







ASSEMBLY INSTRUCTIONS

MODEL : 2120S-BK
Dining Chair

(Box 1)
BOX OF DINING CHAIR (X4)


No	ITEM	Qty
A	Back Rest 	1 pcs
B	Front Leg 	2 pcs
C	Cusion Seat 	1 pcs

(Box 1)
HARDWARE LIST(X4)

No	ITEM	Qty
1	JCBB Bolt M8x80mm Rbw 	4 pcs
2	JCBB Bolt M8x60mm Rbw 	4 pcs
3	Allen Key M5 	1 pcs


REMARK:
THE HARDWARE IS LOCATED IN THE PACKING ITEM.

STEP 1.1 : Remove chair leg from the box seat (C) by open the bottom seat cover as shown.
STEP 1.2 : Align the cushion seat (C) to the Back Rest (A) by secure with JCBB Bolt (1) and tighten them with Allen Key (3)
(DO NOT TIGHTEN BOLTS DURING THIS STEPS)

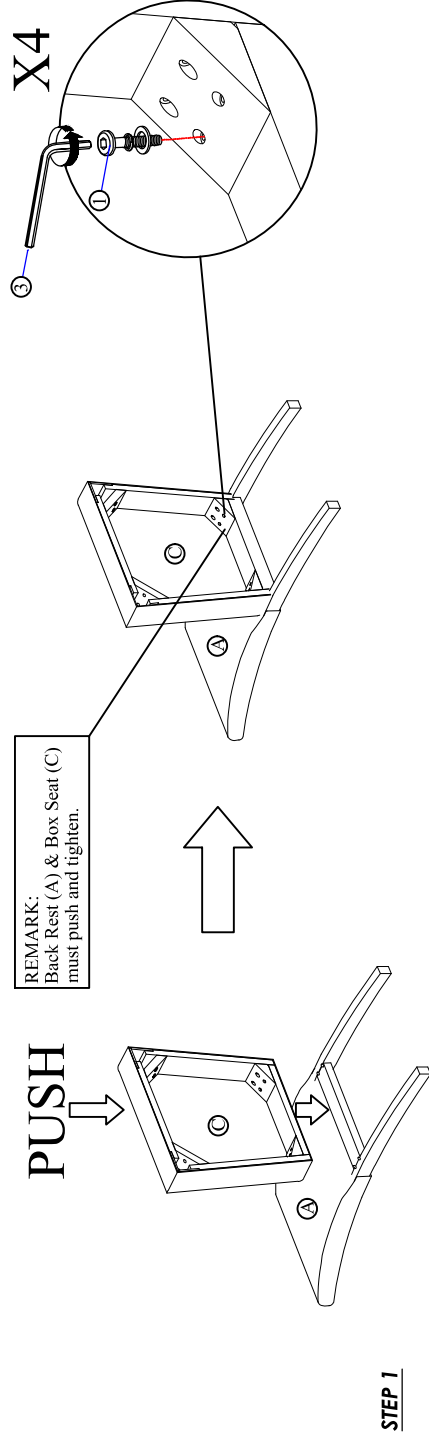


STEP 1

STEP 2.1 : Align Front Leg (B) into cushion seat (C) and fix with JCBB Bolt (2) tighten them with Allen Key(3) as shown.
STEP 2.2 : Closed down the cover of bottom cushion seat (C) after all parts completely fixed.

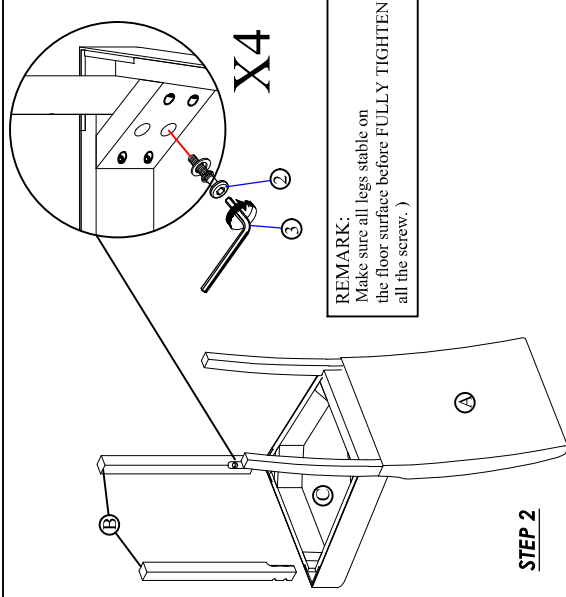

STEP 2

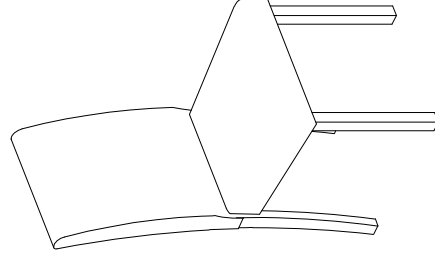

COMPLETE ASSEMBLY

NOTE : Periodically check to ensure that all connectors (bolts, screws, etc.) are tight.