
 

 


ASSEMBLY INSTRUCTION FOR RECTANGULAR COFFEE TABLE CRK120CT


Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staple used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PART LIST				HARDWARE LIST			
NO.	PARTS DESC	CODE	Q'Ty	NO.	HARDWARE DESC	CODE	Q'Ty
A	MARBLE TABLE TOP		1	1	 Allen Bolt (Ø1/4"x15mm)	PCRK120CTHW	14
B	LEG	PCRK120CTLEG	7	2	 Allen Bolt (Ø1/4"x25mm)		7
C	BASE FRAME	PCRK120CTBAS	1	3	 Spring washer (Ø11 x 1.5mm)		21
				4	 Flat washer (Ø13 x 1.5mm)		21
				5	Allen Key M4		1




NOTES: DO NOT FULLY TIGHTEN ANY BOLTS UNTIL LAST STEP

STEP 1

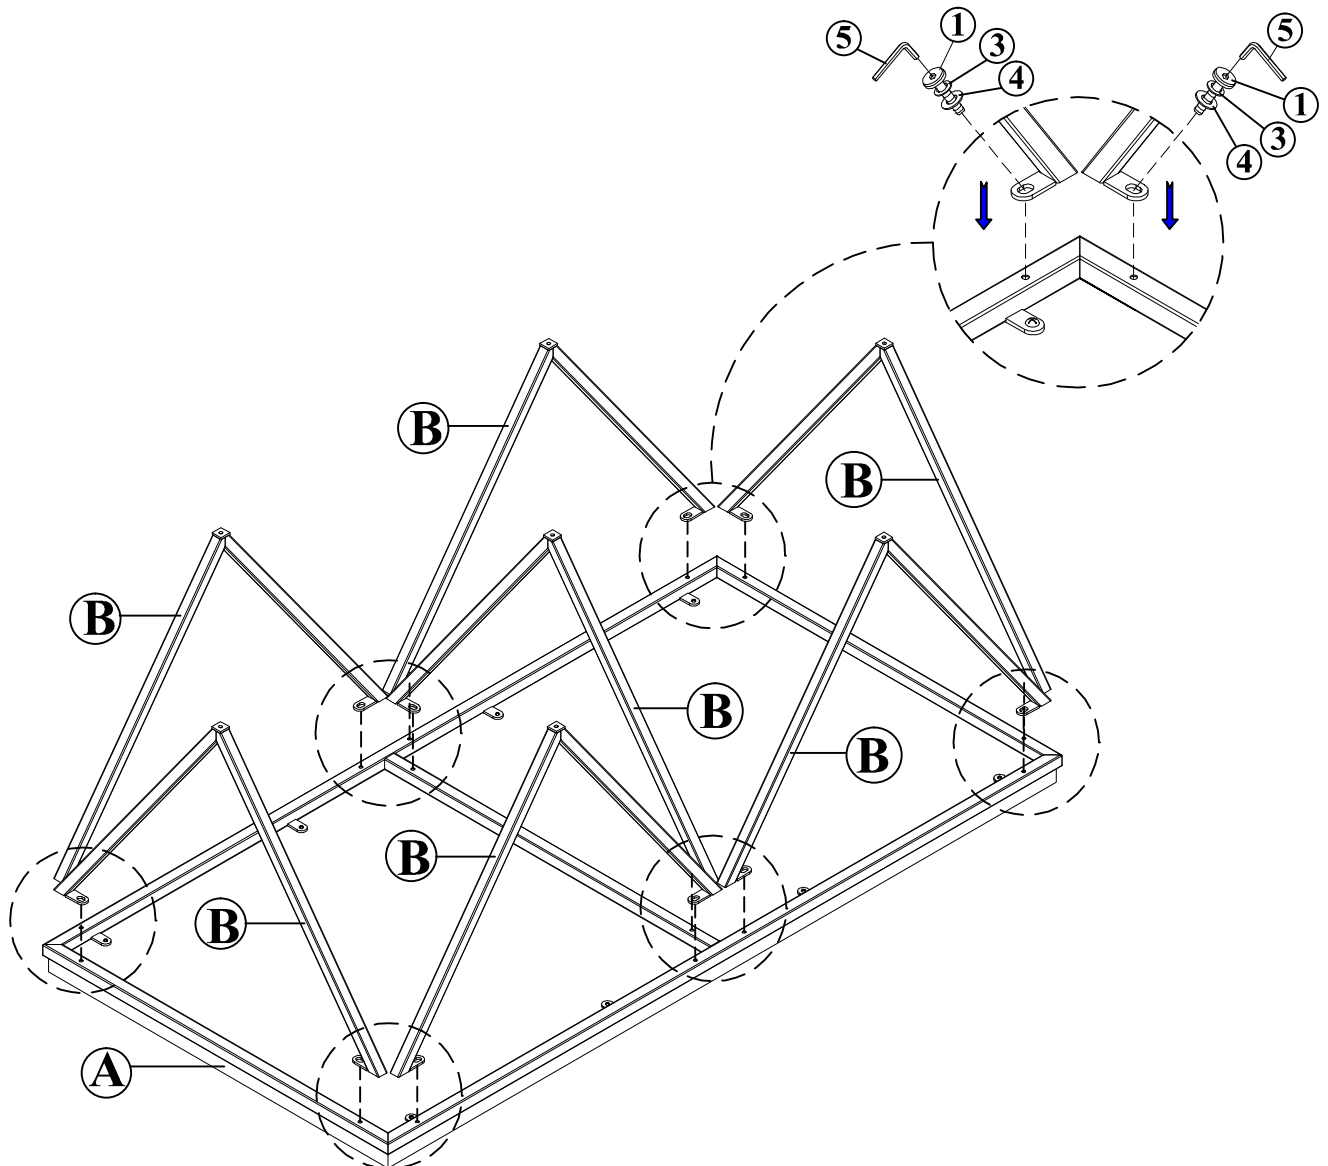

ASSEMBLY INSTRUCTION FOR RECTANGULAR COFFEE TABLE CRK120CT

STEP 2

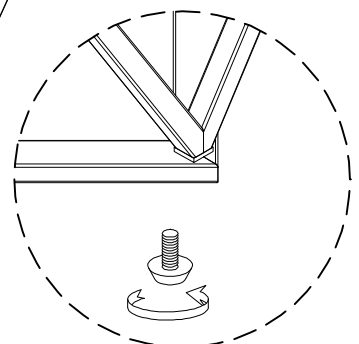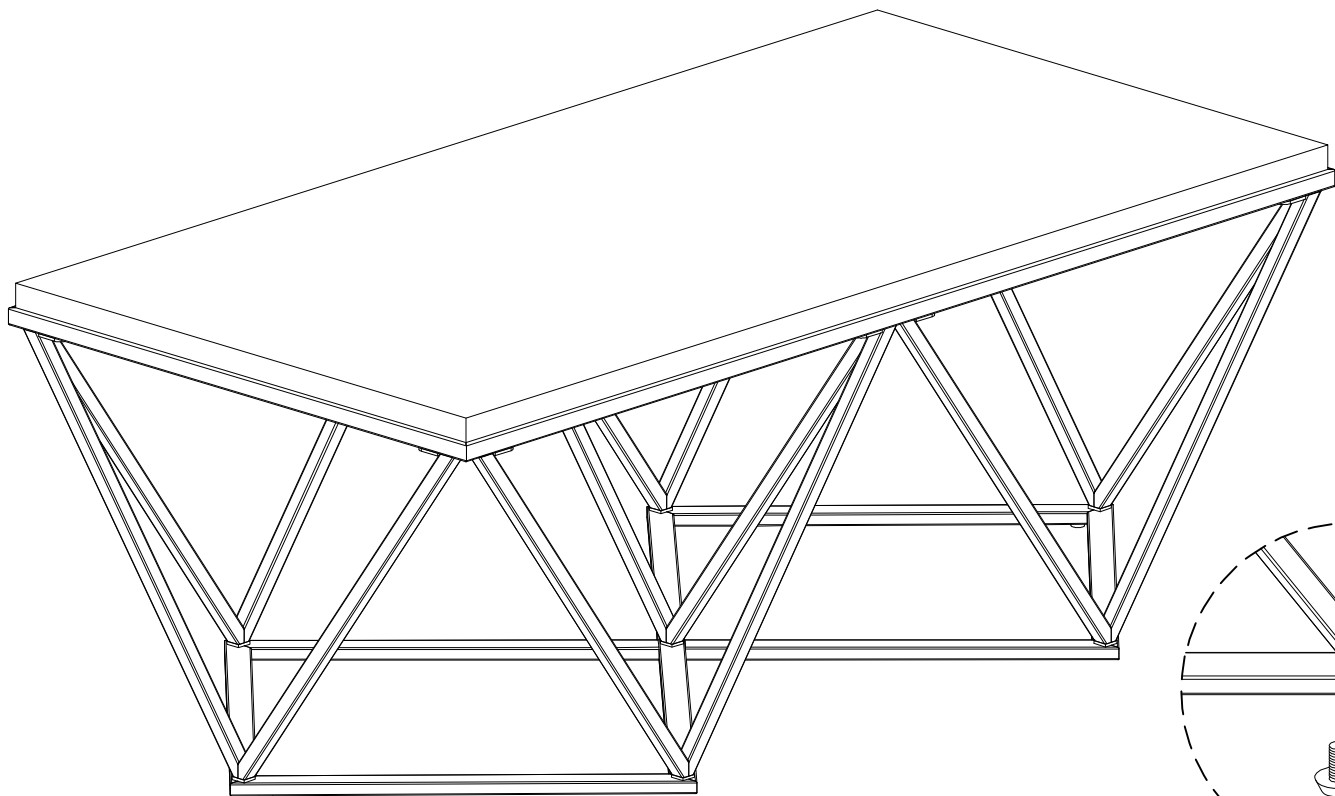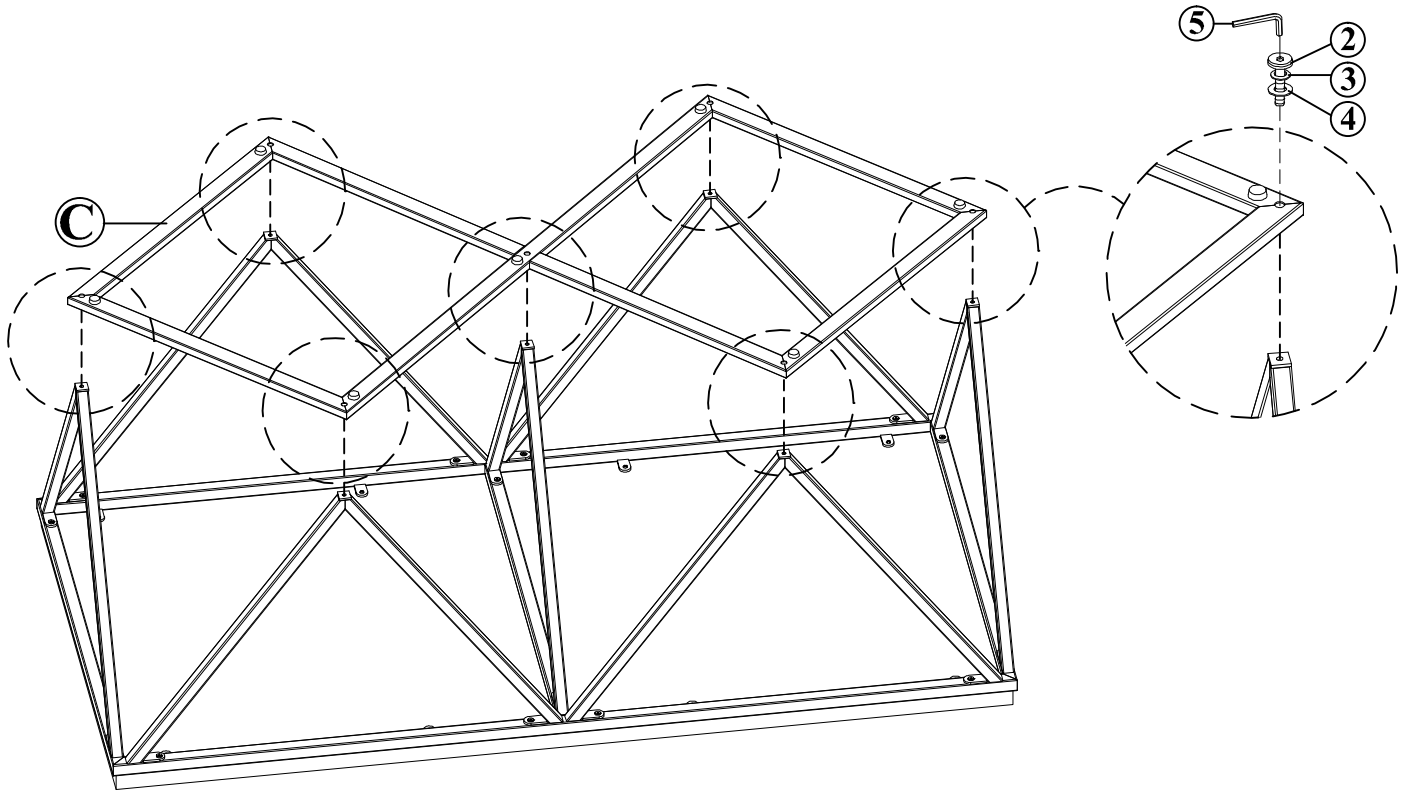

COMPLETED step