


(1) Operating Clothes Dryer

1. Place the laundry inside the clothes dryer.
2. Close the door.
3. Press the On/Off button.

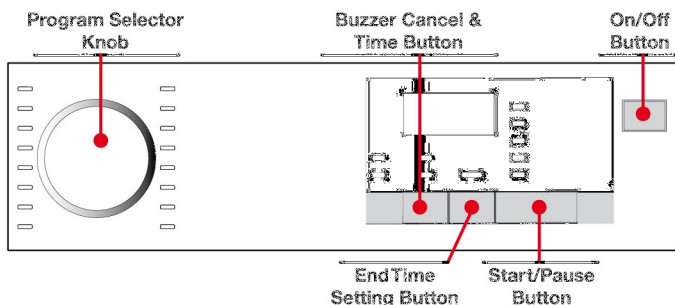

4. Select the appropriate program using the program selector knob.
 - ⚠ Use the program selection table for an appropriate program.
 - ⚠ The selected program duration shall write on the screen.
5. Press "Start/Pause" button to start the program.
6. 'Final / Anti Wrinkle' led lights up when the drying operation is completed.
 - ⚠ Press the 'Buzzer Cancel' button for audible warning at the end of the program.
7. You may open the door and take the laundry out.
 - You can take your laundry when 'Final / Anti Wrinkle' led lights up.
 - ⚠ In case of not taking the laundry out, the anti creasing program that prevents creasing of the laundry by rotating it at certain intervals shall be activated.
8. Clean the filter. (see, Section 2)
 - ⚠ Always clean the lint filter after each use.
9. Press the On/Off button to turn off the clothes dryer.

(2) Cleaning the Lint Filter

1. Remove the filter.



⚠ The filter symbol lights turn on after each use, clean the filter

2. Open the filter and clean the lint inside the filter. You can clean the lint by hand or by using a piece of cloth.



⚠ A layer can build up on the filter pores that can cause clogging of the filter after using your the clothes dryer for a while. Wash the filter with warm water to remove the layer that builds up on the filter surface. Dry the filter completely before using it.

3. Close the lint filter and place it back into its housing.



⚠ Do not operate your the clothes dryer without installing the filter in its place after cleaning it.

(3) Cleaning the Filter Drawer



1. Push the kick plate button to open the kick plate.

Kick-Plate



2. Remove the filter drawer cover by turning it in the direction of the arrow and pull out the filter drawer.

3. Open the filter drawer by pressing red button and take out the sponge.



4. Clean the lint, fibre and cotton raveling on the filter cloth by hand or clean with a soft pieces of the cloth.




⚠ A layer can build up on the filter pores that can cause clogging of the filter after using your the clothes dryer for a while. Wash the filter with warm water to remove the layer that builds up on the filter surface. Dry the filter completely before using it.

5. Wash the filter drawer sponge and squeeze it by hand in order to remove the excessive water.
6. Place the sponge back into its place.

⚠ Do not use your dryer without filter drawer sponge. Such use increases the energy consumption of your appliance and extends drying period for each program.

7. Close the filter drawer as to lock the red button.
8. Place the filter drawer back into its place, turn the filter drawer cover clockwise making sure that it is closed securely.

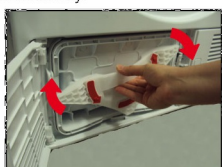

(4) Draining the Clothes Dryer



1. Connect pipe to pump outlet.
2. Connect pipe to drain.



⚠ Make sure that you have tightly inserted the pipe to pump outlet.

(5) Child-proof lock

To activate the child lock, press the 'Buzzer Cancel' and 'End Time Setting' buttons simultaneously for 3 seconds. When the child lock is activated, the led with the lock symbol lights up on the screen. Press the same buttons for 3 seconds to deactivate the child lock.

Child lock will be deactivated when you turn your the clothes dryer off and on by the 'On/Off Button'.

(6) Cancelling the Program

Press the 'On/Off' button if you want to cancel the program and stop the drying after the clothes dryer starts running.

When the clothes dryer is taken to the stand-by mode by pressing the 'Start / Pause' button while the program is running, turning the program selector knob to any direction will cancel the program.