



ASSEMBLY INSTRUCTIONS

I-KSL-C004

PRODUCT IMAGE SHOWN IS FOR ILLUSTRATIVE PURPOSES ONLY, SHOULD NOT BE TAKEN AS REFERENCE POINT

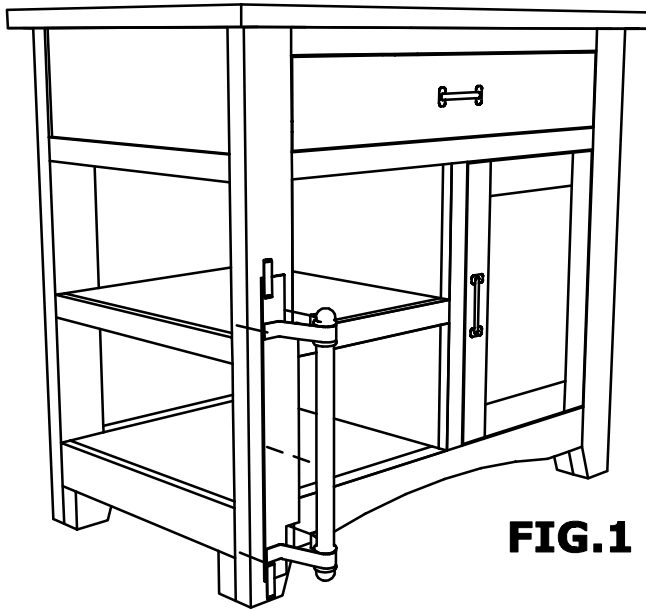


FIG.1

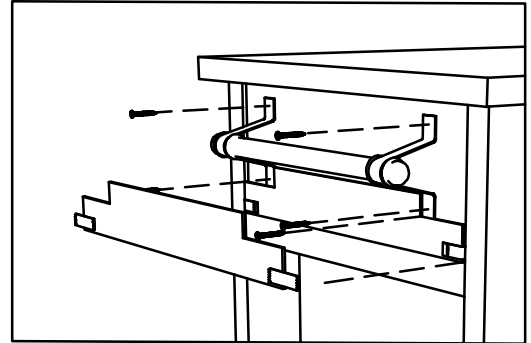


FIG.2

NOTE: THE "FIXED CASTERS"
ARE INCLUDED INSIDE
LATERAL DOORS


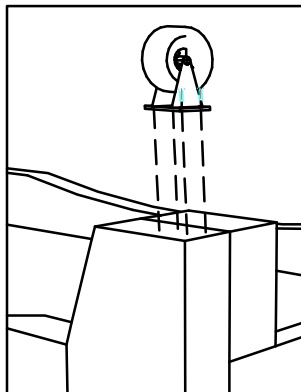


FIG.3

ATTACH THE "FIXED
CASTERS"

ATTACH THE "ROTATE
CASTERS"

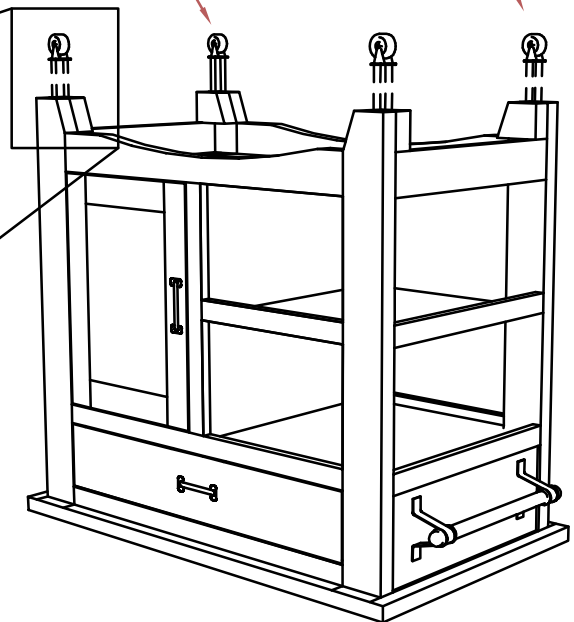

INSTRUCTIONS

TO ATTACH THE TOWEL RAIL TO THE ISLAND

- 1.- REMOVE THE TOWEL RAIL AND THE MDF GUIDE , AS SHOWN FIG.1
- 2.- PLACE THE MDF GUIDE AND STICK ON THEM WITH MASKING TAPE AS SHOWN IN FIG.2
- 3.- CENTER THE TOWEL RAIL USING THE MDF GUIDE, SCREW IT AND REMOVE THE MDF GUIDE.

TO ATTACH THE CASTERS

- 1.- WITH SOME ONE ELSE'S HELP, PLACE THE TOP OF THE KITCHEN-ISLAND UPSIDE DOWN OVER A CLEAN AREA.
- 2.- ATTACH THE TWO "ROTATE CASTERS" ON THE SAME SIDE OF THE KITCHEN-ISLAND THEN PLACE THE "FIXED CATERS" ON THE OPPOSITE SIDE AND SCREW AS SHOWN IN FIG.3
- 3.- TURN BACK THE TOP FROM THE ISLAND CAREFULLY.

HARDWARE

DESCRIPTION	# PCS
ROTATE CASTERS	2
FIXED CASTERS	2
PAN HEAD SCREW 6 X 1"	16
PAN HEAD SCREW 8 X 3/4"	4