



Chrome "Touch" Buttons

Standard for
motorized
mechanisms.

RECLINER CONTROLS

Most recliners are standard with a manual push mechanism, but a motorized mechanism is also available at an upcharge. All wall huggers are standard with a motorized mechanism. These controls will be placed on the right side sitting in-arm. This will allow for a friendly design, easy up lift, and recline movements.

The standard motorized mechanism features two chrome buttons that are sensitive to touch. You just touch the buttons and they will open or close the recliner. These buttons are located on the left side facing in-arm.

Also available for the motorized mechanism upon request, a two button mechanism with a USB charging port. This mechanism is located on the left facing out-arm.

Battery packs are available, if requested, at an upcharge.



Buttons with USB Port

Available for motorized
mechanisms at no
additional charge.

Templefurniture

www.templefurniture.com

