


# ASSEMBLY INSTRUCTIONS

FES-001 / FES-002 / FES-003 / FES-004

Fes-005 / FES-006 / FES-007 / FES-008

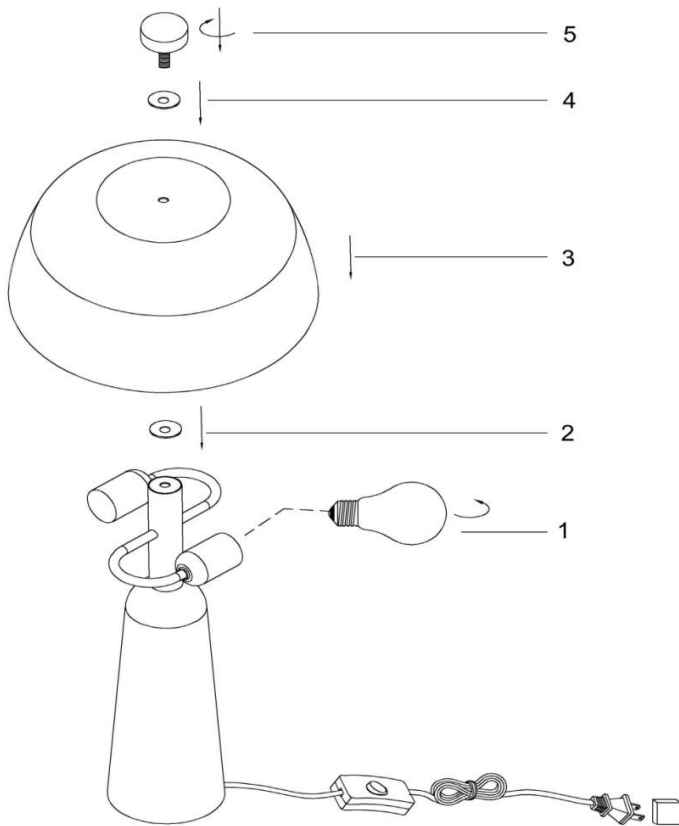

(1) Carefully move out all parts from box and remove all plastic covering from lamp parts.

(2) Put the Washer② onto the top of the tube of Joint box.

(3) Attached the Shade③ to the tupe of lamp body. screw it together with Washer④ and Finial⑤.

(4) Screw the Bulbs① into the Socket.

(Bulb not included. Surya recommends two LED bulbs)

**CAUTION:** TO REDUCE RISK OF FIRE,  
USE **MAX** 40-WATT TYPE G  
LAMP OR USE MAXIMUM 7-WATT  
SELF-BALLASTED LAMP OR LAMP ADAPTER,  
120V 60Hz AC ONLY MADE IN CHINA E533168

**ATTENTION:** AFIN DE RÉDUIRE LE RISQUE D'INCENDIE,  
UTILISER UNE **MAX** AMPOULE TYPE G DE 40  
WATTS OU UTILISER UNE **MAXIMUM** 7 WATTS  
AUTOBALLASTÉE LAMPE OU LAMPE ADAPTEUR.  
120V 60Hz C.A. SEULEMENT FABRIQUÉ EN CHINE E533168

## CAUTION: IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not alter the plug.

**NOTE :** The drawing of the lamp body is for reference only.

**Made in China**

Dear Customer,

Congratulations on your purchase of this quality lamp. It has been produced under the highest quality standards. Please read carefully the following precautions before using this lamp:

- When unpacking and assembling, be careful not to pull wire with full strength, as an incorrect connection could result.
- Only use the bulb and wattage specified in this instructions or on the label located on the socket.
- Do not attempt to replace bulb while the lamp is plugged into an electrical outlet.
- Do not use outdoors, or near water or other liquids.
- Unplug from outlet before removal of any parts and cleaning.
- Only use soft cloth for cleaning. Do not use any chemical or abrasive cleaners.
- Remove the cellophane cover from shade before use.
- During shipment, the socket cover may have become loose. Before inserting bulb, check to see that the socket cover is in place.