

ASSEMBLY INSTRUCTIONS

MODEL #

CM3829F-SC-2PK

Questions?

GIVE US A CALL: 1-888-980-5122 MON – FRI 8:30AM – 5:30PM (PT)

TOOLS REQUIRED



(Included)



1 - People Recommended



The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.







Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:30 AM – 5:30 PM Pacific Time and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.



PRE ASSEMBLY

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

















Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

Suitable Location

Assembling near the area of the intended location is highly recommended.

Sufficient Space

Make sure you have enough space to move around during the assembly.

Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND **CARE ADVICE**



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY **RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools



Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.



Save the instructions and store any supplied tools for later maintenance.

After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

IVORY FABRIC SIDE CHAIR CM3829F-SC-2PK · Please keep instructions for future reference. Check the quantity and irregularity of parts and hardware before you start. PARTS (#1) 1pc x2 (#2) 1pc x2 (#3) 2pcs x4 **Chair Back Chair Seat** Leg HARDWARE (#D) 3pcs x2 (#B) 4pcs x2 (#A) 1pc x2 (#C) 4pcs x2 0 μ Allen Wrench 5mm Bolt Ø5/16"x3-1/2" Bolt Ø5/16"x2" Bolt Ø5/16"x2-3/4" (#E) 11pcs x2 (#F) 11pcs x2 (#G) 1pc x2 \mathbf{T} Dowel Ø 10x 30mm Lock Washer Ø5/16" Flat Washer Ø5/16"

Exploded View



ASSEMBLY INSTRUCTIONS



ASSEMBLY INSTRUCTIONS





 Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are

properly tightened and

Keep this handy! Please retain this instruction

secured.

manual and any order-related information for future reference.

✓ Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.