


NS-BP400

OWNER'S MANUAL MODE D'EMPLOI **BEDIENUNGSANLEITUNG** MANUAL DE INSTRUCCIONES

Speaker Package Package Enceintes

使用說明書 инструкция по эксплуатации

CONNECTION CONNEXION **ANSCHLUSS CONEXIÓN** 连接 ПОДКЛЮЧЕНИЕ

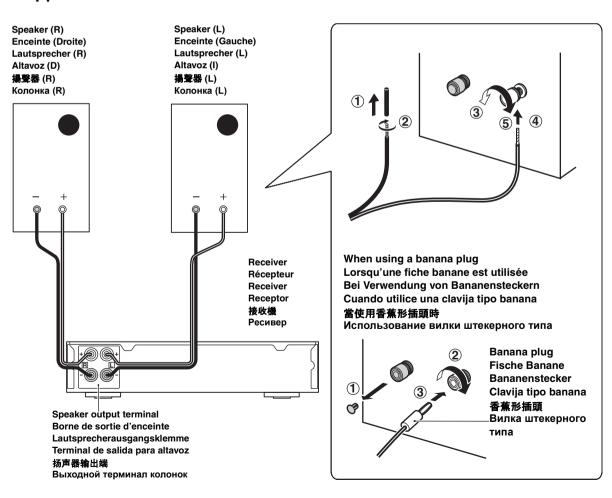

PRECAUTIONS

- Install the speakers in a cool, dry, clean, stable and horizontal
- To avoid electric shock, fire, injury, damage to the speakers, and discoloration of the cabinet, install away from windows, heat sources, sources of excessive vibration, dust, moisture, cold, rain, water, falling objects, noise sources (transformers, motors, etc.) and direct sunlight.
- Do not insert a hand or object into the port or pick up the speaker by holding the port, as it may cause personal injury or damage to
- Any time you note distortion, reduce the volume control on your receiver to a lower setting. Never allow your receiver to be driven into "clipping". Otherwise the speakers may be damaged.
- When using a receiver with a rated output power higher than the nominal input power of the speakers, care should be taken never to exceed the speakers' maximum input.
- Do not attempt to modify or fix the speakers. Contact qualified Yamaha service personnel when any service is needed. The cabinet should never be opened for any reasons.
- Secure placement or installation is the owner's responsibility. Yamaha shall not be liable for any accident caused by improper placement or installation of speakers.

ACCESSORIES

Check that the following items are included. Speaker cable (2 m) x 2 / Front cover x 2

ATTACHING THE FRONT COVER

The speaker and the front cover are packed separately. To attach the front cover, line up the projections (magnets) on the reverse side of the front cover with their corresponding screw heads on the speaker.



Note

When the cover is removed, be sure not to touch the speaker units with your hands or to exert excessive force with tools.

CONNECTION TO YOUR RECEIVER

BEFORE MAKING CONNECTIONS, MAKE SURE THAT THE RECEIVER IS SWITCHED OFF.

When this unit is connected to the receiver, refer also to the owner's manual supplied with the receiver.

See page 1 for the connection method.

PLACING THE SPEAKERS

- Place the speakers on a sturdy, vibration-free surface. You may not be able to obtain good bass quality when the speakers are placed directly on the floor. Put a block, etc. under the speakers.
- Better stereo images will be obtained when the speakers are slightly angled in towards the listening position.

Note

Placing this unit too close to a CRT TV set might happen impair picture color or create a buzzing noise. Should this happen, move the speaker away from the TV set.

ATTACHING THE SPEAKER STANDS

You can also use the screw holes on the bottom of the NS-BP400 for installing the speakers on commercially available speaker stands.

A screw with a diameter of 4 mm can be used (Hole depth: 10 mm, 3/8")



Before installing, please refer to the instruction manual of the speaker stand.

SPECIFICATIONS

Туре	.2-way bass-reflex speaker system
	Non-magnetic shielding Type
Driver	13 cm (5-1/8") cone woofer
	2.5 cm (1") soft dome tweeter
Impedance	6Ω
Frequency Response	50 Hz to 30 kHz (-10 dB)
	100 kHz (-30 dB)
Nominal Input Power	60 W
Maximum Input Power	120 W
Sensitivity	85 dB/2.83 V/m
	3 kHz
Dimensions (W x H x D)	176 x 310 x 330 mm
	(6-15/16" x 12-3/16" x 13")
Weight	5.9 kg (13 lbs.)

- Specifications are subject to change without notice due to product improvements.
- Care should be taken not to exceed the input power values noted

Taking care of the speaker

When you wipe this unit, do not use chemical solvents (ex. alcohol or thinners etc.); this might damage the finish. Clean the cabinet using a soft, dry cloth (such as a Yamaha Unicon cloth). For heavy dirt, use a Yamaha Piano Unicon.

(For polish-finished model) Bumping the surface of the instrument with metal, porcelain, or other hard objects can cause the finish to crack or peel. Use caution.

Information for Users on Collection and Disposal of Old Equipment



This symbol on the products, packaging, and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC. By disposing of these products correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. For more information about collection and recycling of old products, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

[Information on Disposal in other Countries outside the European Union] This symbol is only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

Limited Guarantee for European Economic Area (EEA) and Switzerland

Thank you for having chosen a Yamaha product. In the unlikely event that your Yamaha product needs guarantee service, please contact the dealer from whom it was purchased. If you experience any difficulty, please contact Yamaha representative office in your country. You can find full details on our website (http://www.yamaha-hifi.com/ or http://www.yamaha-uk.com/ for U.K. resident).

The product is guaranteed to be free from defects in workmanship or materials for a period of two years from the date of the original purchase. Yamaha undertakes, subject to the conditions listed below, to have the faulty product or any part(s) repaired, or replaced at Yamaha's discretion, without any charge for parts or labour. Yamaha reserves the right to replace a product with that of a similar kind and/or value and condition, where a model has been discontinued or is considered uneconomic to repair.

Conditions

- The original invoice or sales receipt (showing date of purchase, product code and dealer's name) MUST accompany the defective product, along with a statement detailing the fault. In the absence of this clear proof of purchase, Yamaha reserves the right to refuse to provide free of charge service and the product may be returned at the customer's expense.
- The product MUST have been purchased from an AUTHORISED Yamaha dealer within the European Economic Area (EEA) or Switzerland.

- 3. The product must not have been the subject of any modifications or alterations, unless authorised in writing by Yamaha.
- 4. The following are excluded from this guarantee:
 - a. Periodic maintenance and repair or replacement of parts due to normal wear and tear.
 - b. Damage resulting from:
 - (1) Repairs performed by the customer himself or by an unauthorised third party.
 - (2) Inadequate packaging or mishandling, when the product is in transit from the customer. Please note that it is the customer's responsibility to ensure the product is adequately packaged when returning the product for repair.
 - (3) Misuse, including but not limited to (a) failure to use the product for its normal purpose or in accordance with Yamaha's instructions on the proper use, maintenance and storage, and (b) installation or use of the product in a manner inconsistent with the technical or safety standards in force in the country where it is used.
 - (4) Accidents, lightning, water, fire, improper ventilation, battery leakage or any cause beyond Yamaha's control.
 - (5) Defects of the system into which this product is incorporated and/or incompatibility with third party products.
 - (6) Use of a product imported into the EEA and/or Switzerland, not by Yamaha, where that product does not conform to the technical or safety standards of the country of use and/or to the standard specification of a product sold by Yamaha in the EEA and/or Switzerland.
 - (7) Non AV (Audio Visual) related products.

 (Products subject to "Yamaha AV Guarantee Statement" are defined in our website at

http://www.yamaha-hifi.com/ or http://www.yamaha-uk.com/ for U.K. resident.)

- 5. Where the guarantee differs between the country of purchase and the country of use of the product, the guarantee of the country of use shall apply.
- Yamaha may not be held responsible for any losses or damages, whether direct, consequential or otherwise, save for the repair or replacement of the product.
- Please backup any custom settings or data, as Yamaha may not be held responsible for any alteration or loss to such settings or data.
- This guarantee does not affect the consumer's statutory rights under applicable national laws in force or the consumer's rights against the dealer arising from their sales/purchase contract.

Меры предосторожности

- Устанавливайте колонки в прохладном, сухом, чистом помещении на устойчивой горизонтальной поверхности.
- Во избежание поражения электрическим током, пожара, получения травмы, повреждения колонок и обесцвечивания корпуса устанавливайте колонки подальше от окон, источников тепла, чрезмерной вибрации, пыли, влаги, холоди источников шума (трансформаторов, двигателей и т.п.), в местах, недоступных для дождя, воды, прямого солнечного света, и безопасных с точки зрения возможности падения на колонки других предметов.
- Не просовывайте руки или другие предметы в отверстие, и не поднимайте колонки за это отверстие – это может стать причиной травмирования или повредить колонки.
- В случае искажения звучания понизъте уровень громкости на ресивере. Не допускайте "срезания" звука ресивером. В противном случае ето может стать причиной повреждения колонок.
- При использовании ресивера с номинальной выходной мощностью, превышающей номинальную входную мощность колонок, необходимо следить за непревышением максимальной входной мощности колонок.
- Не пытайтесь модифицировать или чинить колонки. При необходимости обратитесь к квалифицированному сотруднику сервисного центра Yamaha. Ни в коем случае не следует открывать корпус аппарата.
- Ответственность за безопасность размещения и установку несёт владелец. Компания Yamaha не несёт ответственность за какие-либо несчастные случаи, вызванные ненадлежащим размещением или установкой динамиков.

АКСЕССУАРЫ

Убедитесь в наличии в комплекте поставки следующих деталей.

Кабель колонки (2 м) х 2 / Передняя крышка х 2

ЗАКРЕПЛЕНИЕ ПЕРЕДНЕЙ КРЫШКИ

Передняя крышка запакована отдельно от акустической системы. Чтобы установить переднюю крышку, совместите выступающие части (магниты) на заднейчасти передней крышки с соответствующими головками винтов на акустической системе.



Примечание

Не касайтесь частей колонки руками и не прилагайте дополнительных усилий при работе инструментами с колонкой со снятой крышкой.

ПОДКЛЮЧЕНИЕ К РЕСИВЕРУ

ПЕРЕД ВЫПОЛНЕНИЕМ ПОДКЛЮЧЕНИЙ УБЕДИТЕСЬ В ТОМ, ЧТО РЕСИВЕР ОТКЛЮЧЕН.

Если данный прибор подключен к ресиверу, ознакомьтесь с инструкциями, содержащимися в руководстве пользователя ресивера.

Что касается метода подключения, см. стр. 1.

РАЗМЕЩЕНИЕ КОЛОНОК

- Устанавливайте динамики на устойчивой невибрирующей поверхности. При установке колонок прямо на полу возможно снижение качества звучания низких частот. В таком случае установите под колонки подставку и т.п.
- Наилучшее качество стереозвучания достигается в случае установки колонок под некоторым углом к расположению слушателя.

Примечание

Расположение данного устройства слишком близко к ЭЛТ-телевизору может ухудшить цветность изображения или вызвать появление мерцающих помех. В таком случае установите колонки подальше от телевизора.

ЗАКРЕПЛЕНИЕ ДЕРЖАТЕЛЕЙ КОЛОНОК

Для прикрепления имеющихся в продаже держателей к колонкам можно использовать резьбовые отверстия, расположенные на нижней поверхности модели NS-BP400.

В этом случае используется винт диаметром 4 мм (глубина отверстия: 10 мм)



 Перед выполнением установки обязательно ознакомьтесь с руководством пользователя держателей для колонок.

ТЕХНИЧЕСКИЕ ХАРАКТЕРИСТИКИ

- В результате усовершенствования изделия технические характеристики могут изменяться без предварительного уведомления.
- Необходимо следить за непревышением вышеуказанных значений входной мощности.

Уход за колонкой

При протирании данного аппарата, не следует использовать химические растворители (например, алкоголь или разбавители, др.); это может повредить покрытие. Для чистки корпуса используйте мягкую, сухую ткань (например, ткань Yamaha Unicon). При сильном загрязнении, используйте Yamaha Piano Unicon. (Для модели с полировкой) Удары металлическими, фарфоровыми или другими жесткими предметами могут вызвать трещины или шелушение полировки цифрового пианино. Меры безопасности при эксплуатации.