




 

UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE# 22191

Carefully unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
2. Be sure the power to the installation point is power off.
3. Fasten the **Cross bar** to the outlet box. Locate the **Nipple** and the **Washer**, then thread them into the center of the **Cross Bar**.
4. Fasten the **Cross bar** to the outlet box. Secure the **Nipple** onto the **Canopy** with **Loop #1**.
5. Adjust chain length as needed. Thread **Quick Link#1** into **Loop #1** on the Canopy, then **Quick Link #2** into Loop #2 on the **Lamp Body**. Hand tighten until snug.
6. The power supply wire consists of three wires, one black wire, one white wire and one silver ground wire.
 - A. Connect the House Ground Wire to the Fixture Ground Wire.
 - B. Connect the House White (or Ribbed) Wire to the Fixture Supply Wire (White or Ribbed Side).
 - C. Connect the House Black (or Red) Wire to the Fixture Supply Wire (Black or Smooth Side).
 - D. Wrap each connected wire with Wire Connector and carefully stuff all of the connected wires into the Outlet Box.
7. Install the correct **Edison Bulb** (Included) onto the **Socket** referring to fixture markings and/or labels for maximum wattage.

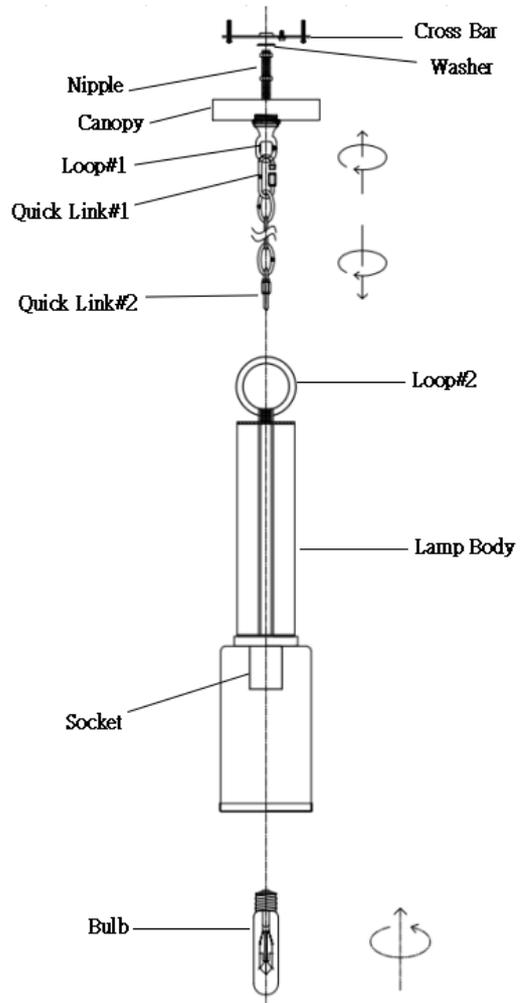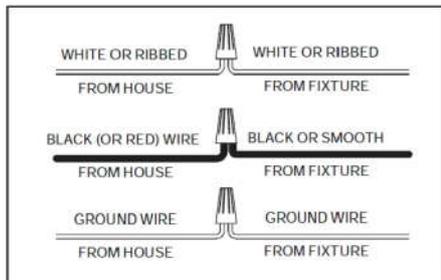

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

www.uttermost.com