

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

706347
END TABLE

ITEM:706347

ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

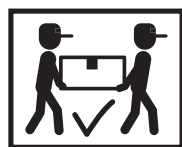


ASSEMBLY TIME

30 MINUTES


PARTS IDENTIFICATION

 A TOP PANEL

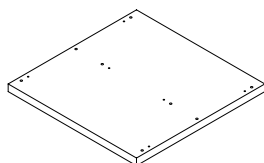


1 PC

 B SIDE PANEL

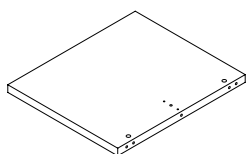

2 PCS

 C MIDDLE CROSS
PANEL



1 PC

HARDWARE IDENTIFICATION

Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	WOODEN DOWEL Ø8x30mm		10 PCS	4	PLASTIC FEET Ø15mm		4 PCS
2	CAM BOLT Ø7x35.5mm SR		10 PCS	5	STICKER Ø20mm		2 PC
3	CAM LOCK Ø15x12mm SR		10 PCS				

 
 
NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.




ITEM: 706347

STEP 1

COASTER
FINE FURNITURE

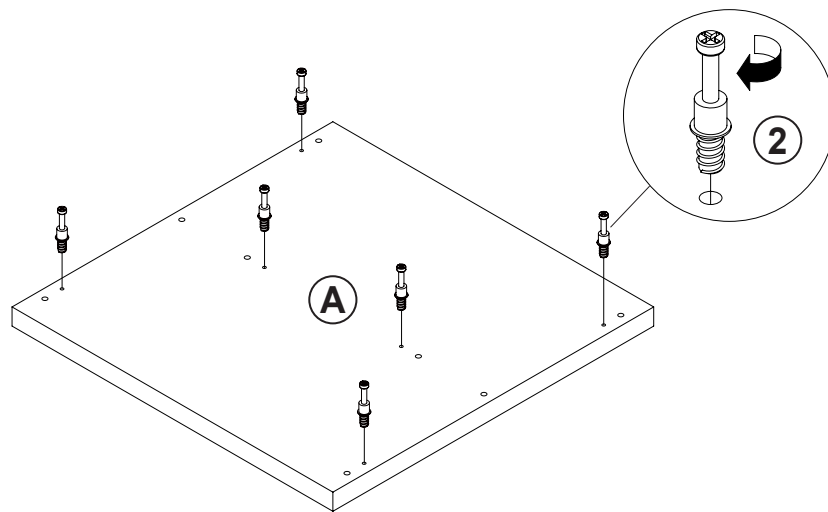


 
 
 
STEP 2

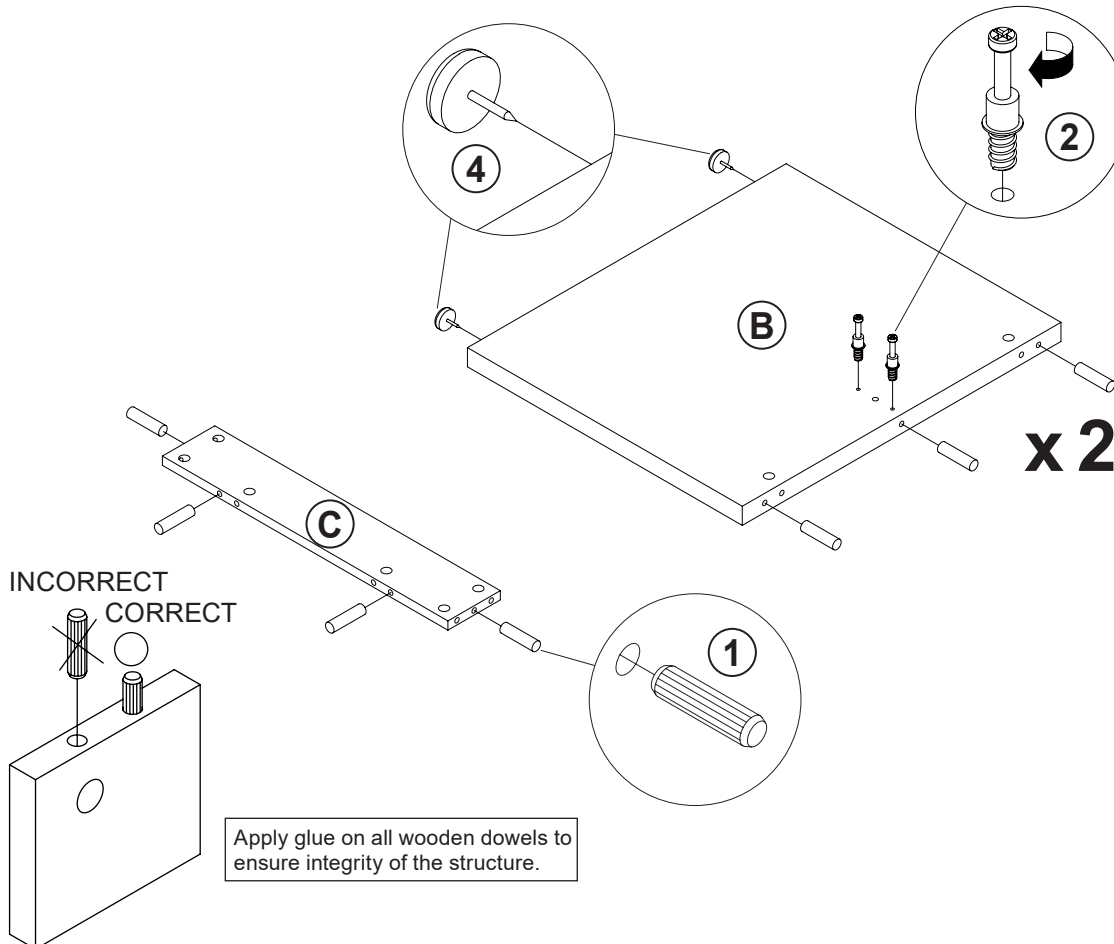





ITEM: **706347**

COASTER
FINE FURNITURE

    STEP 3

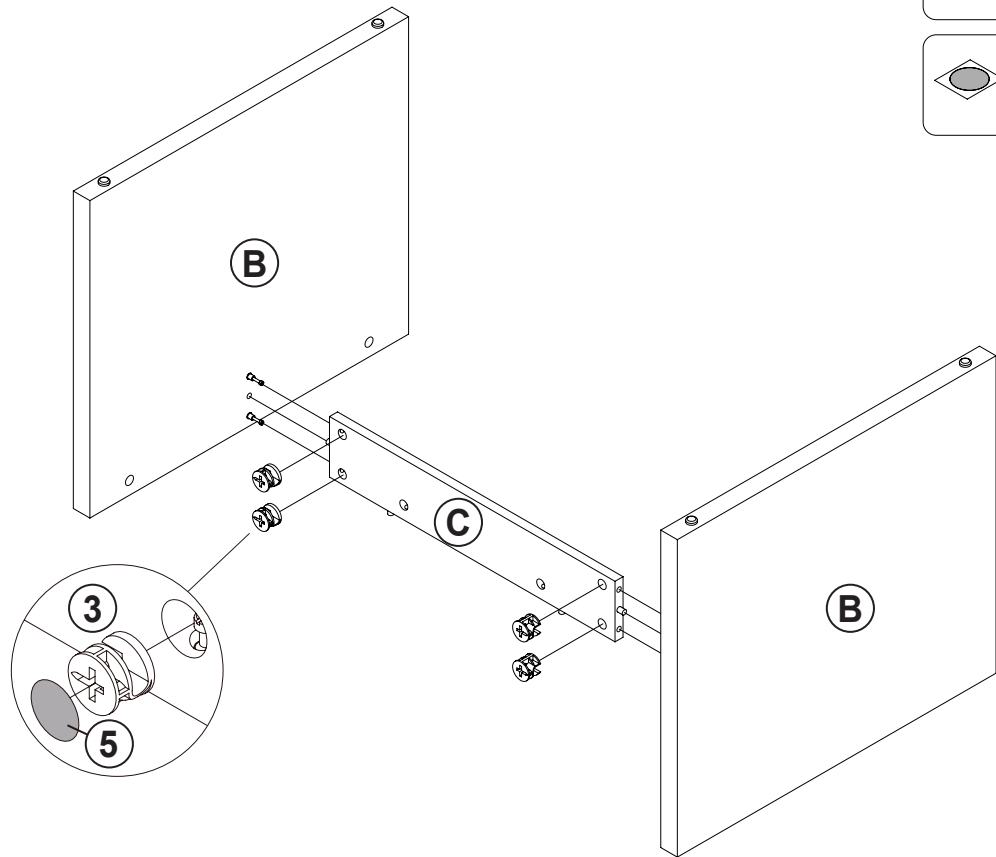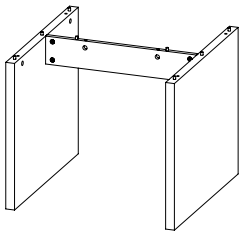

  
 
 
STEP 4

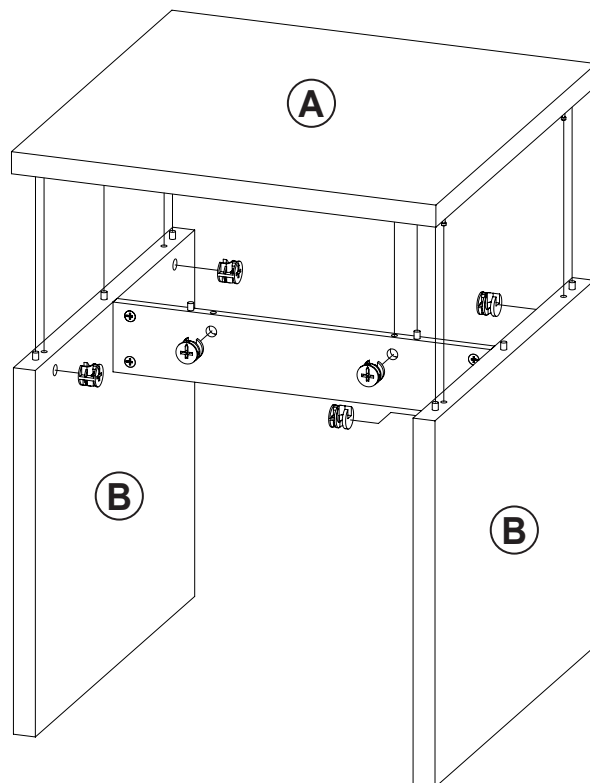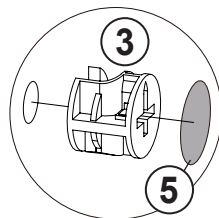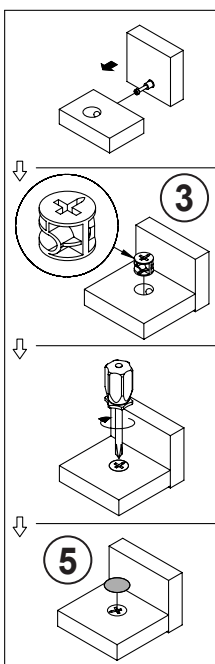


ITEM: **706347**

STEP 5

   COMPLETE

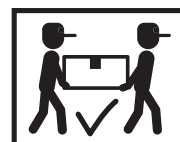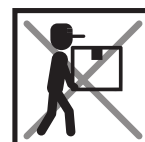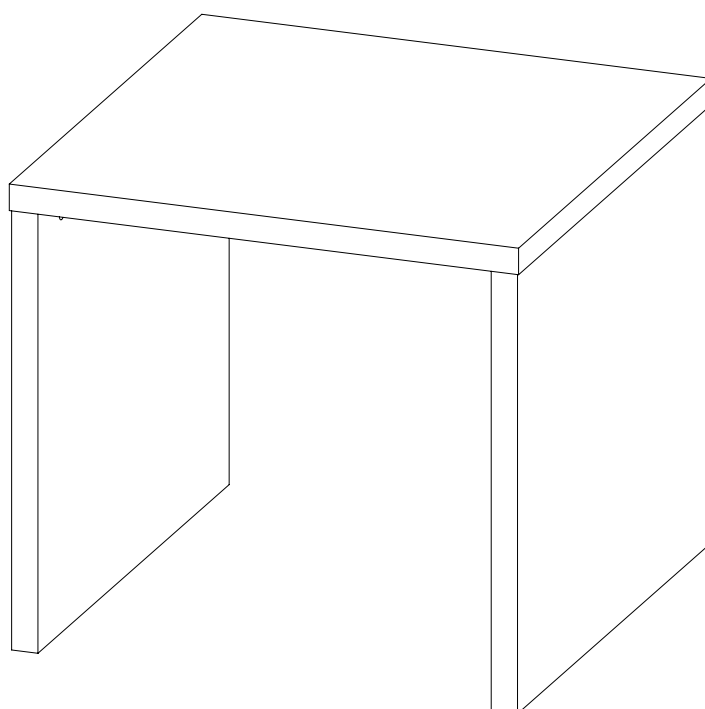

ITEM: **706347**

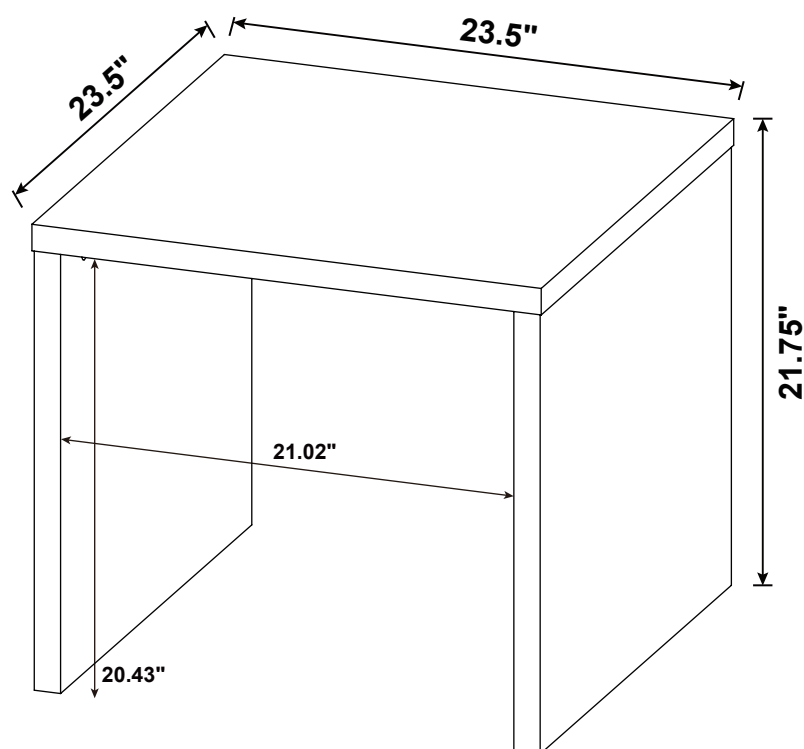 

Note : Dimension tolerance $\pm 5\%$