

# DENON®

## DCD-1600NE

SUPER AUDIO CD PLAYER

# Quick Start Guide

Guide de démarrage rapide / Guía de inicio rápido

## Read Me First....

Lisez-moi en premier.... / Lea esto primero....

ENGLISH

FRANÇAIS

ESPAÑOL

# Welcome

Thank you for choosing a Denon CD player. This guide provides step-by-step instructions for setting up your CD player.

**Please do not return this unit to the store – call for assistance.**

 
**If you need help... :**

If you need additional help in solving problems, contact Denon customer service in your area.


For details, see the Denon homepage. [www.denon.com](http://www.denon.com)

# Before You Begin

## What's In the Box

Quick Start Guide		Power cord	
CD-ROM (Owner's Manual)		Remote control unit (RC-1213)	
Safety Instructions		R03/AAA batteries	
Warranty (for North America model only)		Audio cable	
CD player			

## Required for Basic connections

 		
Amplifier	Speaker systems	Speaker cables




- These drawings are for illustrative purposes only and may not represent the actual product(s).

# Setup


There are five steps to the setup process.

- 1** Install batteries in the remote control unit
- 2** Connect the CD player to the amplifier
- 3** Plug the power cord into a power outlet
- 4** Turn the CD player's power on
- 5** Begin CD or Super Audio CD playback


## **1** Install batteries in the remote control unit

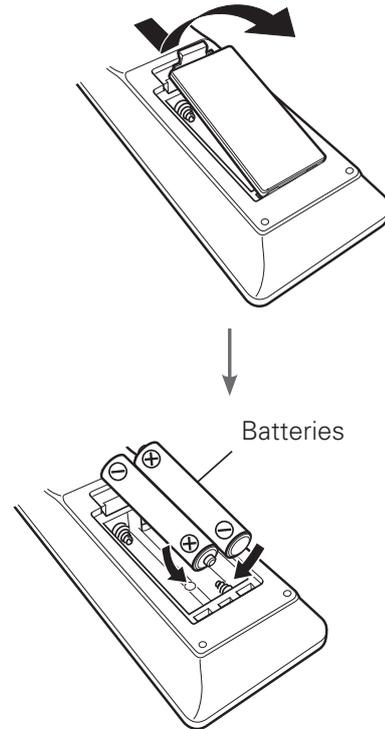


## 2 Connect the CD player to the amplifier

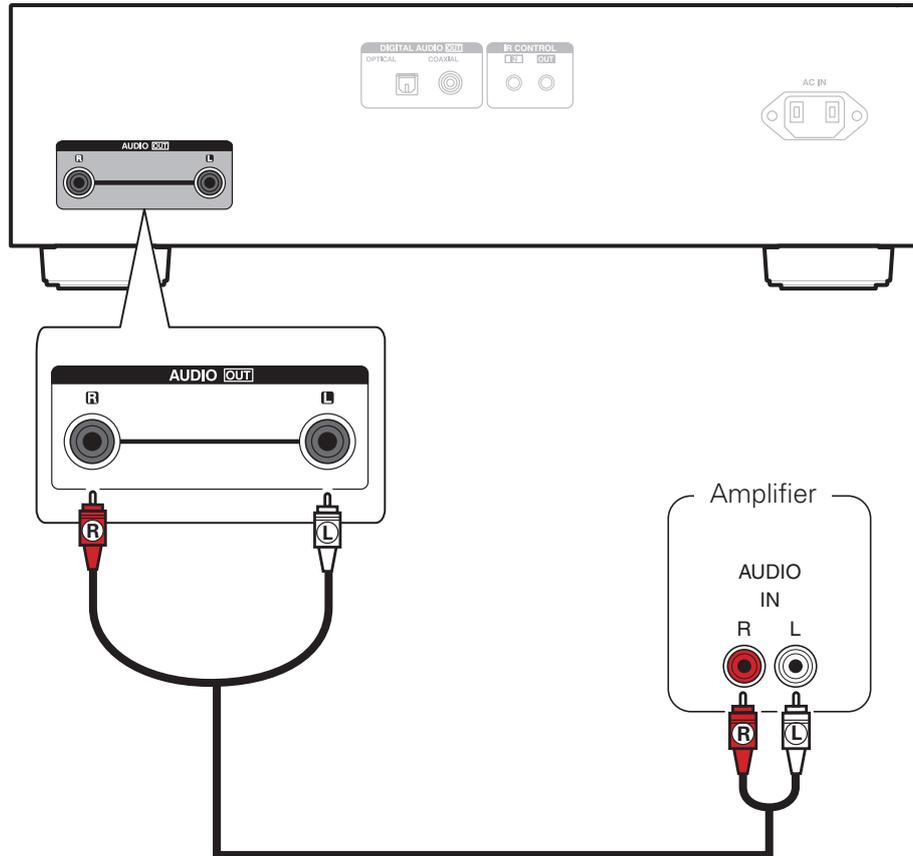


### 3 Plug the power cord into a power outlet

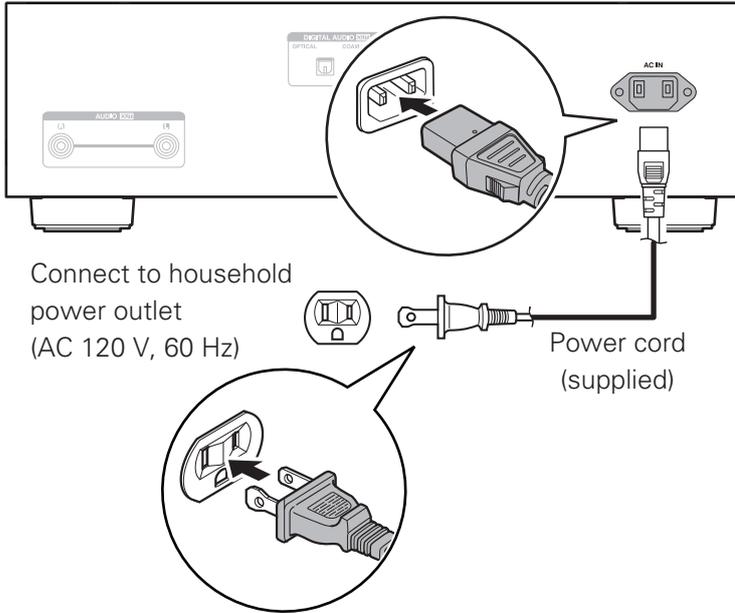

### 4 Turn the CD player's power on

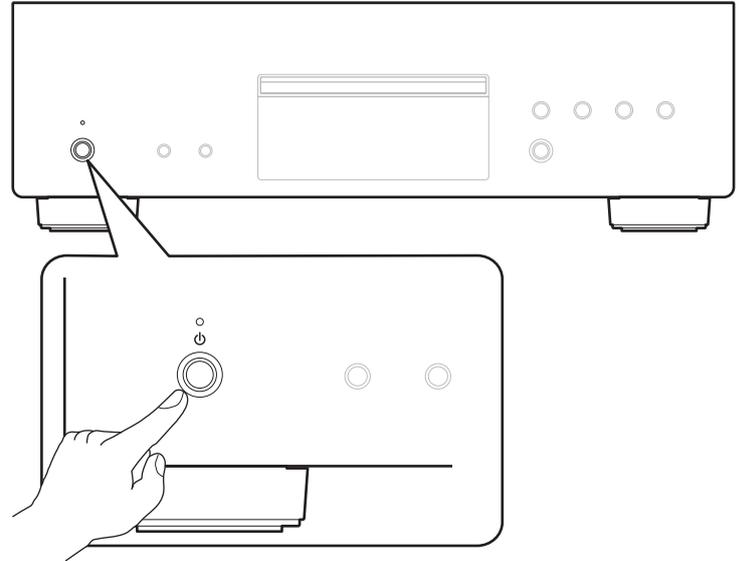


## 5 Begin CD or Super Audio CD playback

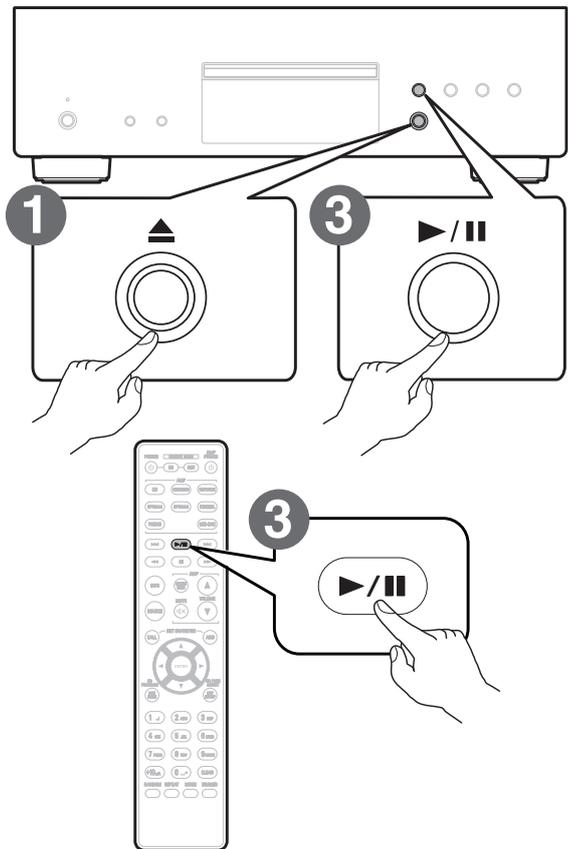

**1** Press  to open the disc tray.

**2** Place CD in the disc tray.

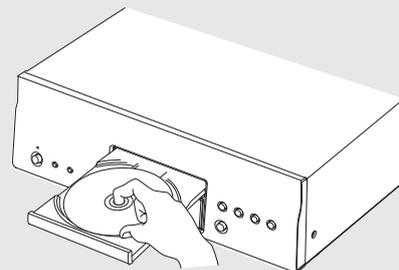

**3** Press .  
Playback starts.

# Owner's Manual


Please reference to the Owner's Manual for more details about the setup and operation of the CD player and its features.

## ❑ Online Version

Enter the following URL into your web browser:  
[manuals.denon.com/DCD1600NE/NA/EN/](http://manuals.denon.com/DCD1600NE/NA/EN/)




Online Manual

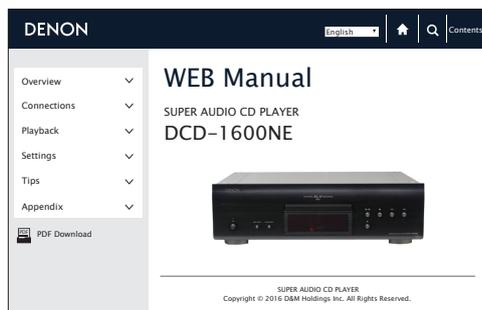

## ❑ Printable Version

Access the print version of the owner's manual from the included CD-ROM or select the "PDF Download" link from the Online Version.

**1** Insert the disc into your PC.

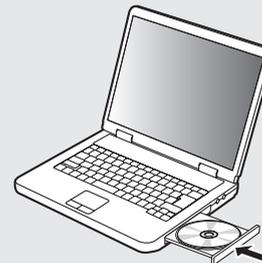

**2** Follow the screen or double click on the PDF file.

**DENON®**

[www.denon.com](http://www.denon.com)

Printed in Japan 5411 11605 00AD  
Copyright © 2016 D&M Holdings Inc. All Rights Reserved.