



Installation Instructions

Heritage Gas Range

HGPR36S, HGPR48S

Table of Contents

Important Safety Instructions	1	Removing the Oven Door	7
Planning the Installation	2	Connecting the Gas	7
Electrical Requirements	2	Finalizing the Anti-Tip Installation	8
Gas-Supply Requirements	2	Reinstalling the Oven Door	8
Product Dimensions	3	Installing the Burner Knobs	9
Cabinet Layout	4	Assembling the Cooktop	10
Installation Instructions	5	Verifying Proper Function	11
Preparing for Installation	5	Moving the Range for Service	11
Installing the Anti-Tip Bracket	5	Installation Checklist	11

IMPORTANT:

- **Installer:** In the interest of safety and to minimize problems, read these installation instructions completely and carefully before you begin the installation process. Leave these installation instructions with the customer.
- **Customer:** Keep these installation instructions for future reference and the local building inspector's use.

Customer Service Information

If you have questions or problems with installation, contact your Dacor dealer or the Dacor Customer Assurance Team. When you call, have ready the range's model/serial numbers, which are on the rating label through the grate inside the door (see below).

Dacor Customer Assurance Team

Phone: 833-35-ELITE (833-353-5483) USA, Canada

Mon – Fri, 5:00 a.m. to 5:00 p.m. Pacific Time

Website: www.dacor.com/customer-care/contact-us

Model Identification

HGPR48S/NG/H

SIZE (width in inches) ————

COLOR ————

C = Custom color

S = Stainless steel

GAS TYPE ————


NG = Natural Gas

LP = Liquid Petroleum (Propane)

ALTITUDE ————

H = Equipped for high altitude operation,
4000 ft. (1219 m) and up

No Character = Equipped for low altitude operation

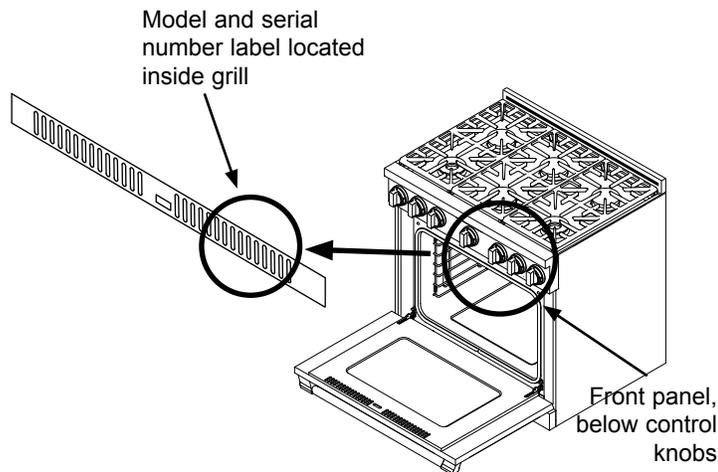

Model/Serial Number Location

READ AND SAVE THESE INSTRUCTIONS

All specifications subject to change without notice. No liability is assumed by Dacor® for changes to specifications.

© 2018 Dacor, all rights reserved.

Important Safety Instructions

Important Info About Safety Instructions

The warnings throughout this manual cannot cover all possible issues. Use common sense and caution in installing and testing this range. Contact Dacor Customer Assurance about issues you cannot resolve.

Safety Symbols and Labels

DANGER

Immediate hazards that WILL cause severe injury or death.

WARNING

Hazards/unsafe practices that COULD cause severe injury or death.

CAUTION

Hazards/unsafe practices that COULD cause minor injury or property damage.

WARNING: TIPPING HAZARD

- Almost any-size person can tip the range and be killed.
- Install the anti-tip bracket as directed (Pg. 5).
- After moving the range, use a flashlight to verify that the anti-tip foot engages the anti-tip bracket (Pg. 8).
- Failure to follow install the anti-tip bracket can lead to serious personal injury or death if the range is tipped over.

AVERTISSEMENT: DANGER DE BASCULEMENT

- Presque toute personne de taille peut faire basculer la gamme et être tué.
- Installez le support antibasculement comme indiqué (pg. 5).
- Après avoir déplacé la cuisinière, utilisez une lampe de poche pour vérifier que le pied antibasculement s'engage dans le support antibasculement (pg. 8).
- Ne pas suivre l'installation du support anti-basculement peut entraîner des blessures graves ou la mort si la cuisinière est renversée.

WARNING

NEVER use the range as a space heater. Doing so may result in carbon monoxide poisoning and overheat the range.

AVERTISSEMENT

N'utilisez JAMAIS la cuisinière comme chauffage d'appoint. Cela pourrait entraîner un empoisonnement au monoxyde de carbone et surchauffer la cuisinière.

WARNING

- Read the User Manual before operating the range.
- Keep packaging material away from children.
- If you receive a damaged product, immediately contact your dealer; do not install/use a damaged appliance.
- The range must be installed by qualified personnel as instructed in this manual.
- The owner should know the gas shut-off valve and electrical-outlet locations so they can turn off the gas supply and power to the range as needed.
- Do not install a venting system that blows air down on the range. Ignition and combustion problems may result, leading to injury/unintended operation.
- If the range is near a window, do not hang long curtains that may be blown over the cooktop.
- Do not connect this range to the gas supply without first installing the provided gas-pressure regulator.
- Do not climb anywhere on the range.

WARNING

- Do not install/repair/replace any range parts unless as instructed in the provided manuals. A qualified technician should perform all other service.
- Make sure all cooktop parts are dry before lighting a burner.
- The range is designed for home use; commercial use is not warranted; do not install the range in a mobile home or RV.
- Do not leave children/pets unattended near the range.
- Do not let children play with any part of the range.
- The range's 3-prong grounding plug protect against electric shock. Plug it in a dedicated, grounded 3-prong outlet. The owner shall ensure the proper outlet is installed. Do not:
 - remove the third (ground) prong from the power plug.
 - use an adapter plug or an extension cord.
 - use a damaged power cord.
 - use a ground fault interrupter (GFI).

WARNING

Do not cover any part of the range with foil or other such items. Doing so blocks air flow through the oven, may cause carbon monoxide buildup, and may trap heat, causing a fire hazard.

AVERTISSEMENT

Ne recouvrez aucune partie de la cuisinière avec une feuille ou d'autres articles de ce genre. Cela empêche l'air de circuler dans le four, peut provoquer une accumulation de monoxyde de carbone et peut emprisonner la chaleur, provoquant ainsi un risque d'incendie.

WARNING

Follow the information in this manual exactly to avoid property damage, personal injury, or death.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- IF YOU SMELL GAS...
 - do not turn on any appliances.
 - do not use any phone in your building.
 - immediately call your gas supplier from a neighbor's home, and follow the supplier's instructions. (If you cannot reach your gas supplier, call the fire dept.)
- Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

WARNING

Suivez les instructions de ce manuel pour éviter tout dommage matériel, blessure corporelle ou mort.

- Ne stockez pas ou n'utilisez pas d'essence ou d'autres vapeurs et liquides inflammables à proximité de cet appareil ou de tout autre appareil.
- SI VOUS SENTEZ DU GAZ...
 - n'allumez aucun appareil.
 - n'utilisez aucun téléphone dans votre immeuble.
 - appelez immédiatement votre fournisseur de gaz de la maison d'un voisin et suivez les instructions du fournisseur. (Si vous ne pouvez pas joindre votre fournisseur de gaz, appelez le service d'incendie.)
- L'installation et l'entretien doivent être effectués par un installateur qualifié, une agence de service ou le fournisseur de gaz.

CALIFORNIA PROPOSITION 65 WARNING

Burning gas cooking fuel generates by-products known by the State of California to cause cancer and reproductive harm. Law requires California businesses to warn customers of potential exposure to such substances. To minimize exposure, operate the range as instructed in the user manual.

Planning the Installation

WARNING

- **IMPORTANT:** Observe all governing codes and ordinances during planning and installation. Contact your local building department for further information.
- To prevent an electric shock hazard, the power supply must meet the specifications stated below. It is the owner's responsibility to make sure that the electrical service meets electrical requirements and that the electrical outlet has been properly installed by a licensed electrician.


The appliance installation must be electrically grounded in accordance with local codes or, in the absence of local codes, with the National Electrical Code, ANSI/ NFPA 70:

Electrical Requirements

- The range is supplied with a factory installed, 6 foot long, power cord with a three-prong grounding plug. It is connected to the chassis at the rear of the range. It must be connected to a dedicated, grounded three-prong electrical outlet.
- The correct voltage, frequency and amperage must be supplied to the appliance from a separate, grounded, circuit that is protected by a properly sized circuit breaker or time delay fuse.

Model	Circuit Required	Total Connected Load*
HGPR36S	120 Vac, 60 Hz, 15 Amp.	120 Vac 60 Hz, 5.0 Amp.
HGPR48S	120 Vac, 60 Hz, 15 Amp.	120 Vac 60 Hz, 8.0 Amp.

*These specifications for reference only. Refer to the rating label for exact specifications (see below for location).

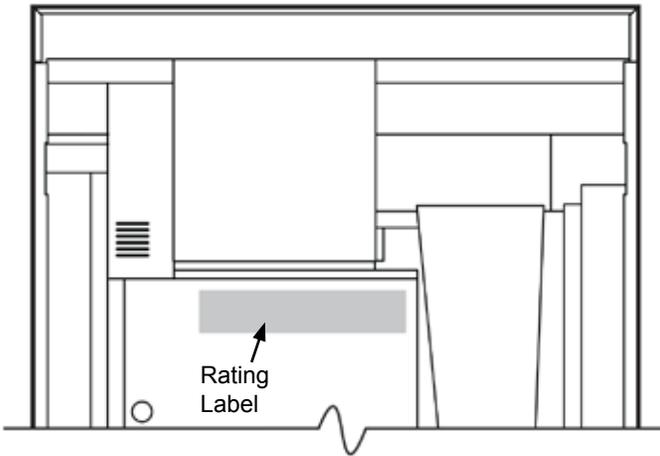


Gas-Supply Requirements

- Installation of this range must conform to local codes or, in their absence, to the National Fuel Gas Code, ANSI Z223.1/NFPA 54.
- The range being installed must match the home gas service (natural or LP gas).
- If using the range above 4000 ft. (1219 m) altitude, ensure it is equipped for high-altitude use. See the rating label and graphic on the inside front cover to verify the correct model.
- This table has gas-supply pressure requirements:

GAS-SUPPLY PRESSURE REQUIREMENTS*		
Gas Type	Min. Manifold Pressure	Minimum Gas-Supply Pressure**
Natural Gas	5" Water Column	6" Water Column
Liquid Propane (LP)	10" Water Column	11" Water Column

*The gas supply pressure for testing the regulator setting shall be at least 1 inch water column (249 Pa) above the specified manifold pressure' **maximum gas supply pressure for all models: 1/2 psi.
The ratings above are for reference only. See the rating label for exact specifications.

- Use only the factory-installed regulator. The regulator inlet receives a 3/4" gas line. The range ships with a 1/2"-to-3/4" adapter connected to the regulator.

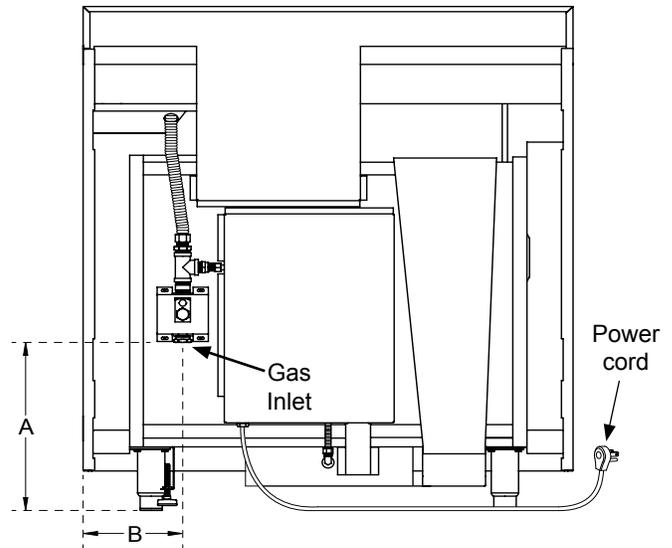

GAS-/ELECTRICAL-ACCESS DIMENSIONS		
Model	A	B
HGPR36S	13 1/16" to 14 3/8" (33.2 to 36.5 cm)	7 5/16" (18.6 cm)
HGPR48S	13 1/16" to 14 3/8" (33.2 to 36.5 cm)	4 1/4" (10.8 cm)

Planning the Installation



Product Dimensions

Product tolerances: $\pm 1/16"$ (± 1.6 mm)


Width

HGPR36S:
35-7/8" (91.1 cm)

HGPR48S:
47-7/8" (121.6 cm)

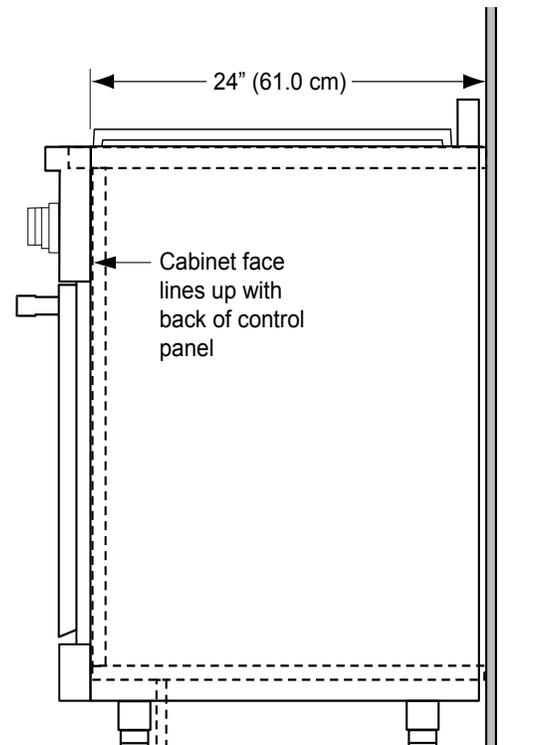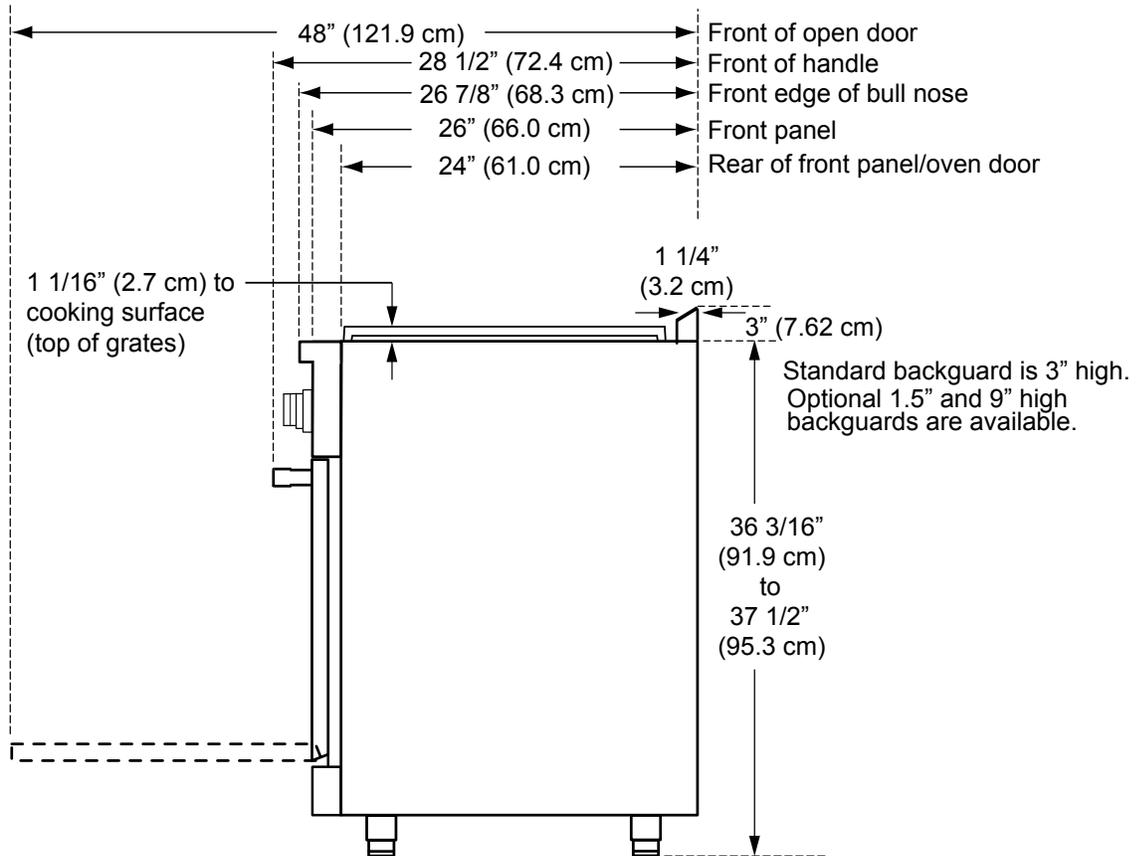

Installed Range

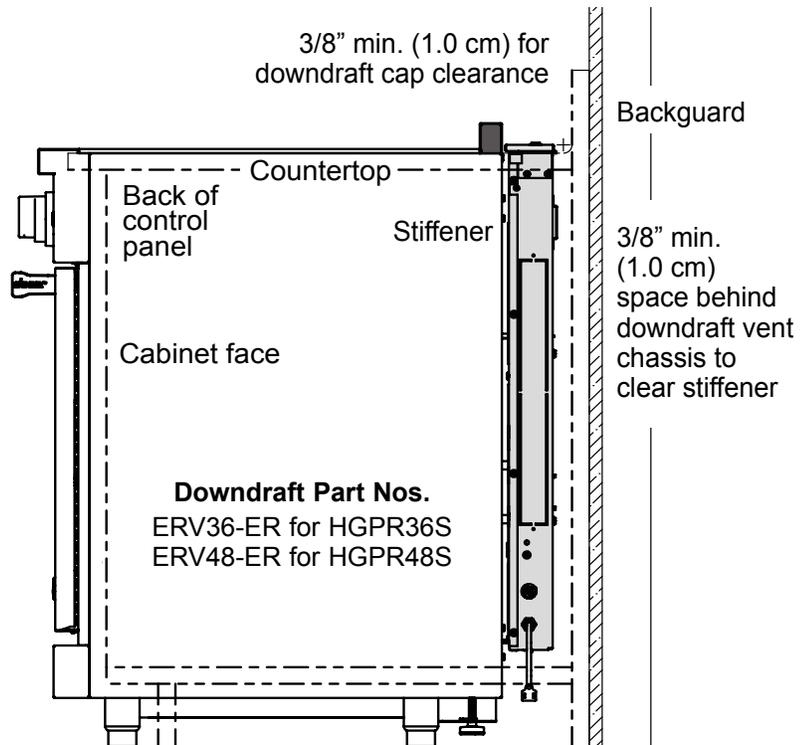

Installed Range With Downdraft

Planning the Installation

Cabinet Layout

- All maximum/minimum dimensions and clearances in the diagrams below must be maintained for safe operation.
- Install the range away from drafts, and include a hood or approved downdraft.
- For safety's sake, do not install cabinets above the range; otherwise, install a hood that extends 5" or more past the cabinet face.
- The range may be installed against the rear wall. You should install a backguard or non-combustible material on the wall between the range and hood. Non-combustible material is not needed behind the range from countertop to floor.
- Seal openings in the wall behind the range or in the floor below.

Gas and Electrical Service


- The shaded area in the diagram below shows the recommended location of the gas inlet and the electrical outlet. (If replacing a range, the existing utilities may be used if they do not interfere with the placement of this range. Check local codes for permissible gas-valve locations.)
- An external, manual shut-off valve must be installed between the gas inlet and range so the gas supply can be turned on/off
- The installation must also allow:
 - access to the gas shut-off valve when the unit is installed.
 - access to the electrical outlet, when the range is in place.
 - the range to be pulled out for service without disconnecting the gas and electrical supply.

DIMENSIONS


Model	F	G	H	I	J
HGPR36S	42" (106.2 cm)*; 36" (91.4 cm)**	36" (91.4 cm)**	33 1/2" (84.8 cm)	30 7/8" (78.4 cm)	3 1/2" (8.9 cm)
HGPR48S	54" (137.2 cm)*; 48" (121.9 cm)**	48" (121.9 cm)**	43 1/2" (110.2 cm)	29 7/8" (75.9 cm)	3" (7.6 cm)

* Recommended ** Minimum

Cutout tolerances: +1/16" (+1.6 mm),
-0 unless otherwise stated

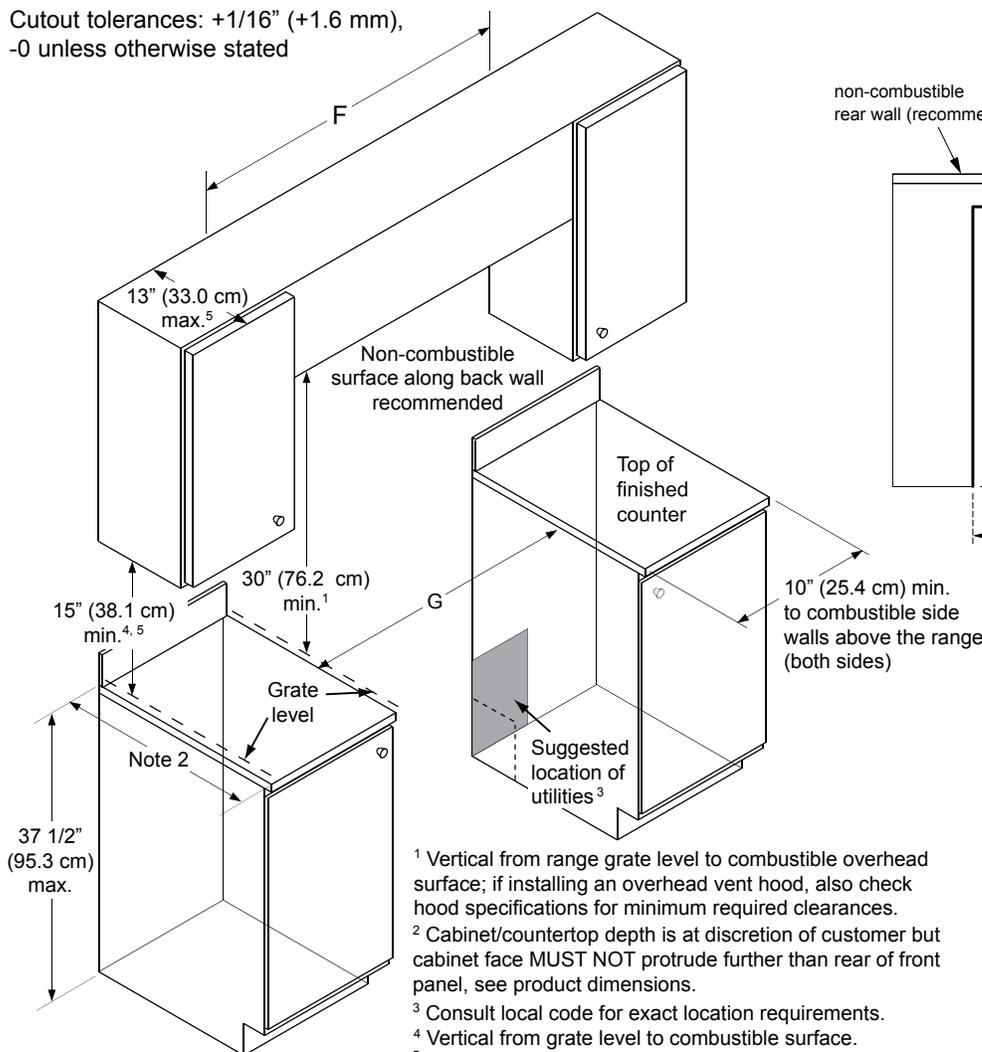

¹ Vertical from range grate level to combustible overhead surface; if installing an overhead vent hood, also check hood specifications for minimum required clearances.
² Cabinet/countertop depth is at discretion of customer but cabinet face MUST NOT protrude further than rear of front panel, see product dimensions.
³ Consult local code for exact location requirements.
⁴ Vertical from grate level to combustible surface.
⁵ This specification does not apply for cabinets more than a horizontal distance of 10" (25.4 cm) from the edge of the range.

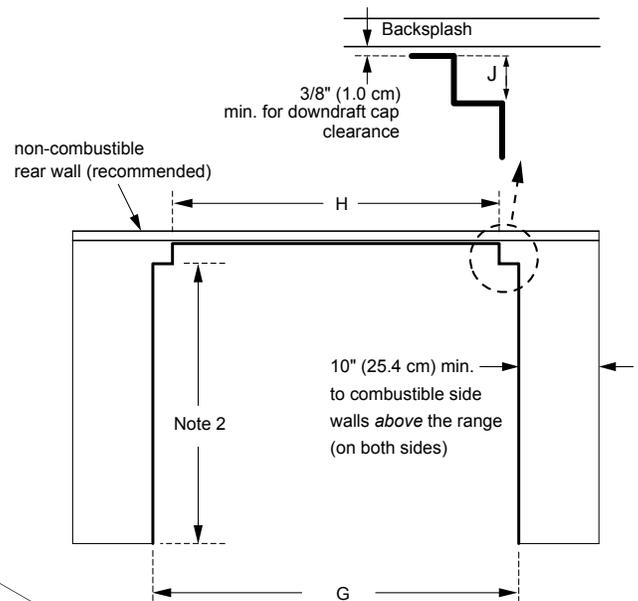

Range	Downdraft Vent
HGPR36S	ERV36-ER
HGPR48S	ERV48-ER
Range	1.5" Low-Profile Backguard
HGPR36S	APB36GLP
HGPR48S	APB48GLP

Installation Instructions

Preparing for Installation

WARNING

- If the home gas/electric service does not meet product specifications, postpone installation until the gas supplier/licensed electrician makes the appropriate modifications.
- Before installing the range, install the anti-tip bracket.

IMPORTANT: In the Commonwealth of Massachusetts, the range must be installed by a licensed plumber or gas fitter.

Unpacking the Range

Unpack the parts box, and verify that all components are present. If anything is missing/damaged, contact your dealer immediately. Do not install a damaged/incomplete range.

Parts List

- 3 Grates
- 8 Standard burner caps (4 brass, 4 porcelain)*
- 4 Standard burner rings
- 4 SimmerSear burner caps (2 brass, 2 porcelain)*
- 2 SimmerSear burner rings
- 2 SimmerSear burner heads
- 2 GlideRack™ oven racks
- 1 Standard rack
- 2 GlideRack™ 18" wide oven racks (RNRP48G only)
- 1 18" wide standard oven rack (HGPR48S only)
- Knobs (4 Standard cooktop, 2 cooktop MAX GRIDDLE, 1 oven for HGPR36S, 2 oven for HGPR48S)
- Anti-tip bracket with screws and anchors
- Griddle
- Wok ring
- Stainless steel cleaner
- Literature kit
- Broiler pan/grill

*Two types of burner caps are provided to suit customer preference. Brass discolors with use; performance is unaffected.

Installing a Backguard (Optional)

Before making the gas/electrical connections, install the backguard per backguard kit instructions. Approved kits for this range:

Model	Description
APB36D9	9" high backguard for range model HGPR36S
APB48D9	9" high backguard for range model HGPR48S

Installing the Anti-Tip Bracket

Install the anti-tip bracket in one of two ways:


- Floor mounting (preferred)
- Wall mounting (alternate—if floor mounting is unsuitable). If the range's front panel (excluding bull nose) is over 27" (68.6 cm) from the back wall – or – if the flooring is too thick (see **Wall-Mounting the Anti-Tip Bracket**), floor-mounting must be used.

Floor-Mounting the Anti-Tip Bracket



WARNING

The anti-tip bracket must be attached as instructed to the concrete slab or wood sub-floor below any flooring (including cement board). Do not attach the bracket directly to floor coverings.

Four plastic anchors are provided with three sizes (4 each) of #8 or #12 Phillips-head screws. Use the anchors and four of the screws only if attaching the bracket to a concrete sub-floor.

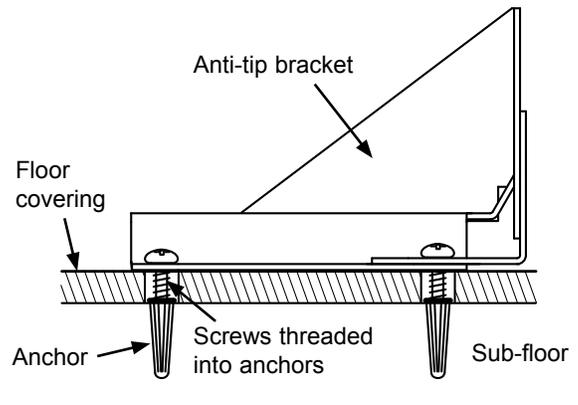

1. Determine the location of the range center line and front panel for the range's final position based on the **Product Dimensions** (Pg. 5) and the actual cabinet/cutout dimensions.
2. Determine the required position of the anti-tip bracket. Mark the four (4) mounting hole locations on the floor with a pencil.

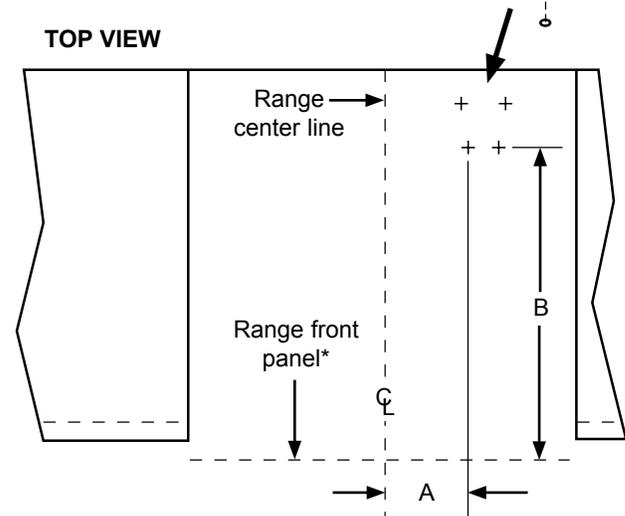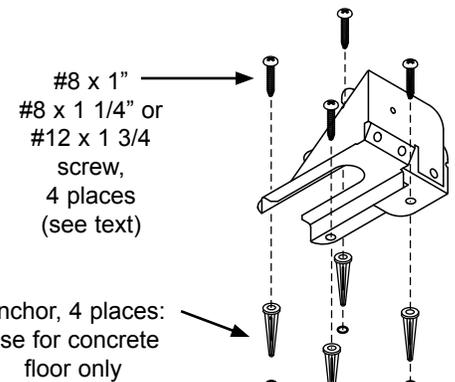

Installation Instructions

- Determine the screw size required. The minimum full thread depth (portion of screw threaded into wood/slab) for wood is 3/8" (1 cm) and 5/8" (1.6 cm) for concrete. See **SCREW SIZE TABLE** to select the correct screw size.

Anchoring the Bracket To Concrete


- Drill four 3/8"-diameter countersink holes through any existing floor covering to (but not into) the concrete slab.
- With a 3/16" masonry bit, drill four anchor holes 1-1/4" (3.2 cm) into the concrete slab.
The hole must be longer than the anchor for proper installation.
- Clear the holes of dust and debris, then tap the anchors into the holes so the top is flush with the slab.
- Position the anti-tip bracket over the anchor holes.
- Insert the screws through the 4 holes in the base of the bracket, and thread them into the anchors.
Ensure the screw threads engage the anchor.
- Tighten the screws.

Attaching the Bracket To a Wooden Sub-Floor


- If there is a hard floor covering (e.g., ceramic, asphalt), drill four countersink holes to (but not into) the wood sub-floor.
- (With a 1/16" bit for #8 screws or a 1/8" bit for #12 screws) Drill four pilot holes into the wood sub-floor.
- Align the anti-tip bracket holes with the holes in the floor.
- Insert and tighten the four screws.

Using the graphic in Step 4 and the final installation cabinet/cutout dimensions, find the range's center line and front panel location.


- Determine and mark the position of the anti-tip bracket.
- Place the bracket in position, and mark a dot at the notch on each side of the bracket.

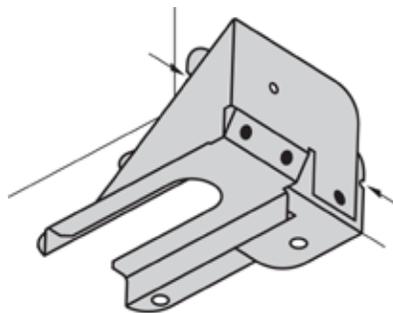

- Drill just deep enough to see if the bit contacts the base plate.
 - If the bit contacts the base plate, wall mounting is suitable.
 - If the bit does not contact the base plate, you must either floor-mount the bracket.)

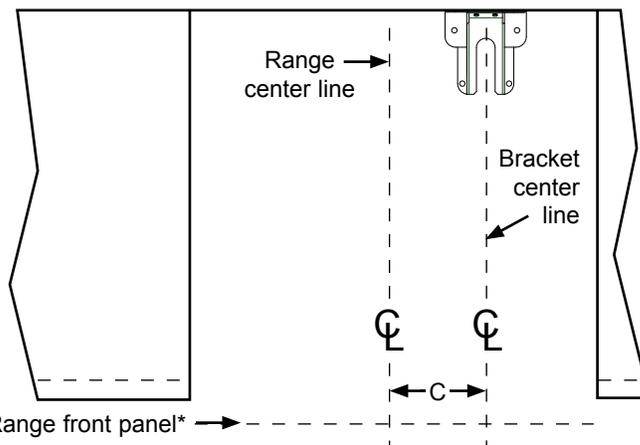

- Place the bracket against the wall in the mounting location. Using a 1/8" bit, drill four 1-5/8" deep pilot holes perpendicular to the screw-seating surfaces shown below. Attach the bracket to the wall as shown with the included #12 x 1-3/4 screws.

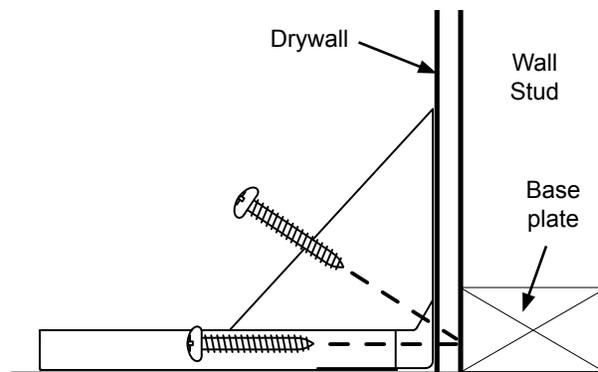

ANTI-TIP BRACKET PLACEMENT		
Dimension	HGPR36S	HGPR48S
C	11-7/8" (30.2 cm)	2-1/2" (6.4 cm)
*Excludes bull nose (see Pg. 3)		

ANTI-TIP BRACKET PLACEMENT		
Dimension	HGPR36S	HGPR48S
A	10-7/8" (27.6 cm)	1-1/2" (3.8 cm)
B	22-1/2" (57.2 cm)	22-1/2" (57.2 cm)
*Excludes bull nose (see Pg. 3)		

SCREW SIZE TABLE	
Sub-Floor Type/Floor Covering Thickness	Screw
Concrete or wood sub-floor, no floor covering	#8 x 1*
Concrete/wood sub-floor, floor covering up to 1/4" thick	
Concrete/wood sub-floor, floor covering over 1/4", up to 1/2" thick	#8 x 1 1/4 *
Wood sub-floor, floor covering over 1/2", up to 1 3/16" thick	#12 x 1 3/4 *
Concrete under floor covering over 1/2" thick	Not included**
Wood sub-floor, floor covering over 1-3/16" thick	
*Included with range; **Determine required depth based on information in Step 3 and purchase from local hardware store.	

Wall-Mounting the Anti-Tip Bracket

- To use this option:
 - the range's front panel (exterior surface of the door—not the forward edge of the bull nose) must be 27 in. (68.6 cm) or less from the wall behind the range.
 - the bracket screws must be able to thread into the wall's base plate (see the graphic, Step 5, Pg. 7).
- Notches on the bracket sides indicate the minimum required height of the base plate and that any floor covering does not keep screw threads from engaging the base plate.

Installation Instructions

Removing the Oven Door


Make the range easier to move by detaching the door.

WARNING


- Do not try to disengage the hinge catches with the door removed. The springs could release causing personal injury.
- Do not lift the door by its handle.

NOTE: If installing the optional backguard, install it before sliding the range into place. (See page 5.)

1. Open the door to its fully opened position.
2. Use a pair of needle nose pliers and a flat blade screwdriver to rotate the catch over the retaining arm on each hinge.

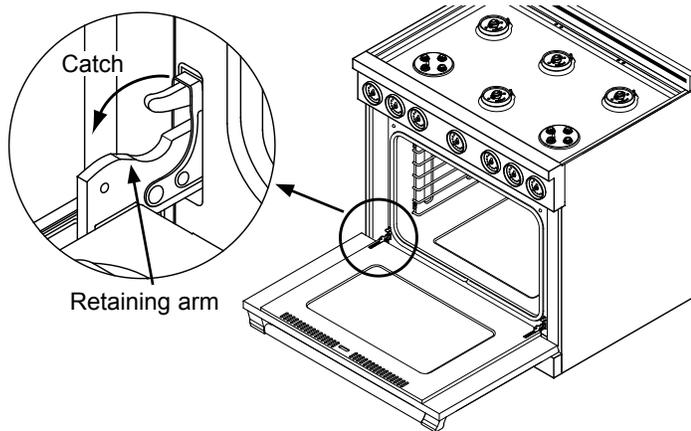

3. Lift the oven door to about 15° from vertical.
4. Grasping the door with both hands just below the handle, lift it away from the oven.

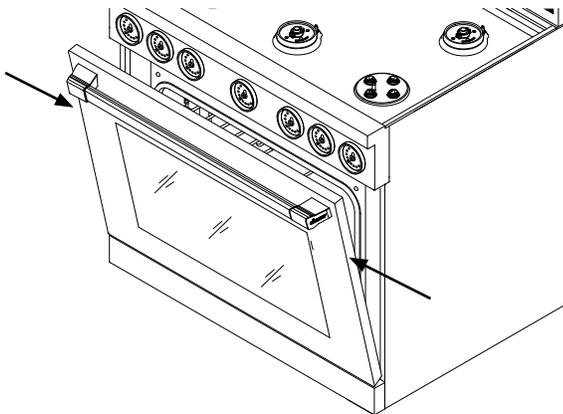


Connecting the Gas

WARNING

- Close the gas-supply valve, and unplug the range before connecting the gas line.
- Do not overtighten the gas connections/fittings.
- Do not use Teflon tape or plumber's putty on gas flex line connections.
- LP installations: The LP gas tank must have its own high-pressure regulator in addition to the range's own regulator.
- The maximum gas-supply pressure to the regulator must never exceed 1/2 psi (pound/square inch) or 3.5 kPa.
- Disconnect the range and shut-off valve from the gas supply piping for pressure tests over 1/2 psi (3.5 kPa).
- The shut-off valve must be closed during pressure testing at or below 1/2 psi (3.5 kPa).
- Check all gas lines for leaks as instructed to avoid a fire or explosion hazard. Do not use a flame to check for leaks.

NOTE: The gas-pressure regulator is factory-set the type of gas intended for use with the range. To verify that the range is compatible with the home gas supply, see the range rating label (rear of range). If the range should use LP gas, "LP" will be in the model number. Call your dealer if the range is incompatible with the home gas supply.


1. Close the gas-supply valve, and unplug the range.
2. Connect a flexible gas line to the gas shut-off valve previously installed on the stub out.
The gas line must be long enough for the range to be pulled out for service without disconnecting the flex line.
3. Slide the gas line up through the access holes in the chassis to the regulator. (Move aside the wires in the access holes to keep them from catching on the gas line.)
4. Connect the gas line to the regulator.
5. Turn off all cooktop control valves, and open the gas valve.
6. With a soap-and-water solution, check all lines and connections for leaks.
7. (If there are no gas leaks) Close the gas valve connected to the range.

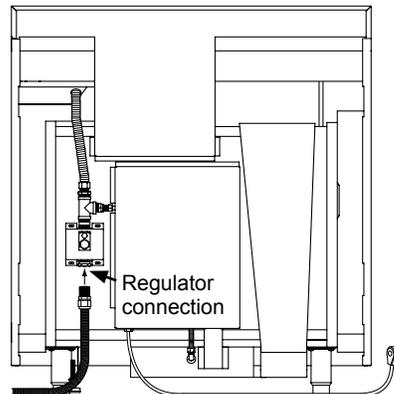

Installation Instructions

Finalizing Anti-Tip Installation

1. Peel the protective plastic from the range (including the door).
2. Measure from floor to countertop, and adjust the leveling legs as needed so the cooktop trim is even with or above the countertop.
3. Find the anti-tip foot on the back of the range, and turn it until it is $1/16"$ (2 mm) off the floor.

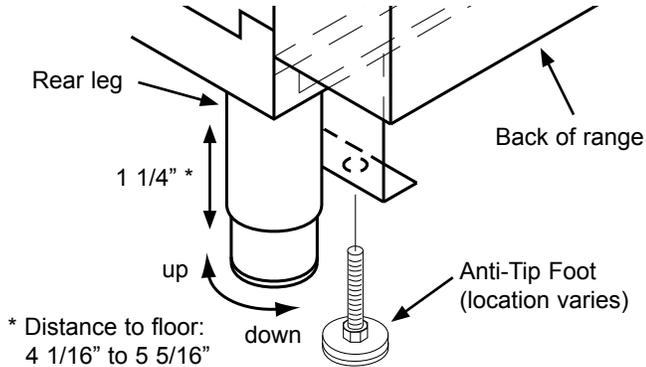

4. Carefully slide the range into the cutout, ensuring the anti-tip foot engages the anti-tip bracket.
5. With a flashlight, verify that the bracket covers the anti-tip foot.



6. With a level ensure the range does not tilt front to back or side to side. (Adjust the legs as needed.)


Re-installing the Oven Door(s)

WARNING

To avoid personal injury or property damage:

- Before opening the door, ensure the notch on the bottom of each hinge rests on the lower lip of each hinge receptacle.
- Flip the hinge locks toward the range immediately after installing the door.

1. Grasp the oven door on the sides below the handle, and hold it at a 15° angle to the oven front.
2. Slide the hinges into their openings, resting the bottom of the hinge arms on the hinge receptacles.
3. Keeping the door at 15° , push until the notch on the bottom of each hinge slips over the lower lip of each hinge receptacle.

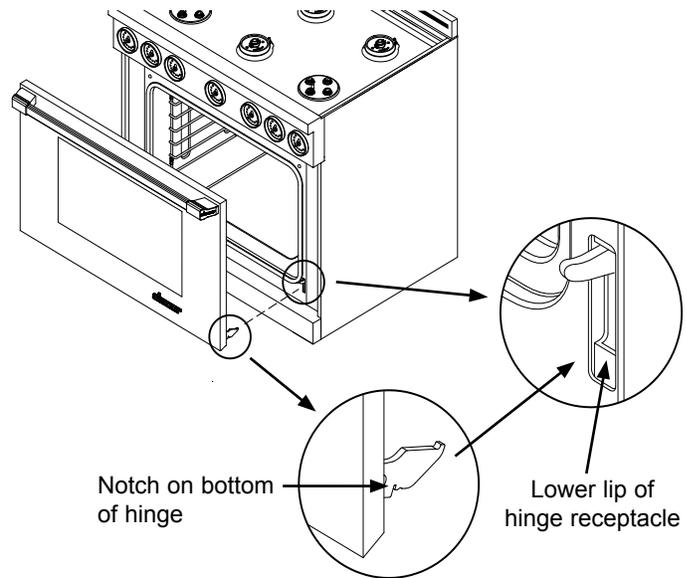

4. Fully open the door, and flip both hinge locks toward the oven.
5. Carefully open/close the door fully to verify proper installation.
6. Remove any packaging from inside the oven.

Installation Instructions


Installing the Burner Knobs

WARNING

Incorrectly installing the burner-control knobs may lead to griddle damage from excessive heat. Knobs for the center burners have the MAX GRIDDLE setting.


NOTE: A D-shaped key on the back of each knob mates with the D-shaped valve stem to ensure proper installation and function

The range has three types of burner-control knobs:

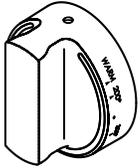


WARM 200° 300° 400° 500° BROIL CLEAN


Oven / Broil Knob **A**

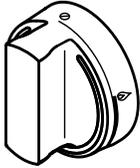


Max Griddle Burner Knob Icons **B**

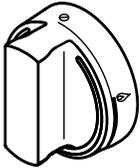

Left Burner Knob Icons **C**

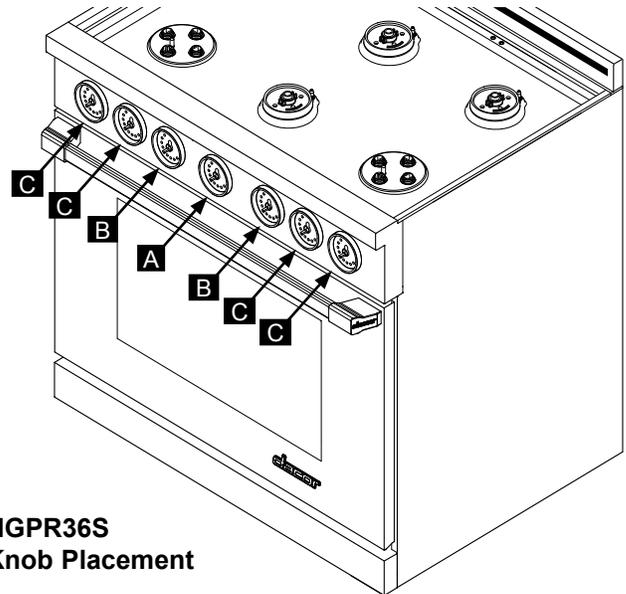

HGPR36S
Knob Placement

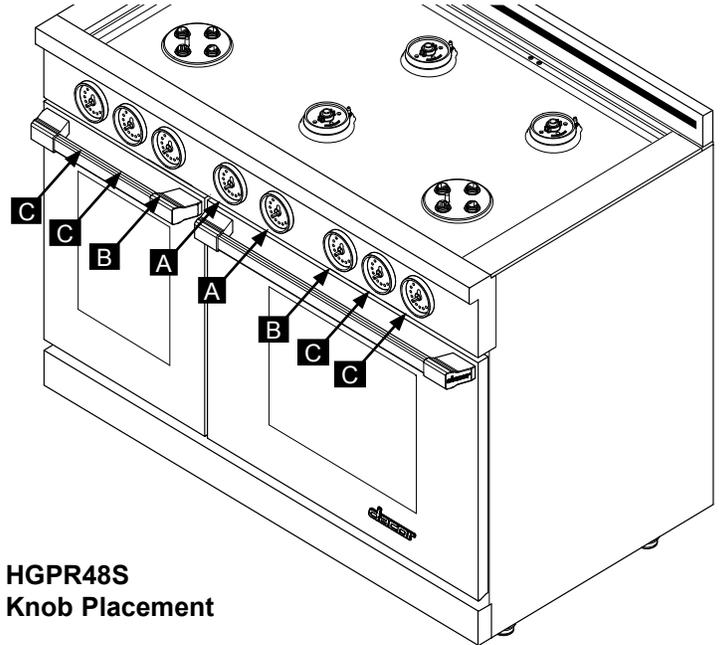

HGPR48S
Knob Placement

Installation Instructions


Assembling the Cooktop

WARNING


Do not use the cooktop unless all burner components and grates are properly in place.

- The range uses standard and SimmerSear burners.
- Use porcelain or brass burner caps as you prefer.
- When assembling the burners, rotate/adjust each part until it seats securely in place for proper function.
- Gently set the grates in the spill tray so the feet of each grate rest in their corresponding dimples formed into the spill tray.


STEP 3: Install burner cap. Ridge on cap must surround top of ring.

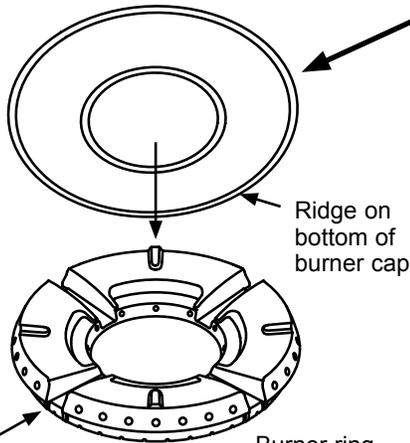


STEP 2: Install burner ring. Line up ring tabs with head slots.

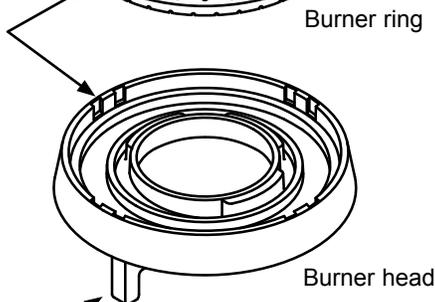


STEP 1: Install burner head. Put locating tab in keyed hole.

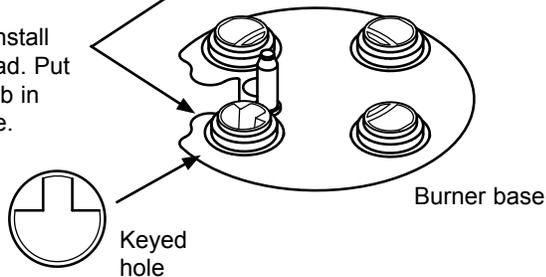


SimmerSear Burner Installation

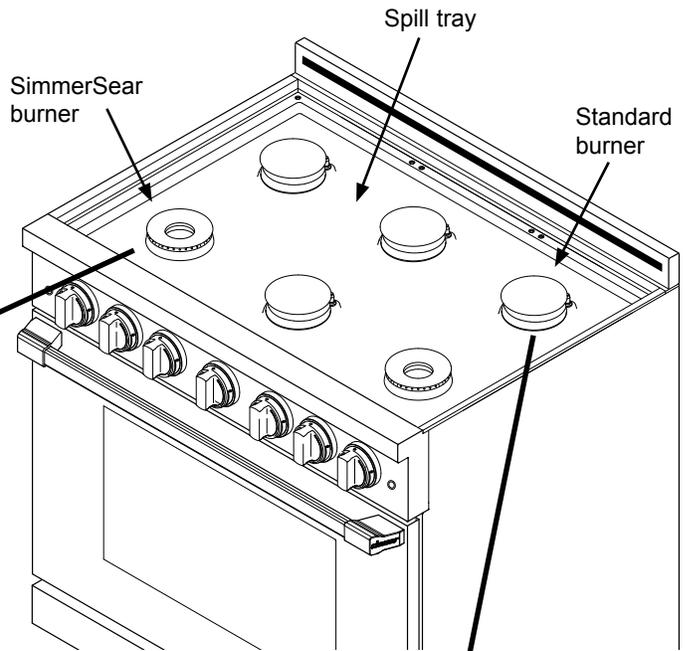


STEP 3: Install burner caps. Ridge on cap must surround top of ring.

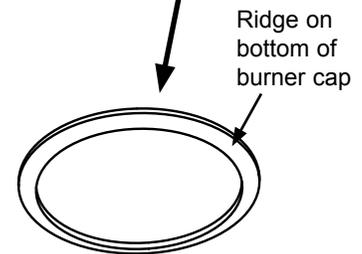

STEP 2: Turn ring until it drops into place.

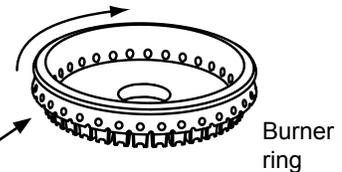

STEP 1: Put burner ring on top of head.

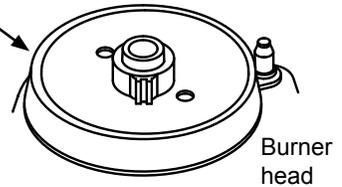

Standard Burner Installation


Installation Instructions

Verifying Proper Function

Before using the range, read the User Manual completely. It contains important safety, service, and warranty information.

Before starting, turn off all range controls, and verify that all cooktop components are properly in place..

1. Open the gas-supply valve.
2. Plug in the range.
The oven indicator light blinks for 10 seconds. (When the blinking stops, go to Step 3.)
3. Test a burner: Pushing-turn a knob to **HIGH**.
The burner may take 4 seconds to ignite, at which time the ignitor stops sparking.
If ignition does not occur within 4 seconds, turn the burner off, wait 5 minutes for the gas to dissipate, then repeat Step 3.
4. After ignition, turn the knob to **LOW**.
A proper flame is steady and quiet, with a sharp, blue inner cone that varies in length with the burner size. Dacor's Smart Flame™ feature reduces the flame under the grate fingers to lengthen the life of the grate. If the range is equipped for LP gas, the flame tips may be yellow, which is normal.
5. Turn the burner off, and repeat the ignition test for the other burners, being sure to turn each off after testing.
6. Open the oven door. On the control panel, turn the light switch on and off.
The oven lights go on and off.
7. Turn on/off the convection fan.
Behind the filter in the oven's rear wall, the fan whirs and stops.
8. With the door open, turn the oven to 400 °F.
The knob and oven's ON indicator light up. Within 60 seconds, the bake burner (in the oven floor) comes on and starts giving off heat.
9. Turn the oven to BROIL.
The bake burner turns off. The oven knob and oven's ON indicator are lit; within 60 seconds the IR burner (on the oven ceiling) ignites and starts giving off heat.
10. Turn off the oven.
11. (Model HGPR48S) Verify the proper function of both ovens.

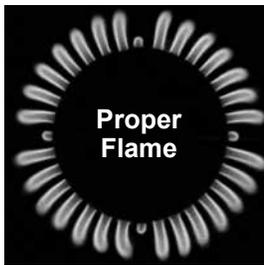

If the range does not operate properly:

1. Check the electrical connections and gas supply to ensure that the installation has been completed correctly, and that the range receives power and gas..
2. Retest cooktop and oven function.
3. If the range still does not work, contact Dacor Customer Assurance (833) 353-5483. Do not try to repair the range yourself.

Product damage/failure due to improper installation and service is not warrantied.

Moving the Range for Service

1. Close the gas-supply valve, and unplug the range.
2. Pull the range out from the wall.
3. Perform the needed service/maintenance.
4. Push the range back into place, being sure to engage the anti-tip bracket (see Pg. 8).
5. Plug in the range, and open the gas-supply valve.

Installation Checklist

WARNING

- To the installer: Complete this checklist to verify thorough installation.
- To the owner: Proper installation is your responsibility. Make sure all installation work is performed by qualified personnel.

- Was the plastic coating removed from the outside of the range?
- Were all packaging materials removed from the oven?
- Were all leveling legs lowered to the floor?
- Is the unit level? (Pg. 8.)
- Is the range secured with the provided anti-tip bracket and foot as instructed in this manual? (Pgs. 5, 8.)
- Was the gas-supply inlet pressure measured to ensure it does not exceed the maximums specified in this manual. (Pg. 2.)
- Is the range connected to the gas supply as instructed and according to applicable codes?
- Was the gas supply checked for leaks?
- Is the oven door properly installed? (Pg. 9.)
- Were the burner knobs properly installed? (Pg. 9.)
- Are the burners properly assembled and grates properly installed? (Pg. 10.)
- Was proper function verified?
- Was the warranty activated online or the warranty card filled out and mailed?

Notes

Notes

dacor

LET THE SHOW BEGIN