
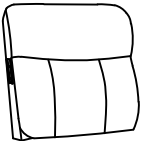
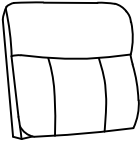
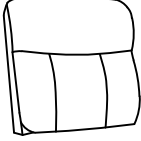


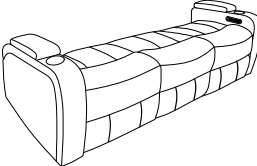


ASSEMBLY INSTRUCTION

UM2768-PRS W/PHR AND LED

DESCRIPTION:POWER RECLINING SOFA W/ PHR, DDT

 
Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

PART LIST:							
No.	Description	Sketch	Quantity	No.	Description	Sketch	Quantity
A	Left Back		1pc	B	Middle Back		1pc
C	Right Back		1pc	D	Seat		1pc
E	Left Wing		1pc	F	Right Wing		1pc
G	Plug With Wire		1pc				

STEP 1:


Important

1. Attached Backrest (A,B,C) to seat (D).

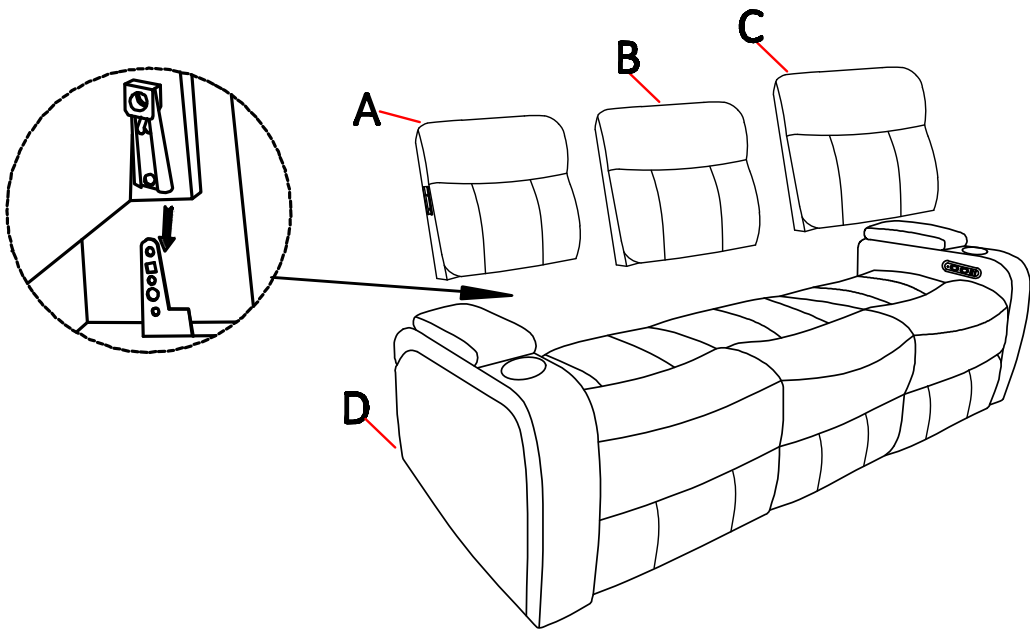

STEP 2:


Important : Slide parts E and F until they are firmly and stably positioned.

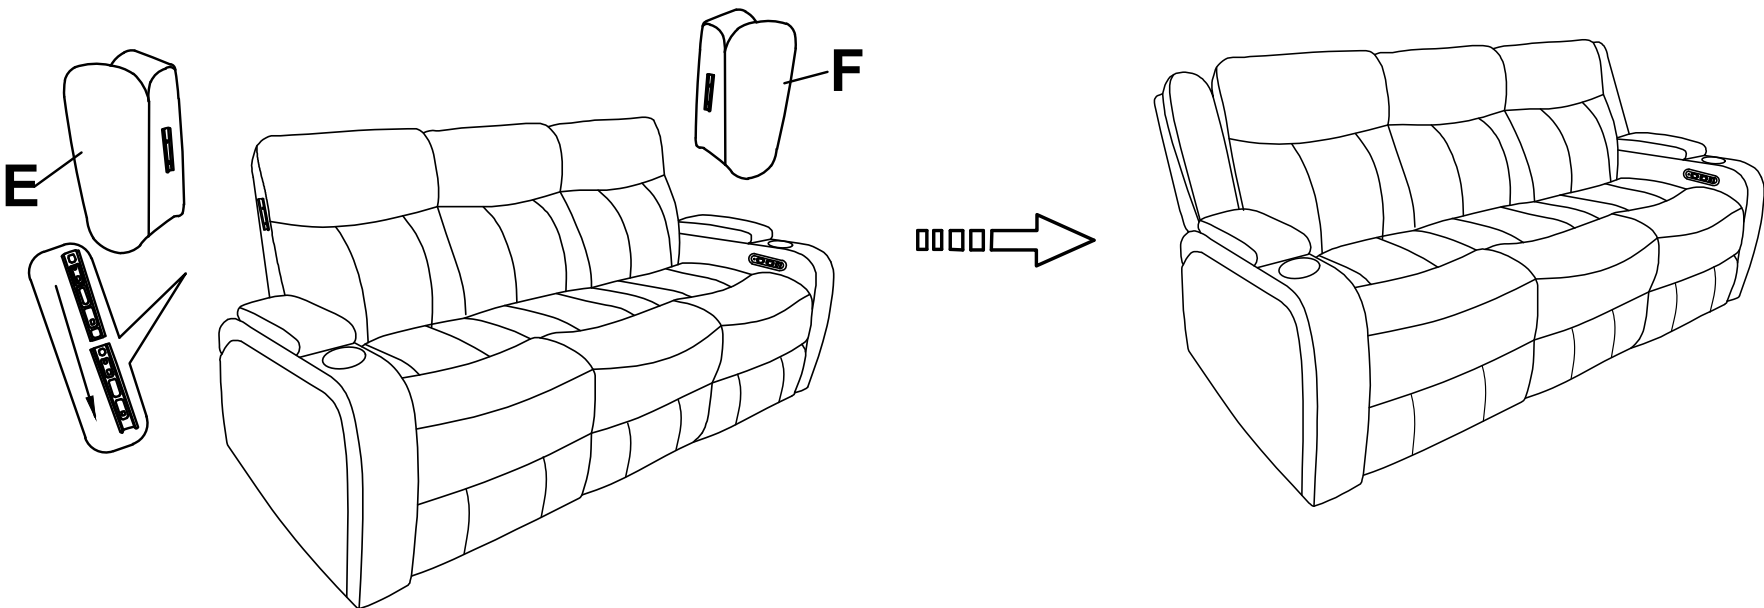

Made In Viet Nam

STEP 3:

Important: Connect the plug (G) to the sofa seat (A).

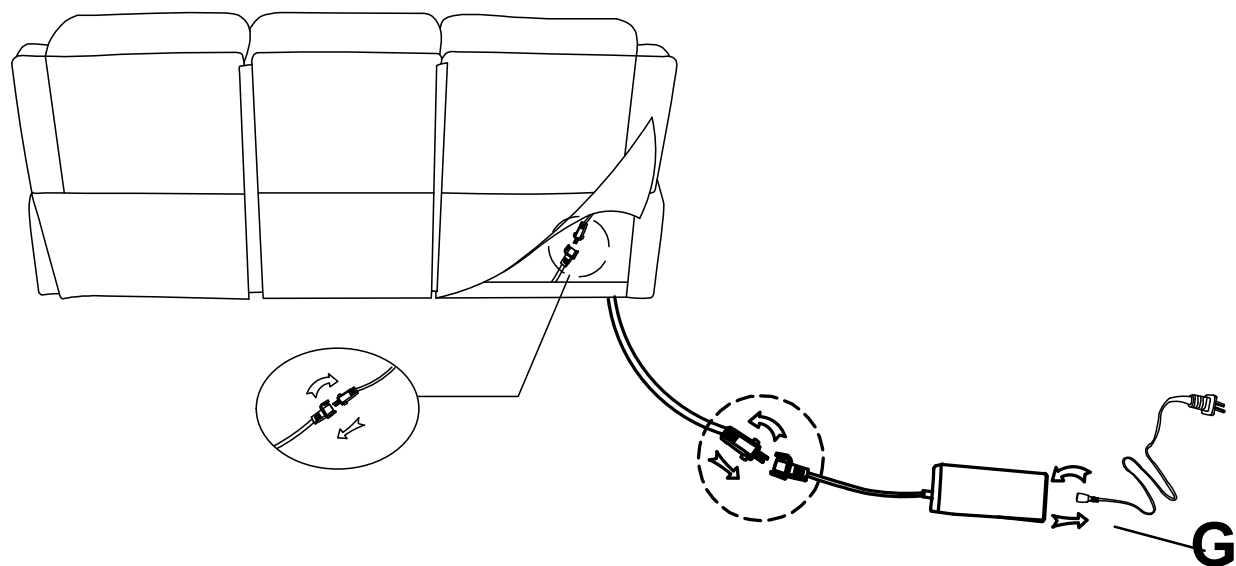

STEP 4:

Important : Open the footrest by pulling out the Switch.

