

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

225062 *Nightstand*

REVISION 0: 11/23/2024

COASTERFURNITURE.COM

ITEM: 225062

COASTER

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND

1PC

B LEG WITH LABEL "R"

2PCS

C LEG WITH LABEL "L"

HARDWARE IDENTIFICATION

1	BOLT (M6 x 35mm - BLK)	4PCS
2	LOCK WASHER (1/4" - BLK)	4PCS
3	FLAT WASHER (1/4"ID x 19mm - BLK)	4PCS
4	WOOD DOWEL (8 x 20mm)	4PCS
5	ALLEN WRENCH (M4 x 60mm - BLK)	1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM:**225062**


ASSEMBLY INSTRUCTIONS

STEP 1




STEP 2

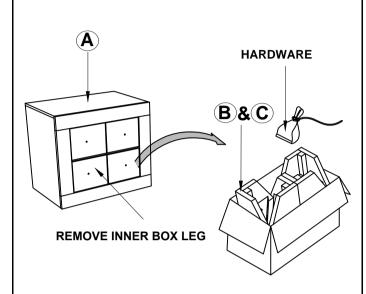

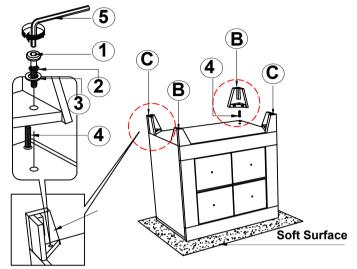

Bottom View

STEP 3

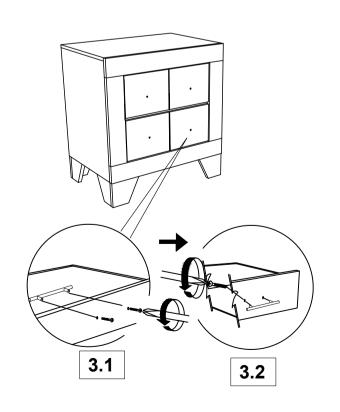

STEP 4 COMPLETE






COASTERFURNITURE.COM



Inner Size of Drawer: 12.75"W x 11.25"D x 4.25"H x 0.25"T

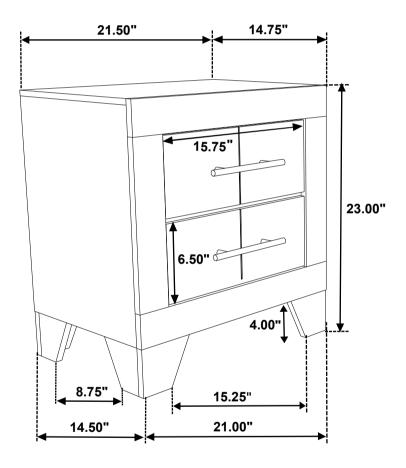

Note: Dimension tolerance ± 5%