

This quick reference guide to dishwasher accessories will help to make sure you have what you need for a successful installation in just 3 easy steps:

Step 1 Find your model number.

Step 2 Read the information on accessories to determine your needs and prepare yourself by knowing the answers to the following questions:

- Do you have the required water supply?
- Do you have the ability to drain within 12 ft. of the dishwasher? (A 60" drain hose is included. If your drain exceeds this distance, you need to purchase a drain hose extension kit)
- Do you have a garbage disposal?
- Do you have the required electrical supply and a min. 15 Amp circuit?

Step 3 Identify the items you need to purchase for your dishwasher appliance.

Where to purchase accessories

Accessories can be purchased in-store with unit, or from LG Canada Parts & Accessories:

[Shop online at LGCanadaParts.com](https://www.lgcanadaparts.com)

Call 1-855-341-2732

Contents

Dishwashers 2



LG dishwasher leveling

Watch video



www.youtube.com/watch?v=huXc4-f7_-M

LG dishwasher accessory guide



LDNTH862S



LDNTH753_ (S/D)



LDNPM654_ (S/D)



LDNPQ555_ (S, D)



SDWB24_3(S,W)



LDPN454_ (HT/2W)



LDFC3532S



LDFC2423_ (V, W)

Water supply requirements

LG dishwashers must be connected to a hot water supply with a temperature range between 120°F and 149°F. Required min. / max. water pressure is 20–80 psi.

 
 


Required purchase

3/8" braided water supply hose or 3/8" copper tubing with compression fitting (3/8" 90° elbow installed at factory)

Drain hose requirements

Cut the included adapter so the end matches the size of the drain connection.



Optional purchase

Drain hose extension

A 60" drain hose is attached to the dishwasher. If an extension drain hose is required, use a 5/8" or 7/8" inside diameter, 2–3 ft. length hose and a coupler for connecting the two hose ends. Do not exceed 12 ft. distance to the drain*

*If connecting the dishwasher's drain hose to the garbage disposal, be sure to follow your garbage disposal's manual for proper installation instructions.

Electrical requirements



Required purchase

3-wire electric cable connected to a 120 V, 60 Hz, 15 Amp circuit breaker

Installation parts



 
Required purchase

Coupler




Required purchase

Coupler
Air gap



Required purchase

 7/8" strain relief
Hose clamp
Wire nuts for 16-gauge wiring
Electrical tape



Included

1 Hose clamp
2 Installation brackets
4 Wood screws



Included

1 Moisture barrier for top (aluminum tape)
2 Moisture barriers for sides (aluminum tape)

Not applicable

If you want the dishwasher toe kick or custom panel and handle to match your cabinetry, you must purchase separately from a local fabricator or cabinet supplier.



Optional purchase

Wood toe kick (if desired)