



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

108146
Bench

ITEM: **108146**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

 
PARTS IDENTIFICATION

A SEAT



1PC

B SIDE LEG FRAME



2PCS

C CENTER LEG FRAME



1PC

D METAL ROD



2PCS

HARDWARE IDENTIFICATION

1 BOLT
(Ø1/4" x 38mm - RBW)



12PCS

2 LOCK WASHER
(Ø5/16" x 13mm - RBW)



12PCS

3 FLAT WASHER
(Ø5/16" x 19mm - RBW)



 
12PCS

4 FLAT HEAD SCREW
(Ø4 x 19mm - RBW)



8PCS

5 ALLEN WRENCH
(M4 x 59mm - RBW)



1PC

NOTE:


Phillips head screw driver is required in the assembly process. However, manufacturer does not provide this item.

ITEM: **108146**


ASSEMBLY INSTRUCTIONS




STEP 1

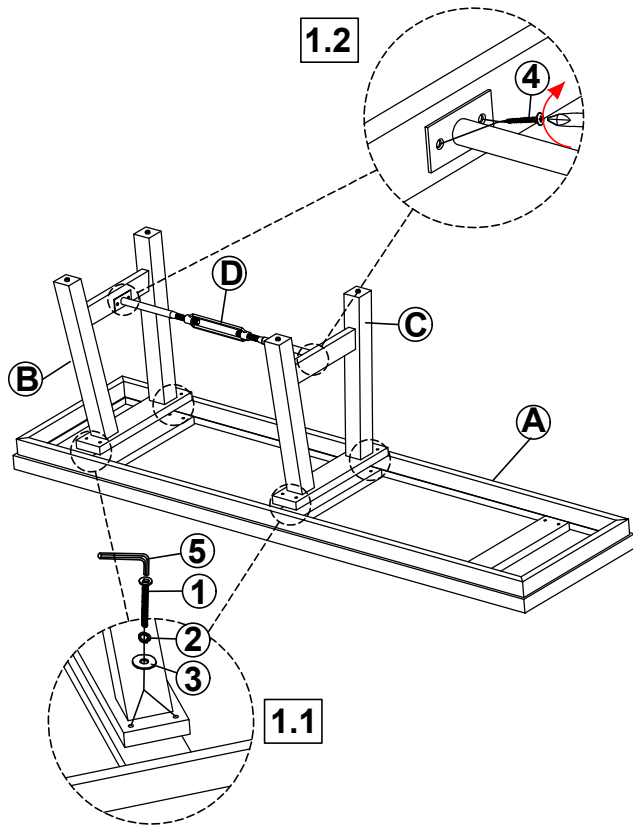


STEP 2

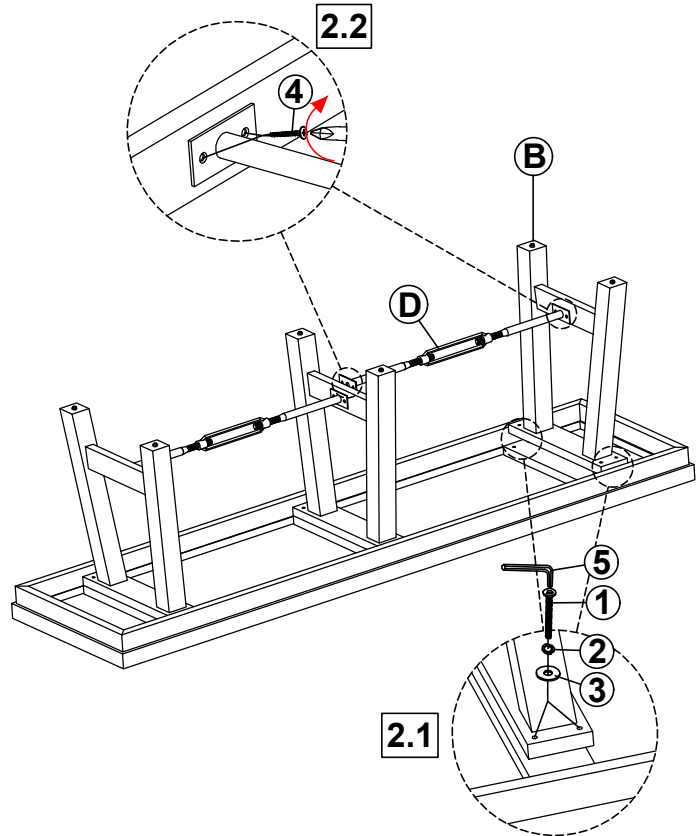

STEP 3 **COMPLETE**

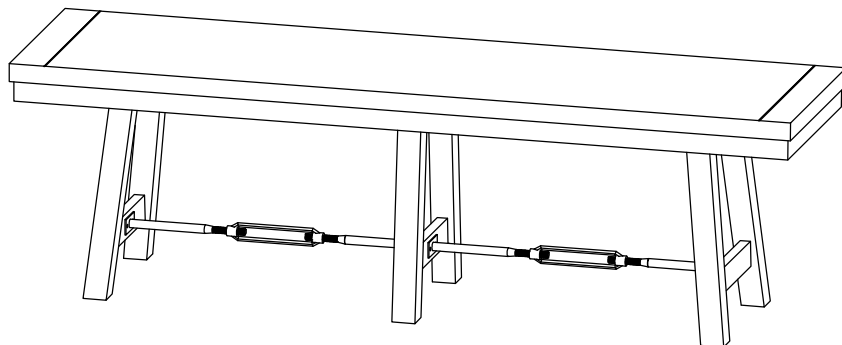

ITEM: **108146**

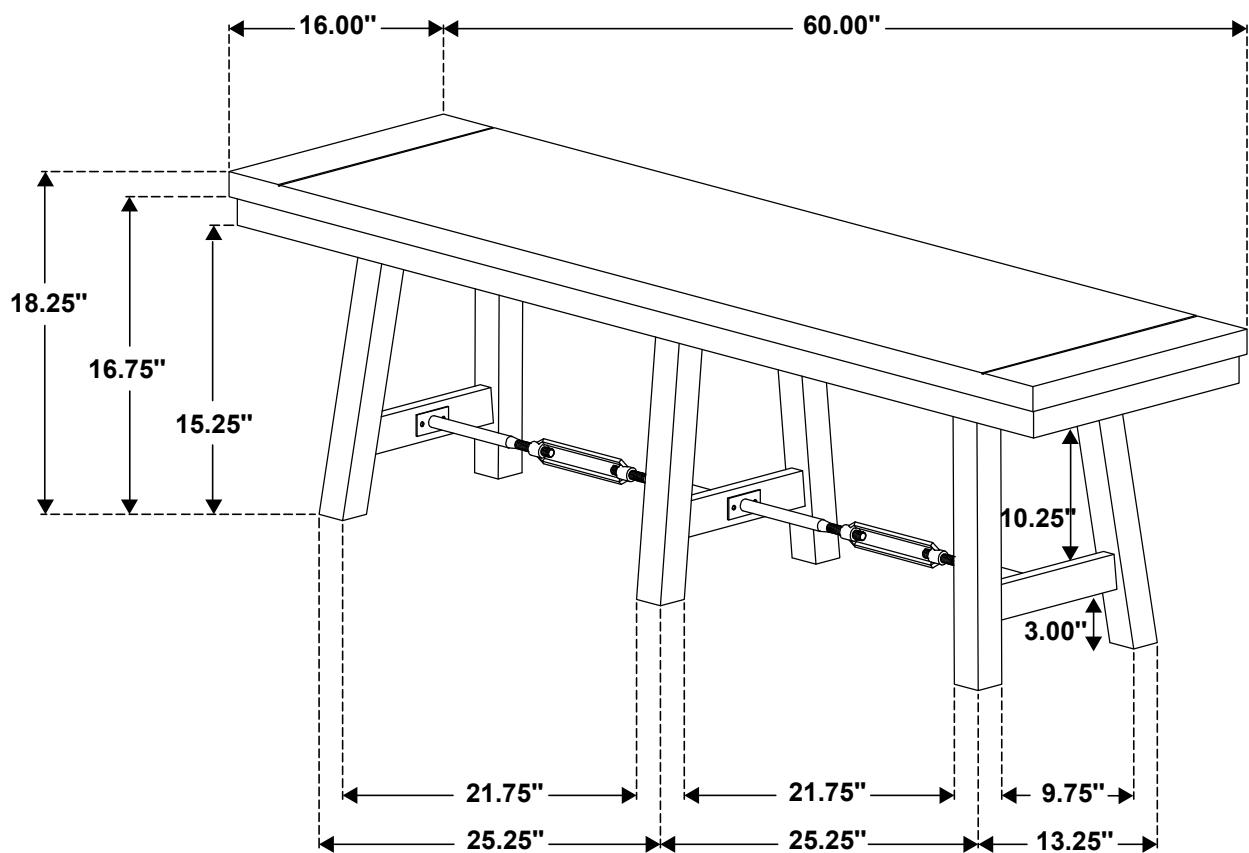

Note: Dimension tolerance $\pm 5\%$