 


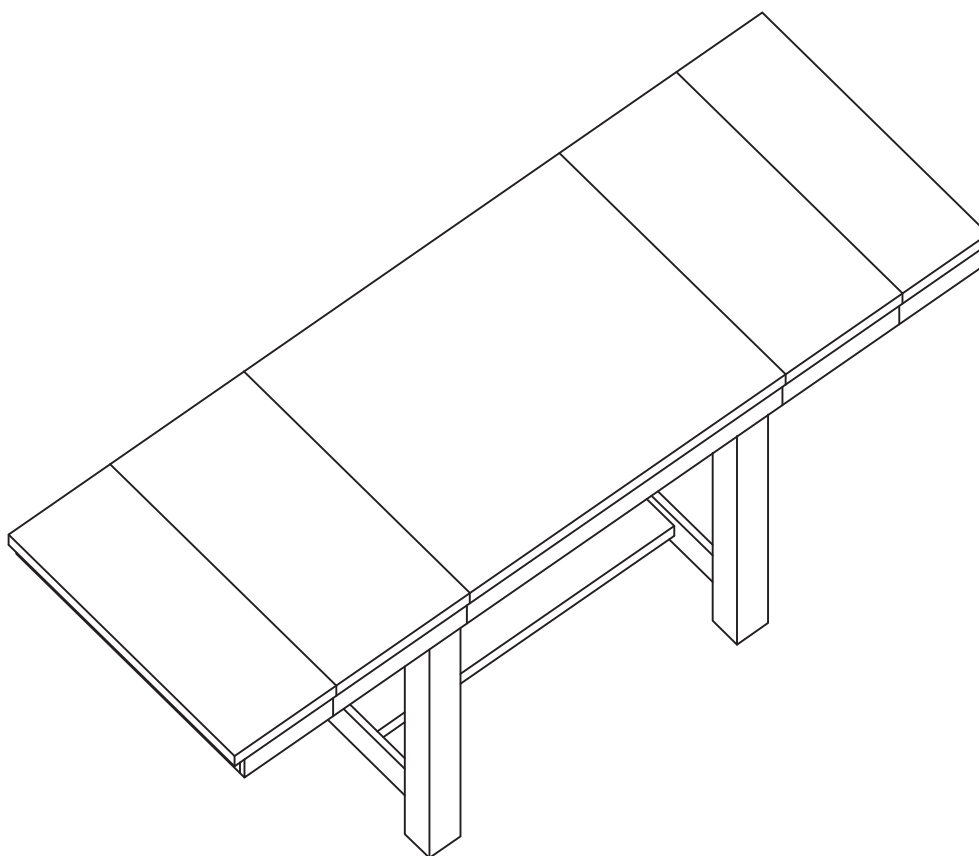

Assembly Instructions

For more information contact our team: service.ec@foagroup.com

CM3543T/ PT



 
ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY  DIFFICULT

Tools Required For Assembly:

Allen Wrench



(Included)

Phillips Screwdriver



(Not Included)

 


2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

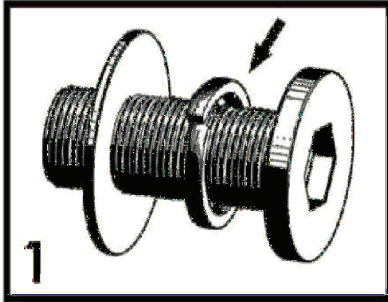

 
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

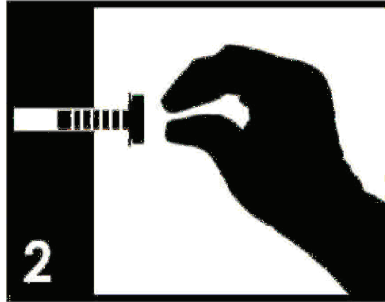

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

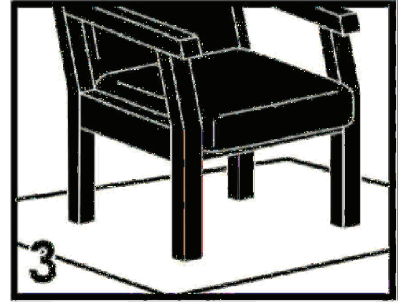

 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor. No dragging of products/parts.

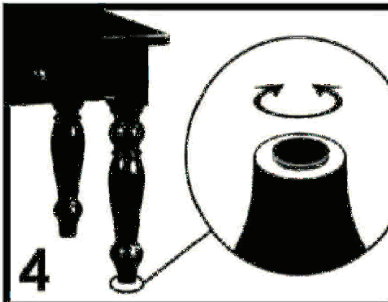

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

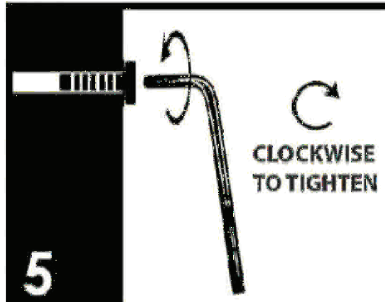

 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

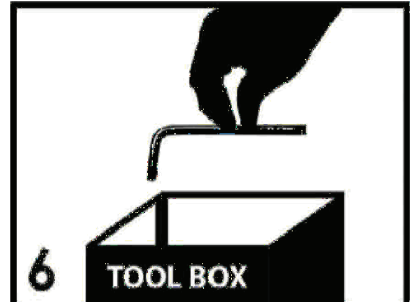


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



 
FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

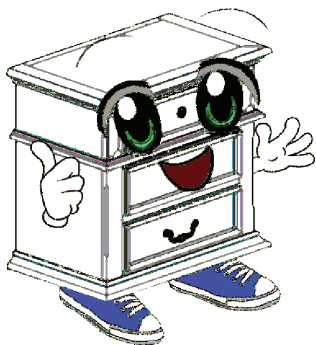

Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

 Parts List

	#1 x 1pc Table Top
	#2 x 2pcs Foot box
	#3 x 1pc Bottom plate
	#4 x 2pcs On The Cross
	#5 x 2pcs Connect The Panel

Hardware List


	#A x 4pcs Bolt Ø5/16"x4-3/4"
	#B x 4pcs Bolt Ø5/16"x2-1/8"
	#C x 12pcs Bolt Ø5/16"x1-1/2"
	#D x 20pcs Lock Washer Ø5/16"
	#E x 20pcs Flat Washer Ø5/16"
	#F x 1pc Allen Key 4mm
	#G x 1pc Allen Key 5mm



#1

#A x 4pcs
#B x 4pcs
#D x 8pcs
#E x 8pcs

 1) Prepare 8 bolts assembly by inserting lock washer (#D), then flat washer (#E) onto bolts (#A,B). Align and attach cross bars (#4) to the top holes of the side panels (#2). Secure with bolts (#A), but do not fully tighten.

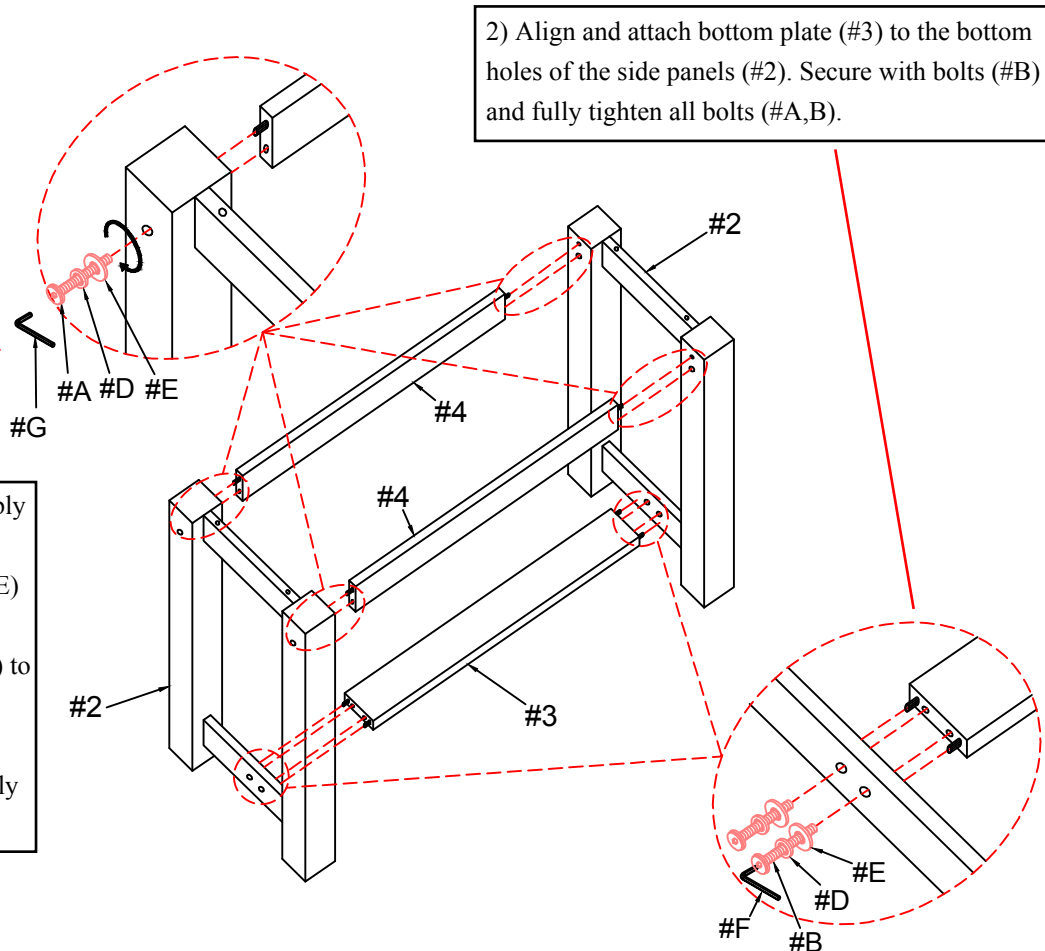


2) Align and attach bottom plate (#3) to the bottom holes of the side panels (#2). Secure with bolts (#B) and fully tighten all bolts (#A,B).



#2
 
#C x 4pcs
#D x 4pcs
#E x 4pcs


Prepare 4 bolts assembly by inserting lock washer (#D), then flat washer (#E) onto bolts (#C). Align connect panel (#5) to the holes of the foot box (#2). Secure with bolts (#C).

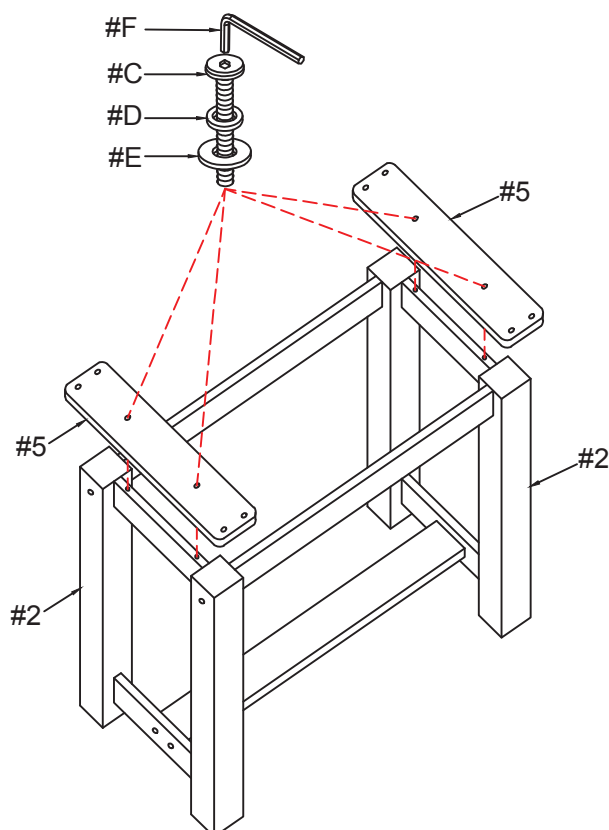




#C x 8pcs
#D x 8pcs
#E x 8pcs

 Prepare 8 bolts assembly by inserting lock washer (#D), then flat washer (#E) onto bolts (#C).
Align the foot box (#2) to the holes of the table top (#1). Secure with bolts (#C).

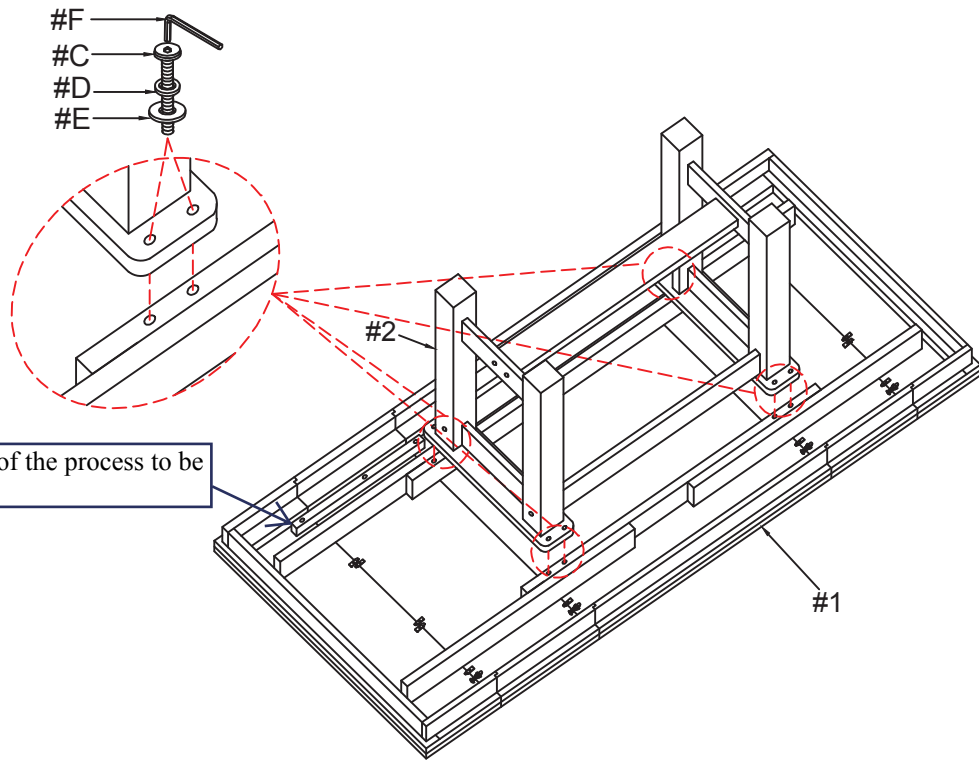


 Unlock the bottom switches of the table top.

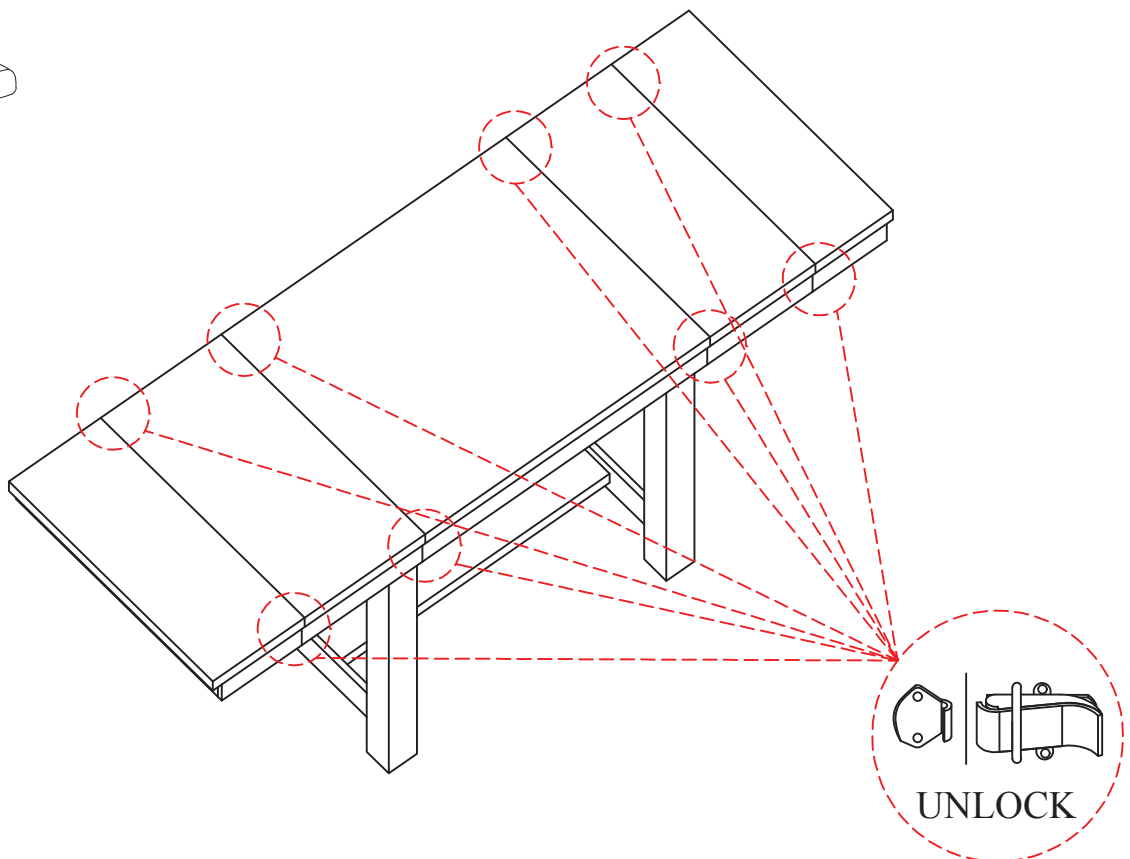



 Remove the leaf of the table to make the table top condensed.

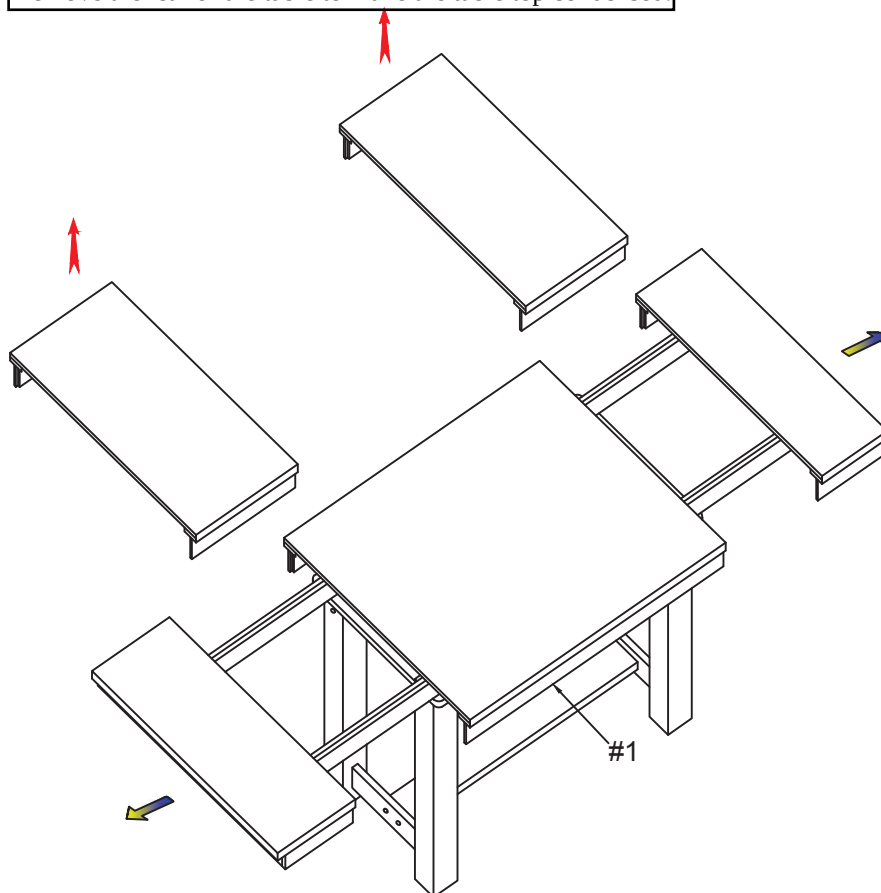

Lock the switch under the table.

