

GEOHOME®

ART WITH AN ATTITUDE

ASSEMBLY INSTRUCTIONS

Item No : B118-23
Description : DRESSER

MODEL : B118-23

REVISION : C









ASSEMBLY TIPS :

 
1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast and easy assembly.

 
IMPORTANT NOTE :

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children !
- Tighten screws periodically ! With the use of this product bolts and screws may become loose over time !
- Don't attempt to modify parts !

Component List		
No	Descriptions	Qty
A	Side Panel (Left)	1
B	Side Panel (Right)	1
C	Center Panel	1
D	Top Horizontal (Front)	1
E	Top Horizontal (Back)	1
F	Left Leg (Front)	1
G	Left Leg (Back)	1
H	Right Leg (Front)	1
I	Right Leg (Back)	1
J	Top Panel	1
K	Back Panel	1
L	Apron Panel (Front & Back)	2
M	Top Drawer Front	2
N	Top Drawer Side (Left)	2
O	Top Drawer Side (Right)	2
P	Top Drawer Back	2
Q	Drawer Bottom Shelf	6
R	Drawer Bottom support	6
S	Bottom Drawer Front	4
T	Bottom Drawer Side (Left)	4
U	Bottom Drawer Side (Right)	4
V	Bottom Drawer Back	4

Hardware List		
No	Descriptions	Qty
1	Big Camlock Ø15 x 12mm 	28
2	Small Camlock Ø12 x 10mm 	18
3	Camlock Screw 	46
4	Wooden Dowel 6mm x 30mm 	64
5	PHCB Screw M4 x 16mm 	20
6	PHCB Screw M4 x 32mm 	30
7	Truss Head Screw M4 x 15mm 	12
8	Handle 	6

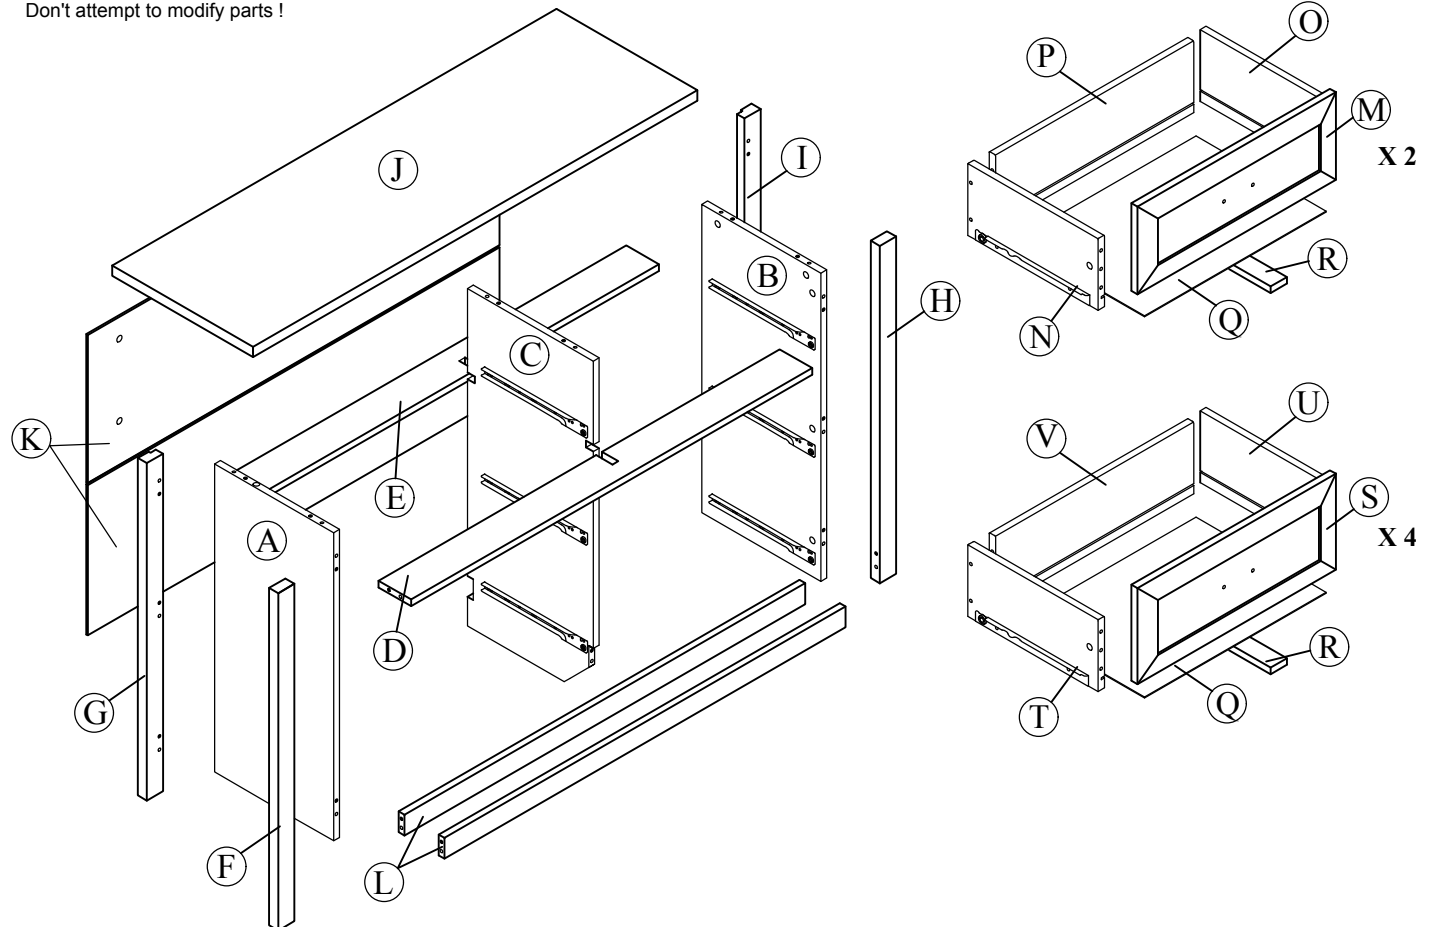

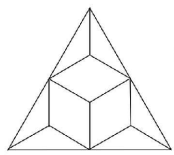



GEOHOME®

ART WITH AN ATTITUDE

ASSEMBLY INSTRUCTIONS

  Item No : B118-23
Description : DRESSER

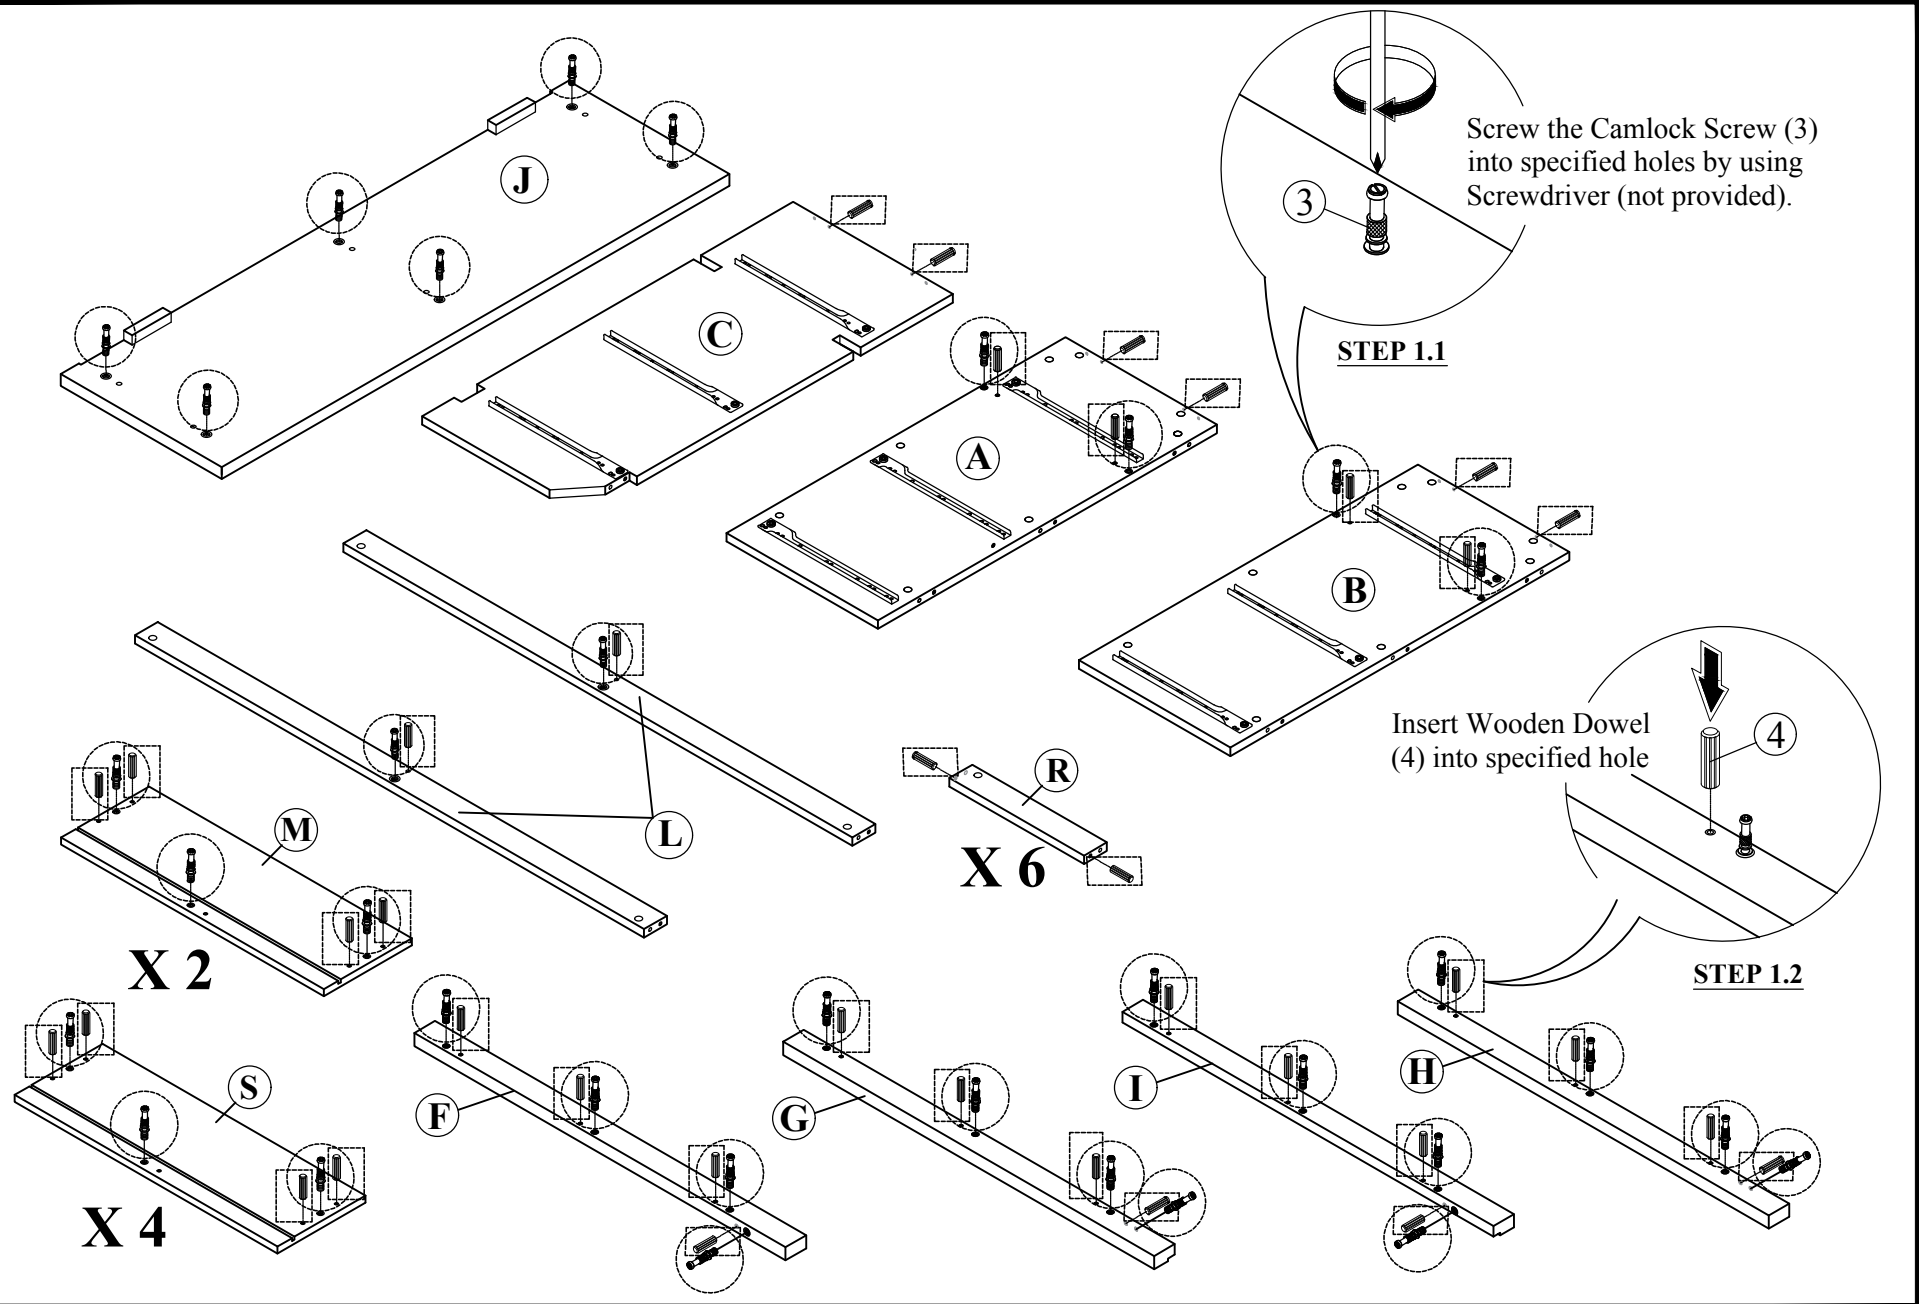

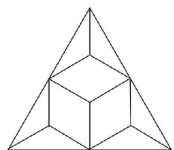



GEOHOME®

ART WITH AN ATTITUDE

ASSEMBLY INSTRUCTIONS

  Item No : B118-23
Description : DRESSER

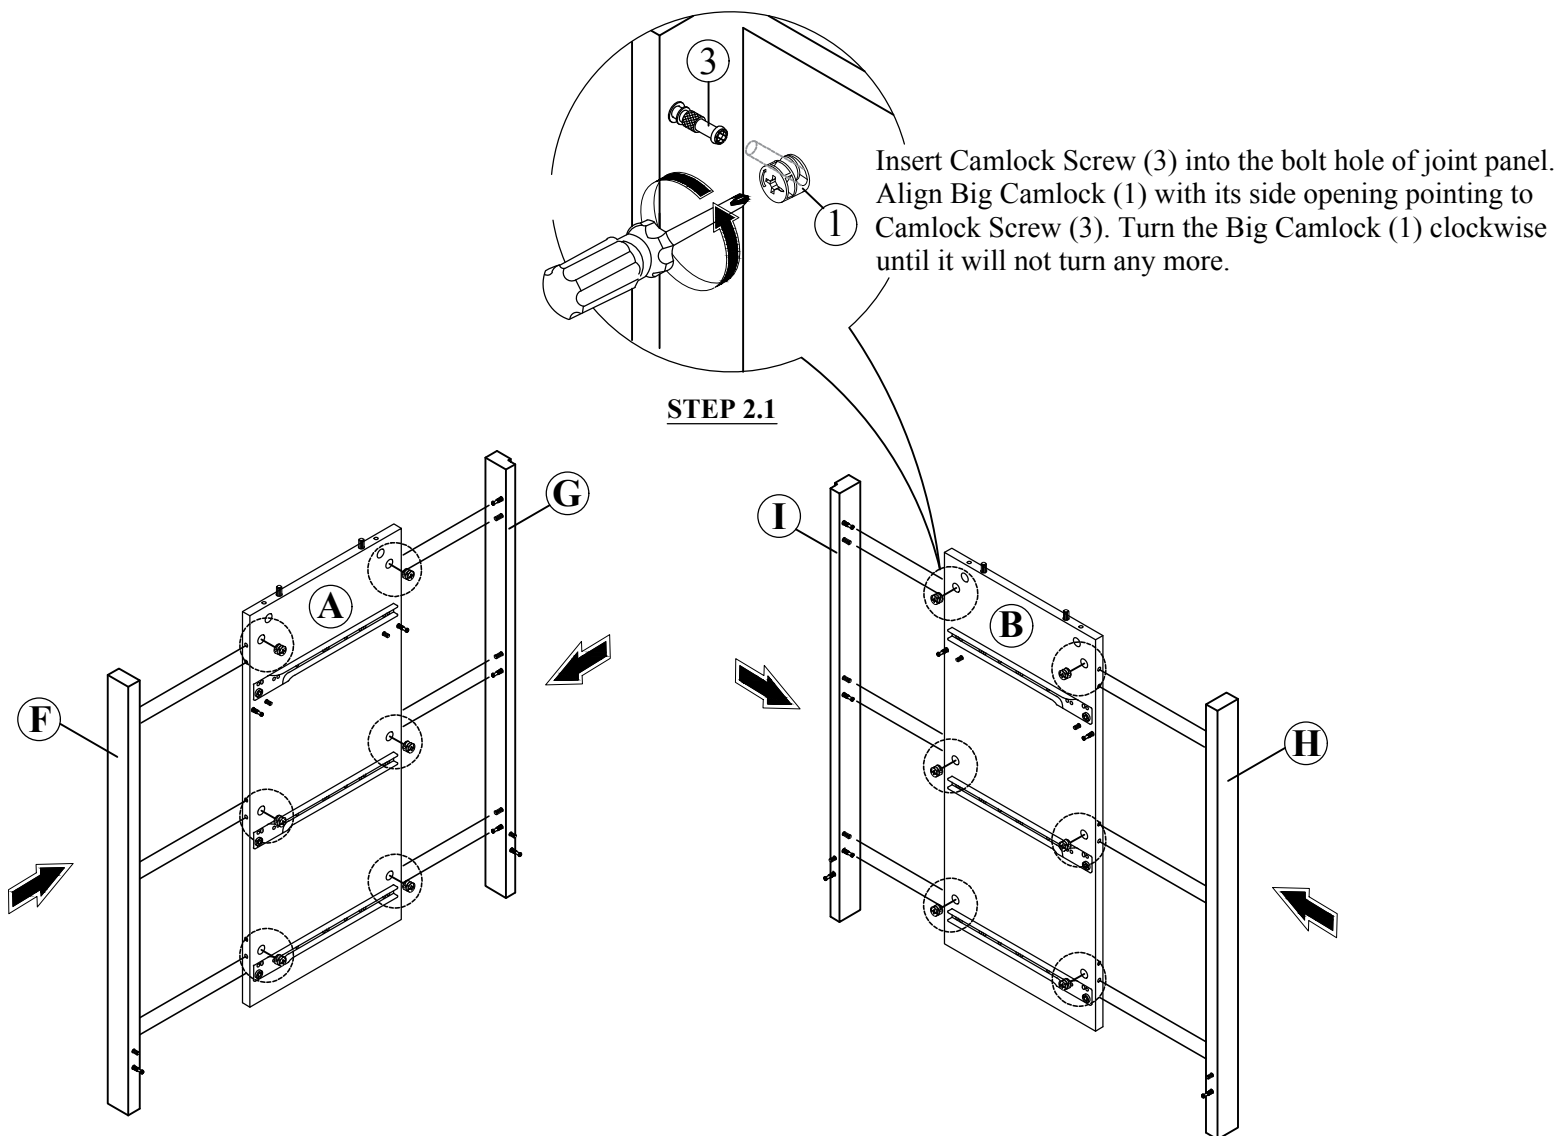


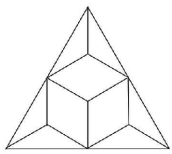


GEOHOME®
ART WITH AN ATTITUDE

ASSEMBLY INSTRUCTIONS

  Item No : B118-23
Description : DRESSER

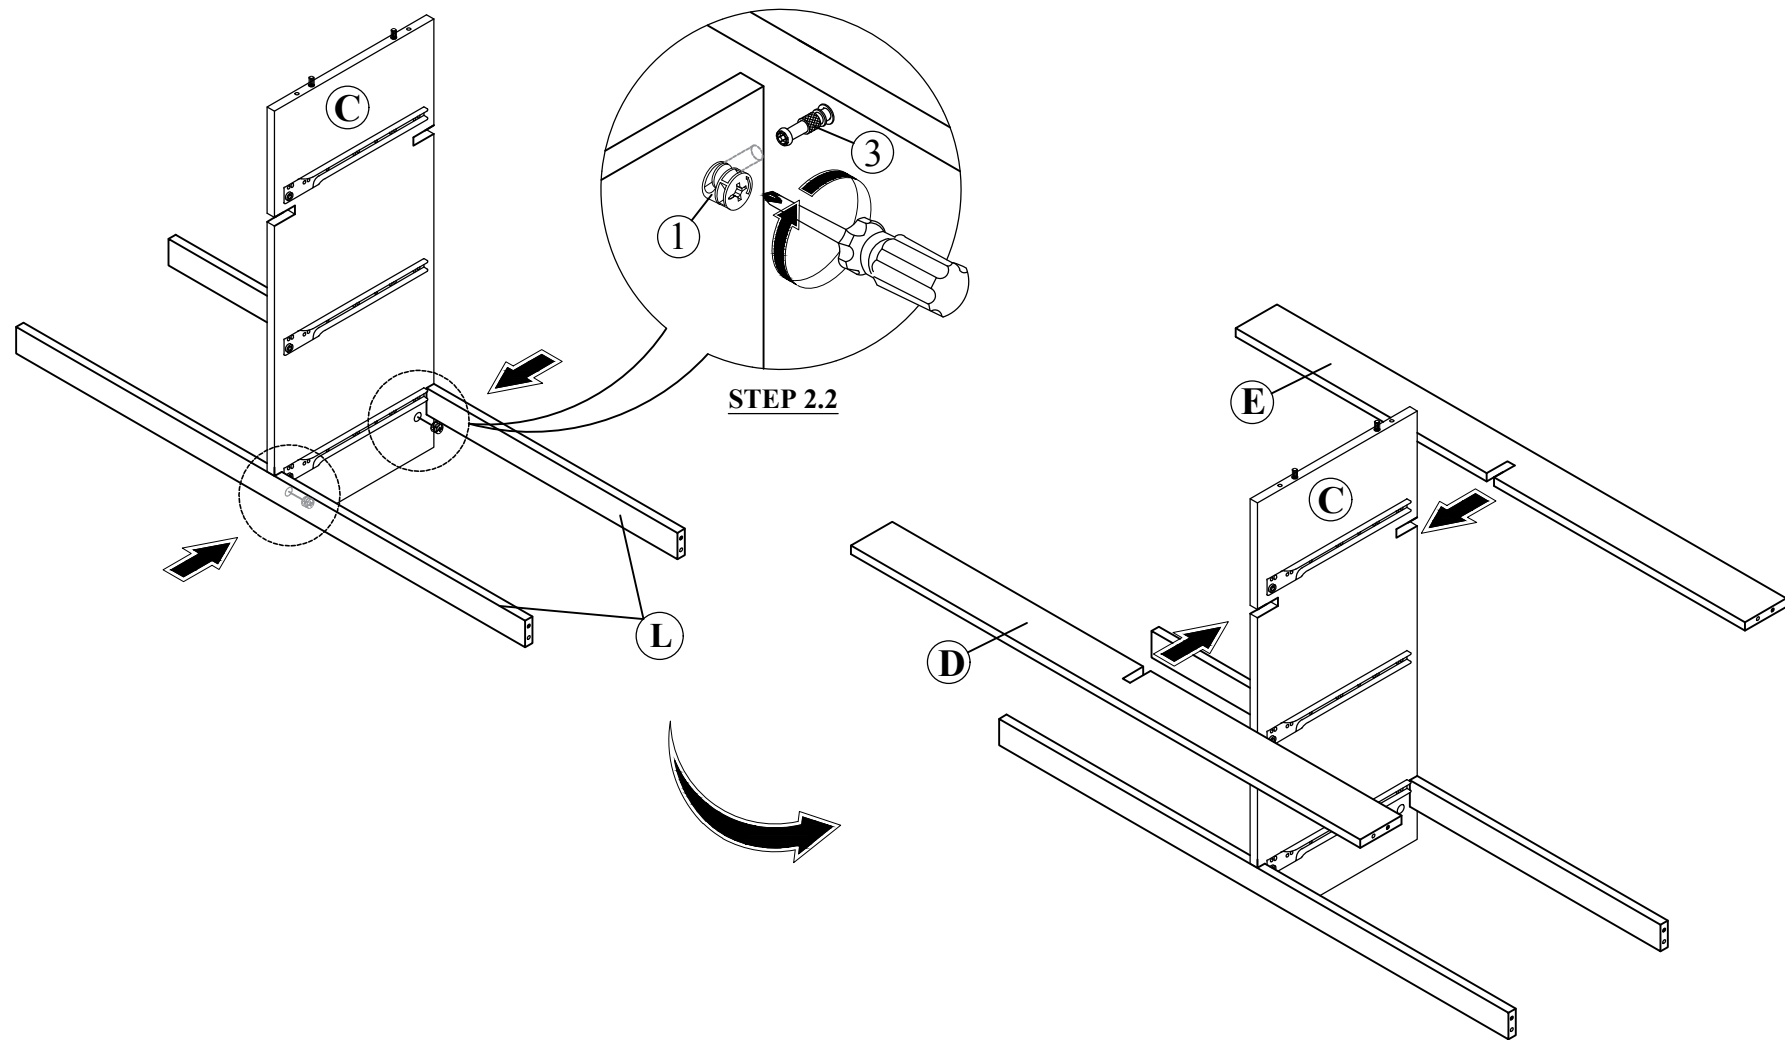

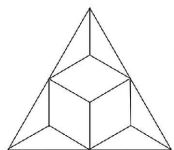



GEOHOME®

ART WITH AN ATTITUDE

ASSEMBLY INSTRUCTIONS

  Item No : B118-23
Description : DRESSER

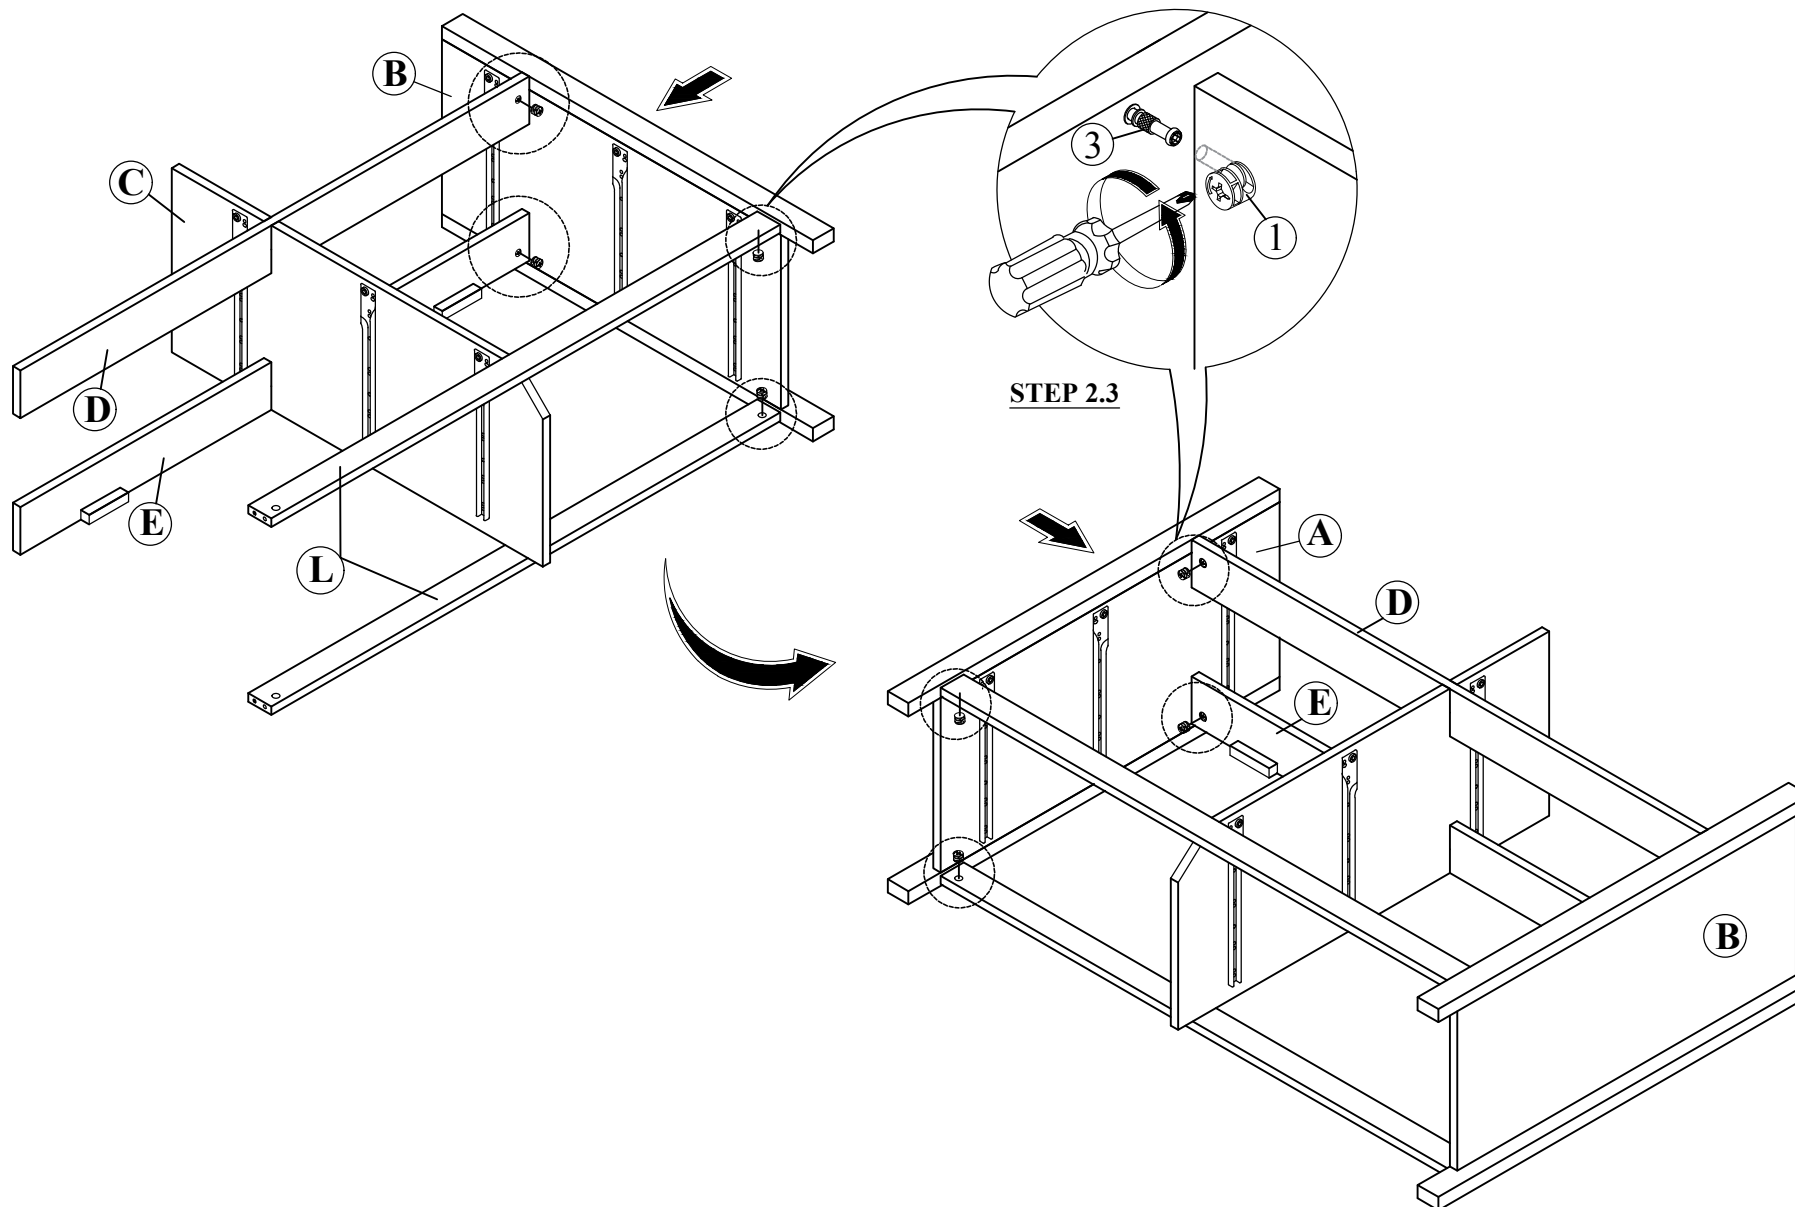


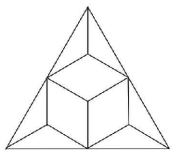


GEOHOME®
ART WITH AN ATTITUDE

ASSEMBLY INSTRUCTIONS

  Item No : B118-23
Description : DRESSER

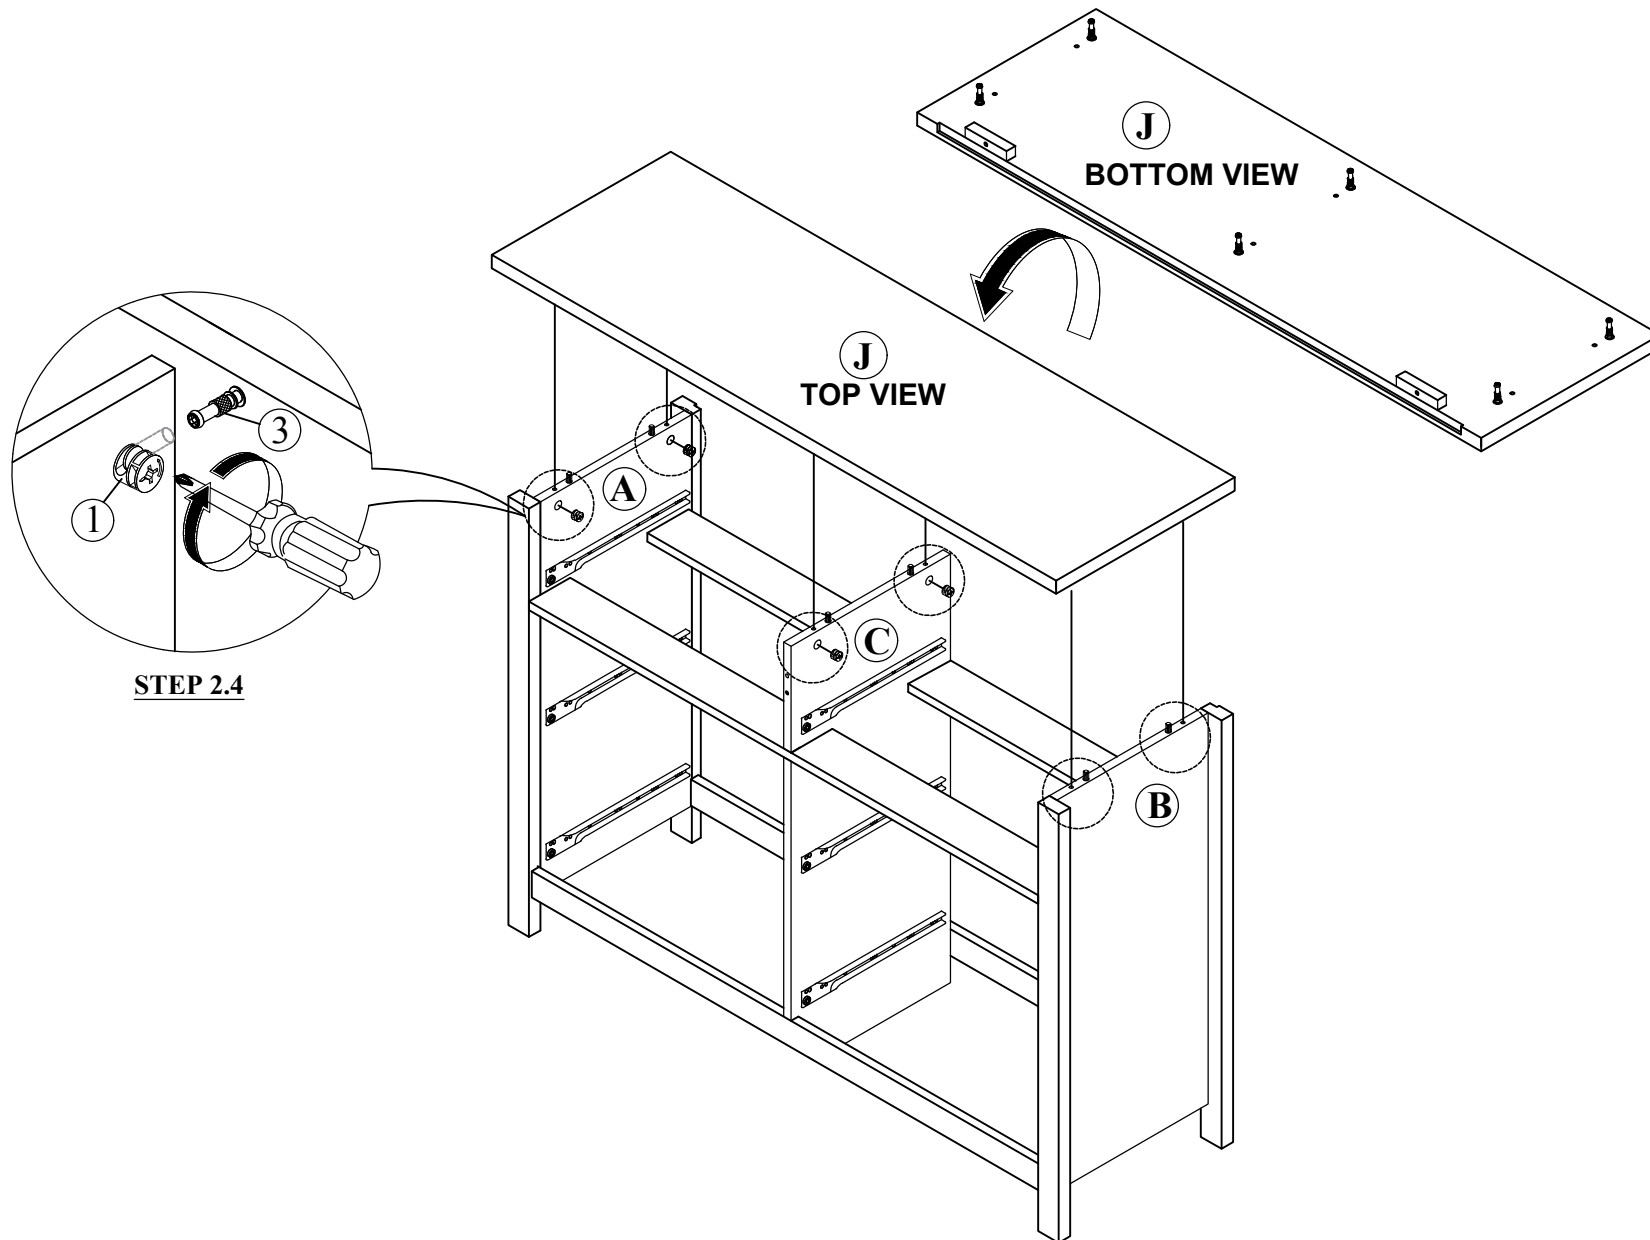


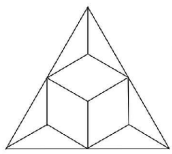


GEOHOME®
ART WITH AN ATTITUDE

ASSEMBLY INSTRUCTIONS

  Item No : B118-23
Description : DRESSER

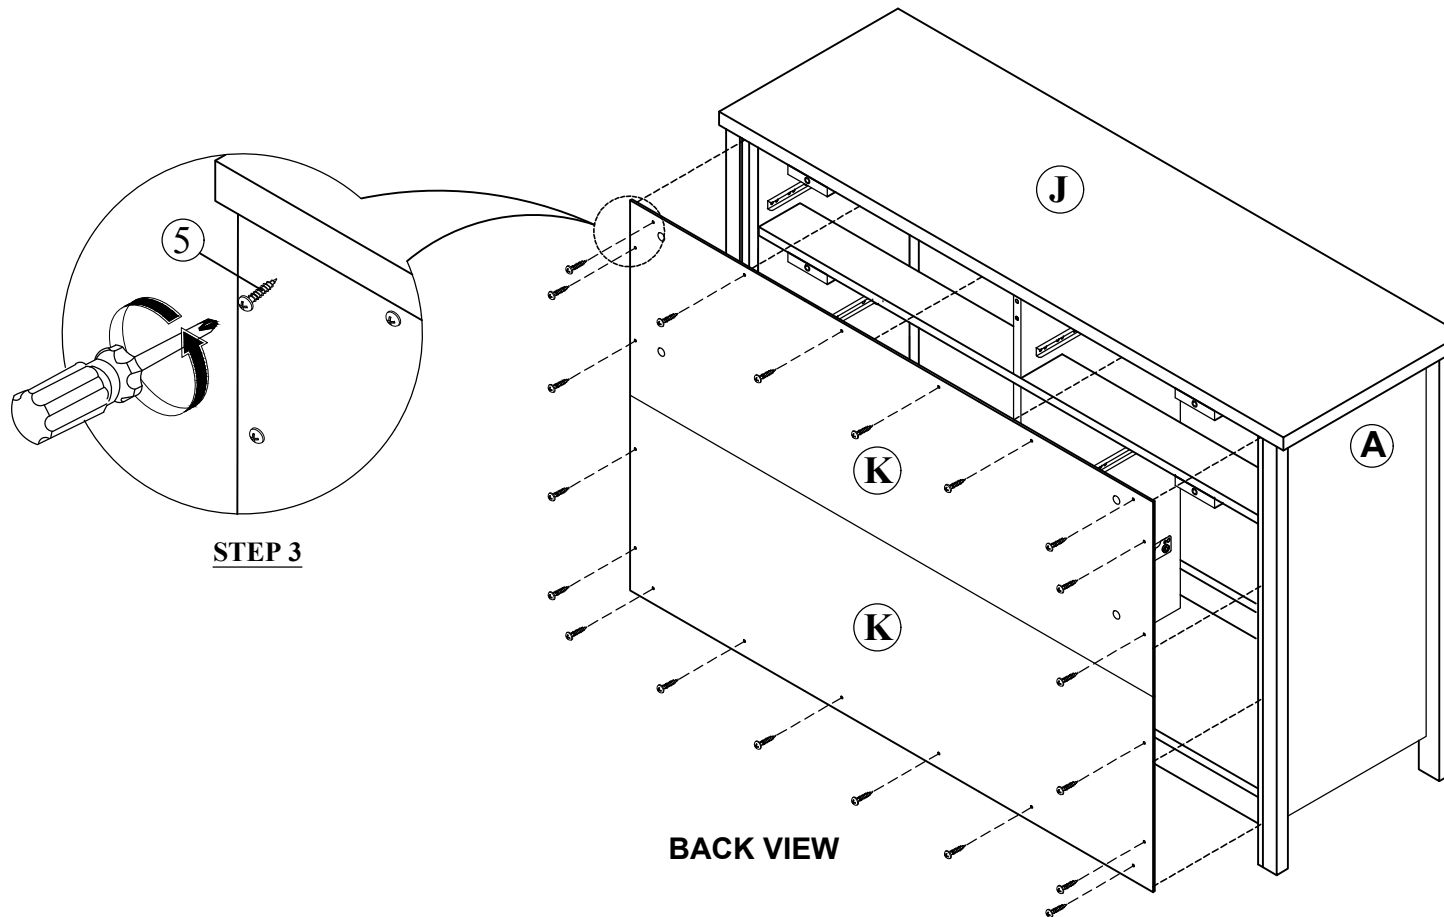

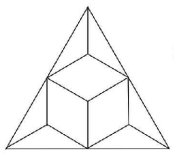


GEOHOME®

ART WITH AN ATTITUDE


ASSEMBLY INSTRUCTIONS


Item No : B118-23
Description : DRESSER

 TOP DRAWER x 2

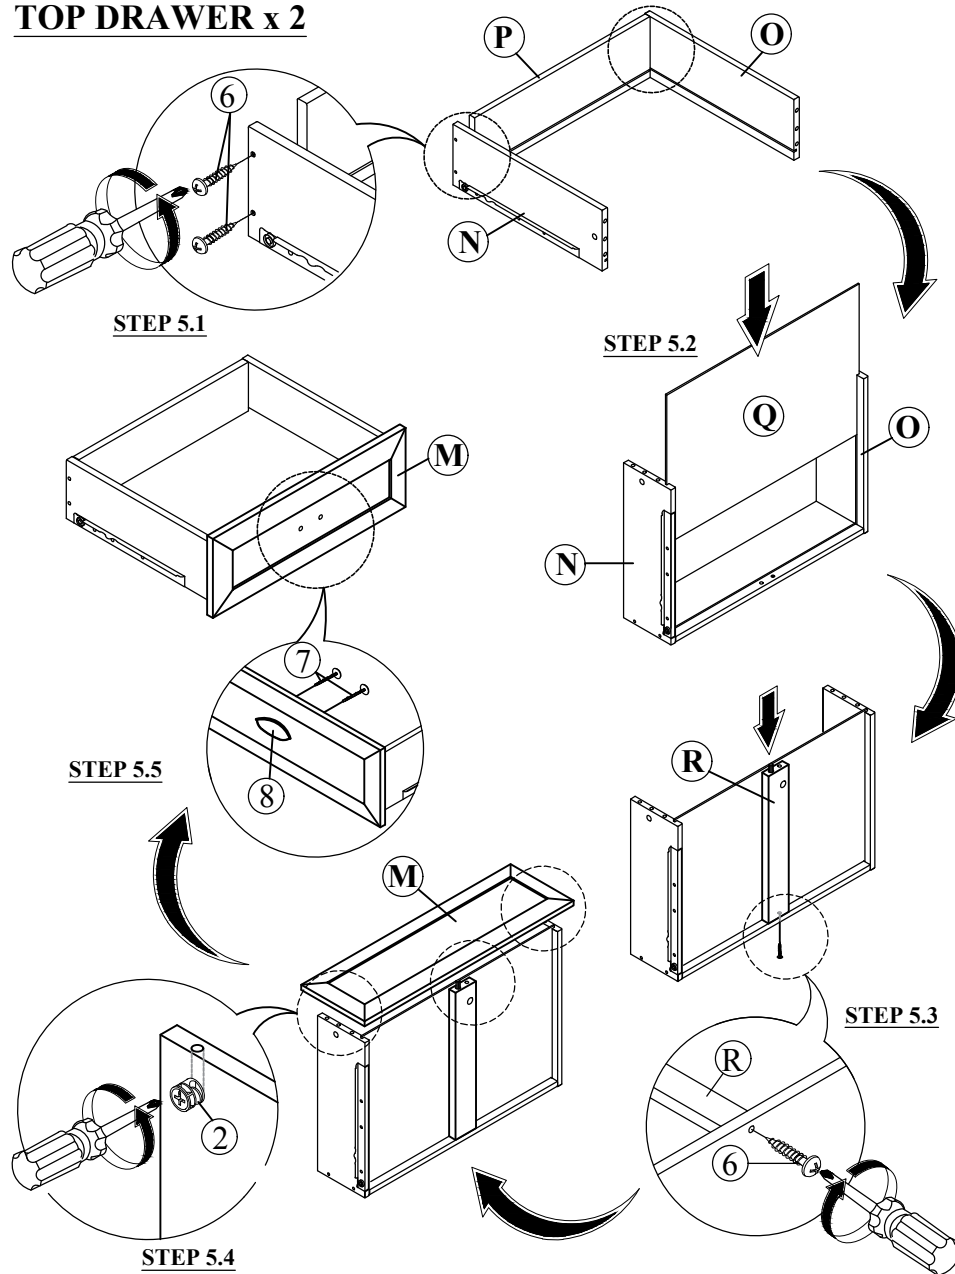

BOTTOM DRAWER x 4

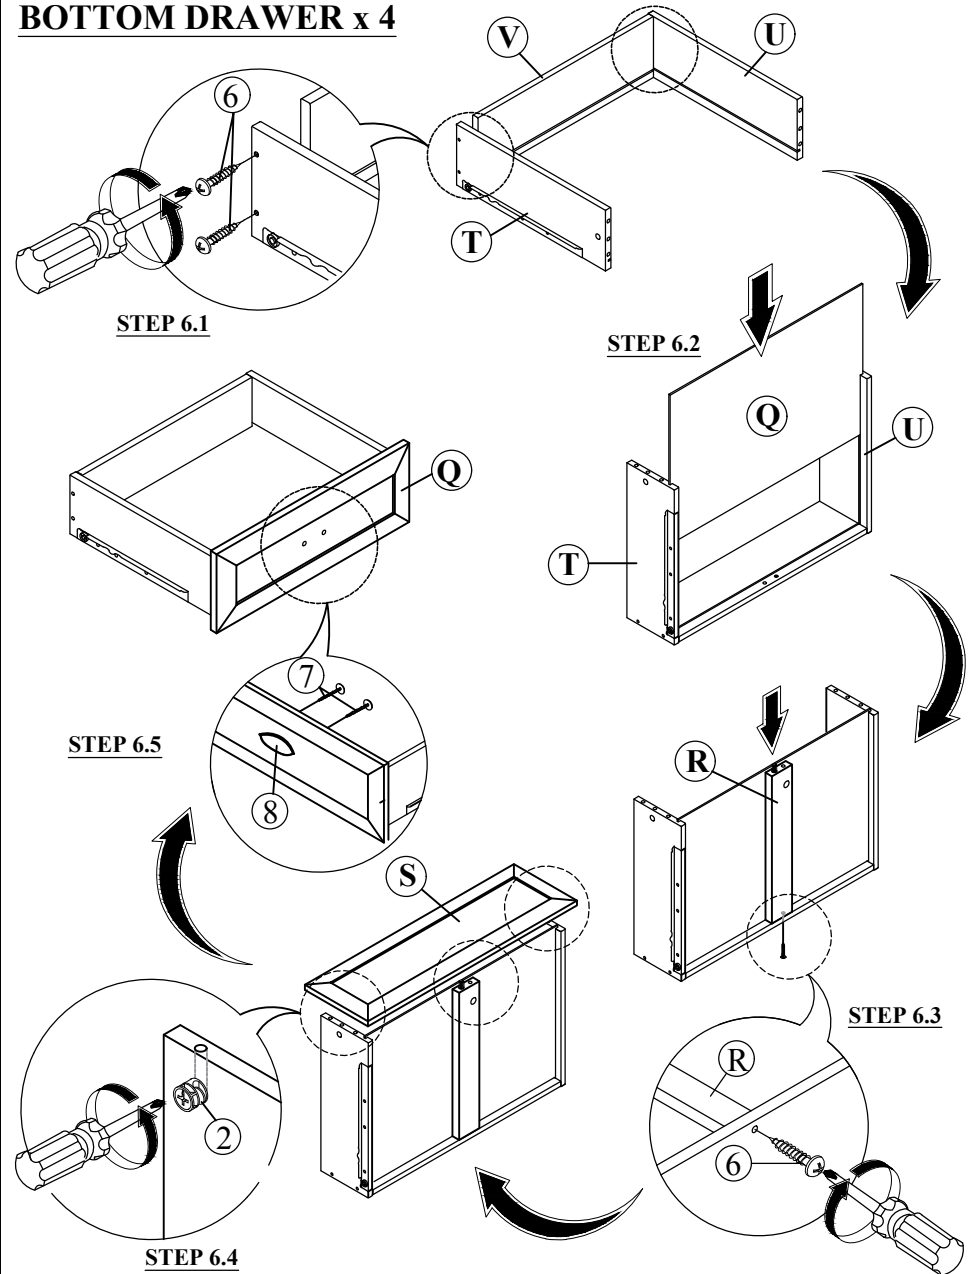 

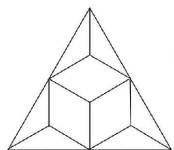 

GEOHOME®

ART WITH AN ATTITUDE

ASSEMBLY INSTRUCTIONS

Item No : B118-23
Description : DRESSER

