



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

REVISION 0: 06/30/2021

REVISION 1: 07/28/2022

PAGE 1 OF 4

115162

DINING CHAIR

COASTERFURNITURE.COM

ITEM:115162



ASSEMBLY INSTRUCTIONS

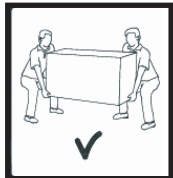
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

 

 
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.






 


ASSEMBLY TIME

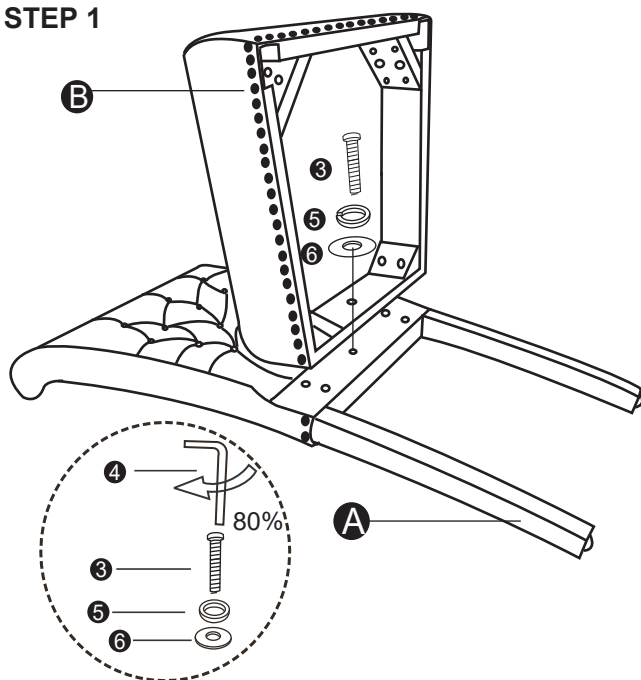
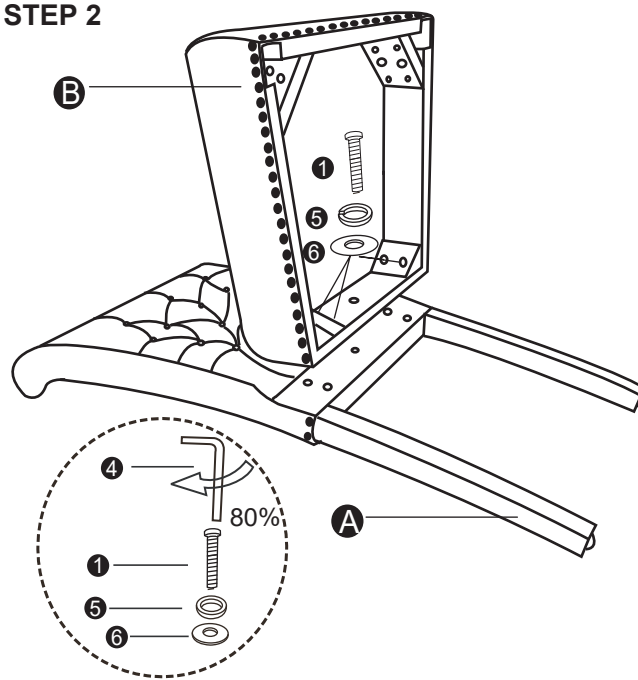
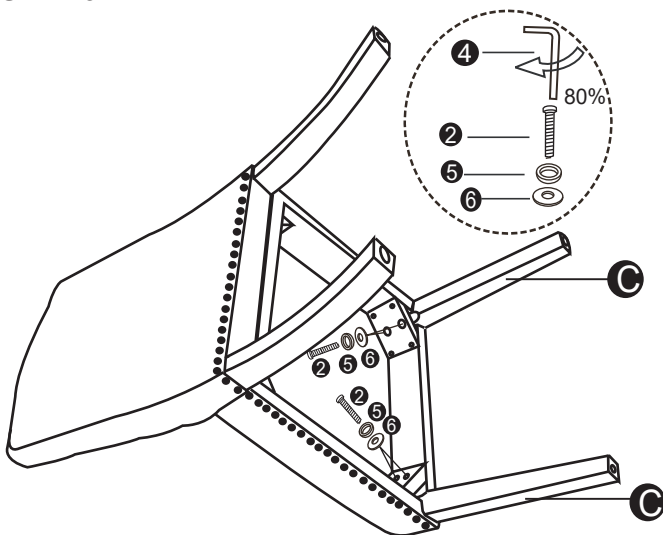
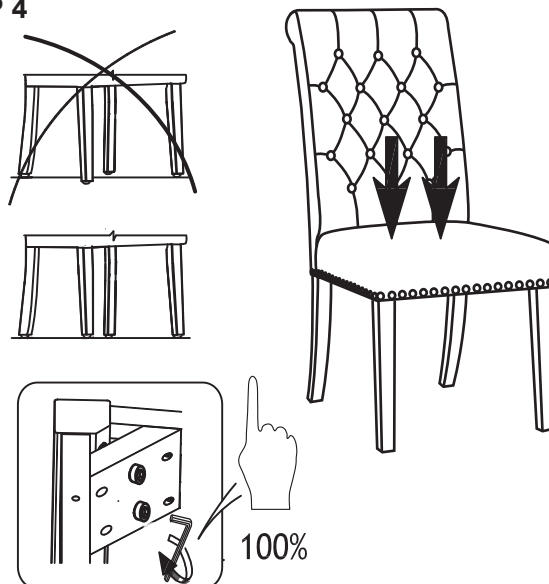
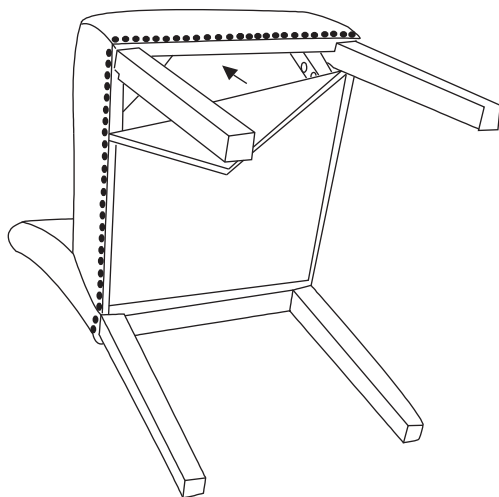
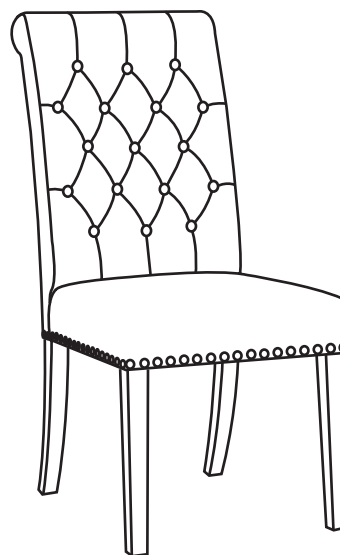
10 MINUTES

PARTS IDENTIFICATION

A		BACK	1PC
B		SEAT CUSHION	1PC
C		FRONT LEGS	2PCS

HARDWARE IDENTIFICATION

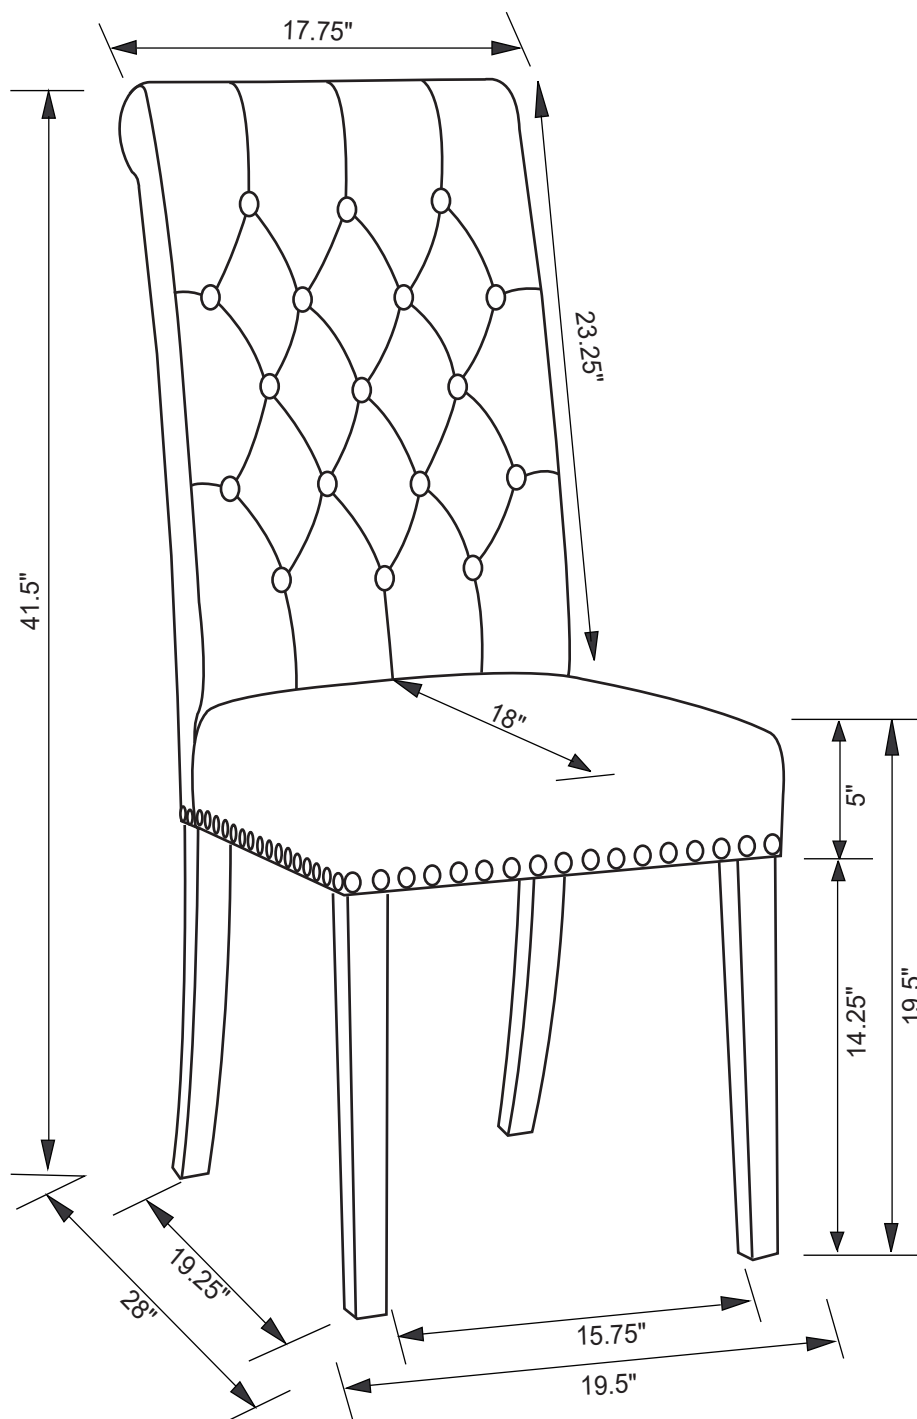
1		LARGE BOLT (M8×75mm)	4PCS
2		SMALL BOLT (M8×60mm)	4PCS
3		SMALL BOLT (M8×55mm)	1PC
4		ALLEN KEY (M8)	1PC
5		LOCK WASHER (Φ8)	9PCS
6		FLAT WASHER (Φ8)	9PCS

STEP 1**STEP 2****STEP 3****STEP 4****STEP 5****STEP 6**

ITEM: **115162**



ASSEMBLY INSTRUCTIONS



Note : Dimension tolerance $\pm 5\%$