 


Assembly Instructions

CM3199BC-BC-2PK
CM3199WC-BC-2PK

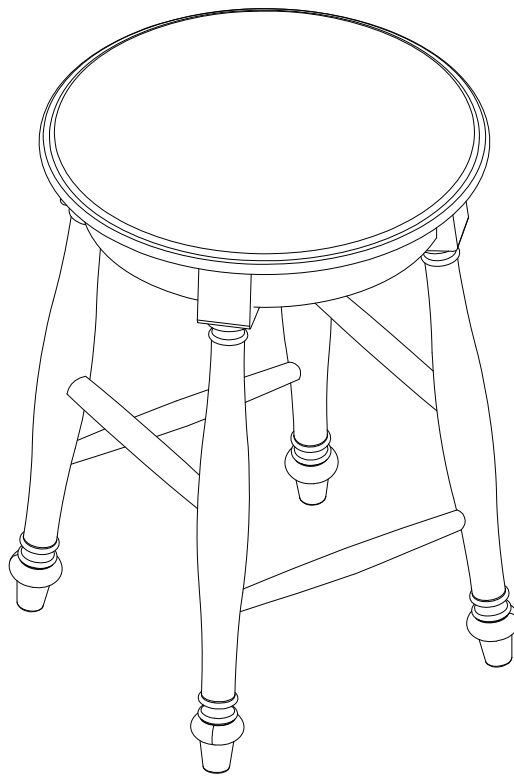

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

 


Tools Required For Assembly:

Allen Wrench



Phillips Screwdriver




2 PERSONS RECOMMENDED

ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.

 
BASIC ASSEMBLY TECHNIQUES

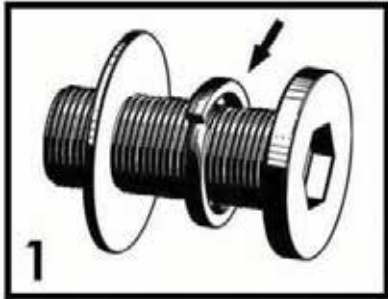


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.



 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

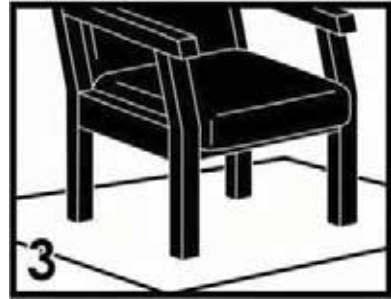

 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

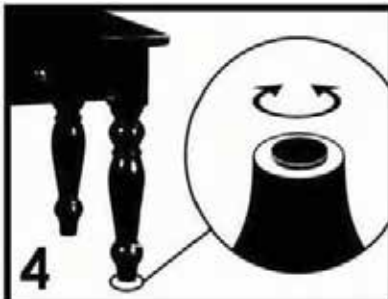

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

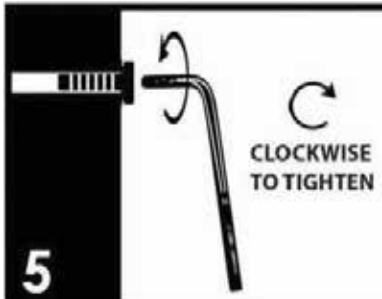


 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

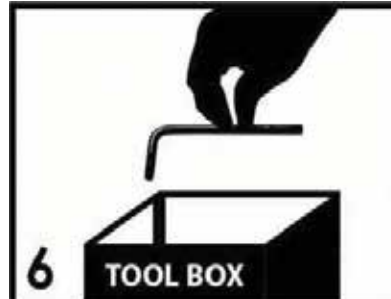

Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

 IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

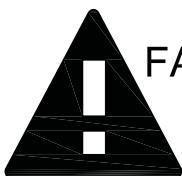




FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.








Before you begin, please read Page 2 of "Assembly and Care Advice".

   
And remember, do not tighten until each step is completed or instructed.

Parts List

  -  #1 x 1pc x 2
Top Chair
-  #2 x 4pcs x 2
Leg - L/R
-  #3 x 4pcs x 2
Leg Support

Hardware List

 -  #A x 8pcs x 2
Bolt 1/4 x 2-1/16"
-  #B x 8pcs x 2
Flat Washer Ø1/4"
-  #Cx 8pcs x 2
Lock Washer Ø1/4"
-  #D x 1pc x 2
Allen Wrench M4
-  #E x 8pcs x 2
Wood screw Ø8x1-9/16"

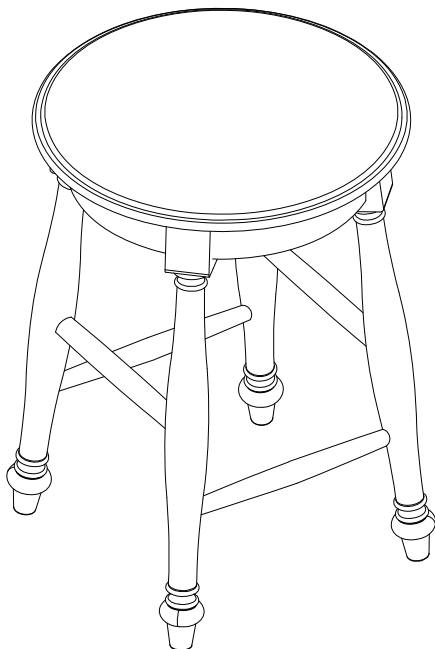


x 2




2. Align a left and right leg (#2) to the holes along the sides of the top (#1). Align the leg support (#3) in between.

#A x 4 pcs
#B x 4 pcs
#C x 4 pcs


 
1. Place the top (#1) face down onto a protected surface.

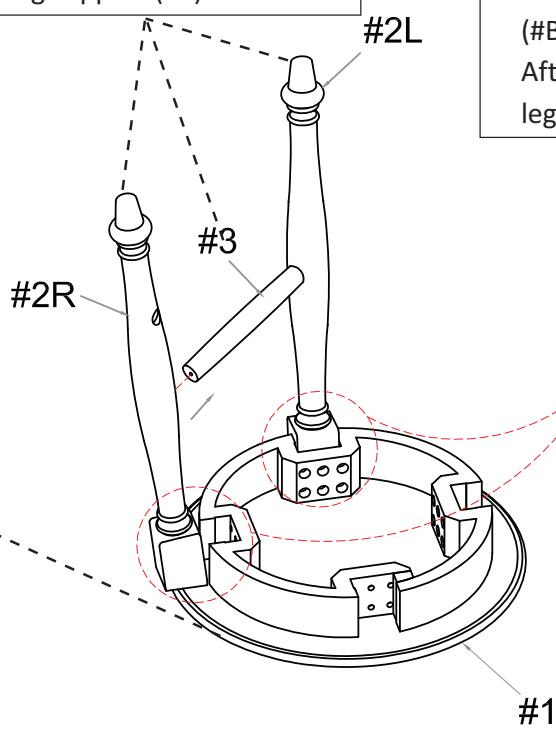

 3. Prepare 4 bolt assemblies by first inserting a lock washer (#C) onto the bolt (#A) then a flat washer (#B) onto that same bolt (#A). After that insert 2 bolts into each leg and secure using the Allen wrench.

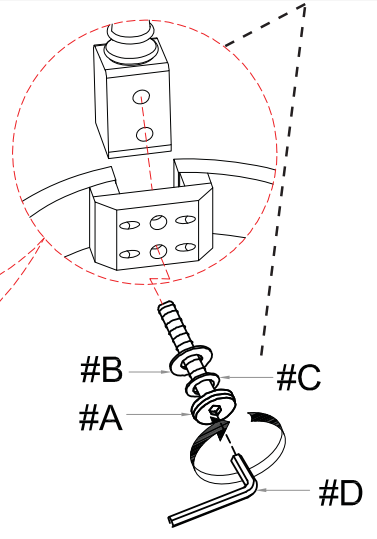

  Insert 2 leg supports (#3) into the slots along the legs (#2).

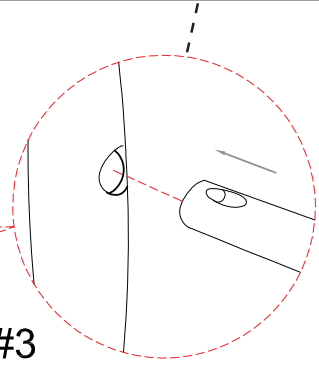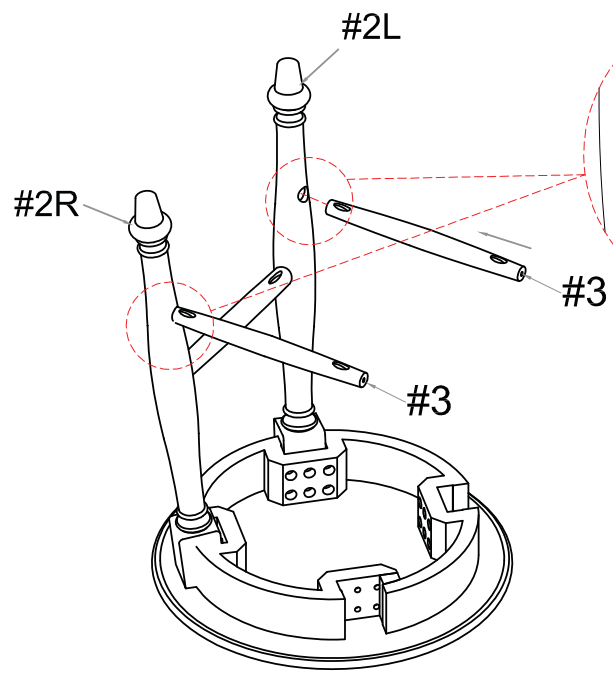





1. Align the remaining 2 legs (#2) to the holes along the top (#1) and insert the last leg support (#3) in between.

2. Prepare 4 bolt assemblies by first inserting a lock washer (#C) onto the bolt (#A) then a flat washer (#B) onto that same bolt (#A). After that insert 2 bolts into each leg and secure using the Allen wrench (#D).

#A x 4 pcs
#B x 4 pcs
#C x 4 pcs

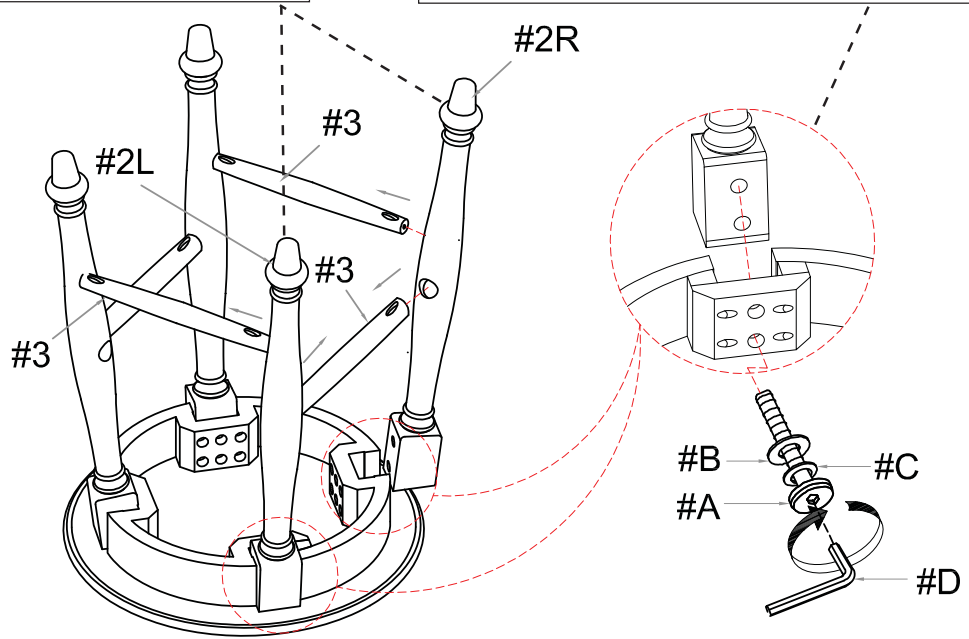 

#E x 8 pcs

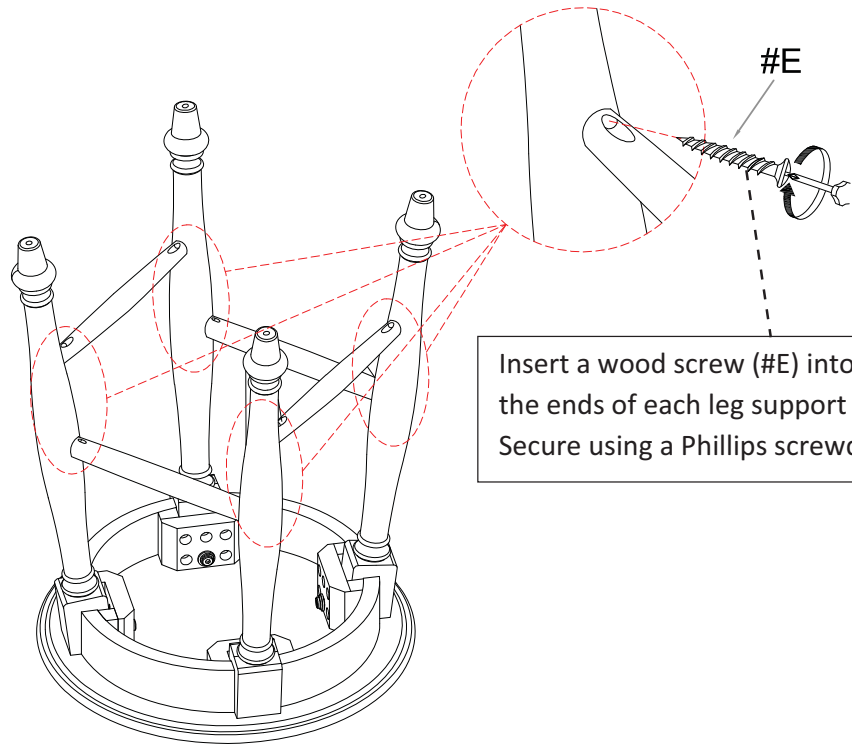 

Insert a wood screw (#E) into the ends of each leg support (#3) Secure using a Phillips screwdriver.