### ASSEMBLY INSTRUCTIONS




### aspenhome.

Distributed by Furniture Values International, LLC

ITEM NO: ICB-6050-BCH/BLK Leg Dining Table

HARDWARE PACK				COMPONENT LIST		
A		Bolt (Ø5/16"*55mm)	8PCS	Table Top	1 Pc	
В		Lock Washer (Ø5/16")	8PCS	Leg	4 Pcs	
C	0	Flat Washer (Ø5/16")	8PCS	Leaf	2 Pcs	
D		Allen Wrench	1PC			

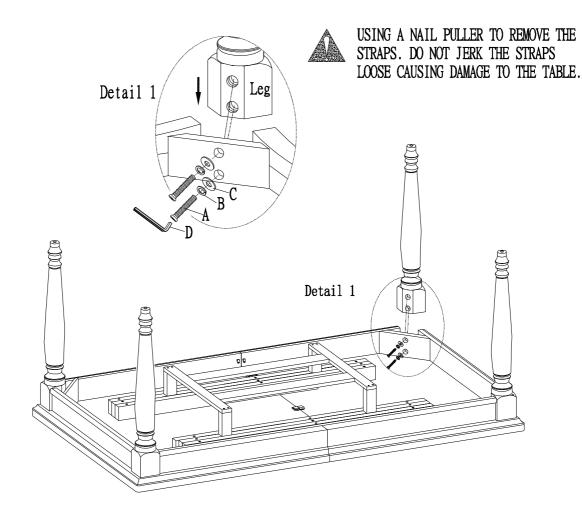


#### ASSEMBLY STEP:


- 1. Put the table top upside down on a soft, clean surface.
- 2. Set the leg in the corner of the table top. Align the holes in the corner block of table top with the threads in the legs. Attach the legs to the table top with bolts(2 pcs each leg), Lock washers and Flat washers and tighten with Allen wrench.
- 3. Set the table upright.


### ASSEMBLY INSTRUCTIONS





ITEM NO: ICB-6050-BCH/BLK Leg Dining Table

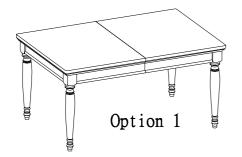


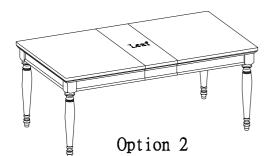

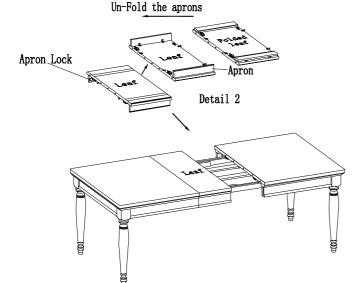

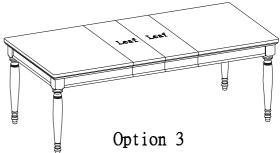

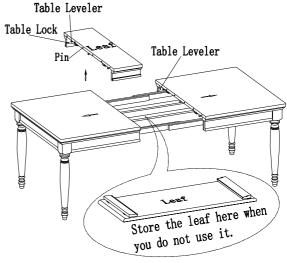

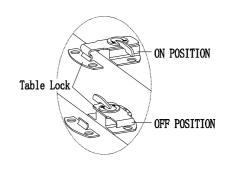

If you prefer to use this table as Option 2 or Option 3, please proceed as the following steps:

- 1. Make the table locks under the table top at the OFF position. And pull the table top to both sides out completely. Take the leaves out, un-fold its aprons as shown in detail 2.
- 2. Put the leaf in.
- 3. Push the table top until the table top fully closed. Make the table locks at the ON position.




# aspenhome.

Distributed by Furniture Values International, LLC




#### ITEM NO: ICB-6670A-BCH/BLK Dining Dbl X Arm Chair(2/Carton)

HÁRI	WARE PAG	<b>X</b>					
A		3" Bolt (Ø1/4")	4 Pcs	F	<b>©</b>	Flat Washer	2 Pcs
В		2 1/2" Bolt (Ø1/4")	4 Pcs			(Ø1/4"*12mm)	
C		1 1/2" Bolt (Ø1/4")	8 Pcs	G		Allen Wrench	1 Pc
D		Lock Washer (Ø1/4")	16 Pcs	H	0	Wood Plug	2 Pcs
E	<b>(a)</b>	Flat Washer	14 Pcs				
		(Ø1/4"*19mm)					
COMP	NENTS LIS	T					
Cha	r Back	1 Pc	Chain	r Seat		1 Pc	
	Front Leg 2 Pcs		Arm Rest			2 Pcs	
	_						

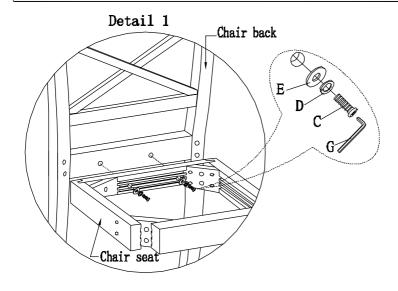

#### Detail 2

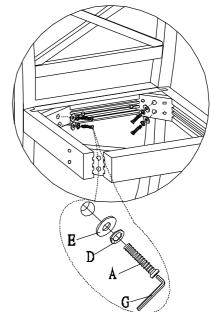

- 1. Open the box. Take out each part and the hardware pack.
- 2. Place the chair back on a padded area, and assemble the chair seat to the chair back (as shown in detail 1 &
- 2). Do not tighten the bolts completely.




# aspenhome,

Distributed by Furniture Values International, LLC



ITEM NO: ICB-6670A-BCH/BLK Dining Dbl X Arm Chair(2/Carton)

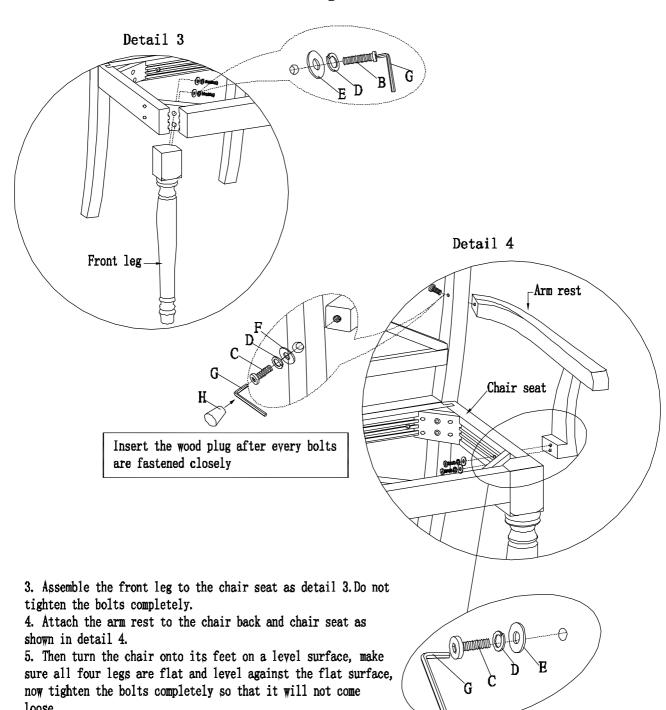

6. After all assembly steps, if the gap is too wide between the seat and the chair back, take off the wood screws which have been locked under the seat. And adjust the seat in an ideal

position, then re-attach its.



# aspenhome.

Distributed by Furniture Values International, LLC



ITEM NO: ICB-6670S-BCH/BLK Dining Dbl X Side Chair(2/Carton)

HARDWARE PACK									
A		3" Bolt (Ø1/	/4")	4 Pcs	D	0	Lock Washer (Ø1/4")	10 Pcs	
В		2 1/2" Bolt	(Ø1/4")	4 Pcs	E	<b>©</b>	Flat Washer (Ø1/4")	10 Pcs	
C		1 1/2" Bolt	(Ø1/4")	2 Pcs	F		Allen Wrench	1 Pc	
COMPONENTS LIST									
Chair Back 1 Pc				Chair Seat			1 Pc		
Fro	Front Leg		2 Pcs						

