 



 
 

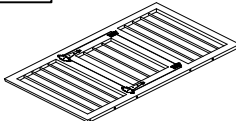 
 
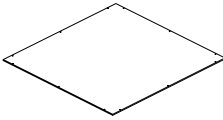 
CROSLEY

FURNITURE

 
 

 

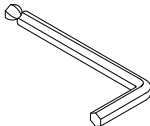 

Corner Credenza Pet Crate CF4503

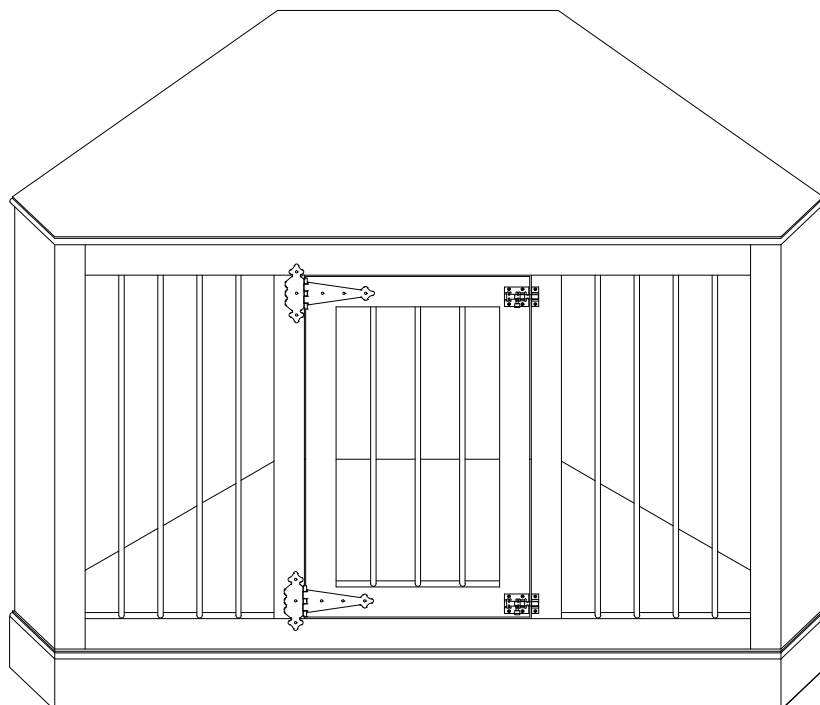

PART LIST


<div>A</div> <div></div>	<div>B</div> <div></div>	<div>C</div> <div></div>	<div>D</div> <div></div>	<div>E</div> <div></div>
Top 1 PC	Bottom 1 PC	Left Panel 1 PC	Right Panel 1 PC	Door Frame 1 PC
<div>F</div> <div></div>	<div>G</div> <div></div>			
Back Center Panel 1 PC	Back Panel 2 PCS			

HARDWARE LIST

#1		#2		#3		#4		#5	
Ø8 x 30mm		Ø1/4" x 38mm						Ø3 x 15mm	
Wood Dowel		Bolt		Spring Washer		Flat Washer		Screw	
18 PCS (Extra 1)		6 PCS (Extra 1)		6 PCS (Extra 1)		6 PCS (Extra 1)		24 PCS (Extra 1)	
#6		#7							
Allen Wrench		Safety Strap Kit							
1 PC		1 SET							

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

 Please do not use tools to assemble this unit unless specifically indicated.

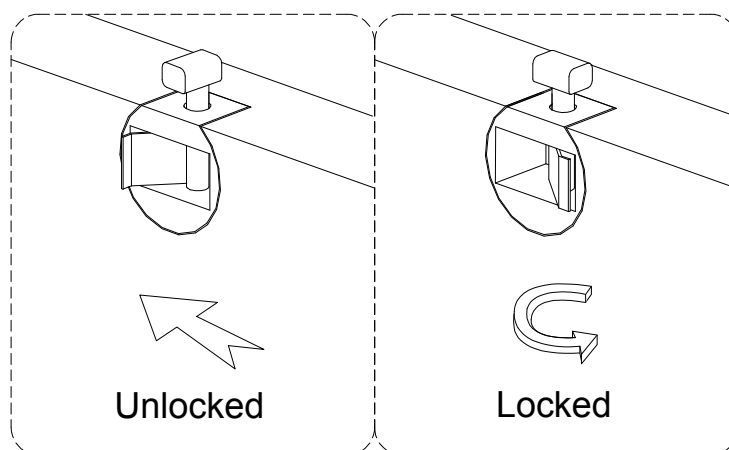


Reference the images above any time the instructions state "lock the hardware".
Note: Be sure to check all hardware is locked when completed.

 Step 1. Carefully lay top (part A) on a soft surface, such as carpet. Attach door frame (part E) to top (part A) using wood dowels (part #1) and lock the hardware.

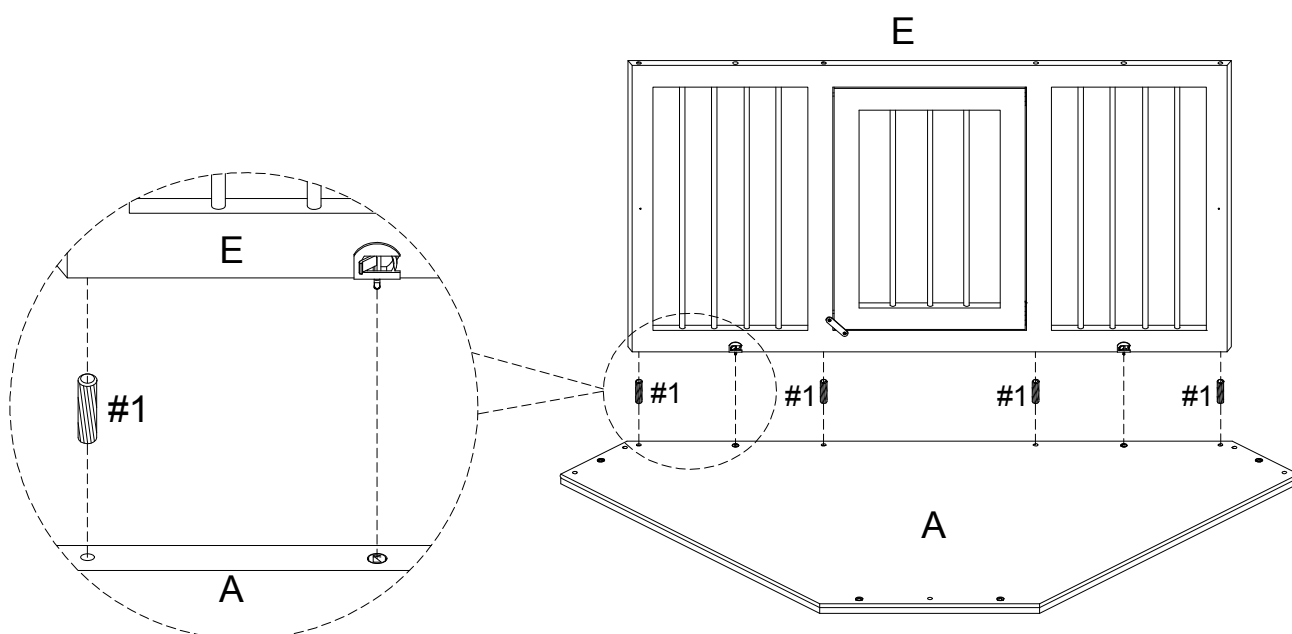


#1  x 4

 
Step 2. Attach left panel (part C) and right panel (part D) to top (part A) using wood dowels (part #1) and lock the hardware.

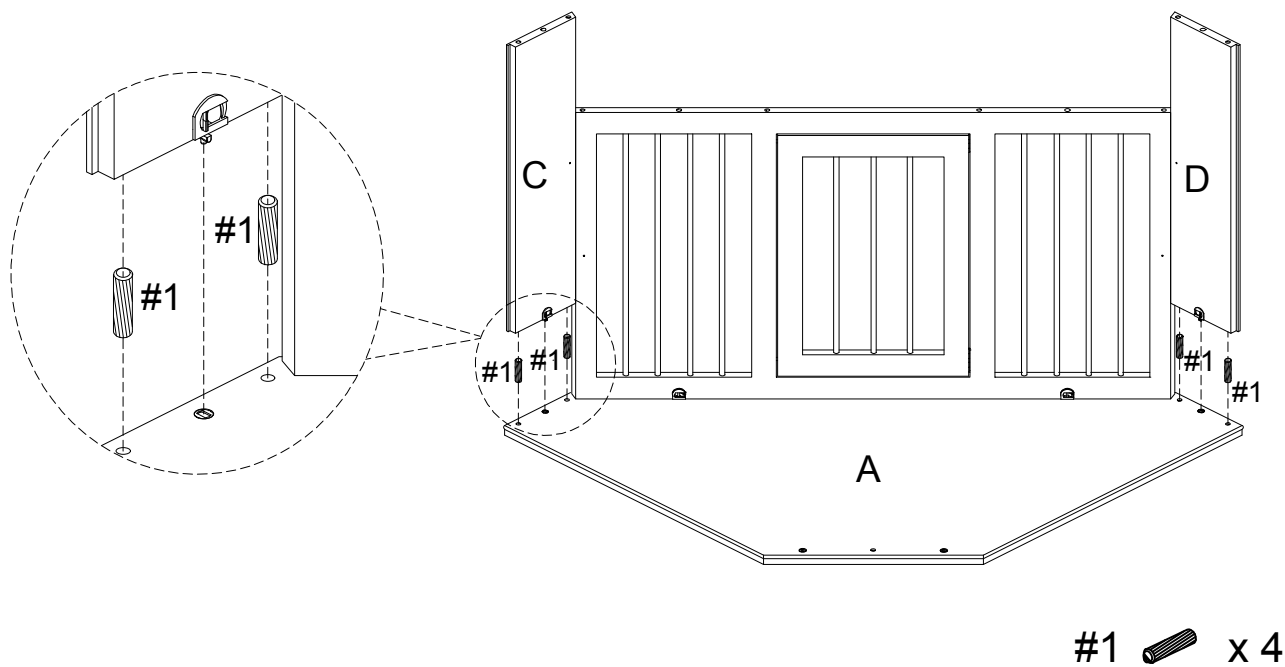

 Step 3. Attach back center panel (part F) to top (part A) using wood dowel (part #1) and lock the hardware.

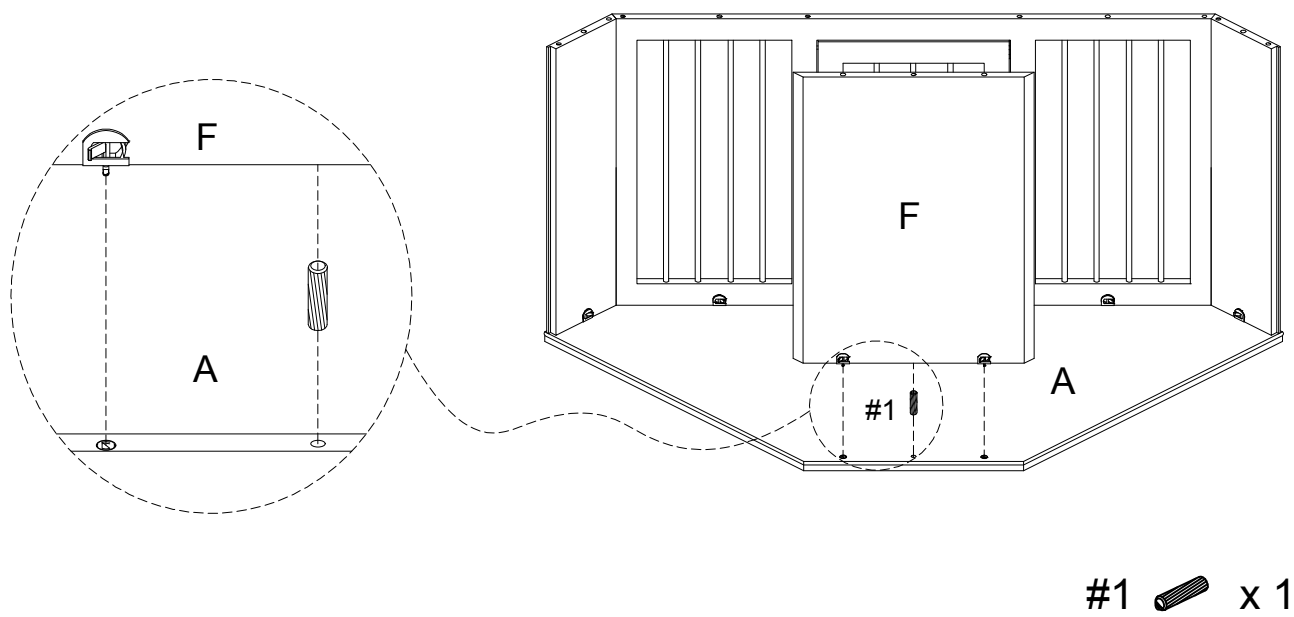


  Step 4. Attach bottom (part B) to assembled unit (parts C, D, E & F) using wood dowels (part #1), spring washers (part #3), flat washers (part #4), bolts (part #2) and allen wrench (part #6).

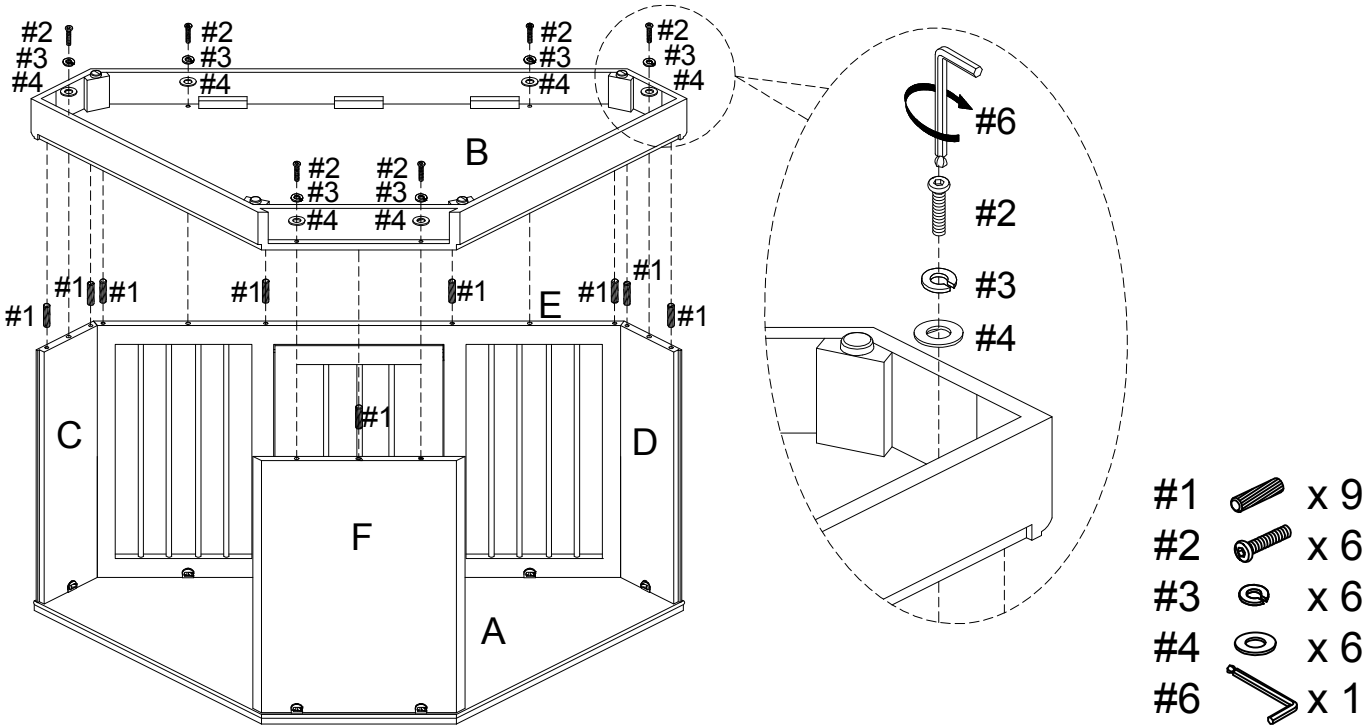 



 

 
 
 
Step 5. Carefully turn unit upright. Attach back panels (part G) to assembled unit (parts A, B, C, D, & F) using screws (part #5) and phillips head screwdriver.

Important: Safety strap kit (part #7) must be installed to prevent tipping, damage and / or injury.

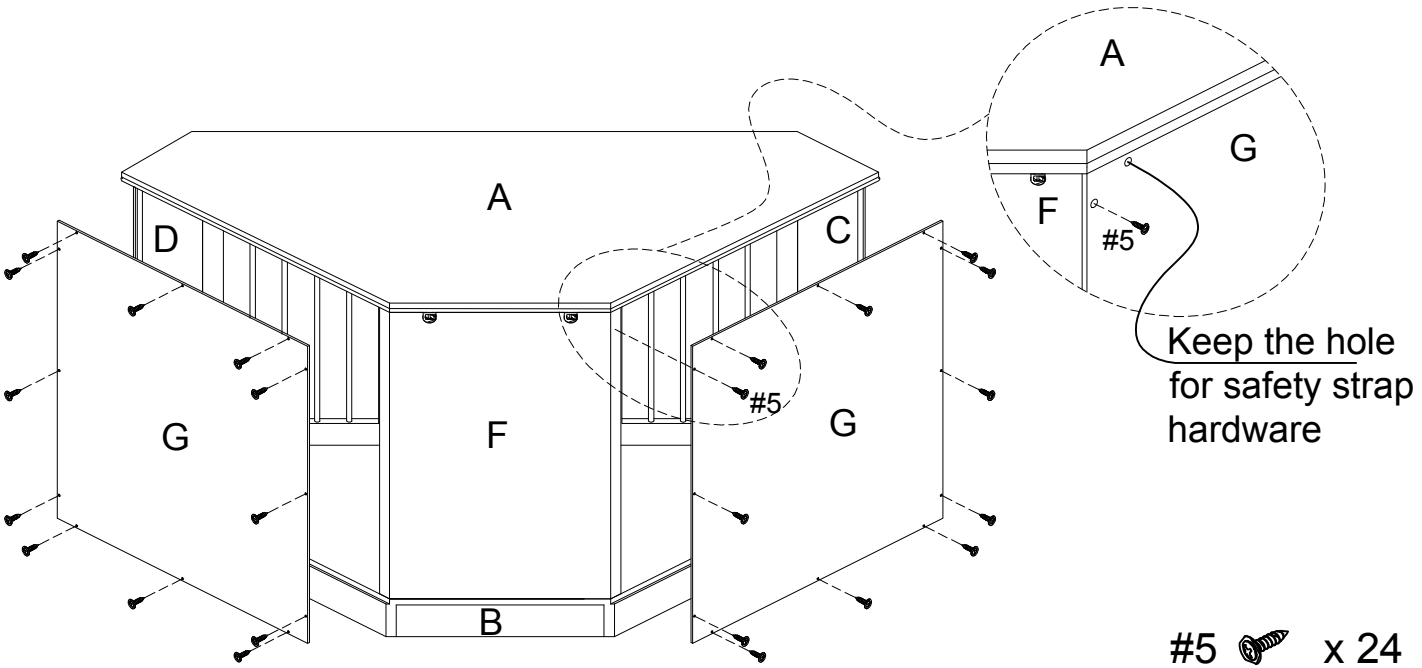

Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

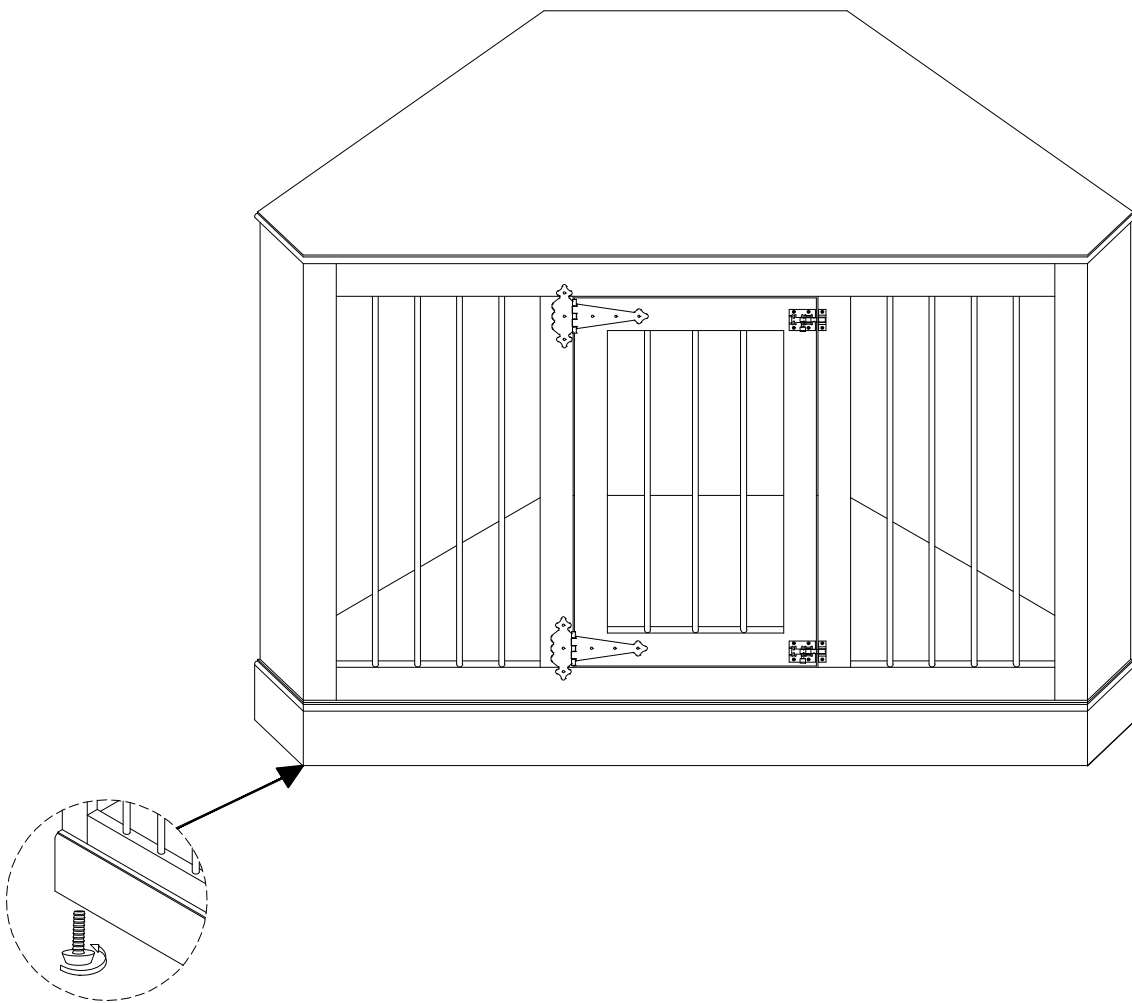


#7	A	B	C	D	E
			 Ø8*3/4"	 Ø8*1-1/2"	
Safety Strap Kit	Wall Anchor	Washer	Short Screw	Long Screw	Safety Wall Strap
1 SET	1 PC	2 PCS	1 PC	1 PC	1 PC

SAFETY WALL STRAP INSTALLATION



Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury

 1. Insert short screw (C) through washer (B) and safety wall strap (E) and attach to top (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top (part A) where the safety wall strap (E) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) through washer (B) and safety wall strap (E) into wall anchor (A) using phillips head screwdriver.

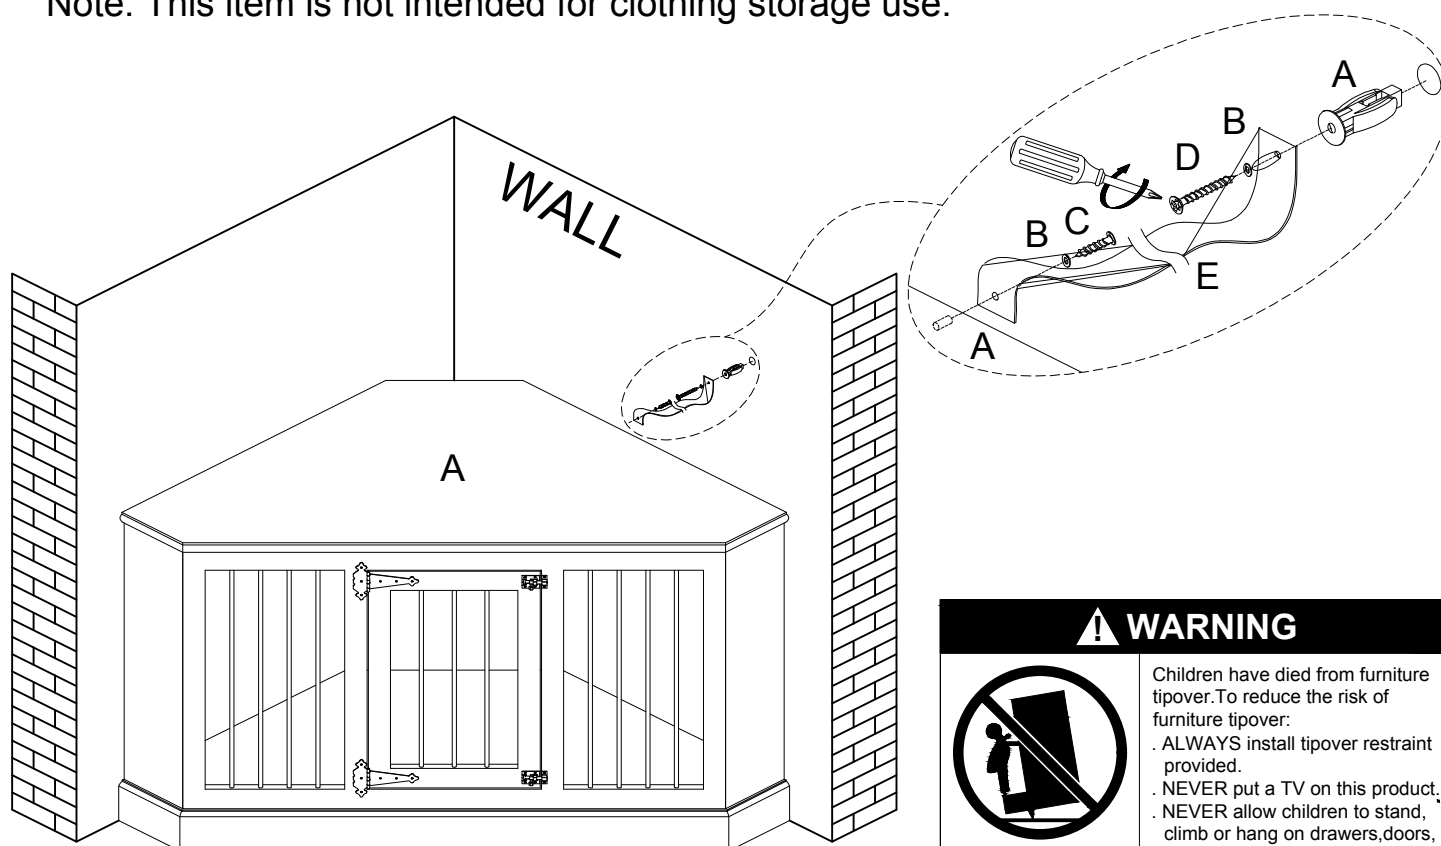Note: This item is not intended for clothing storage use.



⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*