



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

610155P Power Reclining Loveseat

ITEM: **610155P**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING



- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

 


ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A SEAT



1PC

B LEFT BACK



1PC

C CONSOLE BACK



1PC

D RIGHT BACK



1PC

E LEFT EAR



1PC

F RIGHT EAR



1PC

G ADAPTER




1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **610155P**
ASSEMBLY INSTRUCTIONS
STEP 1

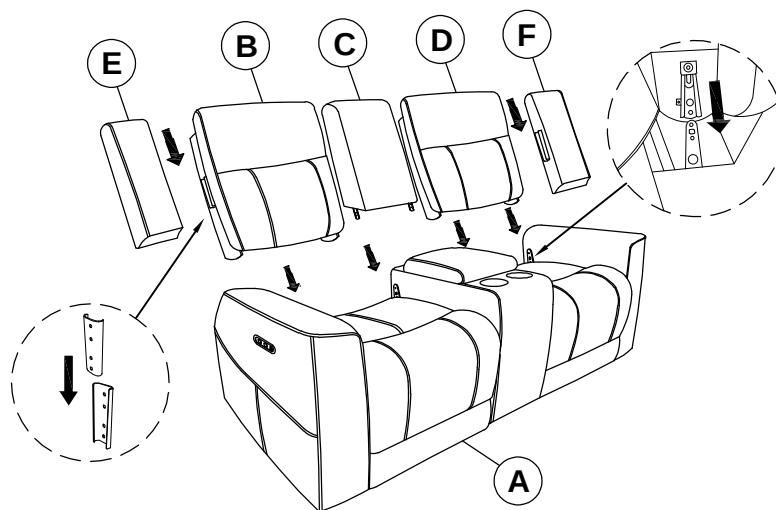


STEP 2

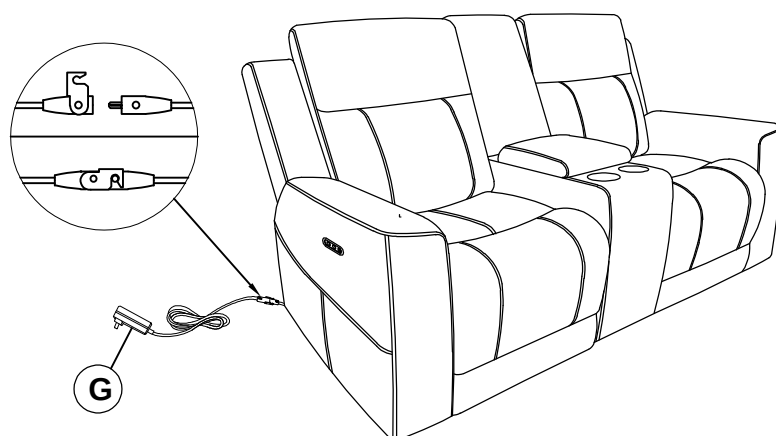


STEP 3
COMPLETE

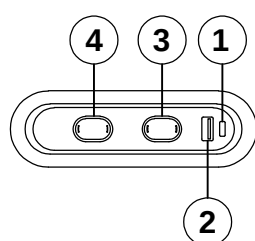

- ① Type C
- ② USB Port
- ③ Open Recliner
- ④ Close Recliner

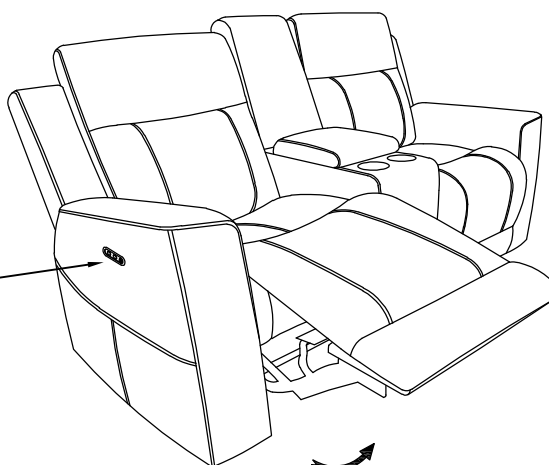

ITEM: **610155P**

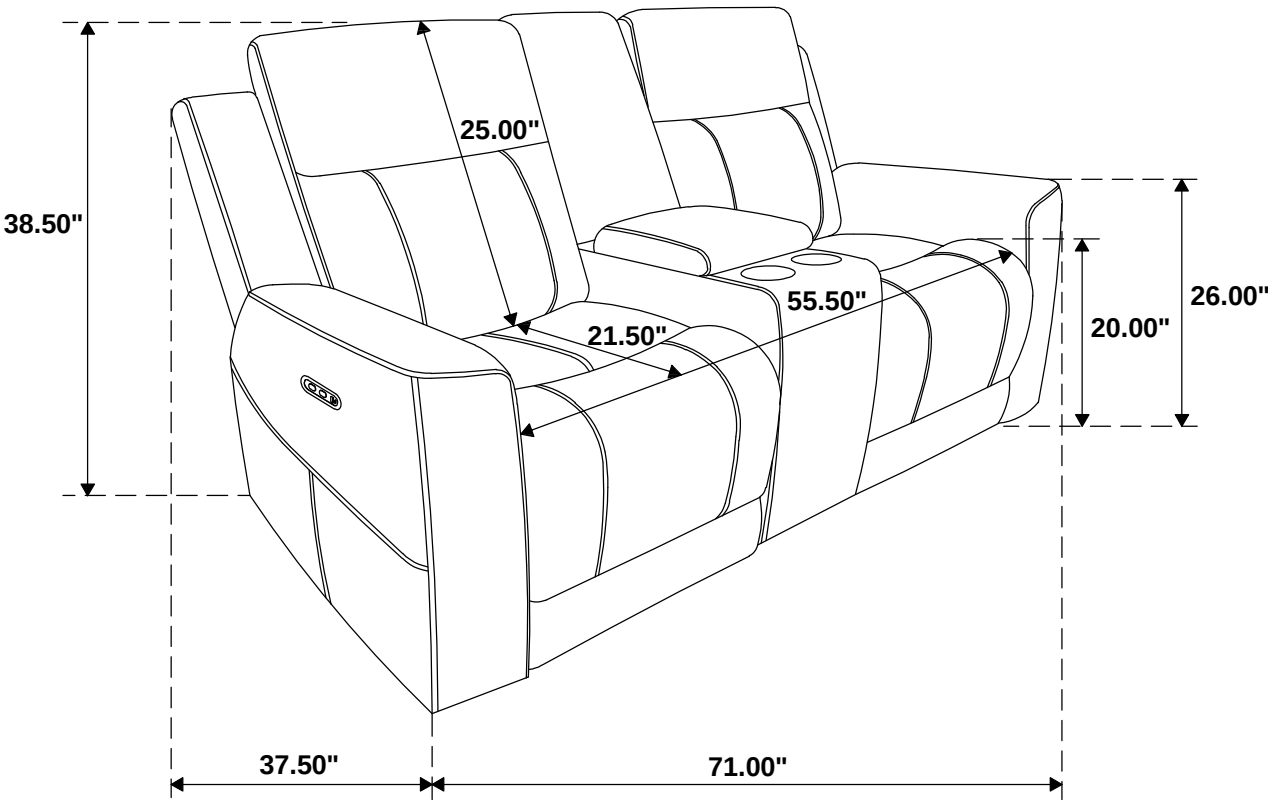

Note: Dimension tolerance $\pm 5\%$