 


homestyles®

88 5523 942 Kitchen Island

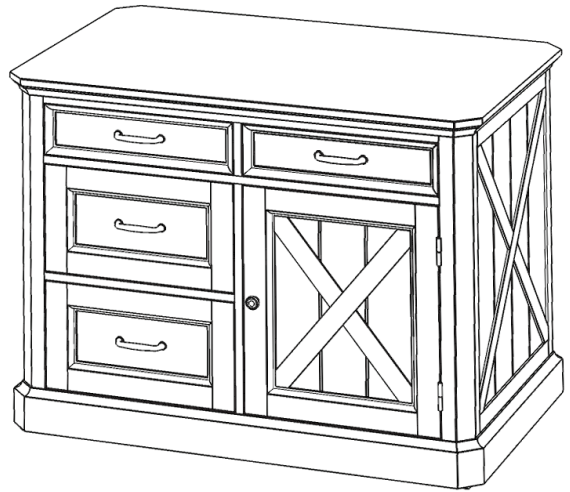

 
IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.


Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.


Part List

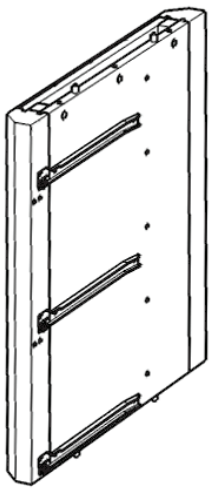

 
B.
Side Panel
1 pc.

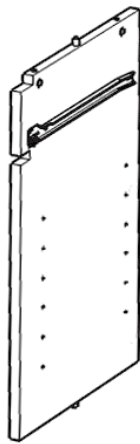

 
C.
Middle Panel
1 pc.

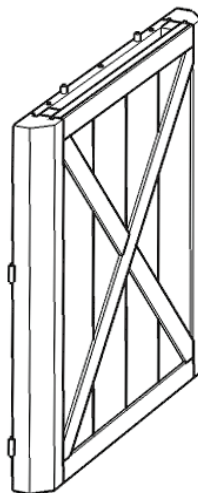

 D.
Side Panel
1 pc.

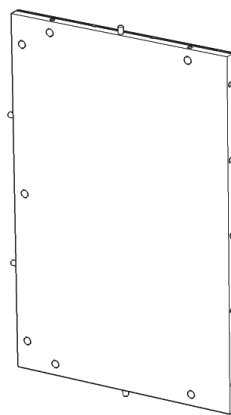

 E.
Back Panel
1 pc.

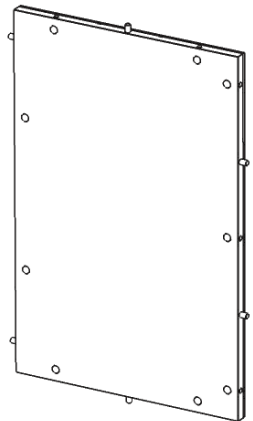

F.
Back Panel
1 pc.

Hardware List



Cam Lock
28 pcs.(+6 extra)



M6x35
Long Screw
for Base
8 pcs. (+1 extra)



Adjustable Pin
8 pcs. (+1 extra)



M3x15
Wood Screw
for Magnet
2 pcs. (+1 extra)



M3.5x25
Wood Screw (long)
for Drawer Side
40 pcs. (+1 extra)



M4x28
Machine Screw
9 pcs.



Cam Lock Screw
28 pcs.(+2 extra)



Flat Washer
8 pcs. (+1 extra)



 
M3.5x16
Wood Screw (short)
for Drawer Bottom
16 pcs. (+1 extra)



Magnet
1 pc.



Knob
1 pc.

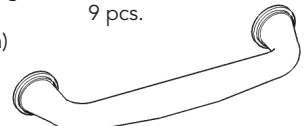

Handle
4 pcs.

Cartons 88 5523 941 and 943 are also needed for assembly.

Tool(s) required for assembly: Phillips screwdriver, Level, Drill (8 volts or less), 3/8" Drill Bit

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/6

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the screws until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.

STEP 1

Put Cam Lock Screws into the pre-drilled holes of Top (A), Side Panels (B), (D), Middle Panel (C), Back Panel (E) and Base (I) and tighten. (See Figure 1)


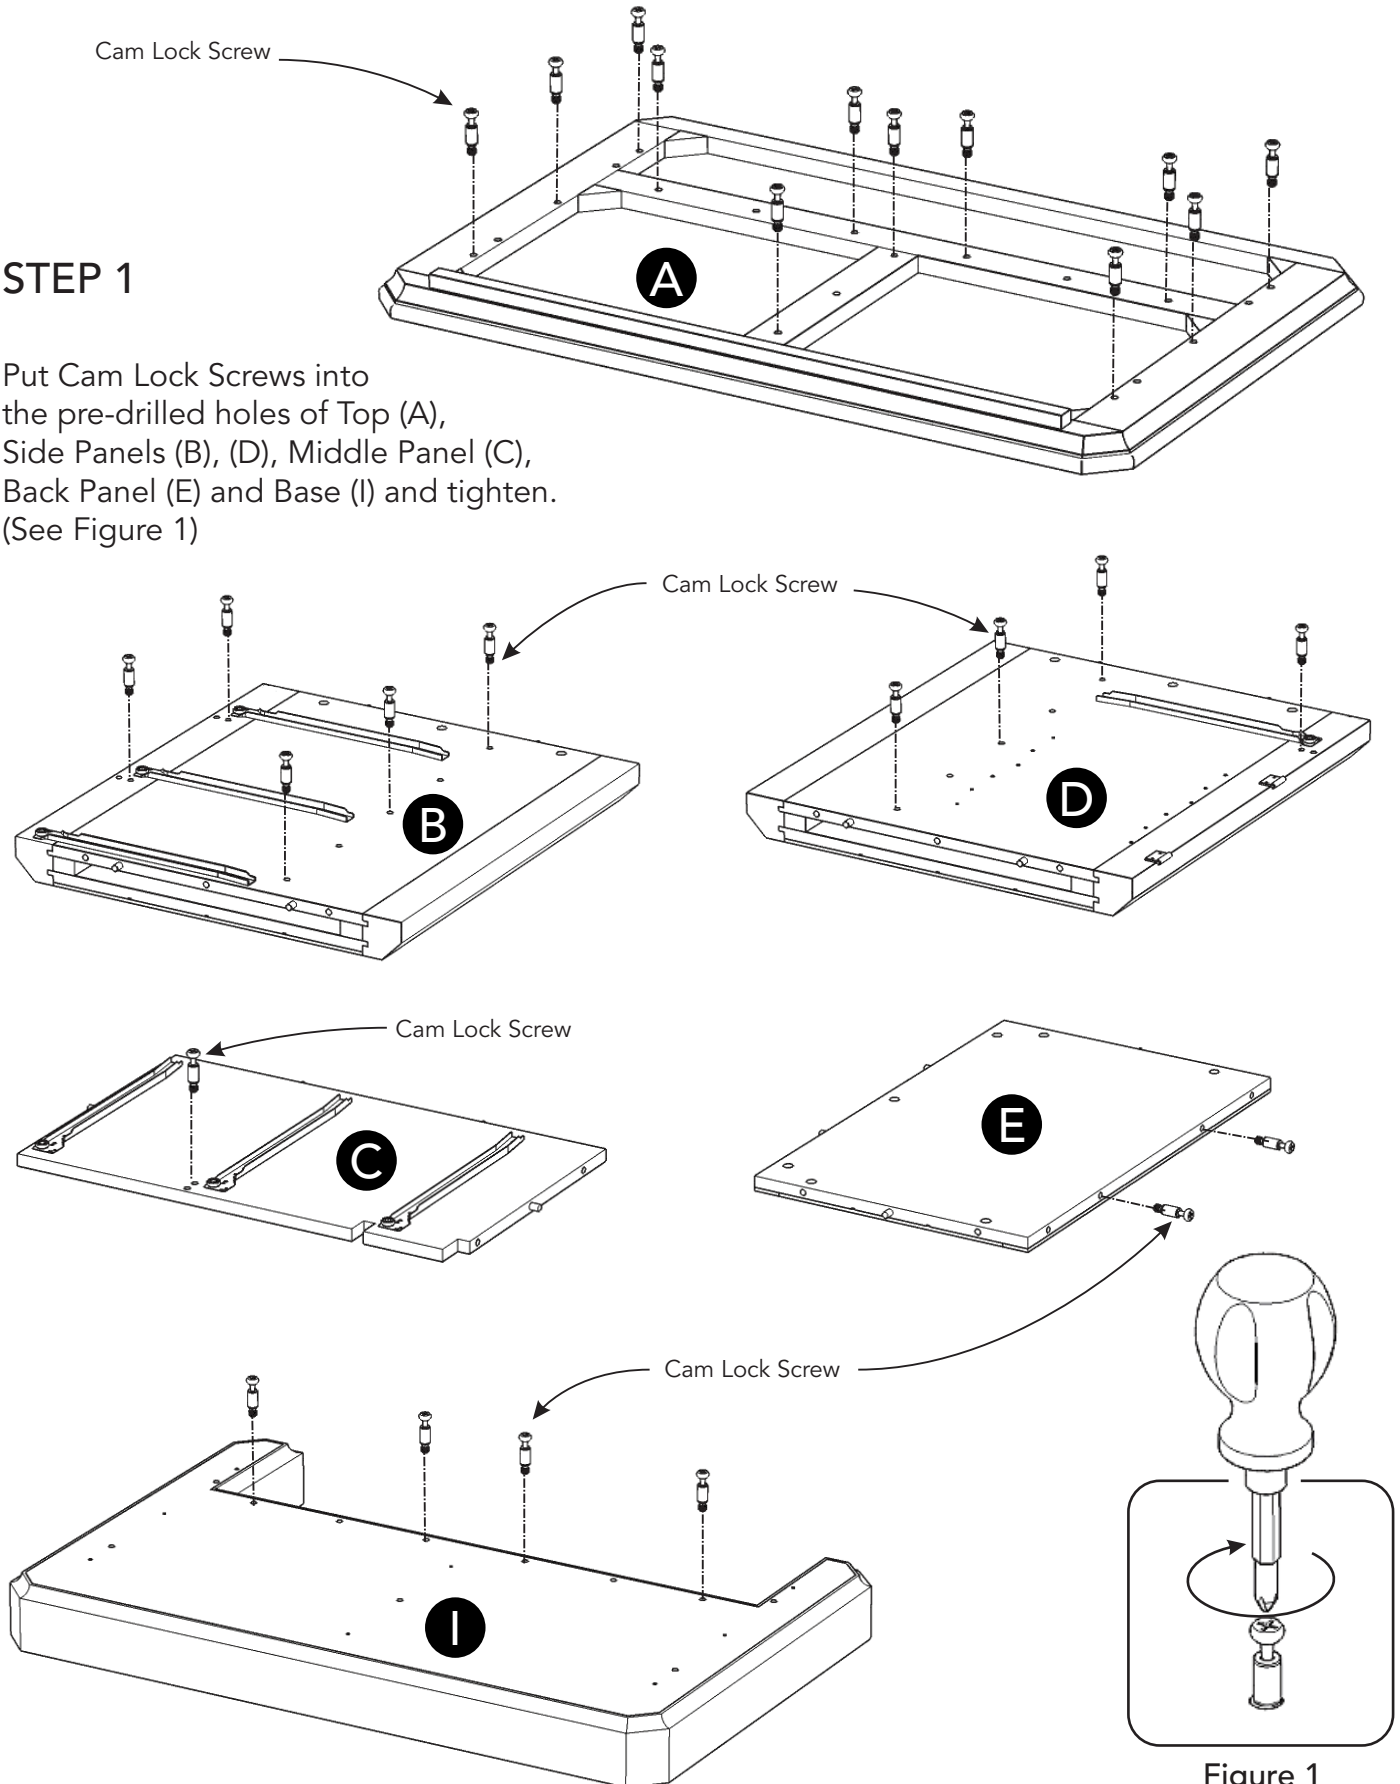 


Figure 1

 STEP 2

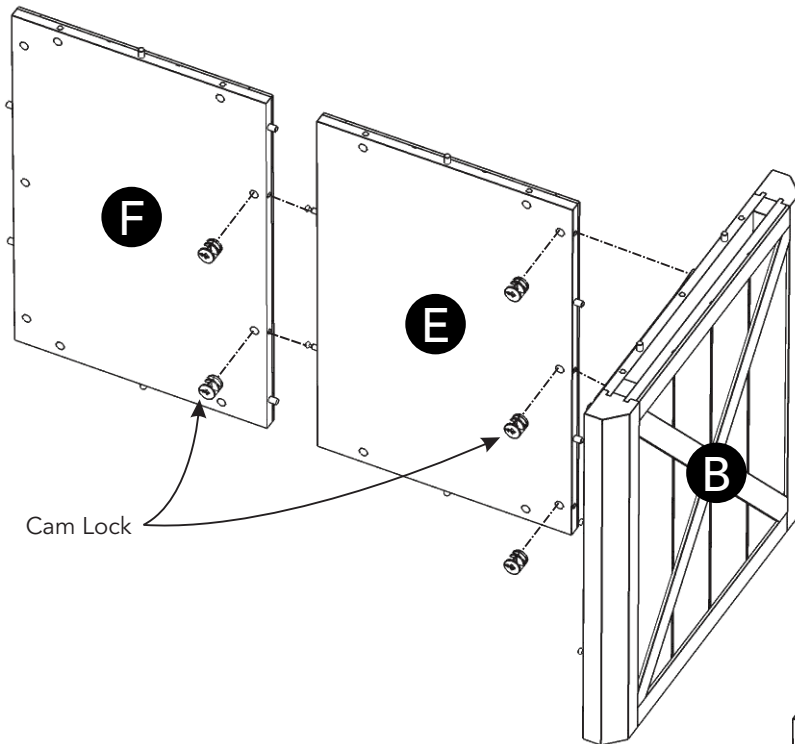

Attach Back Panel (E) to Side Panel (B) with Cam Locks.
(See Figure 2)

Attach Back Panel (F) to unit with Cam Locks.


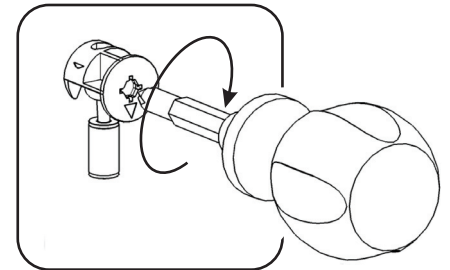 


Figure 2

STEP 3

Attach Front Rails (H) and (G) to Middle Panel (C).

 Attach unit from Step 2 to unit from Step 3 with Cam Locks.


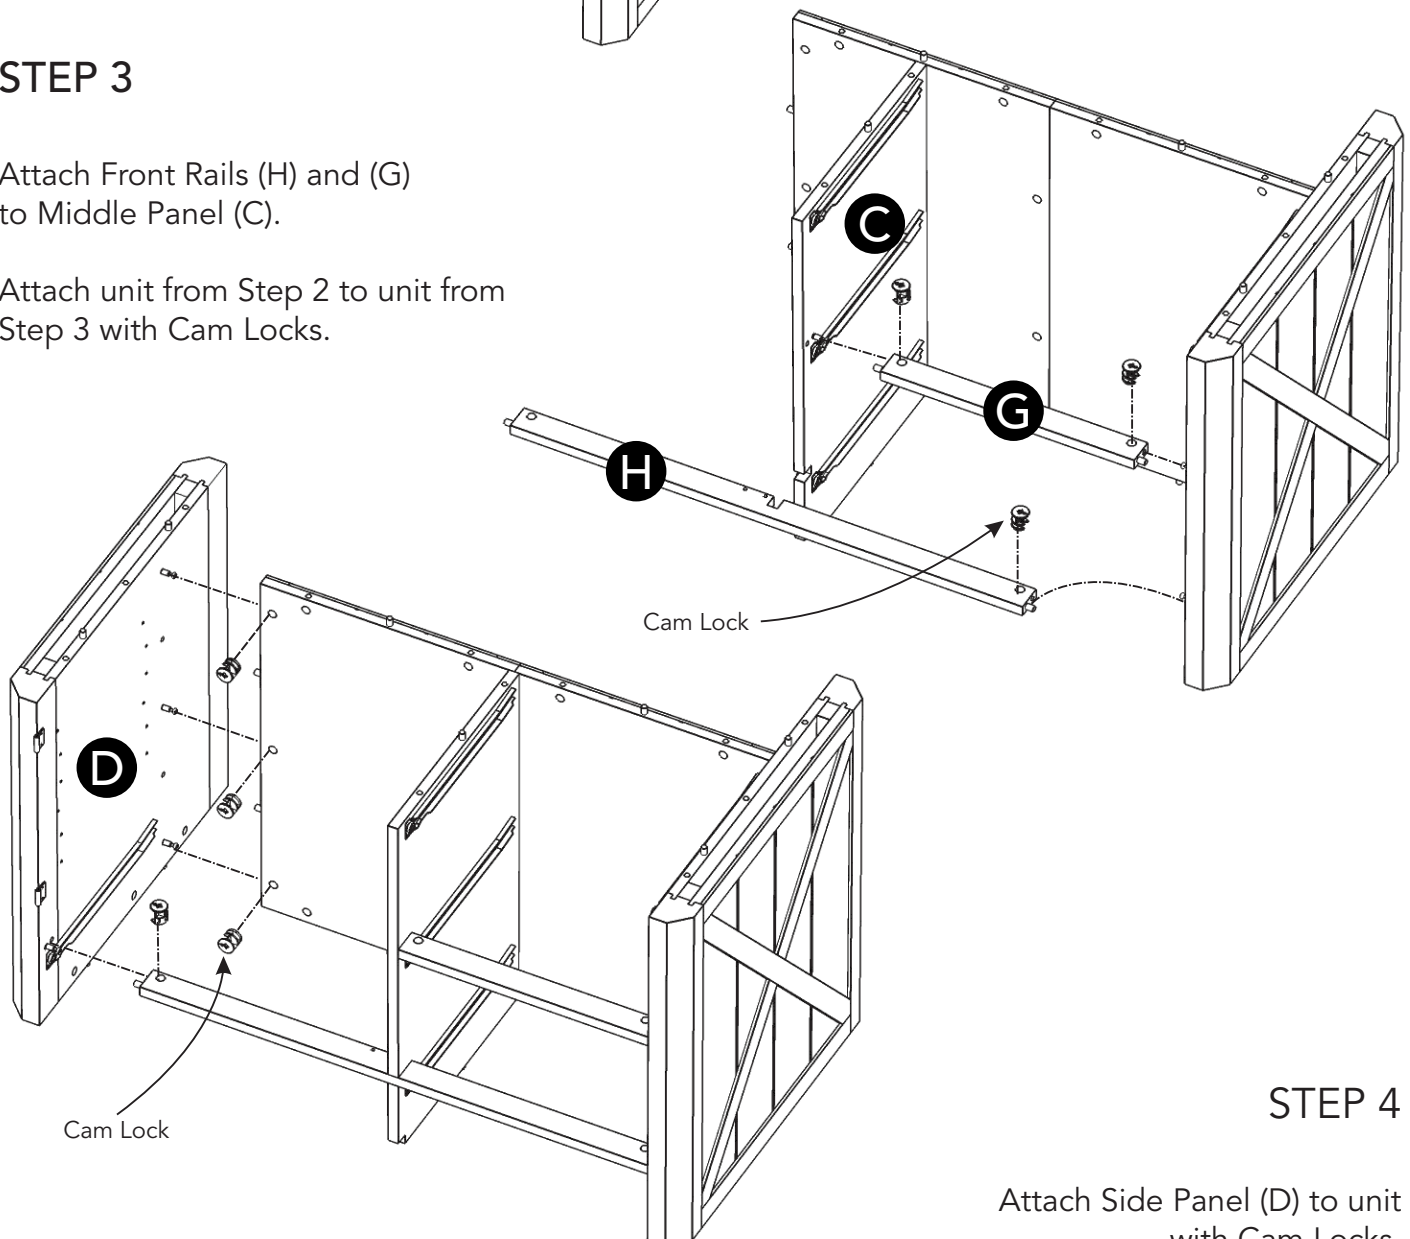


STEP 4

Attach Side Panel (D) to unit with Cam Locks.

Assembly Instructions 4/6

  
Drawer (L)

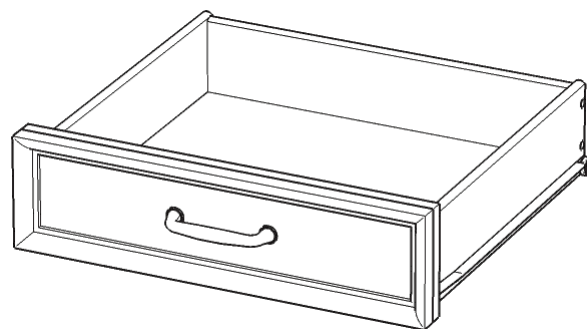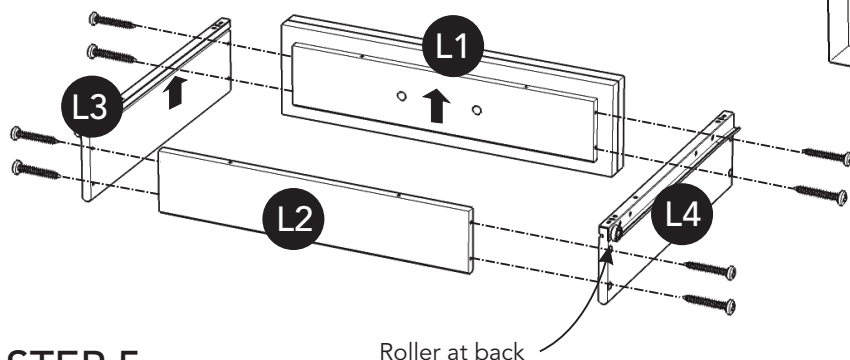

STEP 5


Attach Drawer Front (L1) and Drawer Back (L2) to Drawer Side (L3) with Wood Screws (long).

 Attach Drawer Side (L4) to unit with Wood Screws (long).

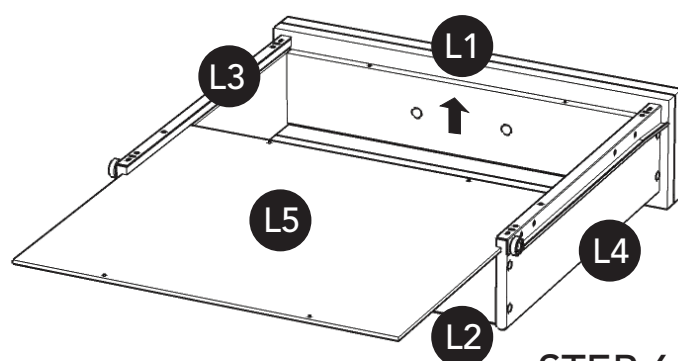

STEP 6

 Slide Drawer Bottom (L5) into the grooves of Drawer Sides (L3) and (L4) until it meets Drawer Front (L1).

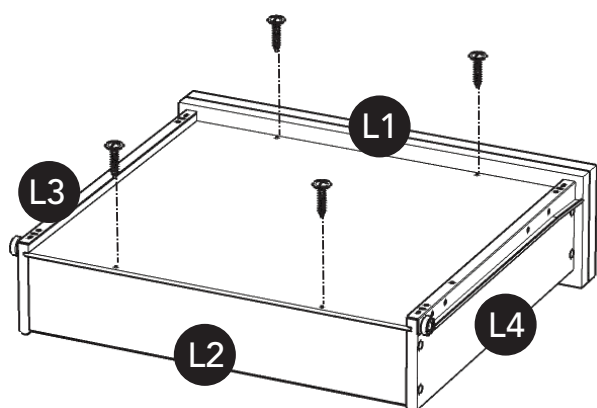


STEP 7


Attach Drawer Bottom (L5) to unit with Wood Screws (short).

STEP 8

 
Attach Handle with machine screws.

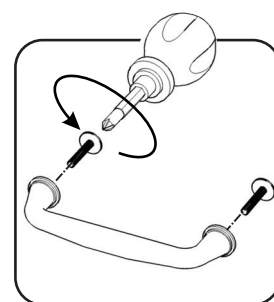


Part List

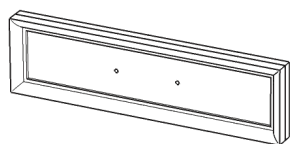 


L1.
Drawer Front
2 pcs.

 


L2.
Drawer Back
2 pcs.

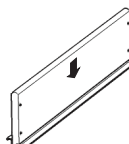 

L3.
Drawer Side
2 pcs.

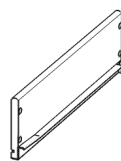 



L4.
Drawer Side
2 pcs.

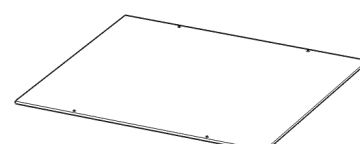 

L5.
Drawer Bottom
2 pcs.

Assembly Instructions 5/6

  
Drawer (M)

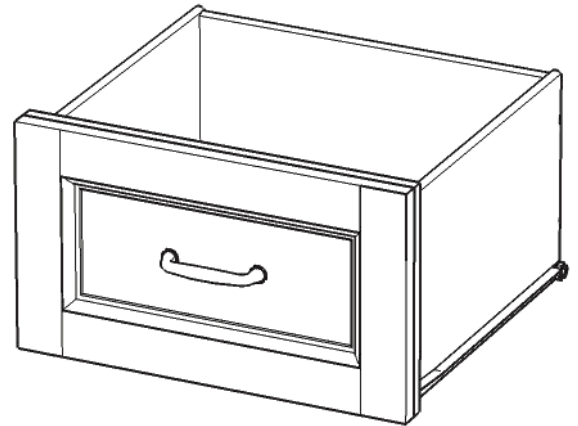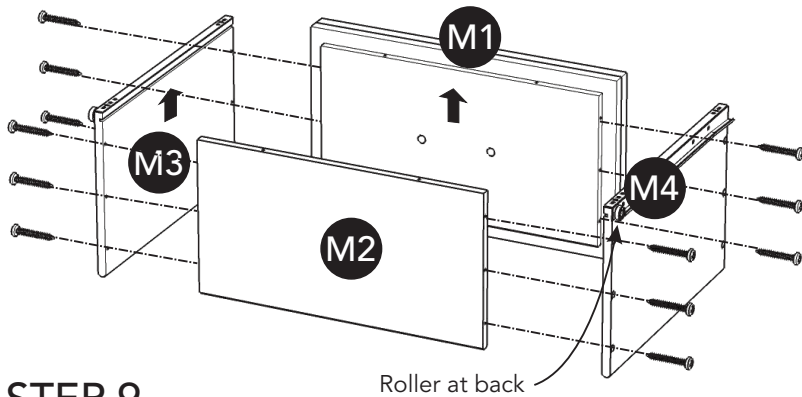

STEP 9


Attach Drawer Front (M1) and Drawer Back (M2) to Drawer Side (M3) with Wood Screws (long).

 Attach Drawer Side (M4) to unit with Wood Screws (long).

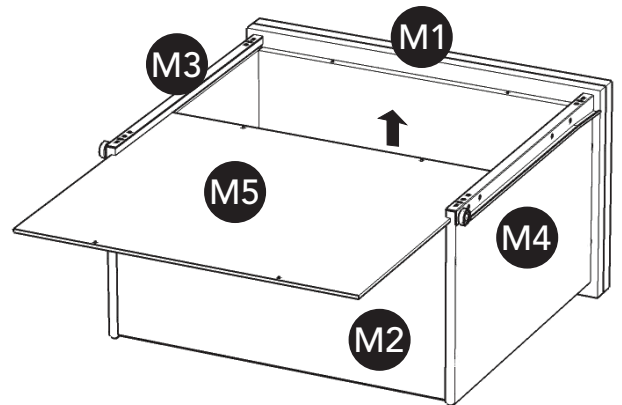

STEP 10

 Slide Drawer Bottom (M5) into the grooves of Drawer Sides (M3) and (M4) until it meets Drawer Front (M1).

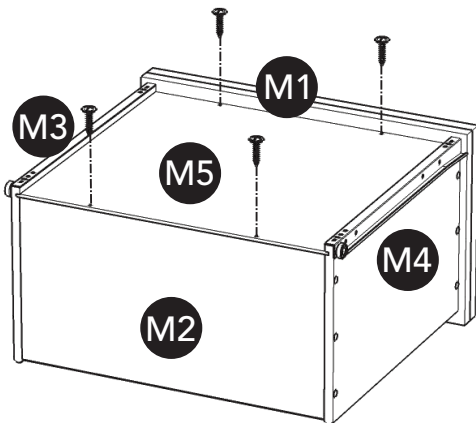


STEP 11


Attach Drawer Bottom (M5) to unit with Wood Screws (short).

STEP 12

 
Attach Handle with machine screws.

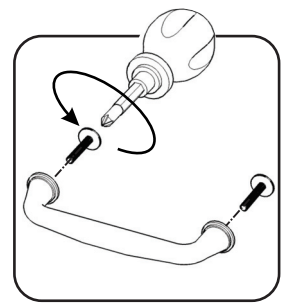


Part List

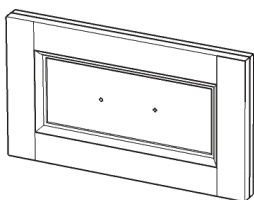 

M1.
Drawer Front
2 pcs.

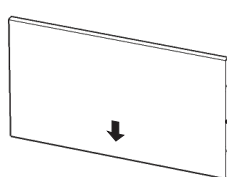 


M2.
Drawer Back
2 pcs.

 

M3.
Drawer Side
2 pcs.



 M4.
Drawer Side
2 pcs.

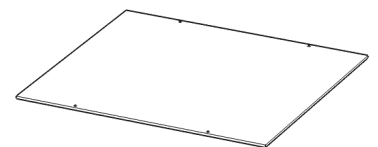

M5.
Drawer Bottom
2 pcs.

Assembly Instructions 6/6

STEP 13

Attach Base (I) to unit with Washers, Long Screws and Cam Locks. (See Figure 3)

Attach Magnet to unit with Wood Screws for Magnet. (See Figure 4)

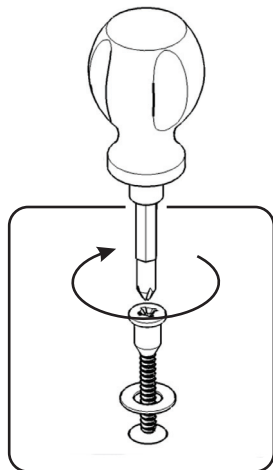 


Figure 3

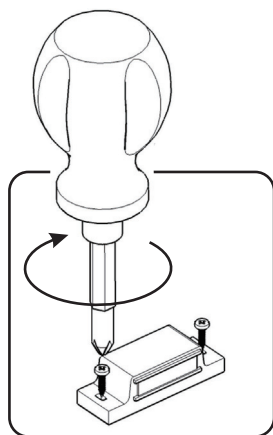 


Figure 4

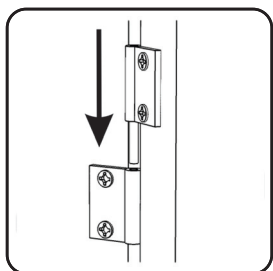 


Figure 5

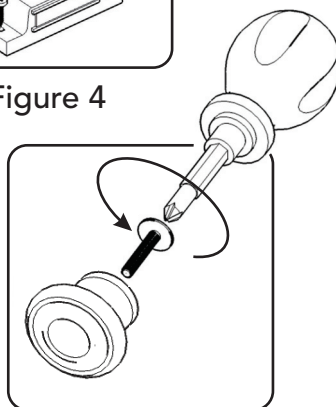 


Figure 6


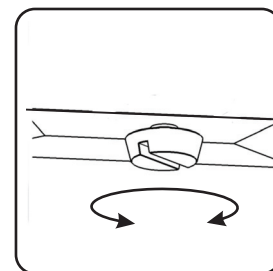 


Figure 7

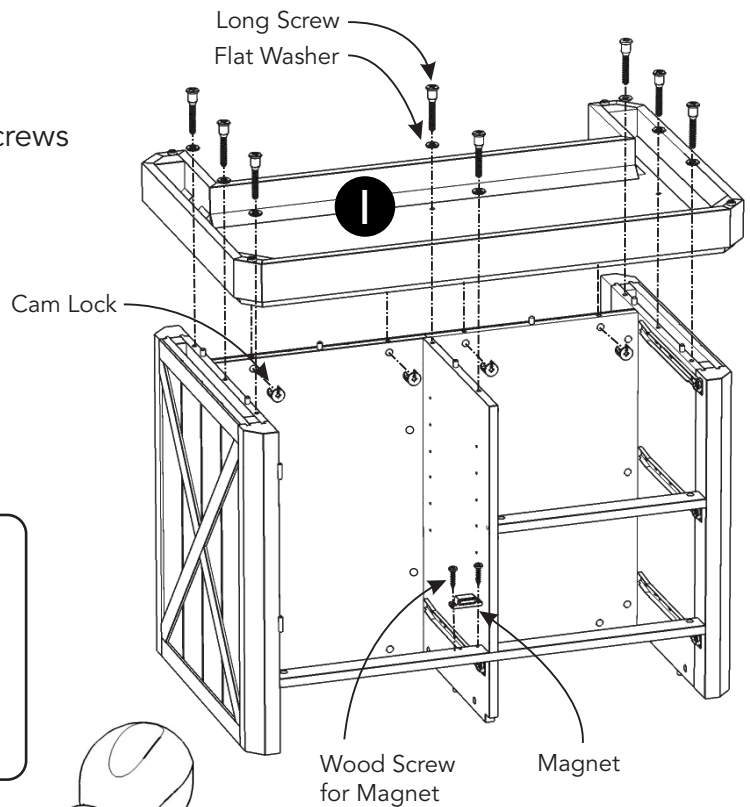 

STEP 14

Turn the unit upright position, attach Top (A) to unit with Cam Locks.

Slide Drawers (L) and (M) into position.

 
Insert Adjustable Pins into side panel and middle panel at desired level, then place Shelves (K) into position.

Attach Door (J) by sliding the door lift hinges into the side panels lift hinges. (See Figure 5)

Assemble Knob to Door (J) with Machine Screws. (See Figure 6)

To level the unit, adjust the adjustable levelers on the bottom of unit. (See Figure 7)

Note: Unit must be level to work properly.

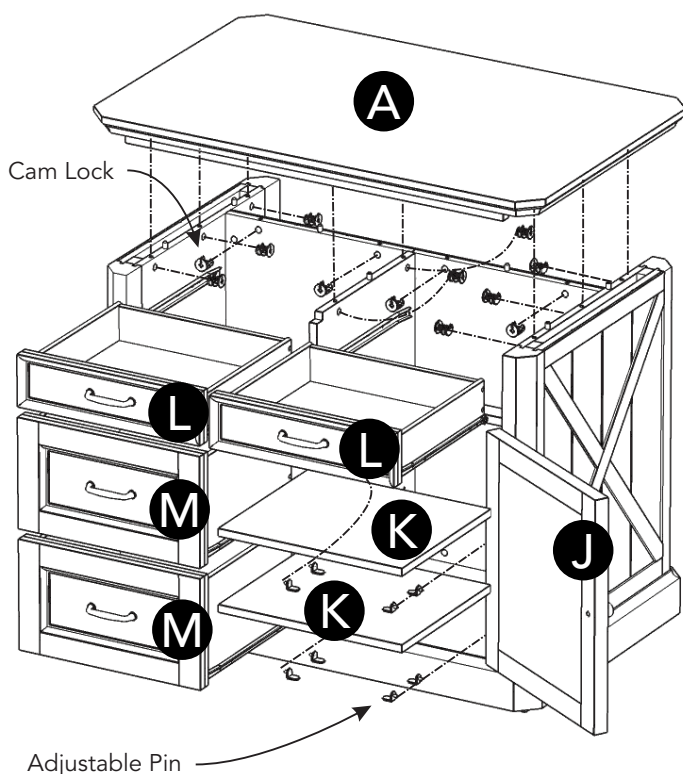

CARE INSTRUCTIONS

NEVER


allow liquids to remain on furniture.
Absorption causes parts to warp
and split and finishes to delaminate.

NEVER

use glass cleaners on
finished furniture. Ammonia
chemically attacks the finish.



Do not use power tools
above 8 volts to assemble.
**PREVENT
CRACKING**

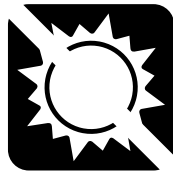


Do not place
in direct sunlight.
**PREVENT
FADING**



Do not write
directly on surface.
**PREVENT
MARKING**



Do not place hot
objects on surface.
**PREVENT
FINISH DAMAGE**

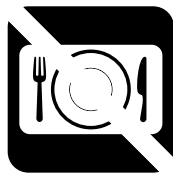

Do not use rubber
based placemats.
**PREVENT
DISCOLORING**



Do not use commercial
waxes and polishes.
**PREVENT
YELLOWING**

CLEAN

with a soft cloth moistened
in lukewarm soap and water.
Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:
www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319