


FLEXSTEEL®

Power Reclining Loveseat with Console & Power Headrests, Power Lumbar


IMPORTANT NOTE

Read these instructions carefully, and familiarize yourself with each procedure before assembling the furniture. Check that you have all the component parts, and familiarize yourself with each part before proceeding.

Take all the fittings out of the plastic bag and separate them into groups. Ensure you have enough space to lay out all the parts before assembly. To prevent damage to the parts, we recommend that you assemble the unit on a soft, level surface.

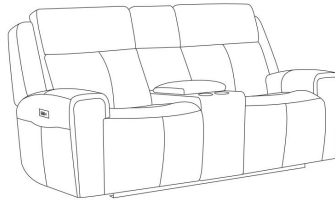

Part List

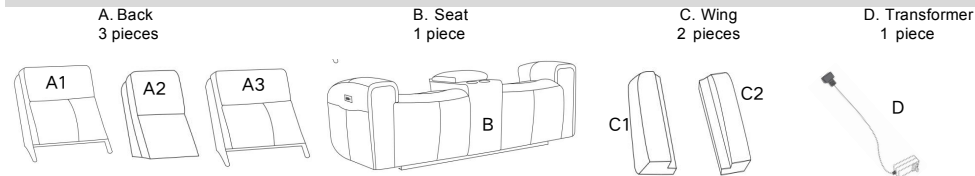

Assembly Instructions

STEP 1

Detach the transformer (D) from the bottom of the Seat (B) and the wings (C1/C2) from the bottom of the armrests (See Figure 1.)

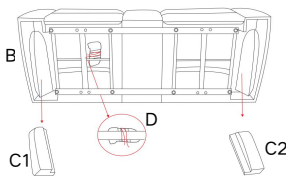


Figure 1

STEP 2

Take the Middle Back (A2) out of the Console. (See Figure 2.)

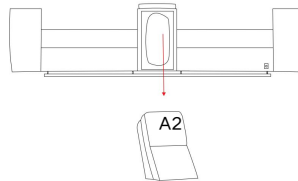


Figure 2

Assembly Instructions

STEP 3

Take the three screws out of the bottom of Middle Back (A2), then attach the Middle Back (A2) to the Console with screws (See Figure 3.)

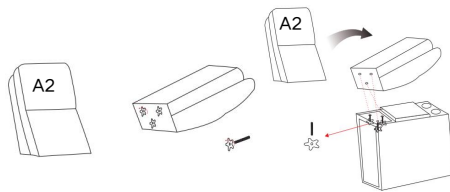


Figure 3

STEP 4

Attach the Back (A1/A3) to Seat (B). Then attach the Wing (C1/C2) to Back (A1/A3). Ensure the latches fit well. (See Figure 4.)

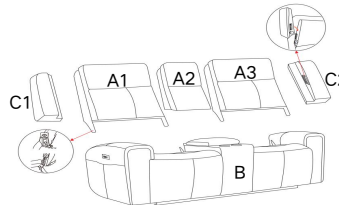


Figure 4

Assembly Instructions

STEP 5

Flip up the back flap, connect the headrest cable to the power button control cable, place the lumbar cable (yellow label) to the power button control cable (yellow label), and place them behind the flap. (See Figure 5.)

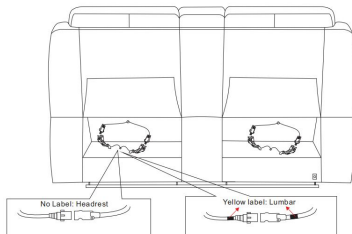


Figure 5

STEP 6

Plug the transformer (D) into a nearby outlet, still making sure it is clear of the metal base. (See Figure 6.)

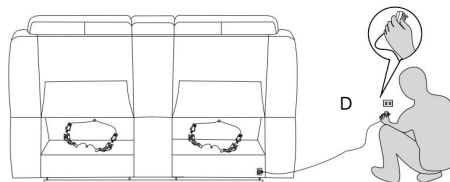


Figure 6

STEP 7

Fasten the back flaps to the bottom of the furniture. (See Figure 7.)

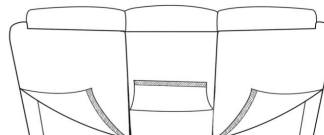


Figure 7

- To avoid any risk of suffocation to children or pets, dispose of all plastic bags immediately.
- To ensure proper performance, occasionally check for loose screws and tighten as needed.
- If the reclining functions are not working properly, check for loose cable connections before contacting the retailer.