# Galanz

## Model# GEWWD22S3SV125

## ExpressWave User Manual



Thank you for purchasing a Galanz product. Please read this manual carefully for correct usage and safety, and keep for future reference. For service, support and warranty information, call 1-800-562-0738.

Important Safety Instructions	1
Precautions to Avoid Possible Exposure to Excessive Microwave Energy	1
California Proposition 65 Warning	1
General Warning	1
Grounding Instructions	3
Installation Guide	
Cooking Utensils Guide	5
Product Diagram	6
Control Panel	7
First Time Use	8
Product Specifications	
Operation Instructions	
Setting the Clock	
Timer	
Quick Start Microwave	10
Microwave Cooking	11
Weight Defrost	
Time Defrost	
Sensor Cook	
Sensor Reheat	
Popcorn	16
Beverage	16
Potato	
Frozen Vegetable	
Dinner Plate	
Soup	
+30 Sec Function	
Child Lock	
Sound On/Off Function	20
Energy Saving Mode	
Troubleshooting	
Cleaning And Care	22
Product Warranty	23

## PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave technology. It is important not to tamper with the safety interlocks.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is very important that the oven door closes properly and that there is no damage to the a) Door (including any dents),
  - b) Hinges and latches (broken or loosened),
  - c) Door seals and sealing surfaces.

The oven should not be adjusted or repaired by anyone except qualified service personnel.

### CALIFORNIA PROPOSITION 65 WARNING

## **⚠** WARNING

Cancer and Reproductive Harm-WWW.P65Warnings.ca.gov.

## 

To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave technology:

- Read all instructions before using the appliance.
- Read and follow the specific "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" on page 1.
- This appliance must be grounded. Connect only to properly grounded outlet. See "GROUNDING INSTRUCTIONS" on page 3.
- Do not operate the oven when empty.
- Install or locate this appliance only in accordance with the provided installation instructions.
- Some products such as whole eggs and sealed containers -for example, closed glass jars- are able to explode and should not be heated in this oven.
- Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
- As with any appliance, close supervision is necessary when used by children.
- To reduce the risk of fire in the oven cavity:
- —Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
- —Remove wire twist-ties from paper or plastic bags before placing bag in oven.
- —If materials inside the oven should ignite, keep oven door closed, turn oven off using the circuit breaker panel, and call

- emergency services.
- Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.
- Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling due to surface tension of the liquid. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. This could result in very hot liquids suddenly boiling over when a spoon or other utensil is inserted into the liquid.
- To reduce the risk of injury to person:
- —Do not overheat the liquid.
- —Stir the liquid both before and halfway through heating it.
- —Do not use straight-sided containers with narrow necks.
- —After heating, allow the container to stand in the microwave oven for a short time before removing the container.
- —Use extreme care when inserting a spoon or other utensil into the container.
- Do not heat oil or fat for deep-frying. It is difficult to control the temperature of oil in microwave oven.
- Do not cover or block any openings on the appliance.
- Do not operate this appliance if it has a damaged cord or a plug, if it is not working properly or if it has been damaged or dropped.
- Do not immerse cord or plug in water. Keep cord away from heated surface. Do not let cord hang over edge of table or counter.
- This appliance should be serviced only by qualified service personnel, contact nearest authorized service facility for examination, repair, or adjustment.
- When cleaning surfaces of door and oven that comes together on closing the door, use only mild, nonabrasive soaps, or

- detergents applied with a sponge or soft cloth.
- Oversized food or oversized metal utensils should not be inserted in a microwave/toaster oven as they may create a fire or risk of electric shock.
- Do not store or use this appliance outdoors. Do not use this product near water, for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar locations.
- Do not clean with metal scouring pads. Pieces can burn off the pad and touch electrical parts involving a risk of electric shock.
- Do not use paper products when appliance is operated in the toaster mode.
- Do not store any materials, other than manufacturer's recommended accessories. in this oven when not in use.
- Do not cover turntables, pans or any other part of the oven with metal foil. This will cause overheating of the oven.
- This equipment has been tested and found to comply with Part 18 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular


installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **GROUNDING INSTRUCTIONS**

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded, and if it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounding plug and a 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.

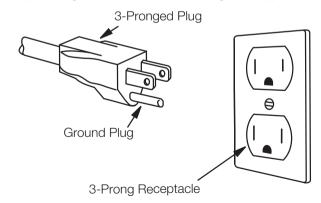

#### **Electrical Requirements**


The electrical requirements are a 120 volt 60 Hz, AC only, 20 amp. It is recommended that a separate circuit serving only the oven be provided. The oven is equipped with a 3-prong grounding plug. It must be plugged into a wall outlet properly installed and ground.

#### **Power Cord**

- —A short power supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- —Longer cord sets or extension cords are available and may be used if care is exercised in their use.
- —If long cord or extension cord is used:
  - a) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
    b) The extension cord must be a grounding-type 3-wire cord, and The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

### **INSTALLATION GUIDE**

- Make sure that all the packing materials are removed from the inside of the door.
- This microwave oven must be placed on a flat, stable surface.
- For correct operation, the oven must have sufficient airflow. Allow minimum 8 inch (20.32cm) of free space necessary above the top surface of the oven and 2 inch (5.08cm) at both sides. Do not cover or block any openings on the appliance. Do not remove feet.
- The appliance shall be only used on a countertop over 3 feet (91.6cm) above the floor.
- Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.

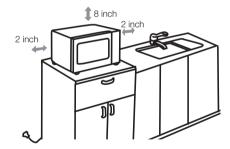

- Make sure that the power cord is undamaged and does not run under the oven or over any hot or sharp surface.
- The socket must be readily accessible so the microwave oven can be easily unplugged in an emergency.

### COOKING UTENSILS GUIDE



This section lists which utensils can be used in this microwave, which have limited use for short periods, and which should not be used in this microwave.

#### **RECOMMENDED**

**Microwave browning dish** — Use to brown the exterior of small items such as steaks, chops, or pancakes. Follow the directions provided with your browning dish.

**Microwaveable plastic wrap** — Use to retain steam. Leave a small opening for some steam to escape and avoid placing it directly on the food.

**Paper towels and napkins** — Use for short-term heating and covering; these absorb excess moisture and prevent spattering. Do not use recycled paper towels, which may contain metal and could ignite.

**Glass and glass-ceramic bowls and dishes** — Use for heating or cooking.

**Paper plates and cups** — Use for short-term heating at low temperatures. Do not use recycled paper, which contain metal and could ignite.

**Wax paper** — Use as a cover to prevent spattering.

**Thermometers** — Use only those labeled "Microwave Safe" and follow all directions. Check the food in several places. Conventional thermometers may be used on microwave food once the food has been removed from the oven.

#### LIMITED USE

**Aluminum foil** — Use narrow strips of foil to prevent overcooking of exposed areas. Using too much foil can damage your oven, so be careful. You should keep distance of 1 inch (2.54cm) between aluminum foil and cavity.

**Ceramic, porcelain, and stoneware** — Use these if they are labeled "Microwave Safe". If they are not labeled, test them to make sure they can be used safely.

**Plastic** — Use only if labeled "Microwave Safe". Other plastics can melt.

#### NOT RECOMMENDED

**Glass jars and bottles** — Regular glass is too thin to be used in a microwave. It can shatter and cause damage and injury.

**Paper bags** — These are a fire hazard, except for popcorn bags due on food.

**Styrofoam plates and cups** — These can melt and leave an unhealthy residue on food.

**Plastic storage and food containers** — Containers such as margarine tubs can melt in the microwave.


**Metal utensils** — These can damage your oven. Remove all metal before cooking.


#### Note:

Should you wish to check if a dish is safe for microwaving, place the empty dish in the oven and microwave at high power level for 30 seconds. A dish which becomes very hot should not be used.

## PRODUCT DIAGRAM

- 1. Control Panel
- 2. Display Screen
- 3. Menu / Time / Portion / Level Selector Knob
- 4. Oven Window
- 5. Push Button
- 6. Glass Turntable
- 7. Roller Ring
- 8. Shaft
- Wave Guide (Please do not remove the mica plate covering the wave guide)
- 10. Door Safety Lock System

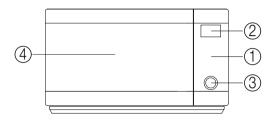

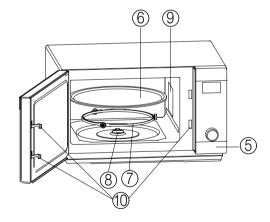

## **CONTROL PANEL**



#### **SENSOR COOK**

Use to set the automatic sensor cook programs (See Page 14).

#### **SENSOR REHEAT**

Use to set the automatic sensor reheat programs (See Page 15).

#### TIME / WEIGHT DEFORST

Press once to set defrost program based on time (See Page 13).

Press twice to set defrost program based on weight (See Page 12).

#### **POPCORN**

Use to set popcorn program (See Page 16).

#### **BEVERAGE**

Used to make hot drinks (See Page 16).

#### **POTATO**

Used to make potatoes (See Page 17).

#### **FROZEN VEGETABLE**

Used to heat up frozen vegetables (See Page 17).

#### **DINNER PLATE**

Used to heat up a dinner plate (See Page 18).

#### **SOUP**

Used to make soup (See Page 18).

#### **CLOCK /TIMER**

Press and hold to set the clock time (See Page 9). Press to set the timer function (See Page 10).

#### **MICRO**

Use to microwave food with selected power level (See Page 11).

#### LOCK/MUTE (ON/OFF/HOLD 3 SEC)

Press once to set sound on/off (See Page 20). Press and hold to set child lock (See Page 19).

#### +30 SEC

Press to add time during the cooking program (See Page 19).

#### STOP / CANCEL / ENERGY SAVING

Press once to pause current cooking program or press twice to cancel the program.

Press and hold to set energy saving mode.

### Menu / Time / Weight / Level Selector Knob

Turn to select cooking menus, time, food weight, portion or power level.

## FIRST TIME USE

If you are using your ExpressWave microwave oven for the first time, please be sure to:

- Clean the glass turntable with hot water, a small amount of dishwashing liquid and a nonabrasive cleaning pad.
- Do not immerse the body of the unit in water.
- ■When you plug in the unit, the display will show "12:00".
- ■While you are in the process of any setting, the oven will return to standby mode after 30 seconds without any operation.
- During cooking, if press **STOP/CANCEL** once or open the door, the program will be paused. Press the dial to resume cooking, but if you press **STOP/CANCEL** twice, the program will be canceled.
- ■When the cooking completes, the screen will display "End" with sound every two minutes until you press STOP/CANCEL or open the door.

### **Product Specifications**

Power Supply	120V/60Hz
Power Consumption (Microwave)	1500W
Rated Microwave Power Output	1250W
Operating Frequency	2450MHz
Outside Dimensions (W x H x D)	24 <sup>3</sup> / <sub>4</sub> x 14 <sup>3</sup> / <sub>16</sub> x 19 <sup>15</sup> / <sub>16</sub> inch
Oven Capacity	2.2 Cu.Ft.
Net Weight	Approx. 31.6 lbs

## Setting the Clock



 
You can set the clock in 12-hour or 24-hour by pressing **CLOCK/TIMER** in standby mode.

 
Example: How to set a 12-hour clock at 11:58.

1 In standby mode, press and hold CLOCK/TIMER for 3 seconds to select 12-hour clock (press the pad again to select 24-hour clock).



CLOCK





Press the dial or **CLOCK/TIMER** to confirm the hour.





Turn the dial until the correct minute is displayed.

Press the dial or **CLOCK/TIMER** to confirm the minute and finish setting.





**NOTE:** While in the process of setting the clock, you can cancel the settings by pressing the **STOP/CANCEL**.

The **CLOCK** cannot be set while the **TIMER** is running.

### Timer



You can use the timer feature to count down a specific amount of time whether it's for cooking or for anything else.

## Example: How to set the timer for 3 minutes and 50 seconds.







2 Turn the dial to enter the time. The maximum time you can set is 95 minutes.





3 Press the dial or **CLOCK/TIMER** to confirm.





**NOTE:** Timer countdown can be seen for 5 seconds by touching **CLOCK/TIMER**, if press **STOP/CANCEL** during these 5 seconds, the timer will be canceled.

### **Quick Start Microwave**



This feature allows you to start the oven quickly at maximum microwave power. The longest cooking time is 95 minutes.

## Example: How to quick start microwave for 3 minutes and 30 seconds.

 In standby mode, turn the dial to select cooking time. The maximum time you can set is 95 minutes.





2 Press the dial to confirm and start cooking.





## Microwave Cooking



This feature allows you to choose the power level and cooking time of microwave function. The longest cooking time is 95 minutes.

Example: Cook at 30% power level for 3 minutes and 50 seconds.

1 Press **MICRO** pad once, the default power level is 100%(maximum power).

MICRO



2 Turn the dial to select the 30% power level.





Press the dial once to confirm the power level.





4 Turn the dial again to enter cooking time.



**5** press the dial to confirm and start cooking.





### **Power Level Chart:**

Power Level	Display
100%	P100
90%	P-90
80%	P-80
70%	P-70
60%	P-60

Power Level	Display
50%	P-50
40%	P-40
30%	P-30
20%	P-20
10%	P-10

#### NOTE:

 
If you want to set 100% power level, you can turn the dial to enter cooking time directly and then press the dial to start.

## Weight Defrost

 


 
The defrosting time and power level are automatically set once the food category and the weight are selected.

 
#### Example: How to defrost 8oz seafood.











### **Weight Defrost Food Chart:**

Code	Food	Maximum Weight
dEF1	Meat	96oz
dEF2	Poultry	96oz
dEF3	Seafood	32oz

#### NOTE:

During the defrosting program, the system will pause and alert the user to turn the food over when 1/2 of the defrosting time remains. After turning food over, close the door and press the dial to resume the defrosting.

Weight must be in pounds and ounces. If label gives weight in pounds only, change the fraction of a pound to ounces using the following chart.

#### Converting fractions of a pound to ounces:

Fractions of a pound	Ounces	Fractions of a pound	Ounces
Less than .03	0	.54 to .59	9
.03 to .09	1	.60 to .65	10
.10 to .15	2	.66 to .71	11
.16 to .21	3	.72 to .78	12
.22 to .27	4	.79 to .84	13
.28 to .34	5	.85 to .90	14
.35 to .40	6	.91 to .97	15
.41 to .46	7	.97 to .99	16
.47 to .53	8		

## Time Defrost

 


The defrosting power is adjusted automatically once the cooking time is programmed.

## Example: How to defrost food for 3 minutes and 50 seconds.









#### NOTE:

During the defrosting program, the system will pause and alert the user to turn the food over when 1/3 of the defrosting time remains. After turning food over, close the door and press the dial to resume the defrosting.

### Sensor Cook



For sensor cook function, you can select the type of food you want to cook from the programs listed on the cooking label located on the interior panel of the appliance..

## Auto Program: How to Cook 8oz fresh vegetable with sensor.

In standby mode, press the **SENSOR COOK** once.

SENSOR COOK



2 Turn the dial to select food code 'SC-2' (Fresh Vegetable).





3 Press the dial once to confirm and start sensing and cooking.





The appliance with automatically suggest a cooking time and start countdown.



### Sensor Cook Food Chart (Auto Program):

Code	Food	Weight Range
SC-1	Oatmeal	5-16oz
SC-2	Fresh Vegetable	7-21oz
SC-3	Fish	7-21oz
SC-4	Ground Meat	5-24oz

#### NOTE:

- After cooking for a period of time, the system will detect whether there is error, if there is error, for example, the sensor short circuit or open circuit, the system will stop automatically with the display showing "Er60", beeps sound until press STOP/CANCEL pad.
- If there is no error, the system will judge corresponding cooking time based on the steam generated by the food, after cooking for a period of time, the countdown will display on the screen.
- During sensor cooking program, if press STOP/CANCEL pad once or open the door, the system will turn back to standby mode.
- If during the longest sensor time the oven cannot judge the cooking time according the steam produced by food in the cavity, the cooking will auto-end.

### Sensor Reheat



For sensor reheat function, you can select the type of food you want to cook from the programs listed on the cooking label located on the interior panel of the appliance.

### Auto Program: How to Reheat frozen pizza with sensor.

In standby mode, press the **SENSOR REHEAT** once.

SENSOR REHEAT



2 Turn the dial to select food code 'SH-3' (Frozen Pizza).





3 Press the dial once and start sensing and cooking.





The appliance with automatically suggest a cooking time and start countdown.



#### Sensor Reheat Food Chart (Auto Program):

•	beneer Hericat Food Onlart (Auto Frogram).		
	Code	Food	Weight Range
	SH-1	Chili	5-24oz
	SH-2	Frozen Entrée	7-24oz
	SH-3	Frozen Pizza	5-16oz
	SH-4	Mac and Cheese	5-24oz
	SH-5	Mashed Potatoes	5-24oz
ĺ	SH-6	Pasta	5-24oz
	SH-7	Rice	5-28oz

#### NOTE:

- After cooking for a period of time, the system will detect whether there is error, if there is error, for example, the sensor short circuit or open circuit, the system will stop automatically with the display showing "Er60", beeps sound until press STOP/CANCEL pad.
- If there is no error, the system will judge corresponding cooking time based on the steam generated by the food, after cooking for a period of time, the countdown will display on the screen.
- During sensor cooking program, if press STOP/CANCEL pad once or open the door, the system will turn back to standby mode.
- If during the longest sensor time the oven cannot judge the cooking time according the steam produced by food in the cavity, the cooking will auto-end.

### Popcorn



Example: How to cook popcorn for 1 minutes and 50 seconds.

1 In standby mode, press the **POPCORN**. The default time is 1 minutes and 30 seconds (For one bag around 3.5 oz).



POPCORN

2 Turn the dial to select the cooking time.





3 Press the dial once to confirm and start cooking.





#### NOTE:

- ■The default time is 1 minutes and 30 seconds. For default time, you can skip step 2, directly press the dial to start if you prefer.
- The maximum cooking time is 5 minutes.

## Beverage



Example: How to heat up a cup of 10 oz beverage.



2 Turn the dial to select the weight.
Display shows 8, 10, 12, 14 (oz).



Press the dial once to confirm and start cooking.





 
### Weight and Time Chart:

Display	Weight	Time
8	8 oz	1:10
10	10 oz	1:30
12	12 oz	1:50
14	14 oz	2:10

### Potato



Example: How to cook a potato of 20 oz.





2 Turn the dial to select the weight.
Display shows 8, 12, 16, 20, 24, 28 (oz).



Press the dial once to confirm and start cooking.





#### Weight and Time Chart:

Display	Weight	Time
8	8 oz	3:30
12	12 oz	5:00
16	16 oz	6:30

Weight	Time
20 oz	8:30
24 oz	11:00
28 oz	13:30
	20 oz 24 oz

## Frozen Vegetable



Example: How to cook 16 oz frozen vegetable.

1 In standby mode, press the FROZEN VEGETABLE.

FROZEN VEGETABLE



2 Turn the dial to select the weight.
Display shows 8, 12, 16, 20, 24 (oz).





Press the dial once to confirm and start cooking.





### Weight and Time Chart:

Display	Weight	Time
8	8 oz	4:20
12	12 oz	5:20
16	16 oz	6:20

Display	Weight	Time	
20	20 oz	7:20	
24	24 oz 8:20		

## **Dinner Plate**



Example: How to cook a dinner plate 20 oz.

1 In standby mode, press the DINNER PLATE

DINNER PLATE



**2** Turn the dial to select the weight. Display shows 8, 12, 16, 20, 24, 28 (oz).





**3** Press the dial once to confirm and start cooking.





#### Weight and Time Chart:

Display	Weight	Time
8	8 oz	1:20
12	12 oz	2:20
16	16 oz	3:20

Display	Weight	Time
20	20 oz	4:20
24	24 oz	5:20
28	28 oz	6:20

### Soup



Example: How to cook 16 oz of soup.

1 In standby mode, press the **SOUP**.

SOUP



Turn the dial to select the weight.
Display shows 4, 8, 12, 16, 20, 24, 28 (oz).





3 Press the dial once to confirm and start cooking.





### Weight and Time Chart:

Display	Weight	Time
4	4 oz	1:00
8	8 oz	1:30
12	12 oz	2:00
16	16 oz	2:30

Display	Weight	Time
20	20 oz	3:00
24	24 oz	3:30
28	28 oz	4:00

### +30 Sec Function



In standby mode, you can press **+30 SEC** pad to start the microwave oven immediately.

During cooking, you can add cooking time by touching **+30 SEC** pad repeatedly. The longest cooking time is 95 minutes.

Example: During microwave cooking, add the cooking time by 2 minutes by utilizing the +30 SEC button.

During cooking, suppose the display is showing 3:50.



2 Press the +30 SEC 4 times.





#### NOTE:

- Below programs cannot use +30 SEC during cooking.
  - SENSOR COOK
  - SENSOR REHEAT
  - POPCORN
  - BEVERAGE
  - POTATO
  - FROZEN VEGETABLE
  - DINNER PLATE
- SOUP
- TIME / WEIGHT DEFROST

 
## Child Lock



The child proof lock prevents unsupervised operation by children.

### Example1: How to set/cancel the Child Lock.

1 In standby mode, suppose the display is showing 11:58.



Press and hold the ON/OFF/HOLD 3 SEC. for 3 seconds, then 'LOCK' appears.



Press and hold for 3 seconds.



3 Press and hold the

**ON/OFF/HOLD 3 SEC.** for 3 seconds, then 'LOCK' disappears.



Press and hold for 3 seconds.



### Sound ON/OFF Function



8888

The Sound ON/OFF function can be used to mute the microwave. In standby mode (except on child lock setting), press the **ON/OFF/HOLD 3 SEC.** and the screen will display

'OFF' for 3 seconds after which the microwave will be muted. This includes the end of cooking alert and all pad noises. To turn sound back on, press the **ON/OFF/HOLD 3 SEC.**.

 
You will hear a beep when this is complete.

Example: How to set Sound ON/OFF.

In standby mode, press the ON/OFF/HOLD 3 SEC.. Display will show 'OFF', after which sound is disabled.









#### NOTE:

■ For default mode, the buzzer sounds is open.

## **Energy Saving Mode**



In standby mode, press and hold on

**STOP/CANCEL/ENERGY SAVING** pad to enter the ECO mode. Screen will stop showing a display. Above operation is the only way to start the ECO mode.

The Energy Saving mode can work under child lock function too.

Example: How to set Energy Saving mode.

In standby mode, press and hold the STOP/CANCEL/ENERGY SAVING pad

and enter the ECO mode. Screen will stop showing a display.

 


■ ENERGY SAVING

Press and hold for 3 seconds.



2 Press any pad to activate the screen. ECO mode will still be activated; the screen will turn off after 10 seconds without operation.




3 Press and hold the

**STOP/CANCEL/ENERGY SAVING** pad for another 3 seconds to exit the ECO mode .



■ ENERGY SAVING

 Press and hold for 3 seconds.



## TROUBLESHOOTING

## Troubleshooting



Error Code	Failure	Action
Er30	Inverter Malfunction	Try opening and closing the door and then repeat the operation. If the error reoccurs, contact the call center 1-800-562-0738 - service is required.
Er60	Humidity Sensor	Try to repeat sensor cook operation. If the error reoccurs, allow the oven to cool with the door open to help steam to dry
Er61	Malfunction	and then try again after 30 miutes. If the error still occurs, contact the call center 1-800-562-0738 - service is required.

## **CLEANING AND CARE**

 
■ Turn off the oven and unplug the power cord from the wall when cleaning.




■ Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergents may be used if the oven gets very dirty. Avoid using spray or other harsh cleaners. They may stain, streak or dull the door surface.



- The outside of the oven should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
- Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or spatters. Do not use abrasive cleaner.
- Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.



 - If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. And it is normal.
- It is occasionally necessary to remove the glass turntable, baking and roasting pan, air fry kit for cleaning. Wash them in warm sudsy water.



Please do not dispose of this appliance into the domestic rubbish bin; it should be disposed to the particular disposal center provided by the municipalities.

## PRODUCT WARRANTY

This warranty applies to products sold by Galanz Americas in the U.S. This warranty is in lieu of any other warranty and expressly applies to the individual product only.

Galanz product is warrantied for one year following purchase for defects in material and workmanship. Please save your receipt as proof of purchase is required to make a warranty claim. During this period, we will provide the replacement cost of this product, a replacement or the equivalent, or repair per our discretion.

The warranty can not be transferred through resale, including the resale through a 3rd party unauthorized retailer and is only bestowed up on the original consumer purchaser upon purchase from an authorized retailer.

- This warranty does not cover and excludes damage or defects caused by:
- -Consumer misuse
- -Abuse
- Neglect including the failure to clean and/or provide adequate regular maintenance as outlined in the user manual
- -Commercial use
- —Subjecting the product to any voltage outside the specified range
- -Loss of parts
- —The affixing of any attachments not provided with the product
- -Accident
- —Use in a manner not intended and outlined in the user manual.

- Any subsequent damages caused by the above listed exclusions will not be covered and any claims determined to meet the above exclusions will be denied. All liability is limited to the purchase price and does not include any:
- -Retail offered extended warranties
- -Tax
- —Other charges(including postage to send required materials)
- Incidental and/or consequential damages associated with the product in question.

Every implied warranty, including any statutory warranty of merchantability or fitness for a particular purpose is disclaimed except to the extent prohibited by law, in which case such warranty is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states do not allow limitations on implied warranties or special, incidental, or consequential damaged, so the above limitations may not apply to you.

If you have a claim under this warranty, please call our Customer Service number: 1-800-562-0738.

For faster service, please have the model number, serial number, and receipt ready for the operator to assist you.

## WARRANTY REGISTRATION

Please mail this warranty card to the address below within 30 days of purchase. Or you can register your product online by going to www.galanz.com\us.

Galanz Americas, 55 Challenger Road, Suite 503, Ridgefield Park, NJ 07660. PLEASE PRINT CLEARLY.

Name			
Address			
		State	
Phone	Email		
Model Number		Serial Number	
Purchase Location			

You must attach a copy of your purchase receipt to validate your registration.

# Galanz