homestyles°

20 05185 0164


Desk Hutch


IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

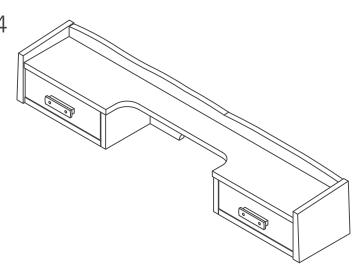

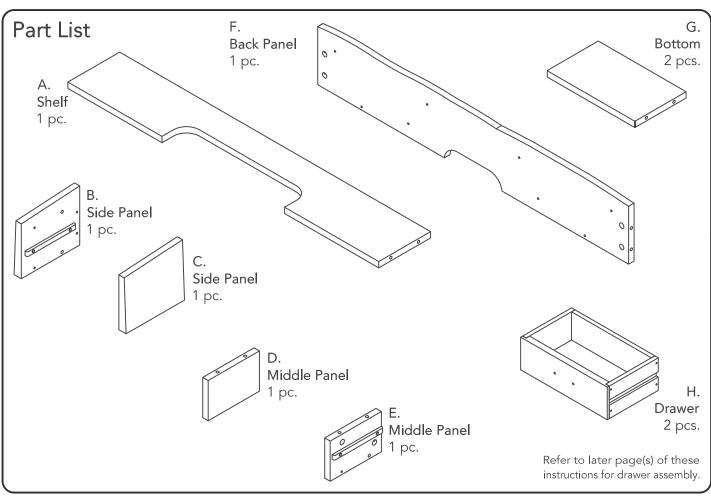

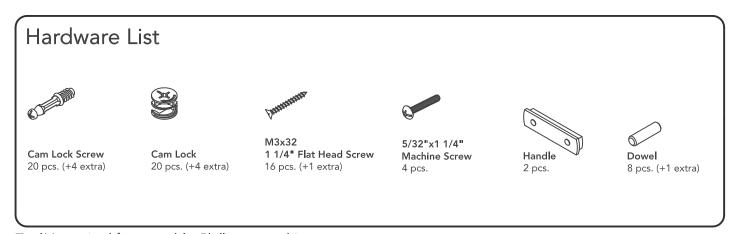

Tool(s) required for assembly: Phillips screwdriver

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319


Assembly Instructions 2/6

IMPORTANT

- \bullet Use a soft cloth between these parts and the floor.
- \bullet Do not use power tools above $\dot{8}$ volts to assemble.
- Do not tighten all the screws until each part is properly assembled.

STEP 1

Insert Cam Lock Screws into pre-drilled holes in Shelf (A), Side Panels (B), (C), Middle Panels (D), (E) and Back Panel (F), then tighten.

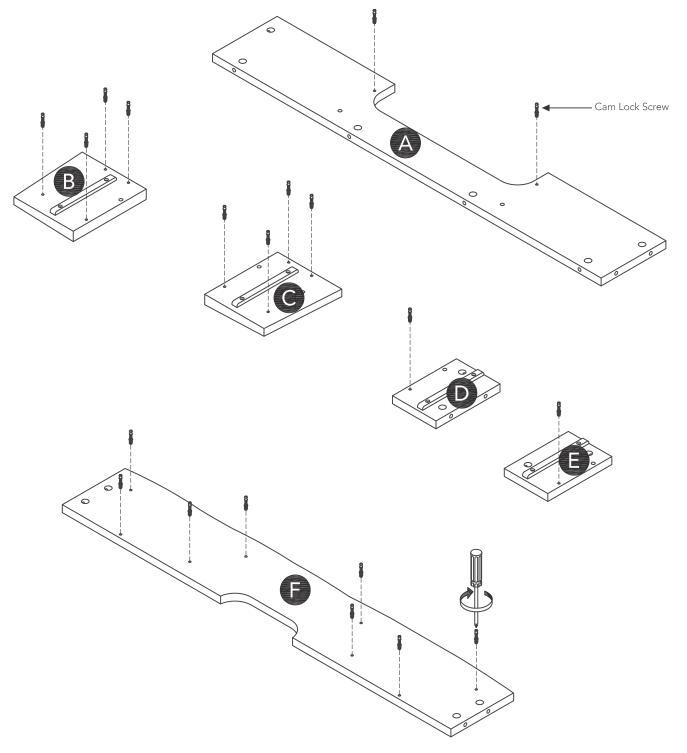

Assembly Instructions 3/6

STEP 2


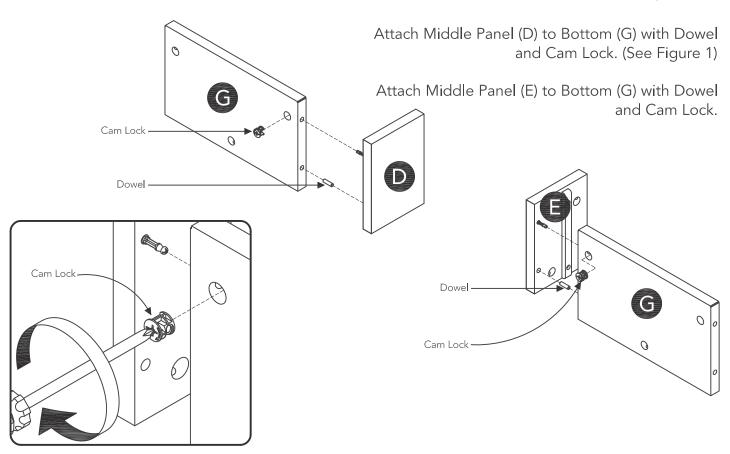


Figure 1

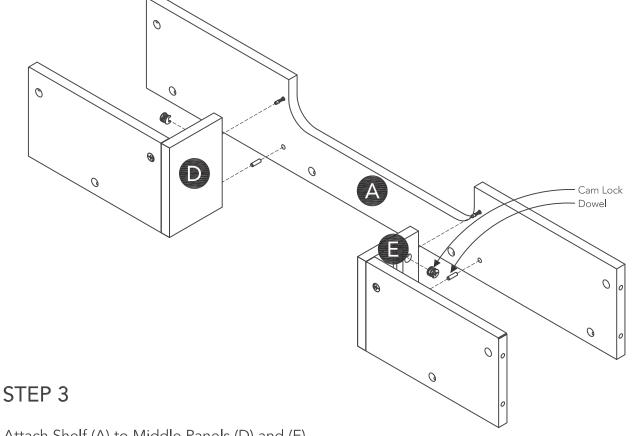


Attach Shelf (A) to Middle Panels (D) and (E) with Dowels and Cam Locks.

Assembly Instructions 4/6

STEP 4




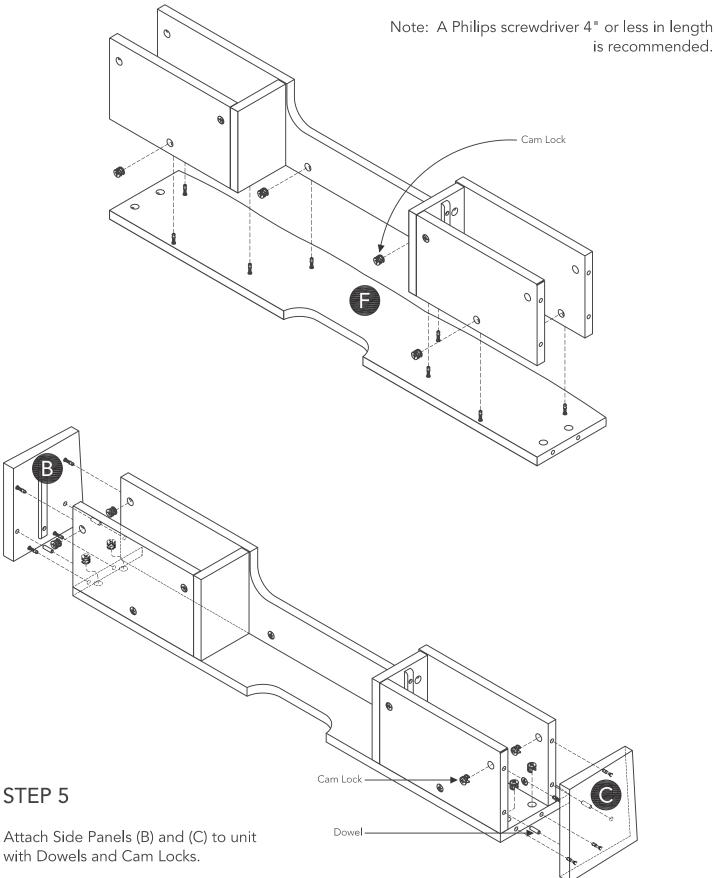


Note: A Philips screwdriver 4" or less in length is recommended.

Assembly Instructions 5/6

Drawer (H)

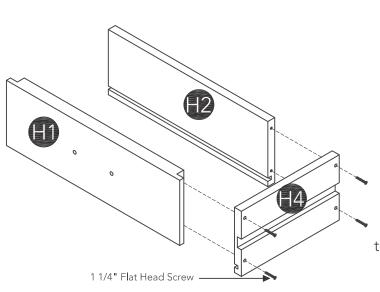

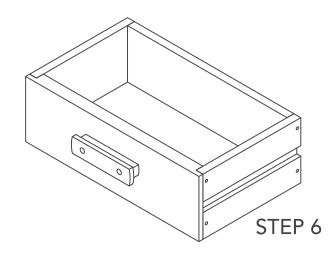



Attach Drawer Front (H1) and Drawer Back (H2) to Drawer Side (H4) with 1 1/4" Flat Head Screws.

STEP 7

Insert Drawer Bottom (H5) into groove.

Attach Drawer Side (H3) to unit with 1 1/4" Flat Head Screws.

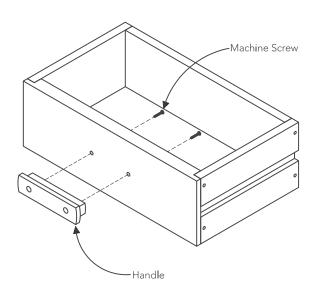


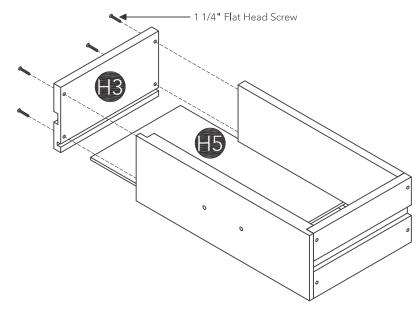


STEP 8

Attach Handle with Machine Screws.

 Part List



H1.
Drawer Front
2 pcs.

 


H2.
Drawer Back
2 pcs.



H3. Drawer Side 2 pcs.




 H4. Drawer Side 2 pcs.



H5.
Drawer Bottom
2 pcs.

Assembly Instructions 6/6

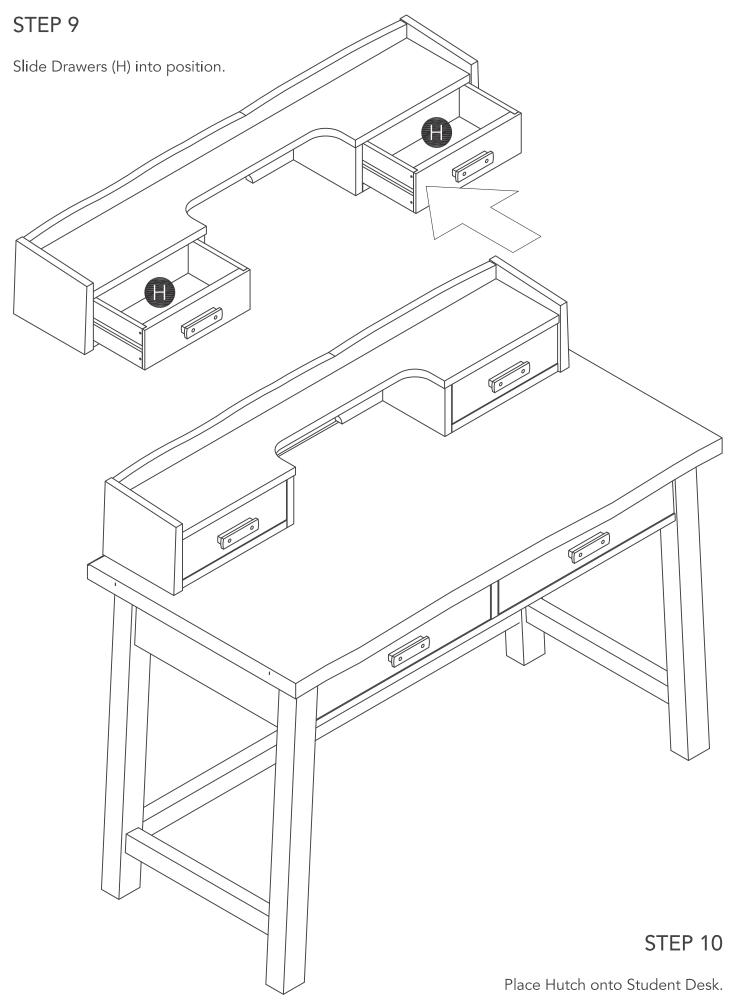

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT

CRACKING



Do not place in direct sunlight. PREVENT FADING



Do not write directly on surface. PREVENT MARKING



Do not place hot objects on surface.

PREVENT
FINISH DAMAGE



Do not use rubber based placemats.

PREVENT

DISCOLORING



Do not use commercial waxes and polishes.

PREVENT

YELLOWING

CLEAN

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319