



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

609566 PUSH BACK RECLINER

ITEM: **609566**



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

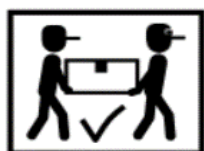

ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A SEAT



1PC

B BACKREST



1PC

C LEFT WING



1PC

D RIGHT WING



1PC

E FRONT LEG



2PCS

F LEFT REAR LEG



1PC

G RIGHT REAR LEG



1PC

HARDWARE IDENTIFICATION

1

BOLT
M8x30MM



12PCS

2

FLAT WASHER
M8x22x2MM



12PCS

3

LOCK WASHER
M8



12PCS

4

ALLEN WRENCH
M5



1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **609566**




ASSEMBLY INSTRUCTIONS


STEP 1

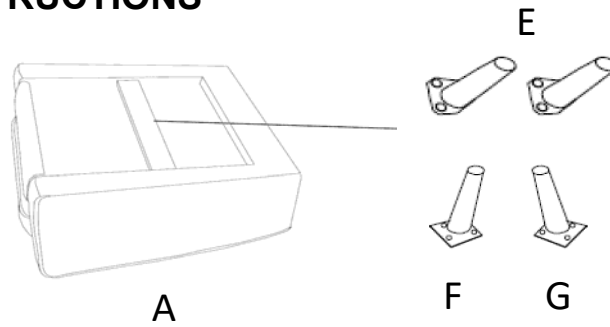


STEP 2

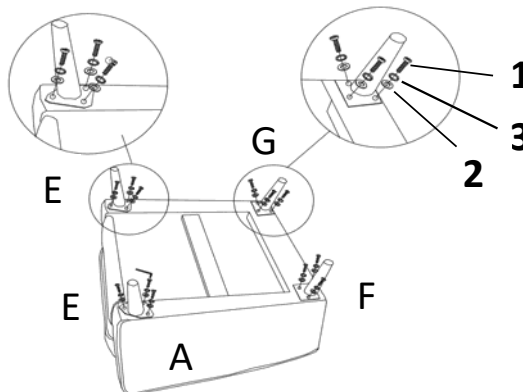

STEP 3

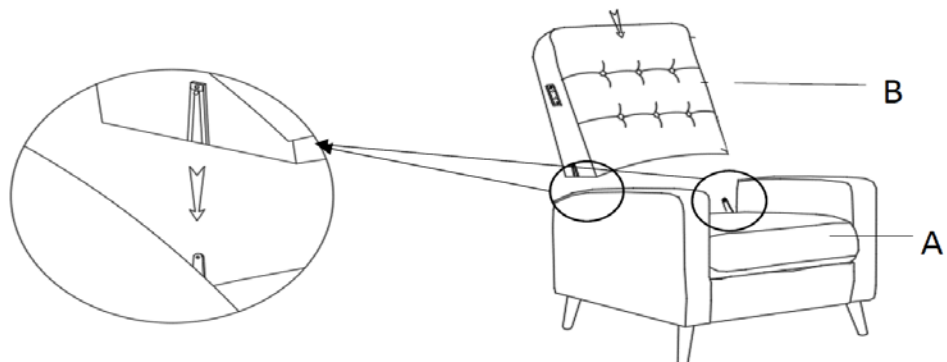


STEP 4

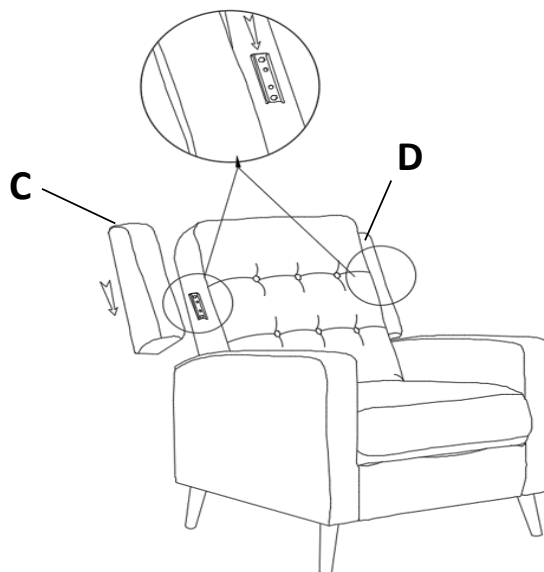


ITEM: **609566**




ASSEMBLY INSTRUCTIONS
STEP 5

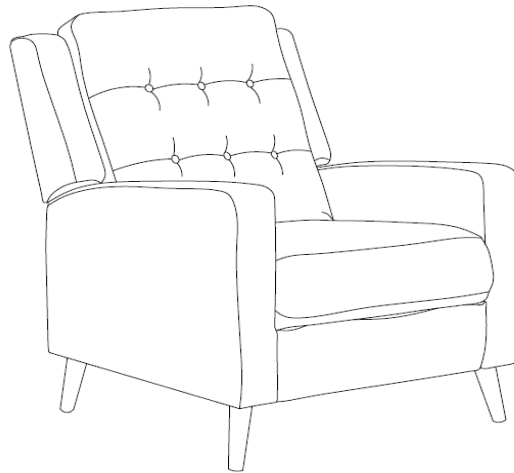


STEP 6

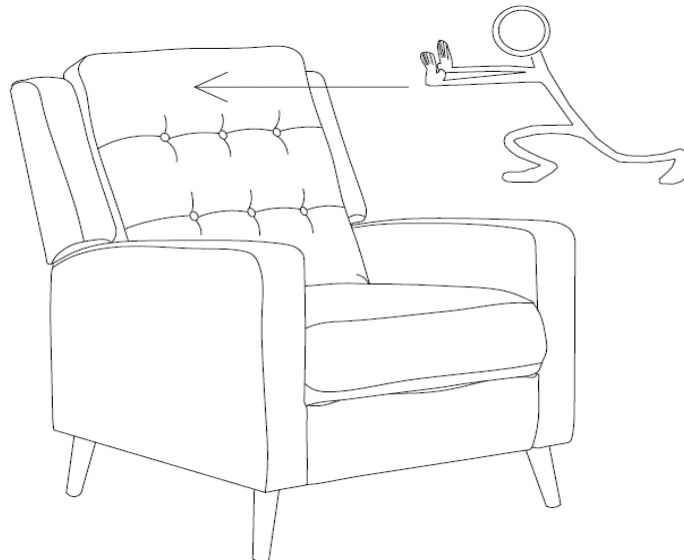

STEP 7

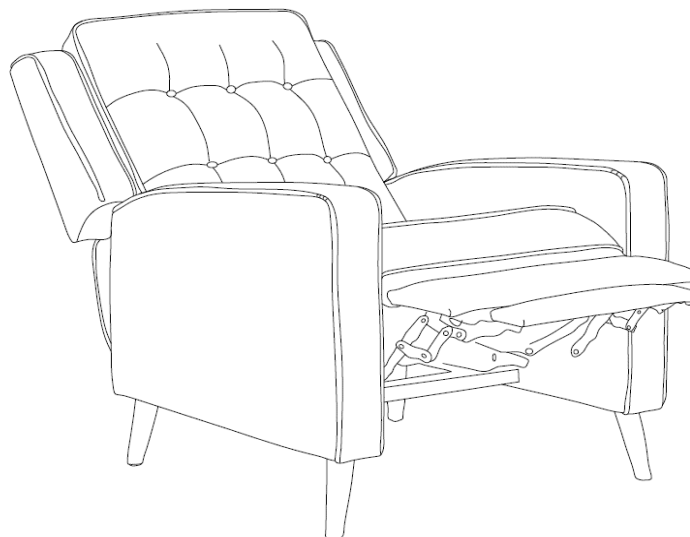

PRODUCT/PART DIMENSIONS

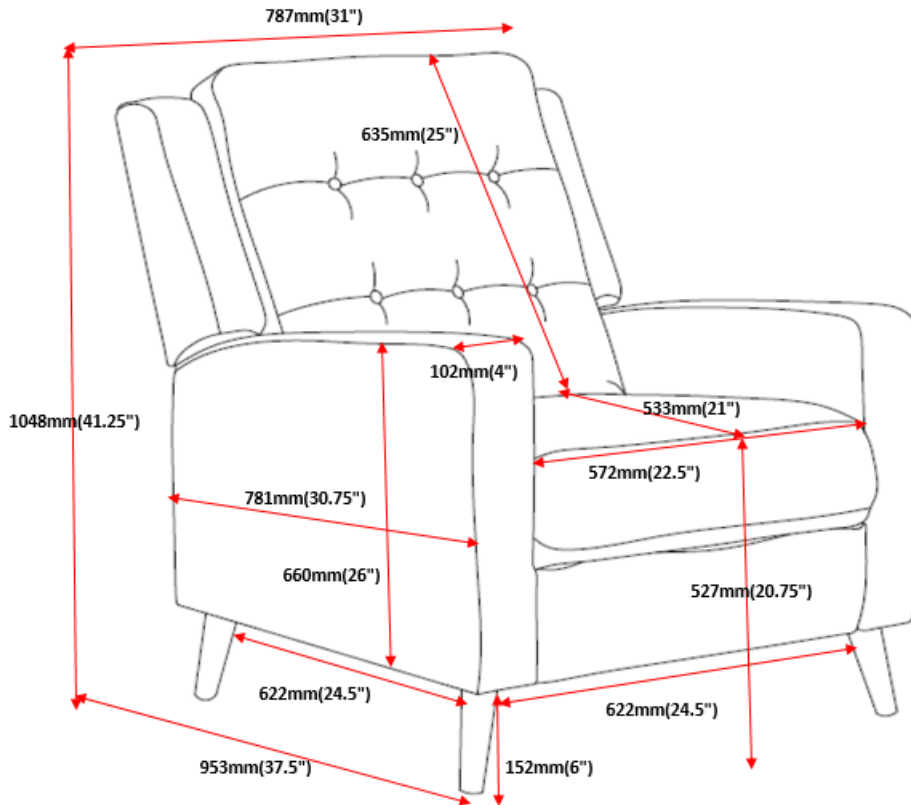

Note: Dimension tolerance $\pm 5\%$