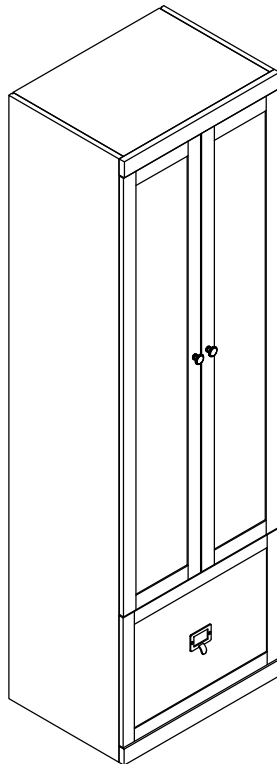 

















CROSLEY

FURNITURE





Pantry
CF6026



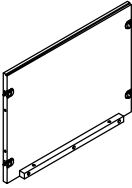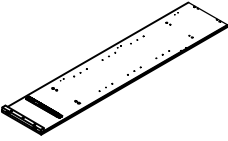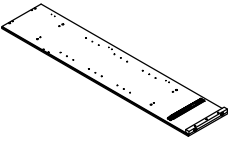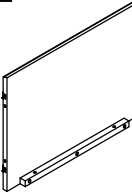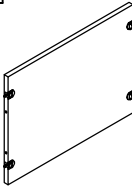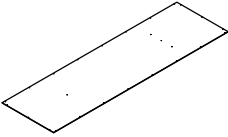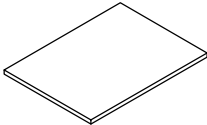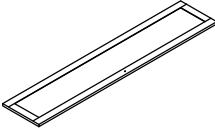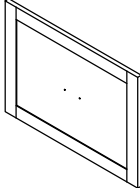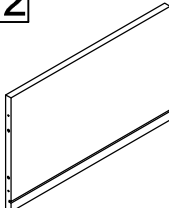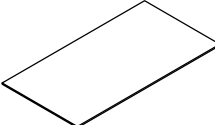               PART LIST


A2 	B2 	C2 	D2 	E2 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Fixed Shelf 2 PCS
F2 	G2 	H2 	I2 	J2 
Back Panel 1 PC	Adjustable Shelf 3 PCS	Door 2 PCS	Hook Slat 1 PC	Drawer Front Panel 1 PC
K2 	L2 	M2 	N2 	O2 
Drawer Left Panel 1 PC	Drawer Right Panel 1 PC	Drawer Back Panel 1 PC	Drawer Bottom Panel 1 PC	Rail 2 PCS

    HARDWARE LIST

#1		#2		#3		#4		#5	
	Ø3*12mm		Ø3*15mm		Ø3.5*15mm		Ø3*30mm		Ø5/32"*25mm
	Short Screw		Round Head Screw		Screw		Long Screw		Round Head Bolt
	2 PCS		26 PCS (Extra 2)		42 PCS (Extra 2)		4 PCS		2 PCS
#6		#7		#8		#9		#10	
	Ø1/4"*1-1/4"		Ø8*30mm						
	Bolt		Wood Dowel		Shelf Holder		Hook		Handle
	4 PCS		28 PCS (Extra 2)		12 PCS (Extra 1)		3 PCS		1 PC
#11		#12		#13		#14			
					4mm				
	Knob		Hinge		Allen Wrench		Safety Strap Kit		
	2 PCS		6 PCS		1 PC		1 SET		

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

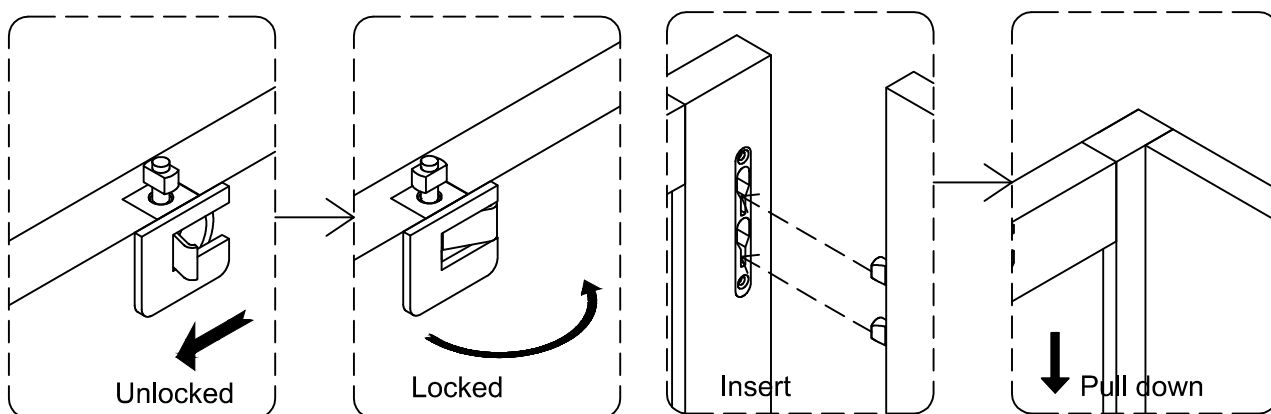 
Please do not use tools to assemble this unit unless specifically indicated.




Reference the images above any time the instructions state "lock the hardware" or "insert hardware and pull down to lock".

Be sure to check all hardware is locked when complete.

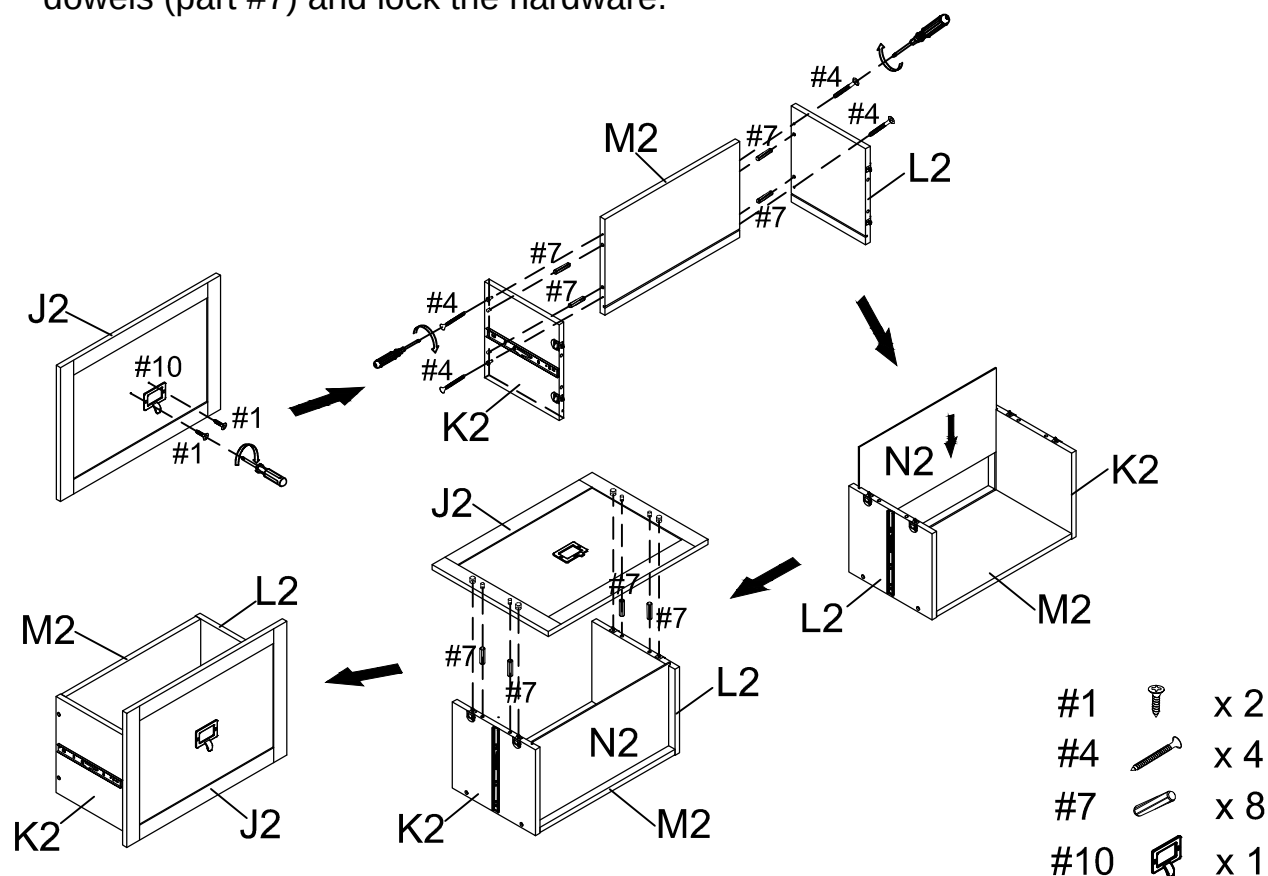 Step 1. Attach handle (part #10) to drawer front panel (part J2) using short screws (part #1) and phillips head screwdriver. Attach drawer left panel (part K2) and drawer right panel (part L2) to drawer back panel (part M2) using wood dowels (part #7), long screws (part #4) and phillips head screwdriver. Slide drawer bottom panel (part N2) into grooves of assembled unit (parts K2, L2 & M2). Attach drawer front panel (part J2) to drawer panels (parts K2 & L2) using wood dowels (part #7) and lock the hardware.




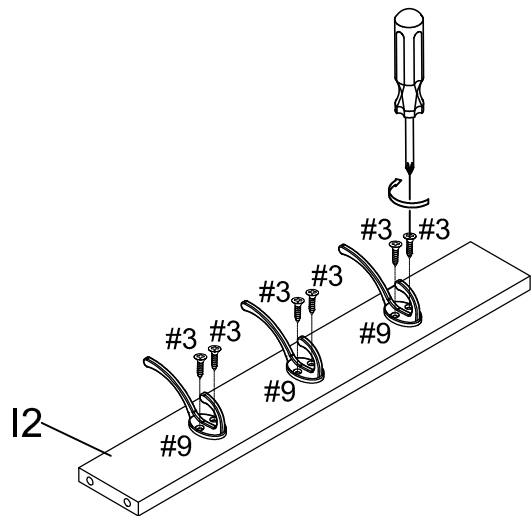 Step 2. Attach hooks (part #9) to hook slat (part I2) using screws (part #3) and phillips head screwdriver.




- | | | |
|----|---|-----|
| #3 |  | x 6 |
| #9 |  | x 3 |

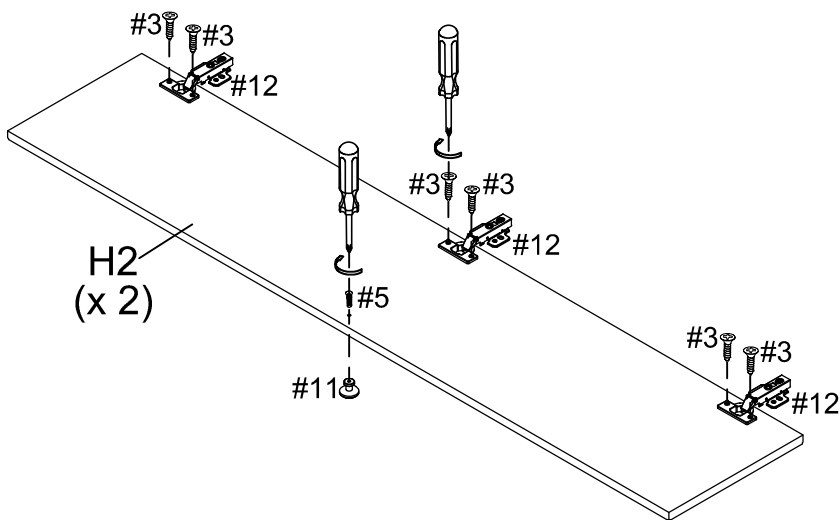 Step 3. Attach hinges (part #12) and knobs (part #11) to doors (part H2) using screws (part #3), round head bolts (part #5) and phillips head screwdriver.




- | | | |
|-----|---|------|
| #3 |  | x 12 |
| #5 |  | x 2 |
| #11 |  | x 2 |
| #12 |  | x 6 |

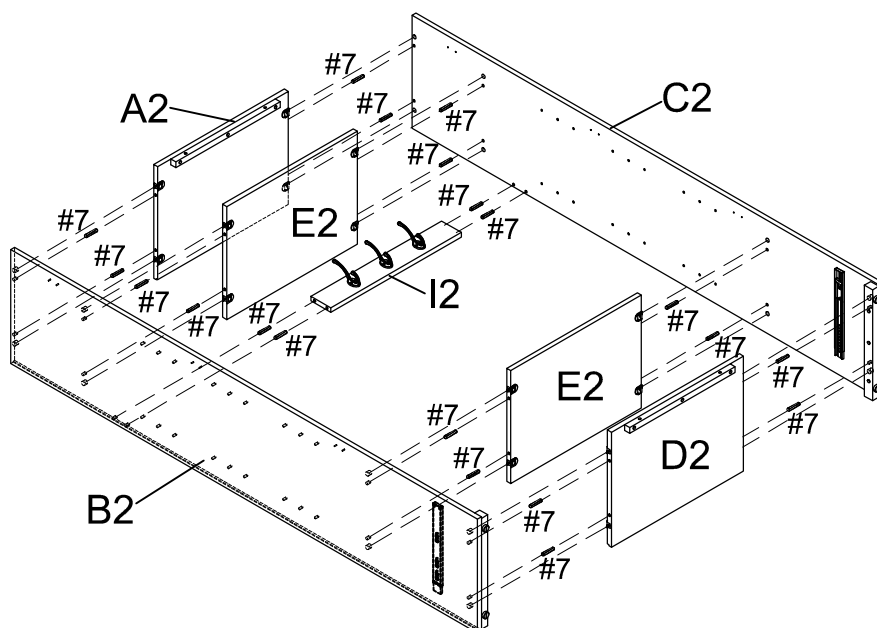 Step 4. Attach top panel (part A2), fixed shelves (part E2), hook slat (part I2) and bottom panel (part D2) to left panel (part B2) and right panel (part C2) using wood dowels (part #7) and lock the hardware.




#7  x 20

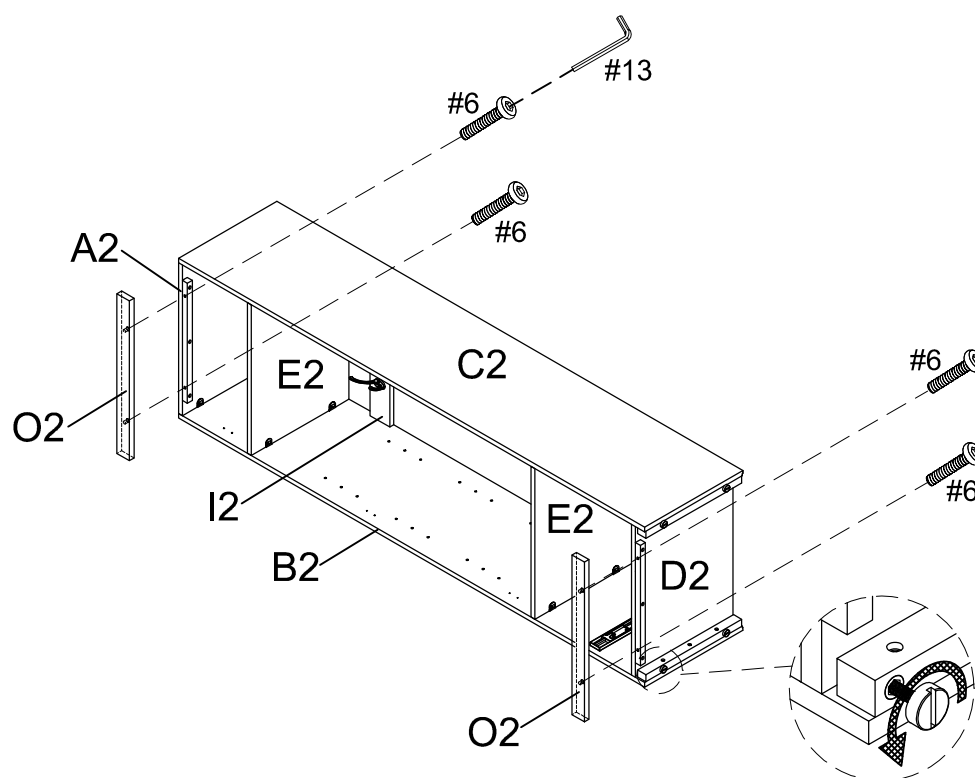 Step 5. Attach rails (part O2) to top panel (part A2) and bottom panel (part D2) using bolts (part #6) and allen wrench (part #13).




#6  x 4
#13  x 1

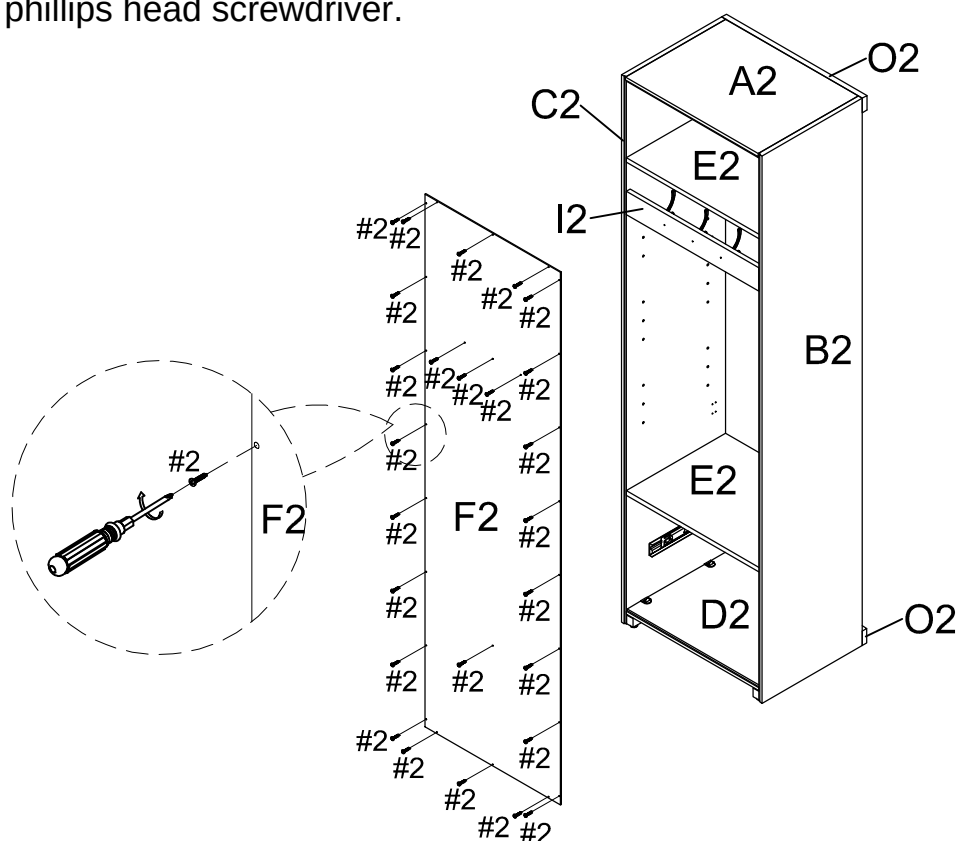 Step 6. Carefully turn unit upright. Attach back panel (part F2) to assembled unit (parts A2, B2, C2, D2, E2 & I2) using round head screws (part #2) and phillips head screwdriver.




#2  x 26

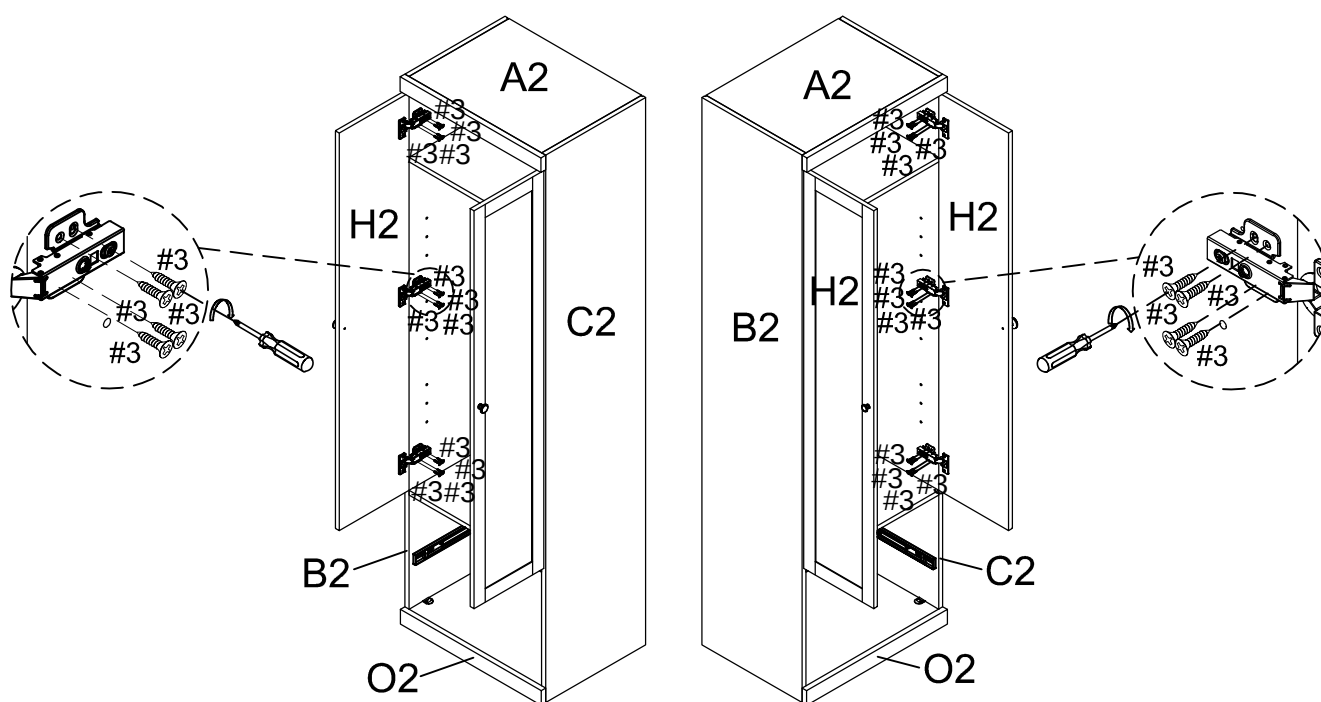 Step 7. Attach hinges to left panel (part B2) and right panel (part C2) using screws (part #3) and phillips head screwdriver.



#3  x 24

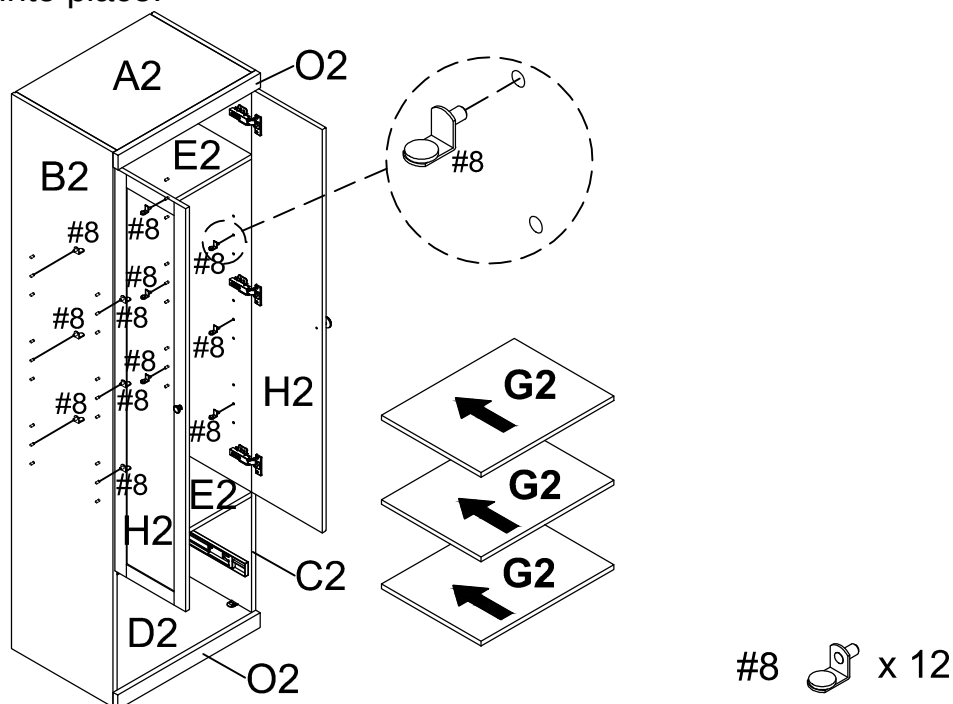 Step 8. Place shelf holders (part #8) into desired position and then slide adjustable shelves (part G2) into place.






Step 9. Slide assembled drawer into place.

Note: To release trigger disconnect levers push one side up and the other down.

NOTE: It is important to adjust levelers once fully assembled and upright.

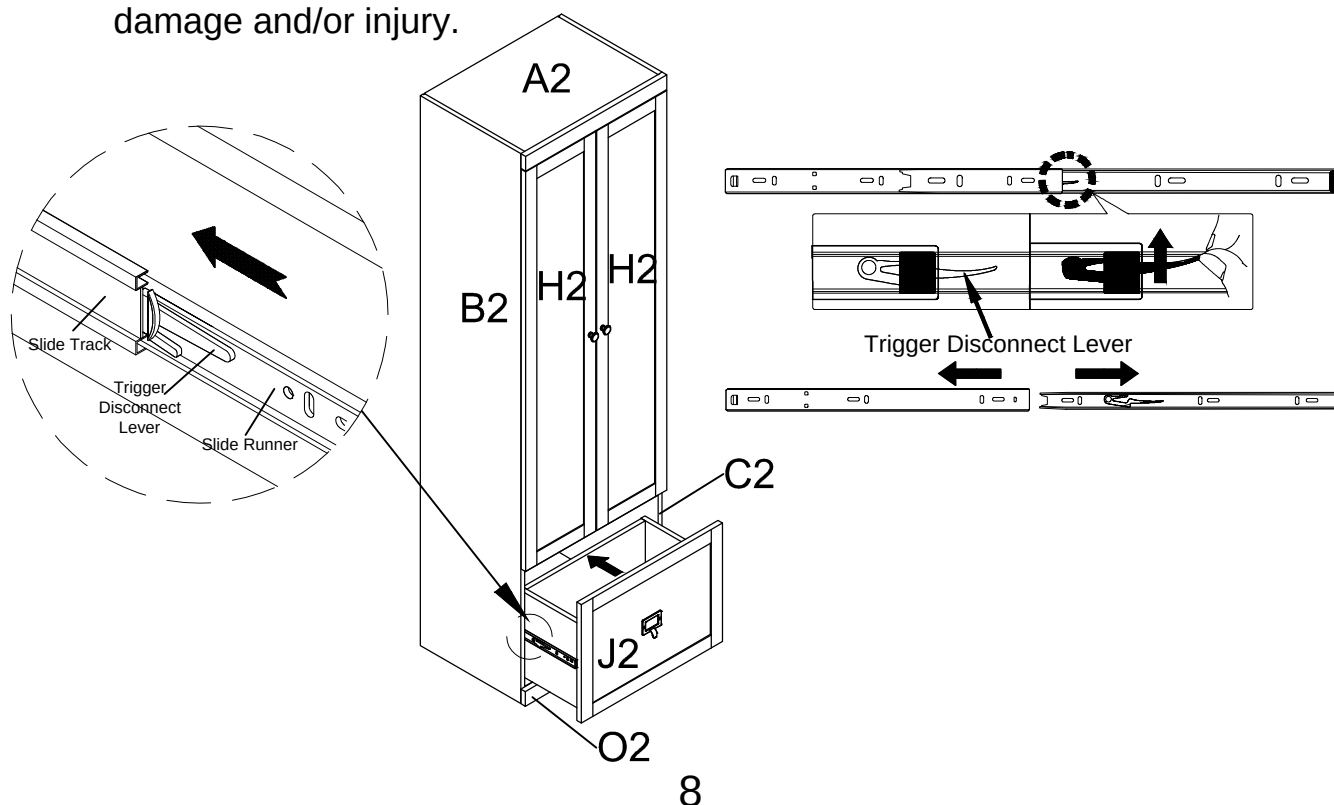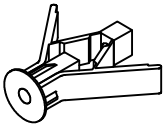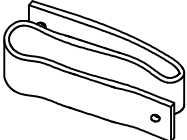   Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location. Important: Safety strap kit (part #14) must be installed to prevent tipping, damage and/or injury.




#14	A	B	C	D	E
			 D8*3/4"	 D8*1-1/2"	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Washer 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) through washer (B) and safety wall strap (E) and attach to back panel (part F2) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in back panel (part F2) where the safety wall strap (E) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) through washer (B) and safety wall strap (E) into wall anchor (A) using phillips head screwdriver.

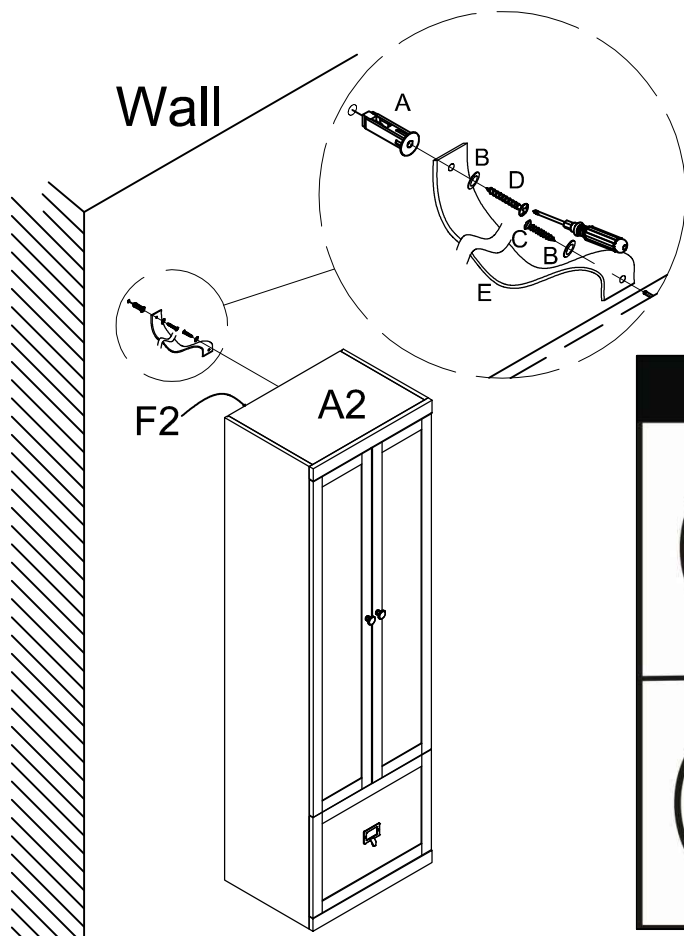 Note: This item is not intended for clothing storage use.



⚠ WARNING




Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*