


ASSEMBLY INSTRUCTION

ITEM: RC806- PSWGL-078/088 Henderson PWR Swivel Glider Recliner


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.

Step 1: Parts list on the below


Parts List			
NO.	ITEM	SKETCH	QTY
A	Back		1
B	Seat		1
C	Power Source		1

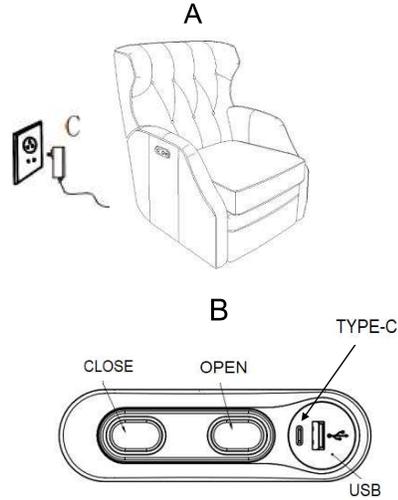

Step 2: Attached the KD back to the base frame by aligning the mechanism receivers with the mechanism post as seen in the drawing below. After aligning both sides, push firmly in a downward motion until a clicking sound is heard. The sound indicates the back is lock to the base frame. Please make sure both sides are locked in position.

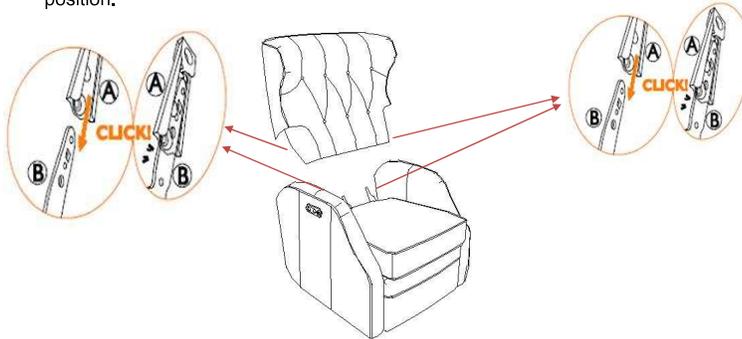

Step 3: Attached the outside back along the bottom rear of the base frame with the pre attached velcro; Connect the connector from motor to the power cord and transformer, then it's ready to use.

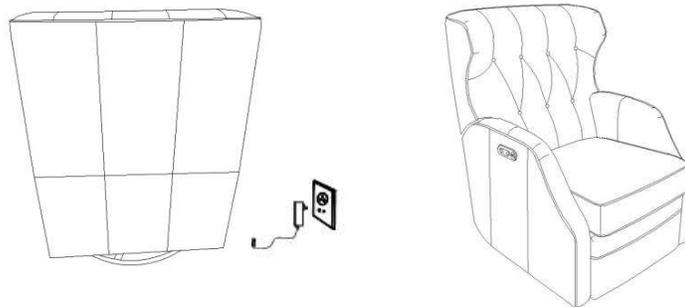

CAUTION

Do not allow children to play on this mechanism furniture or operate the mechanism. Leg rest folds down on closing so that child could possibly be injured. Always leave in an upright and closed position and keep hands feet clear of mechanism. Only the occupant should operate it.