

OWNER'S MANUAL

Rocker Recliner with Headrest & Lumbar

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING.

WARNING: To reduce the risk of burns, fire, electric shock, or injury to persons:

1. DANGER: To reduce the risk of electric shock-Always unplug this furnishing from the electrical outlet before cleaning.
2. Unplug from outlet before putting on or taking off parts.
3. Close supervision is necessary when used by or near children, or disabled people.
4. Use this furnishing only for its intended use as described in these instructions.
Do not use attachments not recommended by the manufacturer.
5. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
6. Keep the cord away from heated surfaces.
7. Never drop or insert any object into any opening.
8. Do not use outdoors. Just for household indoor use only.
9. To disconnect, turn all controls to the off position, then remove plug from outlet.
10. WARNING: Risk of injury - Keep children away from extended foot support.
11. WARNING: Risk of injury to Persons – do not use this furnishing to support video equipment such as televisions or computer monitors.
12. When not in use, it is recommended that the wand be stored securely on the outside of the arm.

SERVICING OF DOUBLE- INSULATED PRODUCTS.

In a double-insulated product, two systems of insulation are provided instead of grounding. No grounding. No grounding means is provided on a double-insulated product, nor is a means for grounding to be added to the product. Servicing a double-Insulated Product requires extreme care and knowledge of the system, and is to be done only by qualified service personnel. Replacement parts for a double-insulated product must be identical to the parts they replace.

 
 
SAVE THESE INSTRUCTIONS.

Assembly Instructions for Rocker Recliner


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Inside the carton you will find two plastic bags that have the recliner's wings in them. Remove the wings from the plastic bags and set them aside to be used in assembly and installation.

Make sure to read the instructions below before assembling your rocker recliner.

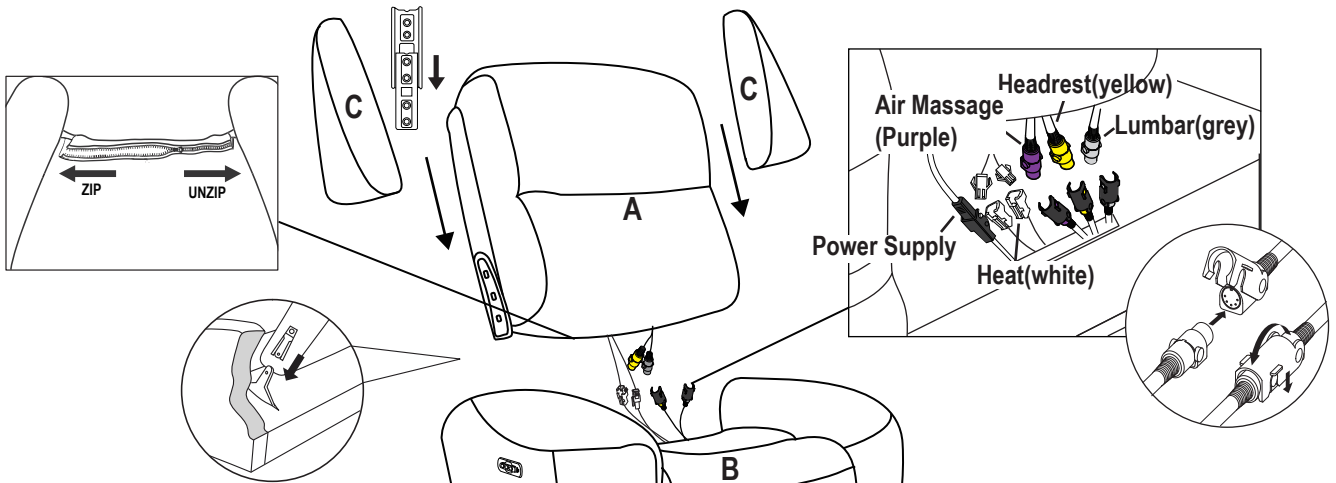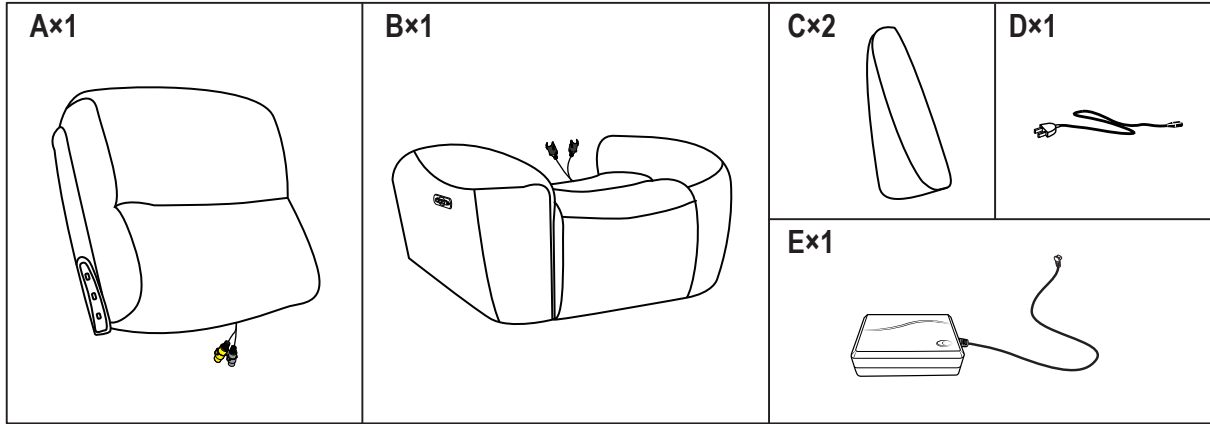

 
Ensure both clips on back are aligned, then press top of back frame downward until a clicking sound is heard.

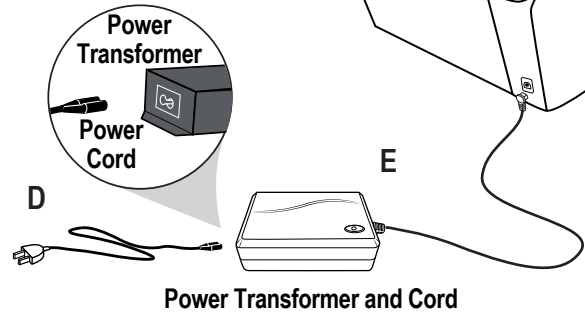

Do Not plug the power cord into a power outlet until your recliner is fully assembled and in place.

Notes:

 - 1) To help prevent shock and or damage to your product only plug the power cord into a grounded outlet.
- 2) Read the operating instructions carefully before operating the rocker recliner.

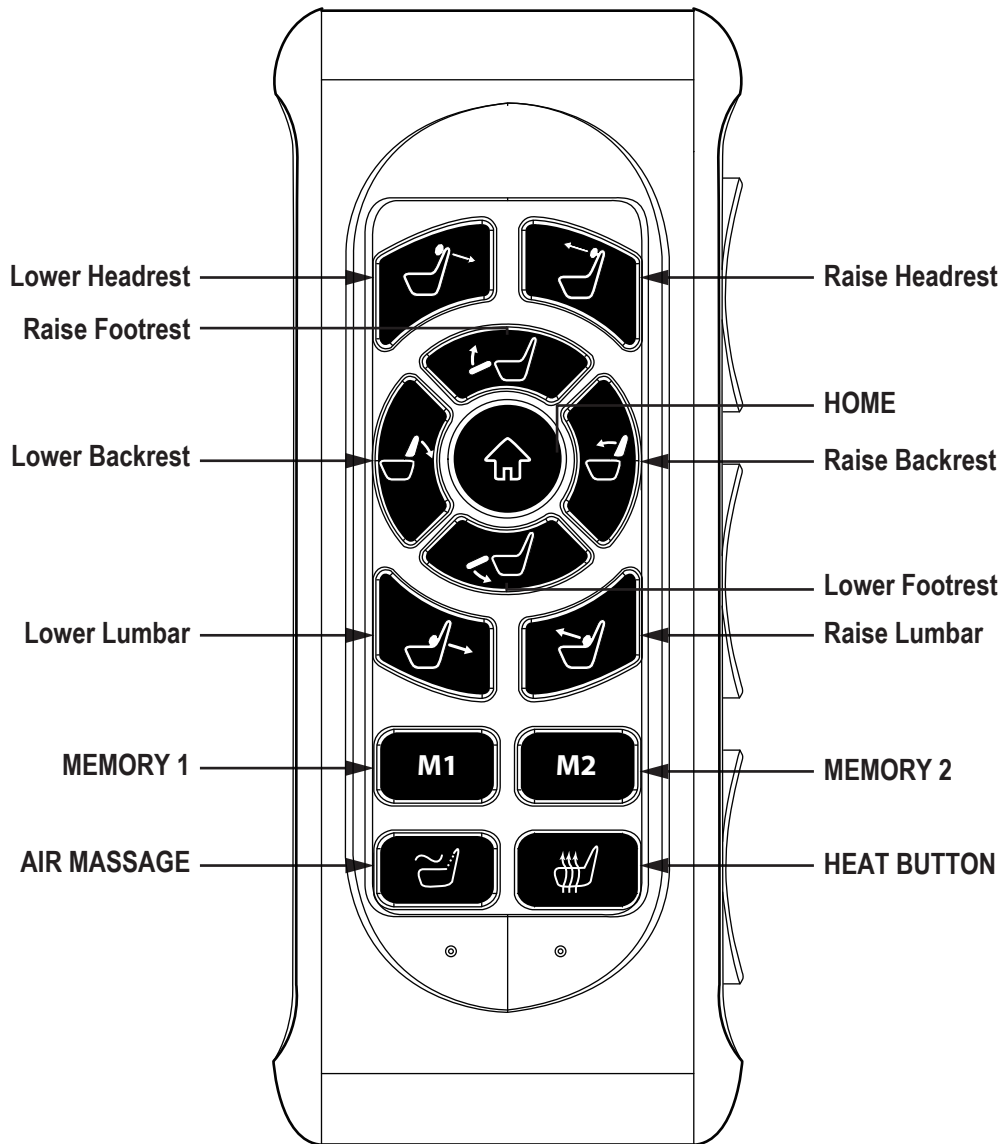

AIR MASSAGE: Press the air massage button to activate air massage function. Press again to cycle intensity through low (light is green), high (light is red), and off (light is off).

When user operates lumbar, will eliminate massage motion if it has been in use.

Massage working time: 20 min.

HEAT BUTTON: Press the heat button to activate heat function. Press again to cycle intensity through low (light is green), high (light is red), and off (light is off).

Heat working time: 30 min.

 
How to use Memory Function

Press and hold Memory 1 button and Memory 2 button for 3 seconds. The buzzer in the Remote will keep ringing to indicate that the hand control is in "set" mode. Press and hold the desired memory button to set the memory position. The buzzer will ring two times from control box.

To go to a preset Memory 1 & Memory 2 position, press and hold the desired memory button M1 & M2.


How to pair the new remote

Disconnect the power, then Press and hold the "Lower Headrest" button and "Raise Headrest" buttons for 5 seconds, the buzzer in the remote will ring two times. Connect the power, the buzzer in control box will ring three times, and then the remote will ring one time. The pairing is finished.

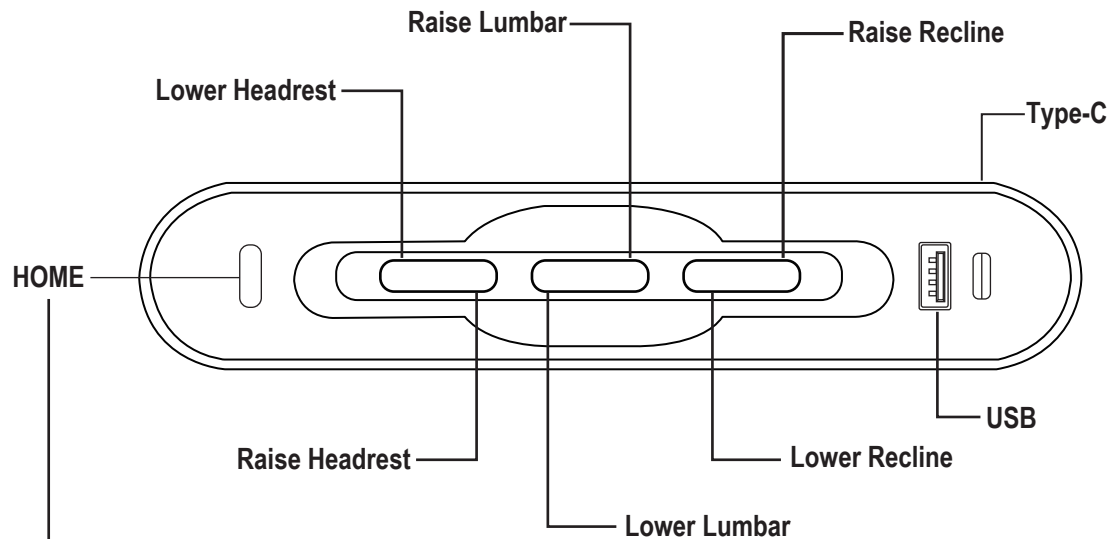

When you can't find the remote hand controller, Press and hold the this button for 10 seconds, the hand wand will make a sound to show where it is.

 Audio Amplifier

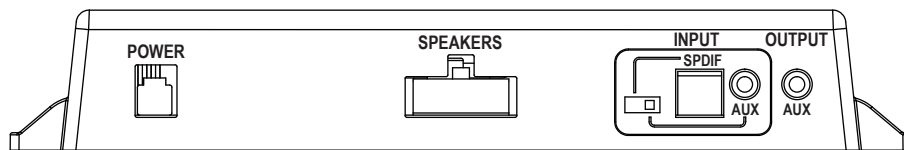

This is located inside arm, accessible from the bottom via a zipper. AUX input, AUX output, and S/PDIF are located on the Audio Amplifier. You can connect multiple devices by using a 3.5mm AUX cable connecting the AUX input to the audio source and then connecting another 3.5mm AUX cable from AUX output to the AUX input of the next Audio Amplifier. 3.5mm AUX cable sold separately.



WARNINGS & CAUTIONS

- To avoid injury, use care when assembling.
- Use on level surface.
- Adult supervision when used by children.
- Maximum load 158 kg / 350 lb.
- Exceeding this weight may damage product and cause potential injury.
- For indoor use only.
- To avoid any risk of suffocation to children or pets, dispose of all plastic bags immediately.
- To ensure proper performance, occasionally check for loose screws and tighten as needed.

TROUBLESHOOTING

PROBLEM	POSSIBLE FACTORS	SOLUTION
The power light is not on.	The AC cable end is not plugged in.	Select another outlet with normal power supply and plug it into the AC side of the power supply.
The recliner stretches or shrinks and stutters.	<ul style="list-style-type: none"> • The iron frame rests are deformed. • There is an even pause when the backrest or leg rest is opened. It is possible that the motor hall sensor is damaged. 	<ul style="list-style-type: none"> • Replace the iron frame. • Replace the motor.
The handle cannot be paired with the recliner.	<ul style="list-style-type: none"> • Signal interference. • The pairing distance is out of range. 	<ul style="list-style-type: none"> • Remove interference sources such as metal and electrical appliances between the handle and the recliner, or change the pairing environment and try again. • Hold the handle close to the recliner (usually within 10 meters) and re-pair.
Loud noise during massage work (clearly different from noise during normal operation)	Faulty air pump	Replace the air pump
Heating does not work	The heating pad line and the control box are disconnected.	Check the connection between the heating power cord and the control box to make sure the connection is secure.
The air massage does not work	The control button and the control box wiring are disconnected.	Check the wiring of the massage control switch and the control box to make sure the connection is secure.

IMPORTANT NOTE

- To avoid any risk of suffocation to children or pets, dispose of all plastic bags immediately.
- To ensure proper performance, occasionally check for loose screws and tighten as needed.

Product Protected By Following Patents:
 Patented Articulating Power Headrest & Lumbar
 US Patent: 10,736,423
 Wireless Hand-held Remote Control Device and Dock
 US Patent: D1032567
 Powered Rocking Lounger Chair
 US Patent: 12,310,509

MOTO **MOTION**

FASHION. FORWARD. FURNITURE.

Customer Service

If you have any questions regarding the use of this unit, or find that your unit need service, please contact your retailer