

USE & CARE GUIDE

REFRIGERATOR

EN

GUIDE D'UTILISATION ET D'ENTRETIEN

RÉFRIGÉRATEUR

FR

GUÍA DE USO Y CUIDADO

FRIGORÍFICO

ES



ENGLISH

Thank you for your trust and for buying this appliance.  
We advise you to read this manual carefully, which contains all the instructions for maintaining the appliance's aesthetic and functional qualities.

FRANÇAIS

Nous vous remercions de votre confiance et de l'achat de cet appareil.  
Nous conseillons de lire attentivement ce manuel qui contient toutes les indications nécessaires pour préserver les caractéristiques esthétiques et fonctionnelles de l'appareil acheté.

ESPAÑOL

Gracias por la confianza que ha depositado en nosotros con la compra de este aparato.  
Aconsejamos leer detenidamente este manual que contiene todas las indicaciones para mantener inalteradas las cualidades estéticas y funcionales del aparato adquirido.

For further information on the product and get spare parts:

Pour toute information complémentaire concernant le produit et obtenir les pièces de rechange:

Para más información sobre el producto y obtener los recambios:

### SMEG USA

FOR SERVICE OR TECHNICAL  
INQUIRIES:

Call 1-888-763-4782 and select  
the appropriate option.

Email: [service@smegusa.com](mailto:service@smegusa.com)

Mail: 590 Belleville Tpke, Building  
1, Unit E-F

Kearny NJ, 07032

ATTN: SMEG USA Service

### SMEG MÉXICO

Smeg MX

Teléfono: 800 1117634

Whatsapp: +55 40677705

Mail:

[smeg@frontfacebusiness.com.mx](mailto:smeg@frontfacebusiness.com.mx)

### SMEG CANADA

SMEG Canada Service

Phone: 1-800-334-7634

To contact the Service Team  
directly,

Email: [service@smegcanada.com](mailto:service@smegcanada.com)

### IMPORTANT:

**Save for the local electric  
inspector's use**

**Installer:** Leave installation  
instructions with the homeowner

**Homeowner:** Keep installation  
instructions for future reference.

Write down the model and serial  
numbers before installing the range.  
Both numbers are found on the  
model/serial ID plate, located on  
the oven door frame.

### IMPORTANT :

**Conserver pour l'inspecteur en  
électricité**

**Installateur :** Laisser les instructions  
pour l'installation au propriétaire

**Propriétaire :** Garder les  
instructions pour l'installation pour  
référence future.

Notez le numéro de modèle et le  
numéro de série avant d'installer la  
cuisinière.

Les deux numéros se trouvent sur la  
fiche signalétique du modèle et du  
numéro de série, située sur le cadre  
de la porte du four.

### IMPORTANTE:

**Guardar estas instrucciones para  
uso del inspector local de  
electricidad**

**Instalador:** Dejar las instrucciones  
de montaje al propietario de la casa

**Propietario de la casa:** Guardar  
las instrucciones de montaje para  
futura referencia.

Anote el número de modelo y de  
serie antes de instalar la cocina.  
Ambos números aparecen en la  
placa de identificación del  
modelo/serie, ubicada en el  
marco de la puerta del horno.

Model # / No Modèle / Modelo # \_\_\_\_\_

Serial # / No Série / N° de serie # \_\_\_\_\_

# Contents

<b>1</b>	<b>Instructions</b>	<b>4</b>
1.1	General Safety	5
1.2	Intended Use	7
1.3	Children's Safety	8
1.4	Hydrocarbon (HC) Warning	8
1.5	For Products with a Water Dispenser/Ice Machine	9
1.6	How to read the user manual	9
<b>2</b>	<b>Description</b>	<b>10</b>
2.1	General Description	10
2.2	Control panel	11
2.3	Parts definition	12
<b>3</b>	<b>Use</b>	<b>14</b>
3.1	Ways to save energy	14
3.2	Recommendations About the Fresh Food Compartment	14
3.3	Initial use	15
3.4	Dual Cooling System	15
3.5	Freezing Fresh Food	15
3.6	Recommendations for Storing Frozen Food	16
3.7	Placing the foodle	16
3.8	Operating temperature	17
3.9	Door bin	17
3.10	Glass shelves	17
3.11	Crisper compartment	18
3.12	Special fridge compartment	19
3.13	Freezer Crisper	19
<b>4</b>	<b>Cleaning and maintenance</b>	<b>20</b>
4.1	Instructions	20
4.2	Avoiding Bad Odors	21
4.3	Protecting the Plastic Surfaces	21
4.4	Cleaning the Inner Surface	22
4.5	Stainless Steel Outer Surfaces	22
4.6	Trouble shooting...	23

We advise you to read this manual carefully, which contains all the instructions for maintaining the appliance's aesthetic and functional qualities.

For further information on the product: [www.smeg.com](http://www.smeg.com)



# Instructions

## 1 Instructions

### Important Safety Instructions

**WARNING:** If the instructions contained in this manual are not followed precisely, fire or explosion may result causing property damage, personal injury or loss of life.



**READ AND SAVE THESE INSTRUCTIONS** - Your safety and the safety of others are very important.

We have provided many important safety messages throughout this manual and on the appliance.

Read all the instructions before using the appliance and always obey all safety messages.



#### **RECOGNIZE SAFETY INFORMATION**

This is a safety alert symbol. This symbol alerts you to potential hazards that can result in severe personal injury or loss of life.

#### **UNDERSTAND SIGNAL WORDS**

A signal word - DANGER, WARNING or CAUTION - is used with the safety alert symbol. DANGER denotes the most serious hazards. It means you could lose your life or be seriously injured if you do not immediately follow the instructions. WARNING means you could lose your life or be seriously injured if the instructions are not followed. CAUTION indicates a potentially hazardous situation which, if not avoided, could result in minor to moderate injury.

#### **WARNING**



- This appliance is intended for use in the home only.
- Use this appliance only for its intended purpose. The manufacturer cannot be held liable for damage caused by improper use of this appliance.
- This appliance complies with current safety regulations. Improper use of this appliance can result in personal injury and material damage.
- Read all the instructions before installing or using the appliance for the first time.
- Keep these operating instructions in a safe place and pass them on to any future user.

# Instructions



The safety messages will inform you of potential hazards, on how to avoid the risk of injury and what can occur if the instructions are not followed.

**IMPORTANT: Observe all codes and ordinances in force.**

**WARNING: For your safety, the instructions contained in this manual must be followed to minimize the risk of fire or explosion and to prevent property damage, personal injury or loss of life.**

Do not store or use gasoline or other flammable vapors, liquids or materials near this or any other appliance.



**NOTE:** This appliance is NOT designed for installation in manufactured (mobile) homes or in recreational vehicles (RVs).

**DO NOT install this appliance outdoors.**

## WARNING




**This chapter contains safety information that will help you avoid the risk personal injury or property damage. Failure to follow these information shall render any product warranty void.**

### 1.1 General Safety

- This product can be used by children at age 8 and above and those people who have limited physical, sensory or mental capabilities and people who lack experience and information on the condition that they have been given the instructions about the safe use of the product, they are supervised and the risks have been eliminated. Children should not play with the product. Cleaning and care should not be performed by children unless they are supervised by an adult.
- Unplug the product if you encounter a failure during use.
- If the product malfunctions, it must not be operated until repaired by the authorized service provider. Risk of electric shock!
- Plug the product into a grounded socket protected by a fuse that corresponds to the value on its nameplate. Have a qualified electrician ground the product. Our company cannot be held responsible for damages resulting from the failure to use the product with a grounded socket pursuant to local regulations.



## Instructions

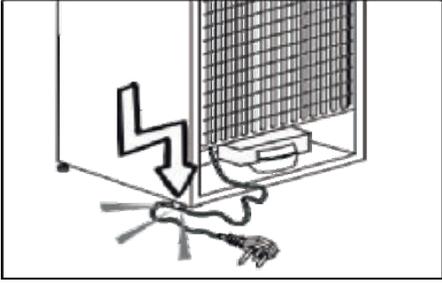

- Unplug the product when not in use.
- Never wash the product by spreading or pouring water onto it! Risk of electric shock!
- Never touch the plug with wet hands!
- Never unplug the product by pulling the cable.  
Always pull the plug by holding the socket.
- Do not plug the refrigerator if the wall socket is loose.
- Never connect your refrigerator to energy saving devices.
- Such systems are harmful to your product.
- Unplug the product during installation, care, cleaning and repairing procedures.
- Always have the Authorized Service Provider install the product and establish its electrical connections.  
The manufacturer cannot be held responsible for damages caused by procedures performed by unauthorized persons.
- Do not eat cone ice cream or ice cubes immediately after you take them out of the freezer compartment! This may cause frostbite in your mouth!
- Do not touch frozen food with wet hands! They may stick to your hand!
- Do not put bottled or canned liquid beverages in the freezer compartment. They may burst!
- Never use steam or steam cleaners to clean or defrost the refrigerator. Steam gets into contact with the live parts in your refrigerator, causing short circuit or electric shock!
- Do not use mechanical devices or other means to accelerate the defrosting process other than those recommended by the manufacturer.
- Never use the parts in your refrigerator such as the door and drawer as a means of support or step. This may cause the product to tip over or damage the parts of it.
- Do not damage the parts where the refrigerant is circulating with drilling or cutting tools. The refrigerant that might blow out when the gas channels of the evaporator, pipe extensions or surface coatings are punctured causes skin irritations and eye injuries.



- Do not cover or block the ventilation holes in your refrigerator with any object.
- Place the beverage with higher proofs tightly closed and vertically.
- Do not use gaseous sprays near the product since there is the risk of fire or explosion!  
Flammable items or products that contain flammable gases (e.g. spray) as well as explosive materials should never be kept in the appliance.  
Do not place vessels filled with liquid onto the product. Splashing water on an electrical part may cause electric shock or the risk of fire.
- Do not store items that need precise temperature adjustment (such as vaccines, heat-sensitive medication, science materials etc.) in the refrigerator.
- If you are not going to use the product for a long time, unplug it and remove the food in it.
- If there is a blue light on the refrigerator, do not look at this light with optical tools. Exposing the product to rain, snow, sun or wind is dangerous in terms of electrical safety.
- In products with mechanical control (thermostat), wait for 5 minutes to plug in the product again after unplugging.
- Do not overload the refrigerator. Objects in the refrigerator may fall down when the door is opened, causing injury or damage.  
Similar problems may arise if any object is placed onto the product.
- If the product has a door handle, do not pull the handle when re-locating the product. The handle might be loose.
- Be careful not to jam your hand or any other body part in the moving parts of the refrigerator.
- Do not put your hand or any other foreign materials into the ice machine while it is operating.

## 1.2 Intended Use

- This product has been designed for domestic use. It is not suitable for commercial use and it must not be used out of its intended use.
- It must be used only for storing food.
- The manufacturer will not take any responsibility for damages resulting from improper use or transport.
- Original spare parts will be available for 10 years after the purchase date of the product.



## Instructions

### 1.3 Children's Safety

- If there is a lock on the door of the product, the key should be kept out of the reach of children.
- Do not let children play with the product.



#### **Before disposing your old refrigerator or freezer:**

- Children may get locked inside.
- Remove the doors.
- Leave the shelves to prevent children from getting inside the product easily.



#### **Improper use Risk of Fire or Explosion**

- This product uses flammable refrigerant.
- Do not use mechanical devices to defrost the refrigerator.
- Do not use chemicals for cleaning.
- Do not pierce the refrigerant pipe.
- If the refrigerant pipe is pierced, it must be repaired only by licensed service personnel.
- Please consult the repair/user manual before cleaning the product. All safety instructions must be followed.
- Dispose the product according to federal or local regulations.

### 1.4 Hydrocarbon (HC) Warning

- If your product's cooling system contains R-600a.  
This gas is flammable.  
Therefore, pay attention not to damage the cooling system or the piping during use and transportation.
- If damaged, keep the product away from potential fire sources that may cause it to catch fire and ventilate the room where the product is placed.



If the product is damaged and if you see gas leak, please keep away from the gas. It may cause frostbite when it gets into contact with the skin (including R134).



Ignore this warning if the cooling system of your product contains R134a.



Type of gas used in the product is stated on the type plate which is on the left wall inside the refrigerator.



**Never throw the product into fire for disposal.**



## 1.5 For Products with a Water Dispenser/Ice Machine

- Operating pressure for cold water inlet is between 1-5.5 bars.  
If the water pressure exceeds 80 psi (5.5 bars), install a pressure limiting valve to your mains system.
- If the mains pressure is lower than 1 bar, you can use an auxiliary pump to compensate the low pressure.
- If you do not know how to check the water pressure, please consult a professional plumber.
- If there is a risk of water impact in your installation, always use a water impact protection equipment in that installation.
- Please consult professional plumbers if you are not sure if there is water impact in your installation.
- Do not make installation on the hot water inlet.
- Take the necessary measures against the freezing risk of the hoses.
- The water temperature operating range must be 0.6°C (33°F) minimum and 38°C (100°F) maximum.



**Never connect the product to a cold water mains with a pressure of 5.5 bars (80 psi) and above.**

## 1.6 How to read the user manual

This user manual uses the following reading conventions:

### Instructions



General information on this user manual, on safety and final disposal.

### Description



Description of the appliance and its accessories.

### Use



Information on the use of the appliance and its accessories, cooking advice.

### Cleaning and maintenance



Information for proper cleaning and maintenance of the appliance.



Safety instructions



Information



Advice

1. Use instruction sequence.

- Single use instruction.


# SAVE THESE INSTRUCTIONS



# Description

## 2 Description

### 2.1 General Description

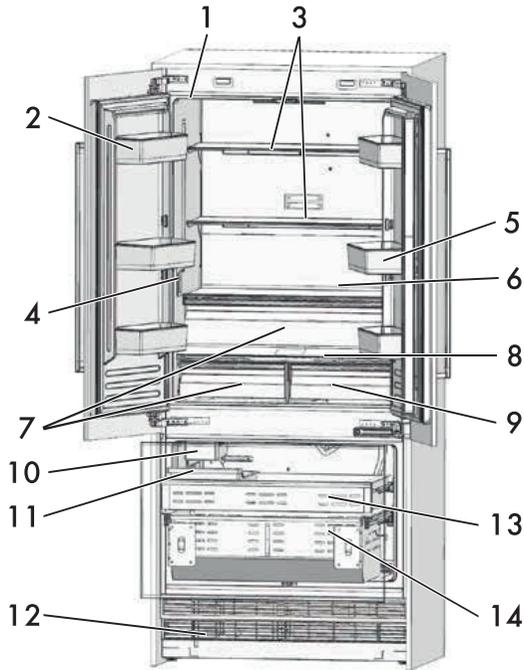

1 Water filter (if applicable)

2 Door bin

3 Body shelf (adjustable height)

4 Water dispenser

5 Gallon door bin (adjustable height)

6 Odour filter

7 Crisper

8 Control display

9 Special fridge compartment

10 Ice machine (if applicable)

11 Ice box applies to high spec models


12 Condenser

13 Upper drawer

14 Lower drawer



## 2.2 Control panel

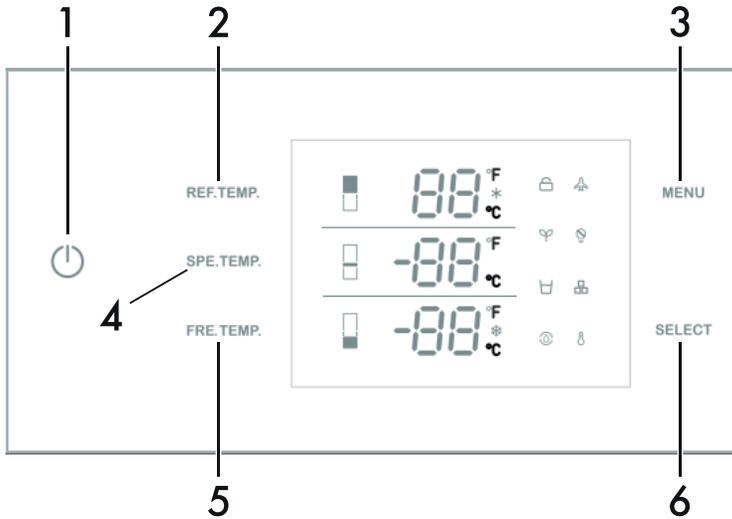

1 On/Off button

2 Refrigerator compartment temperature adjustment button

3 Function election/Child lock button

4 Special fridge compartment temperature adjustment button

5 Freezer compartment temperature adjustment button

6 Confirm button



# Description

## 2.3 Parts definition

### On/Off button

Serves to switch the whole appliance On and Off.

Press the button to switch on the product, the product will be switched on in 5 seconds. Press the on/off button for 1.5 seconds to switch off.

### Function election / Child lock button

The child lock is a feature for preventing children from changing the product settings. By pressing MENU button for 3 seconds, you may lock/unlock the control panel. The lock symbol will illuminate on the display when this function is enabled.

### Refrigerator compartment temperature adjustment button

Press the REF TEMP button to adjust the temperature from 36°F (2°C) to 46°F (8°C).

The best temperature for fresh food compartment is 39°F (4°C).

### Special fridge compartment temperature adjustment button

Press the SPE TEMP button to change the special fridge compartment temperature from 30°F (-1°C) to 41°F (5°C).

### Freezer compartment adjustment button

Press the FRE TEMP button to change the freezer compartment temperature from 5°F (-15°C) to -11°F (-24°C)

\* Super freezing function will be enabled if keep pressing after -11°F (-24°C).

When the snow symbol illuminate on the display the super freezer function will be enabled.



The defaulted temperature setting is 41°F (5°C) for fridge compartment, 36°F (2°C) for special fridge compartment and 0°F (-18°C) for freezer compartment.

### Holiday Mode

Press the MENU button till the holiday symbol illuminates, then press the SELECT button to enable the function.

When the Holiday Mode function is enabled, the fridge temperature will be set at 63°F (17°C) and freezer temperature set at 0°F (-18°C) automatically.



Do not place food in the fresh food compartment when Holiday Mode is enabled.



## Sabbath Mode

Press the MENU button till the Sabbath mode symbol illuminates, then press the SELECT button to enable the function. When the Sabbath mode function is enabled, all lights, buzzers, display panels will be switch off.

## Eco Mode

Press the MENU button till the Eco Mode illuminates, then press the SELECT button to enable the function. When the Eco Mode function is enabled, the fridge temperature will be set at 46°F (8°C) and freezer temperature set at 5°F (-15°C) automatically.

## Water Dispenser (if applicable)

Press the MENU button till the water dispenser symbol illuminates, then press the SELECT button to enable the function. When the water dispensing function is enabled, fresh water can be provided from the dispenser fitted on the internal wall.

## Ice Making (if applicable)

Press the MENU button till the ice making symbol illuminates, then press the SELECT button to enable the function. When the ice making function is enabled, ice maker will be automatically operating, and the ice cubes will be accumulated in the ice tray.



Prepare the water filter for use before using the ice. After connecting the refrigerator to a water source or after replacing the water filter, fill and discard two full containers of ice.

## Water filter replacement (if applicable)

The water filter symbol flashes and beeps to advise the user to replace the water filter. After the replacement is completed, press the SELECT button for 5 seconds to reset. The set replacement time is 130 days.

## Celsius and Fahrenheit selection

Press the MENU button till the Celsius and Fahrenheit selection symbol illuminates to change between Celsius and Fahrenheit. After that press the SELECT button to confirm.



## 3 Use

### 3.1 Ways to save energy



#### Improper use

#### Risk of damages to the appliance

- Connecting your refrigerator to systems that save energy is dangerous as they may cause damage on the product.
- Do not leave the doors of your refrigerator open for a long time.
- Do not put hot food or drinks in your refrigerator.
- Do not overload the refrigerator. Cooling capacity will fall when the air circulation in the refrigerator is hindered.
- Do not place the refrigerator in places subject to direct sunlight. Install the product at least 30 cm away from heat sources such as hobs, ovens, heater units and stoves and at least 5 cm away from electrical ovens.
- Pay attention to store your food in refrigerator in closed containers.
- You can remove the drawer shelf of the freezer compartment to fill the freezer compartment with maximum amount of food.

The given energy consumption value of the refrigerator has been determined with the freezer compartment shelf or the drawer removed and the refrigerator filled with maximum amount of food. There is no harm in using a shelf or drawer according to the shapes and sizes of food to be frozen.

- Thawing the frozen foods in the fridge compartment both saves energy and reserves the quality of the foods.



Temperature of the room where your refrigerator is located should at least be 10°C/50°F.

Operating your refrigerator under cooler conditions is not recommended with regard to its efficiency.



Inside of your refrigerator must be cleaned thoroughly.



If two coolers are to be installed side by side, there should be at least 4 cm distance between them.

### 3.2 Recommendations About the Fresh Food Compartment

- Make sure that the food does not touch the temperature sensor in fresh food compartment. To allow the fresh food compartment to keep its ideal storage temperature, the sensor must not be hindered by food.
- Do not place hot foods or beverages inside the product.



### 3.3 Initial use

Before using the product, make sure that all preparations have been made in accordance with the instructions given in the "General Safety" section.

- Clean the interior of the refrigerator as recommended in the "Cleaning and maintenance" chapter. Before you start the refrigerator, make sure that the interior is dry.
- Plug the refrigerator in a grounded socket. The interior illumination is lit when the door of the refrigerator is opened.
- Operate the refrigerator for 6 hours without placing any food in it and do not open its door unless it is necessary.



You will hear a noise when the compressor starts up. The liquids and gases sealed within the refrigeration system may also give rise to noise, even if the compressor is not running and this is quite normal.



Front edges of the refrigerator may feel warm.

This is normal. These areas are designed to be warm to avoid condensation.

### 3.4 Dual Cooling System

Your refrigerator is equipped with two separate cooling systems to cool the fresh food compartment and freezer compartment.

Thus, the air and odor in the fresh food compartment and the frozen food compartment do not get mixed.

Thanks to these two separate cooling systems, cooling speed is much higher than that of other refrigerators. Also additional power saving is provided since the defrosting is performed separately.

### 3.5 Freezing Fresh Food

Wrap the foods or place them in a covered container before putting them in the refrigerator.

- Hot foods and beverages must cool down to the room temperature before you put them in the refrigerator.
- The foodstuff that you want to freeze must be fresh and in good quality.
- Divided the food into portions according to your family's daily or meal based consumption needs.
- Pack the foods in an airtight manner to prevent them from drying even if they are going to be stored for a short time.
- Materials to be used for packaging must be tear-proof and resistant to cold, humidity, odor, oils and acids and they must also be airtight. Moreover, they must be well closed and they must be made from easy-to-use materials that are suitable for deep-freezers.



## Use

- Frozen food must be used immediately after they are thawed and they should never be refrozen.
- Do not freeze too large quantities of food at one time.  
The quality of the food is best preserved when it is frozen right through to the core as quickly as possible.
- Placing warm food into the freezer compartment causes the cooling system to operate continuously until the food is frozen solid.

### 3.6 Recommendations for Storing Frozen Food

- Frozen foods you purchase must be stored according to the conditions and temperature determined by the food manufacturer.
- Note the following to ensure that the high quality achieved by the frozen food manufacturer and the food retailer is maintained:
  1. Put packages in the freezer as quickly as possible after purchase.
  2. Make sure that the content of the package is labeled and dated.
  3. Check whether the "Use By" or "Best Before" date on the packaging is expired or not.

### 3.7 Placing the foodle

Freezer compartment shelves	Various frozen food such as meat, fish, ice cream, vegetables etc.
Egg tray	Eggs
Fridge compartment shelves	Food in pans, covered plates and closed containers
Door shelves of fridge compartment	Small and packaged foods or beverages (such as milk, fruit juice, beer and etc.)
Crisper	Vegetables and fruits
Special fridge compartment	Delicatessen products (cheese, butter, salami etc.)



### 3.8 Operating temperature

Freezer	Fridge	Remarks
-18°C/ 0°F	4°C/ 39°F	This is the recommended normal setting.
-20°C/ -4°F	3°C/ 37°F	These settings are recommended when the ambient temperature is above 30°C/86°F.
Fast Freezing	4°C/ 39°F	Use when you wish to freeze your food in a short time. Your refrigerator will return to its previous mode when the process is over.
-24°C/ -12°F	2°C/ 35°F	Use these settings if you think that your fridge compartment is not cold enough because of the hot ambient conditions or frequent opening and closing of the door.
-18°C/ 0°F or	Fast Cooling	Use this function when you place too much into the fridge compartment or when you need to cool your food quickly. It is recommended that you activate Quick Fridge function 4-8 hours before placing the food.


#### Recommended Operating Temperature:

Fridge: 4°C / 39°F

Freezer: -18°C / 0°F

### 3.9 Door bin

To remove, lift up the door bin and then pull out straight.

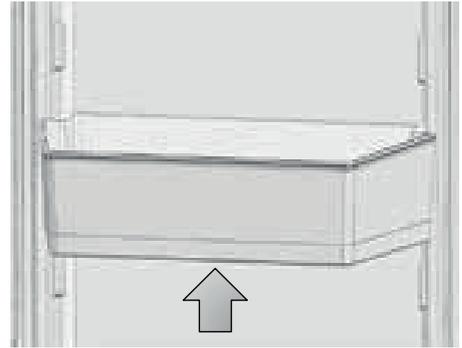

### 3.10 Glass shelves

#### To remove a shelf


- Fully open the corresponding door.
- Hold the front of the shelf, and then gently lift up and slide out.

#### To reinsert

- Hold the shelf at an angle so the front is higher than the back, and then insert the top hook into the top shelf notch.
- Put down the front slightly.



Use care when handling glass shelves to prevent breakage or scratching the interior.

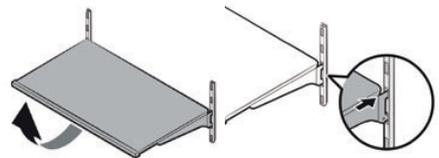





**Glass shelves must be unloaded.**



**You must wait for the glass shelves to reach room temperature before immersing them in water for cleaning.**



**The door may not be closed if the door shelves are positioned at the same level as glass shelves. Make sure that the door is closed after.**

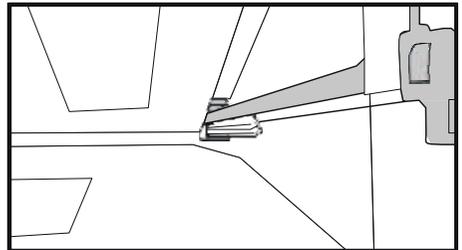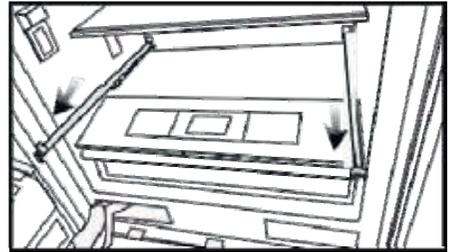


## 3.11 Crisper compartment

### To remove the crisper

- Pull the crisper until it stops.
- Slightly unclip the front section of the drawer and take it out completely.

### To install the crisper

- Pull the rails completely.
- Place the gap at the rear corners of the crisper to the detail located at the rear corners of the rails.
- Push the crisper slowly down until you feel it clip front onto the rails.

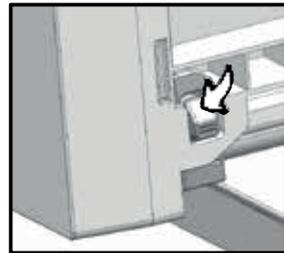

Make sure that the details at the right and left-hand sides are fixed when installing the crisper.



Never leave the vegetables in their plastic bags in the crisper. If they are left in their plastic bags they will rot in a short period of time.



The crisper compartment preserves the humidity of your vegetables, allowing you to store them for a long time without having to keep them in their bags.

If you do not prefer the vegetables to get into contact with other vegetables due to hygienic reasons, you can use perforated paper, foam or a similar material instead of plastic bags.

While the vegetables are being replaced, their specific weights should be taken into consideration.

Heavy and hard vegetables must be placed at the bottom of the crisper and light and soft vegetables must be on the upper part.

Pears, kiwis, tomatoes, cucumbers, apricots, peaches, broccolis, lettuces, cabbages, parsley and spinach are fruits and vegetables that emit ethylene gas.

Do not place them into the same crisper with other fruits and vegetables.

The ethylene gas emitted by these foods cause other fruits and vegetables to ripen sooner and to rot in a shorter span of time.

Do not remove the main body of the crisper from the refrigerator separately unless you have to do so.

### 3.12 Special fridge compartment

You can control the temperature in this section to store your food such as fish, meat, vegetables and delicatessen products for a longtime.



Removal/installation procedures of the special fridge compartment are same as that of the crisper.

### 3.13 Freezer Crisper



The freezer compartment store your foods at a temperature between  $-24^{\circ}\text{C}$  and  $-18^{\circ}\text{C}$  to keep them fresh for a long time.

#### To remove the crisper

- Open the freezer door until it stops.
- Unscrew drawer fixing screw and take it out carefully.

#### To install the crisper

- Open the freezer door until it stops.
- The crisper slowly down and screw drawer fixing bolt.

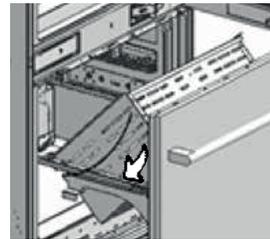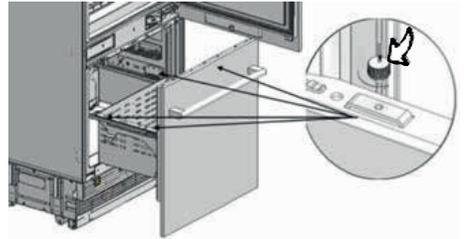



# Cleaning and maintenance

## 4 Cleaning and maintenance

### 4.1 Instructions



#### Improper use

#### Risk of damage to surfaces

- Do not use steam jets for cleaning the appliance.
- Do not use cleaning products containing chlorine, ammonia or bleach on steel parts or parts with metallic finishes on the surface (e.g. anodizing, nickel- or chromium-plating).
- Do not use abrasive or corrosive detergents on glass parts (e.g. powder products, stain removers and metallic sponges).
- Do not use rough or abrasive materials or sharp metal scrapers.



#### Power voltage

#### Danger of electrocution

- Turn off the appliance and unplug it from the mains before cleaning.
- Do not pull the cable to remove the plug.

Service life of the product will extend and frequently encountered problems will decrease if the product is cleaned periodically.

Never use gasoline, benzene or similar substances for cleaning purposes.

Never use any sharp abrasive instruments, soap, household cleaners, detergent or wax polish for cleaning.

Dissolve one teaspoon of carbonate in half liter of water. Soak a cloth in the solution and wring it thoroughly. Wipe the interior of the refrigerator with this cloth and the dry thoroughly.

Make sure that no water enters the lamp housing or other electrical parts.

If you will not use the refrigerator for a long time, unplug it, remove all food inside, clean it and leave the door ajar.

Check regularly that the door gaskets are clean. If not, clean them.

Take out all items in the product to remove the door and body shelves.

Remove the door shelves by pulling them up. Slide the shelves downwards to re-install them after cleaning.

Never use chloric cleaning agents or water to clean outer surfaces or chrome-coated parts of the product. Chlorine causes abrasion on such metal surfaces.



## 4.2 Avoiding Bad Odors

Materials that may cause odor are not used in the production of our refrigerators. However, odor may be emitted if foods are stored improperly or if the inner surface of the product is not cleaned as required. Please consider the following to avoid this problem:

It is important that the refrigerator is kept clean.

Food residuals, stains, etc. can cause odor.

For this reason, clean your refrigerator with carbonate solved in water every 15 days.

Never use detergents or soap.

Keep your foods in closed vessels.

Microorganisms emitted from vessels without a cover may cause unpleasant odors.

Never keep expired or spoiled foods in your refrigerator.

## 4.3 Protecting the Plastic Surfaces

Do not put liquid oils or oil-cooked meals in your refrigerator in unsealed containers as they damage the plastic surfaces of your refrigerator.

If oil is spilled or smeared onto the plastic surfaces, clean and rinse the relevant part of the surface with warm water immediately.



**Switch off the product before cleaning.**



**It is recommended to clean the condenser every six months using gloves.**

**You must not use vacuum cleaners.**



## Cleaning and maintenance

### 4.4 Cleaning the Inner Surface

To clean the inner surfaces and all removable parts, wash them with a mild solution comprising soap, water and carbonate.

Rinse and dry thoroughly.

Prevent the water from contacting the lighting means and control panel.

### 4.5 Stainless Steel Outer Surfaces

Use a stainless steel cleaning agent that is nonabrasive and apply it with a lint-free, soft cloth.

For polishing, wipe the surface softly with a damp microfiber cloth and use dry wash-leather.

Always follow the strands of the stainless steel.



Do not use vinegar, rubbing alcohol or other alcohol-based cleaning agents on any of the inner surfaces.



## 4.6 Trouble shooting...

Problem	Possible cause	Solution
The refrigerator is not operating.	It may not be plugged in properly.	Plug in the product properly.
	The fuse of the socket to which your refrigerator is connected or the main fuse may have blown.	Check the fuse.
The condensation on the fridge compartment.	The door may have been opened/closed frequently.	Do not open/close the refrigerator door frequently.
	The environment may be too humid.	Do not install the refrigerator at locations with a very high level of humidity.
	Foods containing liquid may have been placed into the refrigerator in vessels without covers.	Do not place foods containing liquid into the refrigerator in unsealed vessels.
	Door of the refrigerator may have been left ajar.	Do not keep the doors of your refrigerator open for a long time.
The compressor is not operating.	The freezer is in defrosting cycle.	This is normal for a refrigerator that performs full-automatic defrosting. Defrosting cycle is performed periodically.
	The refrigerator may not be plugged in.	Make sure that the plug fits the socket.
	Temperature settings may be incorrect.	Select the correct temperature value.
Vibration or noise.	Possible power failure.	The refrigerator will start to operate normally when power restores.
	The floor may not be stable or level.	If the refrigerator shakes when moved slightly feed to balance it. Make sure that the floor is level and capable of carrying the refrigerator.
	Objects placed onto the refrigerator may cause noise.	Remove the objects on the refrigerator.



## Cleaning and maintenance

Damp accumulates on the inner walls of refrigerator.	The doors may have been opened frequently or left ajar for a long time.	Do not open the door frequently. Close the doors, if open.
	The door may have been left ajar.	Close the door completely.
Humidity occurs on the outer surface of the refrigerator or between the doors.	Air might be humid. This is quite normal in humid weathers.	Condensation will disappear the humidity level decreases.
There is a bad odour inside the refrigerator.	No regular cleaning may have been performed.	Clean the inside of the refrigerator sponge, lukewarm water or carbonated water.
	Some vessels or packaging materials may cause the odour.	Use another vessel, or packaging materials from another brand.
	Foods may have been placed into the refrigerator in vessels without covers.	Store the foods in closed vessels. Microorganisms emitted from vessels without a cover may cause unpleasant odors.
The door cannot be closed.	Food packages may be preventing the door from closing.	Re-locate the packages obstructing the door.
	The refrigerator may be unstable on the floor.	Adjust the refrigerator feet as required to balance the refrigerator.
Crispers are stuck.	Foods may be touching the upper wall of the crisper.	Re-organise the foods in the crisper.

If the malfunction shows again, contact the Service Center.

The manufacturer reserves the right to make any changes deemed useful for improvement of his products without prior notice. The illustrations and descriptions contained in this manual are therefore not binding and are merely indicative.

Le constructeur se réserve la faculté d'apporter, sans préavis, toutes les modifications qu'il jugera utiles pour l'amélioration de ses produits. Les illustrations et les descriptions figurant dans ce manuel ne sont pas contraignantes et n'ont qu'une valeur indicative.

El fabricante se reserva el derecho a aportar sin aviso previo todas las modificaciones que considere útiles para la mejora de sus propios productos. Las ilustraciones y las descripciones contenidas en este manual no comprometen, por tanto, al fabricante y tienen un valor meramente indicativo.



91477B616/A