

GETTING *started* WITH YOUR SINGLE-DOOR FREEZER



BEFORE YOU START



WHAT'S INCLUDED IN MY LITERATURE PACKET?

You have some extra items in your literature pack, including hinge covers, a *PureAir Ultra II™* Air Filter, an ice scoop, and your Use & Care Manual. Flip over this guide for install instructions for your air filter. For more detailed information, reference your Use & Care Manual.

SET UP YOUR FREEZER

Prior to using your freezer, make sure it is located on a floor that is level and strong enough to support it fully loaded. Check out **INSTALLATION** in your Use & Care Manual.



BEFORE OPERATING FOR THE FIRST TIME

Clean the inside of your appliance before using it. See the **CARE AND CLEANING** section in your Use & Care Manual. To ensure safe food storage, allow the appliance to operate with the door closed for at least 8 hours before loading it with food.

YOU'RE IN CONTROL



Appliance Control Display

The appliance control display is located in the cabinet below the upper drawer.



Alarms and Controls

- 1 **DOOR OPEN** illuminates and alert sounds if the door is open 5+ minutes until you close the door.
- 2 **POWER OUTAGE** illuminates and alert sounds after a power outage ends until you reset it by pressing any button.
- 3 **HIGH TEMP** illuminates and alert sounds if the temperature increases above a safe temperature range until you reset it.
- 4 Press and hold **A** for 3 seconds to enable/disable the appliance control display. While locked, no changes can be made until unlocked.
- 5 Press **⊗** to reveal other function icons.
- 6 Press **+** to raise the temperature and **-** to lower the temperature on the appliance control.
- 7 **TEMP °F/°C** allows you to switch between Fahrenheit (°F) and Celsius (°C).
- 8 Prior to grocery shopping, we recommend you activate **FREEZE BOOST** to freeze your food faster.
- 9 **AIR FILTER** illuminates when it's time to change the filter, generally after 6 months.
- 10 The **ICE MAKER** is already on and will make ice until the ice bin is full. Press and hold **ICE MAKER** for 3 seconds to turn it on/off.



REMEMBER

- Allow 24 hours for the temperature to stabilize between adjustments.
- Avoid frozen packages hanging over the middle shelf to allow the freezer door to maintain a good seal.
- If installing any combination of refrigerators or freezers together, you will need a Pairing Kit (TWINSPAIRKIT). We also suggest a Trim Kit to complete your seamless design. Kits are available at any authorized retailer or Frigidaire.com.



QUICK CARE



A little love goes a long way

Keeping your freezer clean maintains its appearance and freshness.

Be gentle

Clean with warm water and mild soap. For stainless steel models only, use **Frigidaire ReadyClean™ Stainless Steel Cleaner**.



5304508691

KEEP IT FRESH



Install your new **PureAir Ultra II™ Air Filter** to keep fresh air flowing (1 included)

1. Grab and pull the cover in your freezer until it releases from the fixed air filter housing.
2. Snap the new filter into the filter cover. The open face (carbon media) of the filter should face outward.
3. Reattach the air filter cover to the air filter housing, aligning the cover to the housing and firmly snapping it in place.
4. Press and hold **REPLACE AIR FILTER** on the appliance control display to reset it.



Change your filter every 6 months to ensure optimal freezer freshness.

FAQs

What does the alarm or “buzzer sound” mean?

An alarm or “buzzer sound” can mean your door is open, a power outage or **HI-TEMP** has been detected. In most cases, simply acknowledge the alarm by resetting it. However, in the event of a **HI-TEMP**, it's a good idea to make sure your freezer is level, and the door closes freely with a proper seal. Once you close your freezer door, leave it closed so the freezer temperature can decrease and stabilize to the set temperature.

The freezer temperature is warmer or colder than preferred. What can I do?

Simply adjust the temperature by 1 or 2 degrees and allow 24 hours for the temperature to stabilize.

Is it normal to hear a popping or cracking sound when the compressor runs?

Yes, this is normal. These sounds can be caused by the freezer's internal components as they expand and contract with temperature changes, or by the circulation of the refrigerant that's used to cool the freezer.

Why does my freezer seem to run continuously?

Your freezer is equipped with an energy-efficient variable speed compressor. It actually saves energy running more frequently while maintaining even temperatures.



Find more information refer to **TROUBLESHOOTING** in the back of your **Use & Care Manual**.

LET'S MAKE IT OFFICIAL!

Take the first step to becoming a part of the Frigidaire family and discover more benefits by registering your single-door freezer.

Look for the PhotoregisterSM icon on your registration card.



WE ARE
here
FOR YOU



Have a question?



Want help?



Need service?

owner support

frigidaire.com 1 (800) 374-4432

frigidaire.ca 1 (800) 265-8352

