

*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

708222
TV STAND

ITEM:708222

ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.















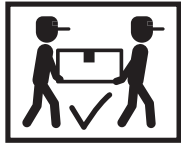


ASSEMBLY TIME

60 MINUTES

MAX TV SIZE : 65"

               PARTS IDENTIFICATION

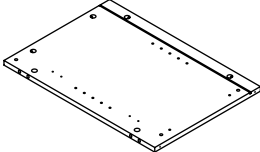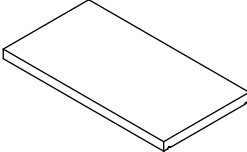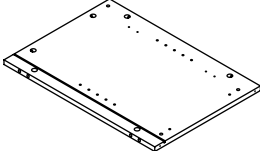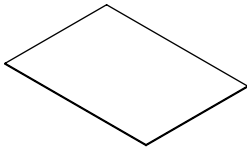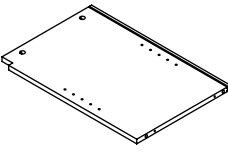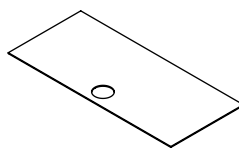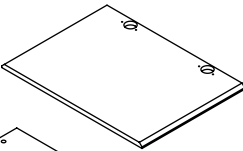
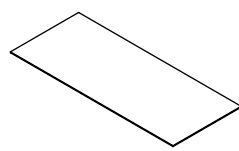
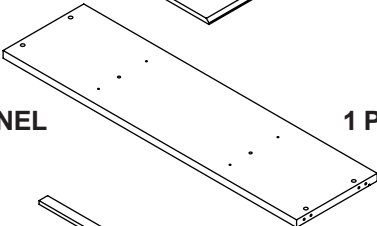

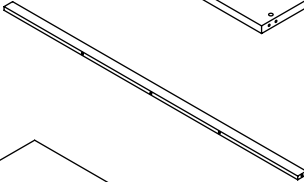

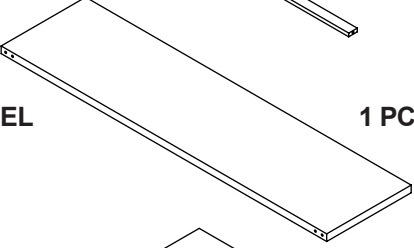
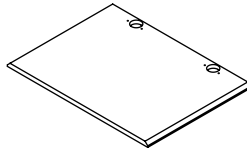

A	LEFT SIDE PANEL		1 PC	I	LARGE ADJUSTABLE SHELF		1 PC
B	RIGHT SIDE PANEL		1 PC	J	BACK SIDE PANEL		2 PCS
C	DIVIDER PANEL		2 PCS	K	BACK MIDDLE UPPER PANEL		1 PC
D	RIGHT DOOR		1 PC	L	BACK MIDDLE LOWER PANEL		1 PC
E	BOTTOM PANEL		1 PC	M	MOLDING BOARD 1		2 PCS
F	UPPER DECORATIVE STRIP		1 PC	N	MOLDING BOARD 2		2 PCS
G	TOP PANEL		1 PC	O	LEFT DOOR		1 PC
H	ADJUSTABLE SHELF		2 PCS				

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:708222

         HARDWARE IDENTIFICATION**Z**


NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	8	PLASTIC COVER Ø 52mm		1 PC
2	WOODEN DOWEL Ø8 x 30mm		33 PCS	9	HINGE Ø35mm SR		4 PCS
3	CAM BOLT Ø7 x 35.5mm SR		24 PCS	10	HINGE SCREW Ø4x15mm SR		16 PCS
4	CAM LOCK Ø15 x 12mm SR		24 PCS	11	FOOT Ø35xH19mm		2 PCS
5	BOLT Ø9.5 x 55mm SR		4 PCS	12	BACK PANEL SUPPORT		6 PCS
6	PLASTIC FEET Ø15mm		4 PCS	13	BACK PANEL SUPPORT SCREW Ø3 x 19mm SR		6 PCS
7	PIN FOR ADJUSTABLE SHELF Ø4.9 x 15mm SR		12 PCS	14	STICKER Ø20mm		4 PCS

Z8, Z9, Z11 not included in blister packaging.**NOTE:**


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **708222**

 STEP 1

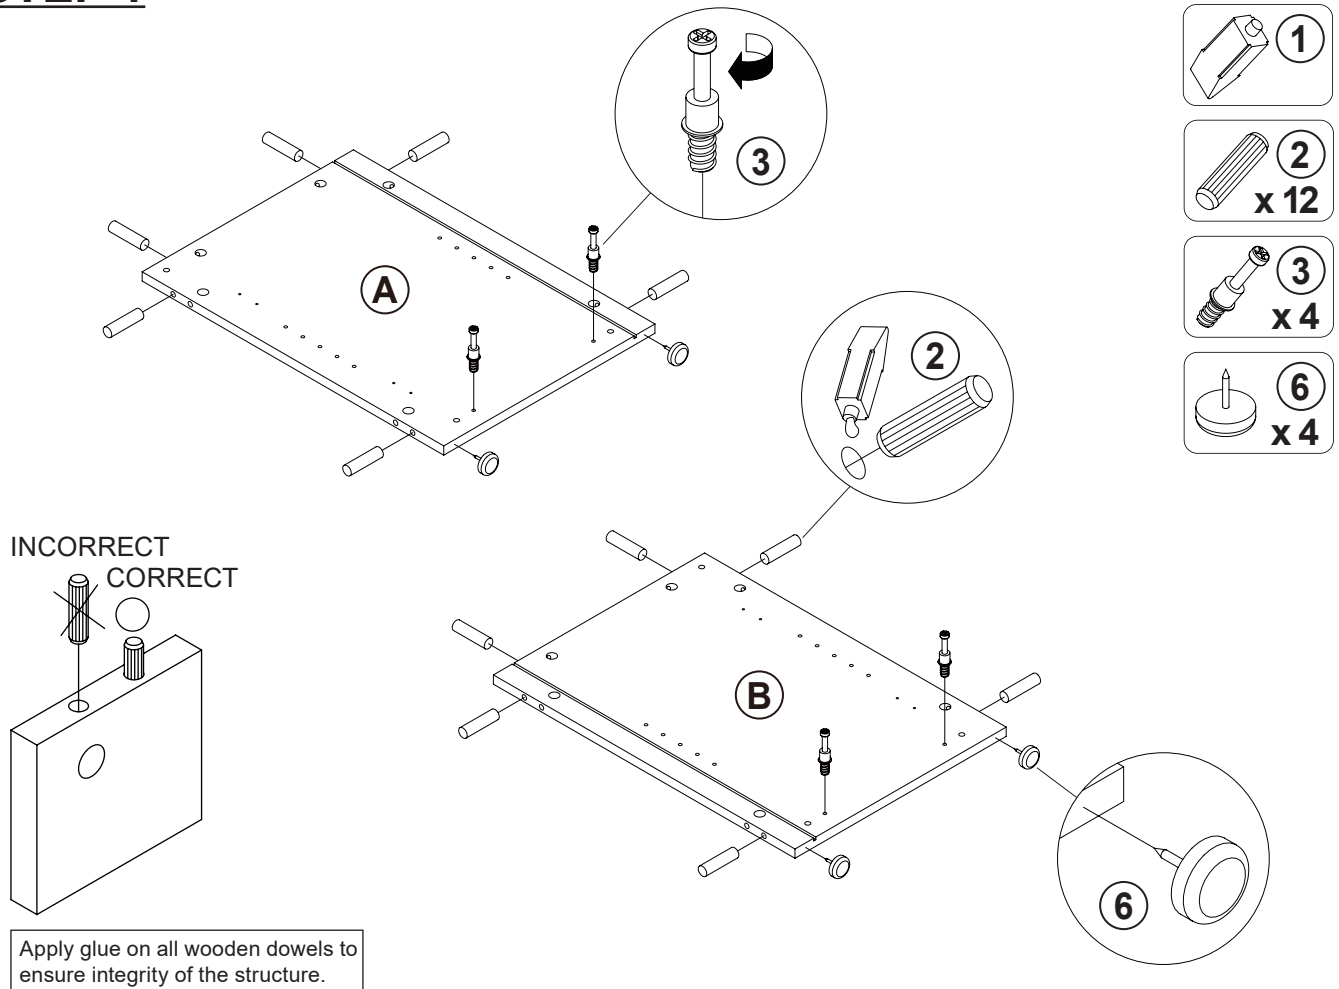


 STEP 2

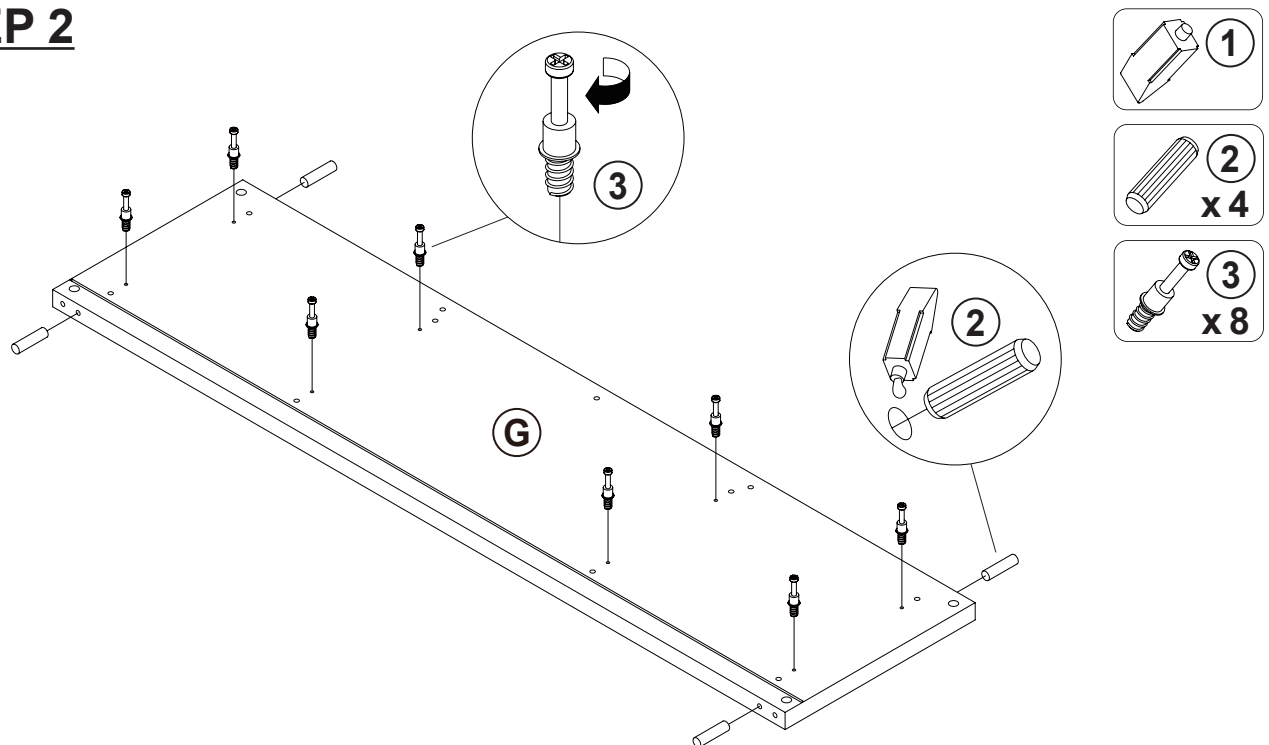


ITEM: **708222**

 STEP 3




1

 

2


x 13

 x 2

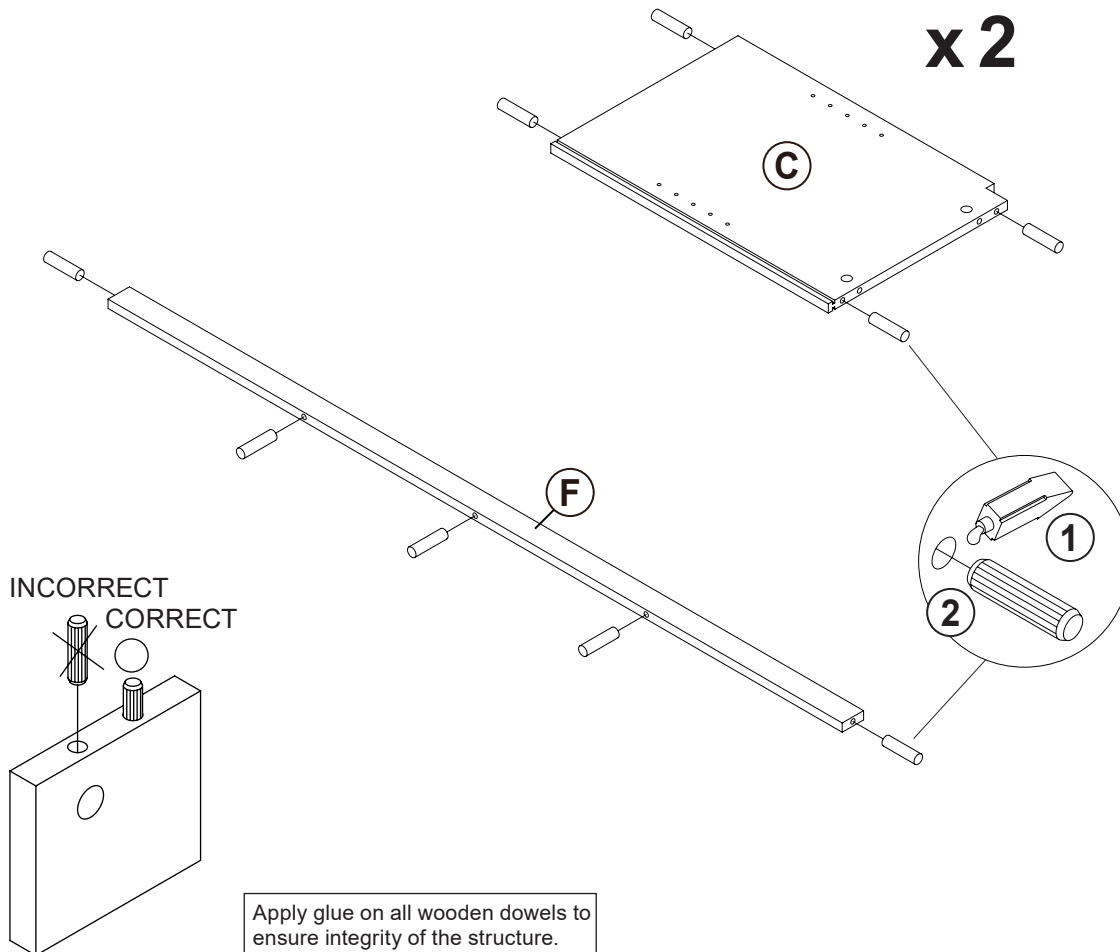

Apply glue on all wooden dowels to ensure integrity of the structure.

 
STEP 4



3

x 12

 x 2




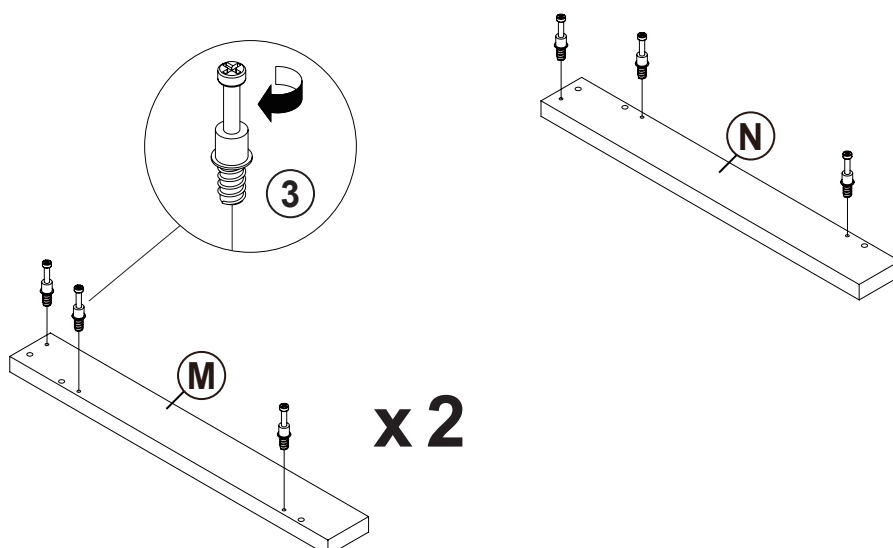


x 2


ITEM: **708222**

STEP 5

    COASTER
FINE FURNITURE

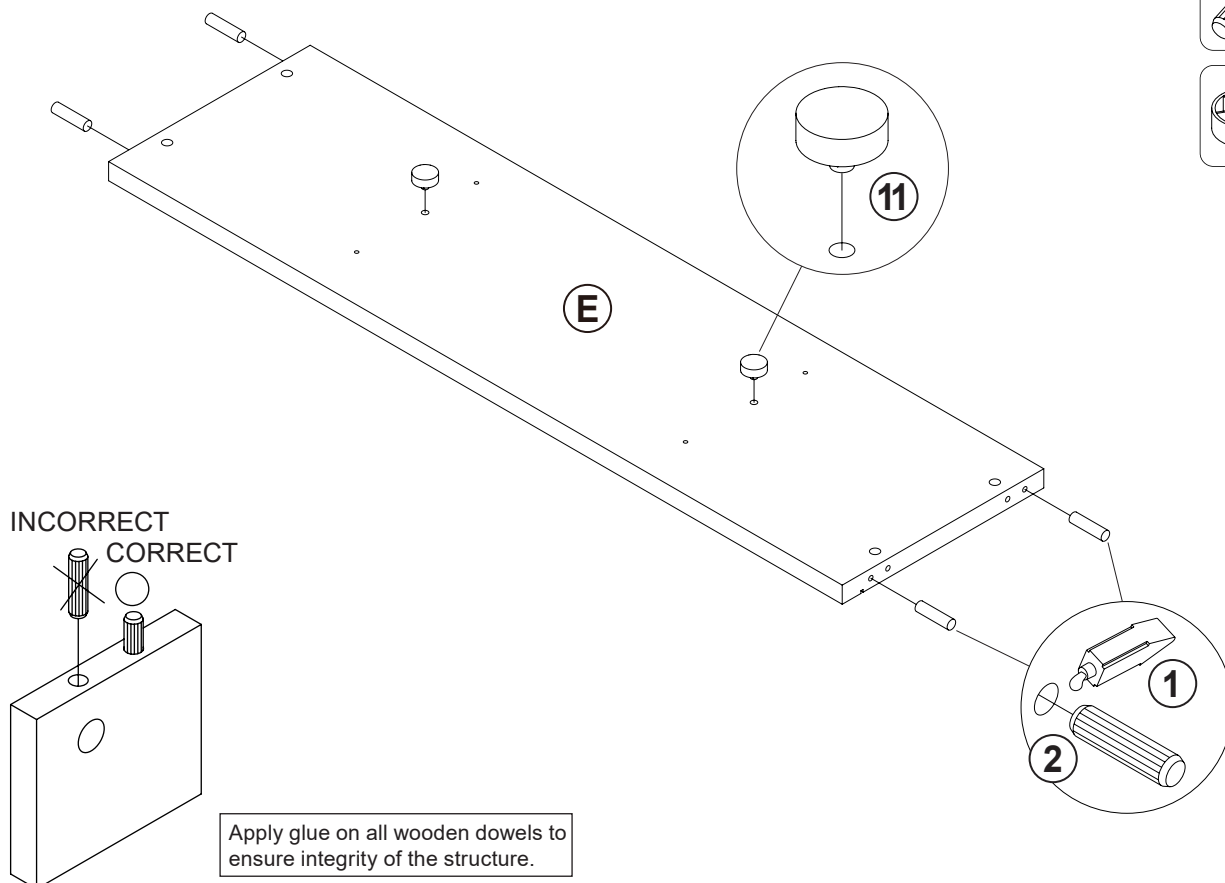


 
STEP 6

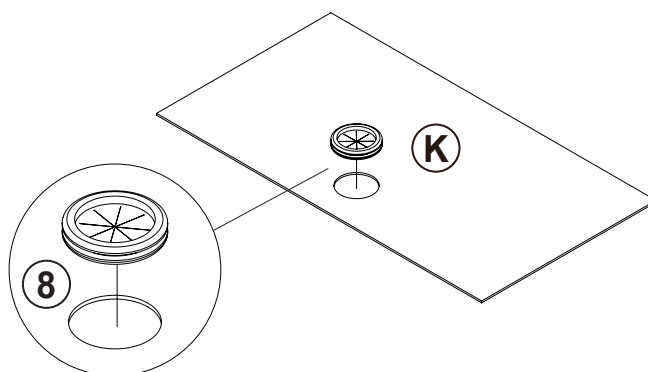




ITEM: **708222**

STEP 7

  COASTER
FINE FURNITURE

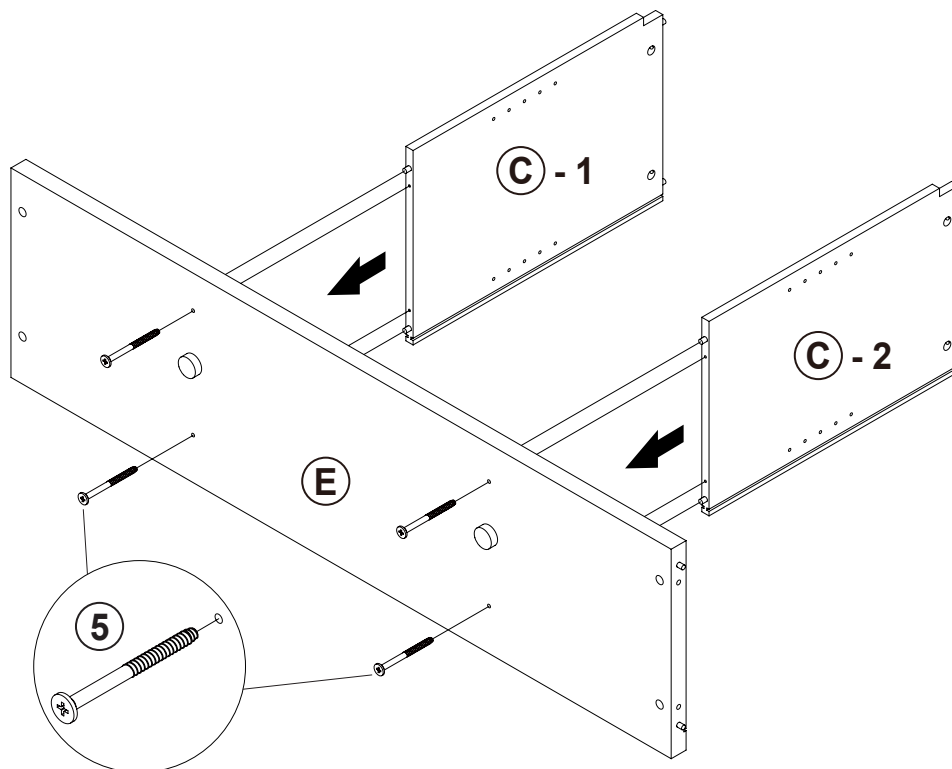

   
STEP 8

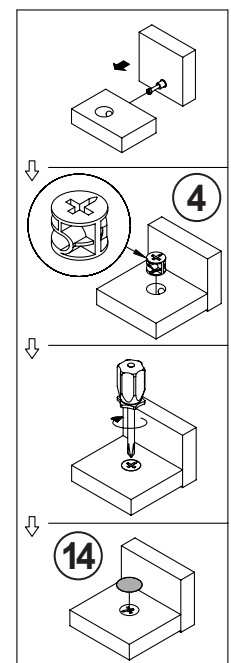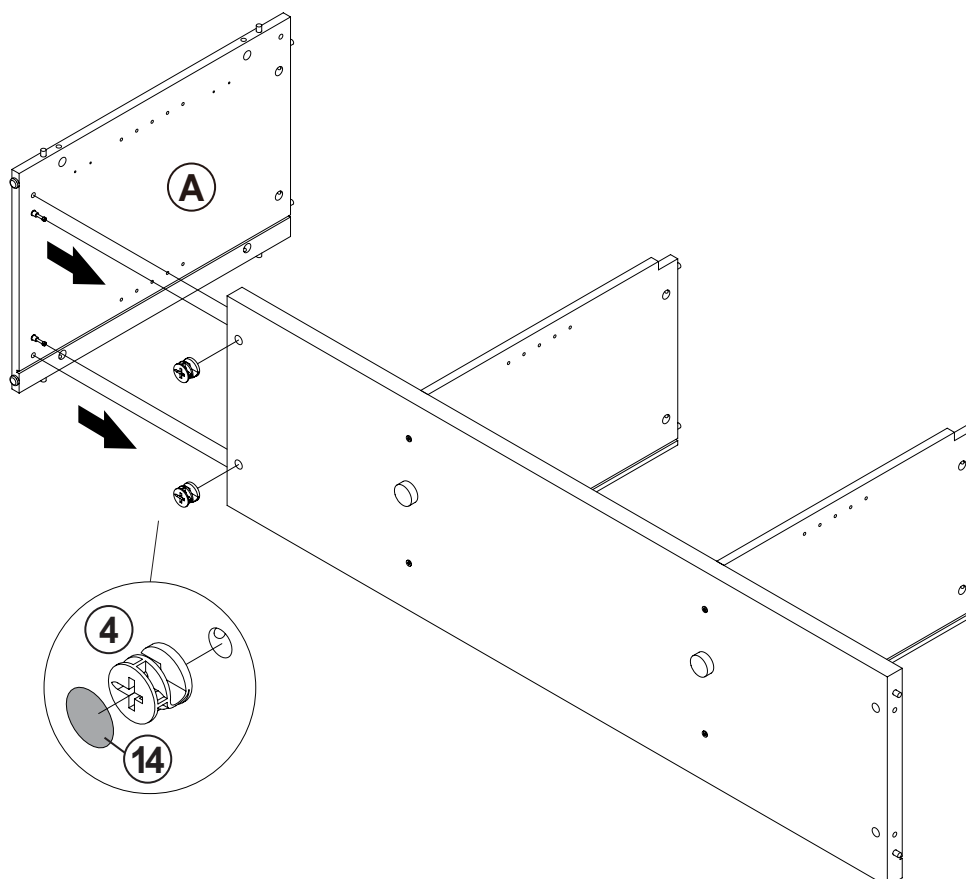


ITEM: **708222**

STEP 9

 COASTER
FINE FURNITURE

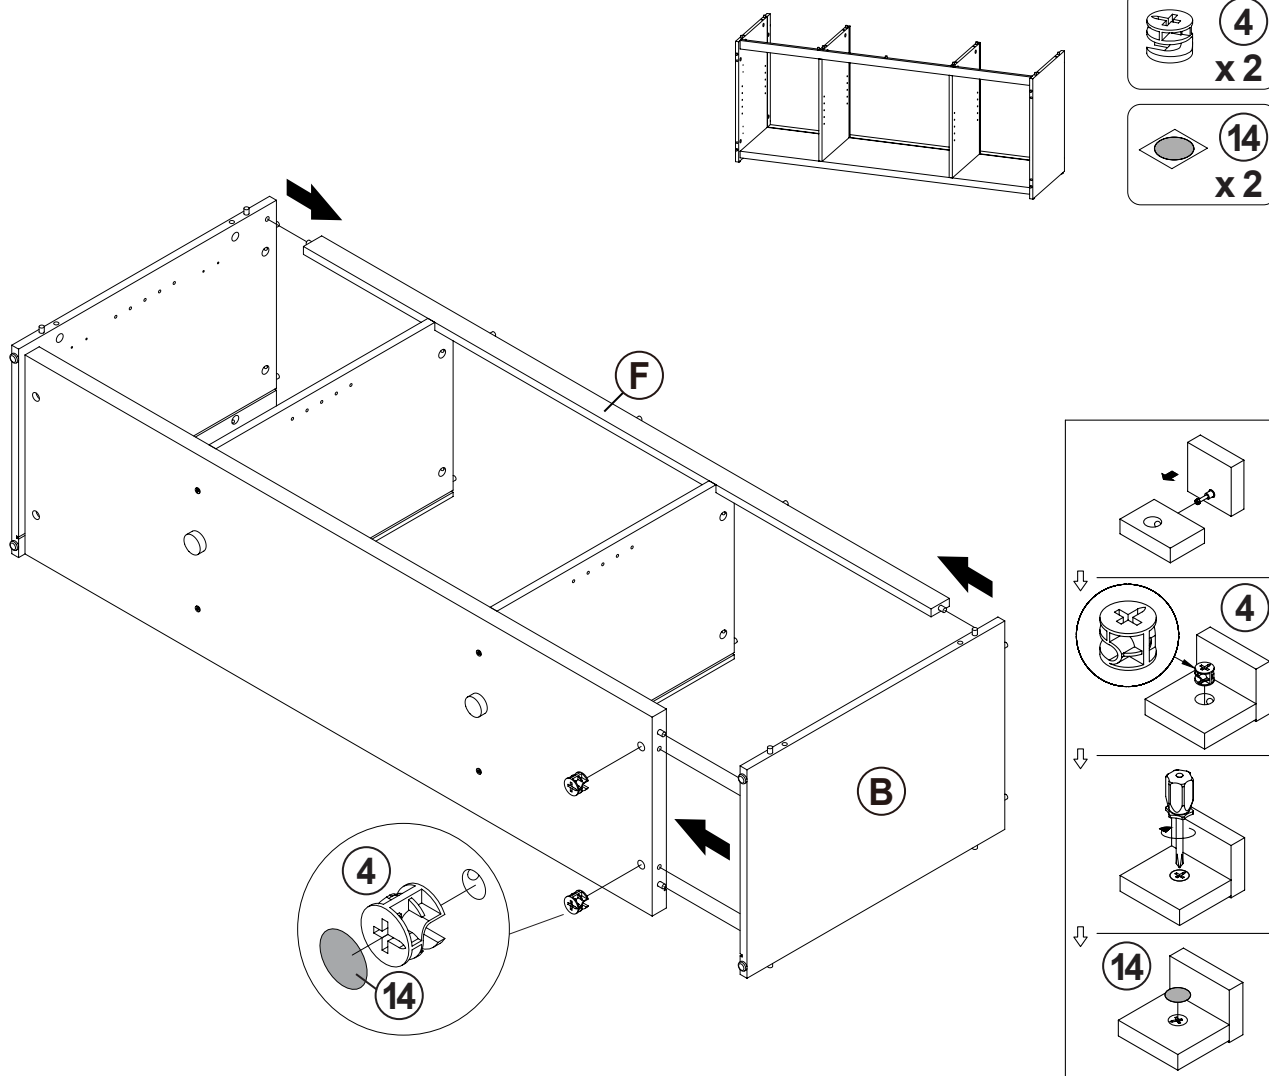



 
STEP 10

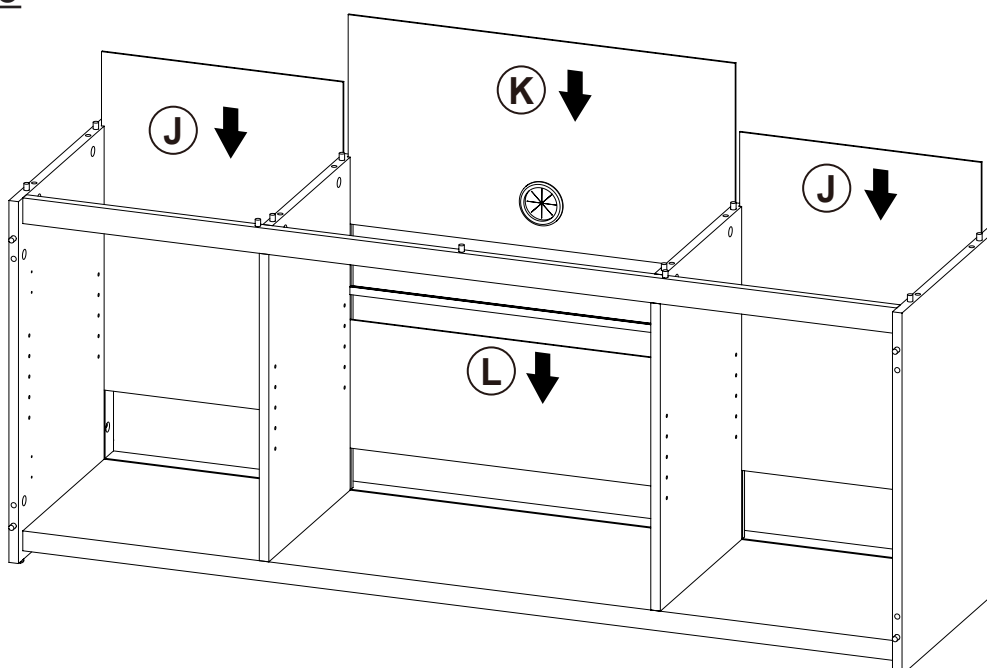



ITEM: **708222**

COASTER
FINE FURNITURE

   STEP 11

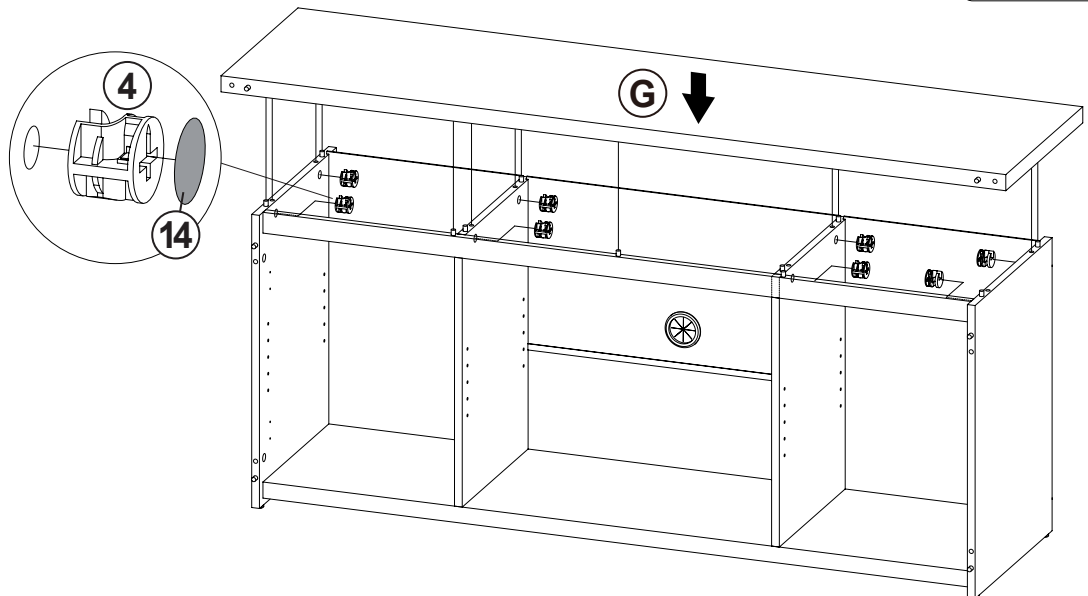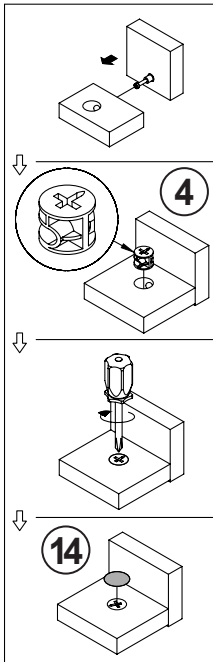



 
 
STEP 12

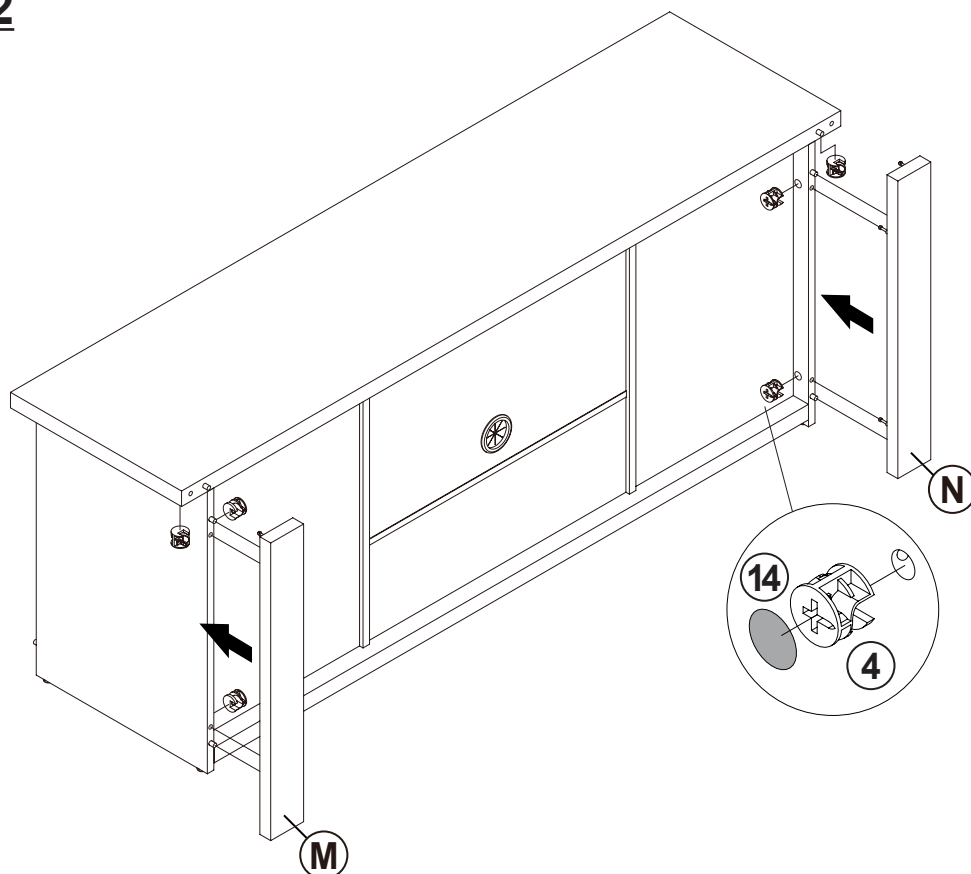




ITEM: **708222**

COASTER
FINE FURNITURE

    STEP 13

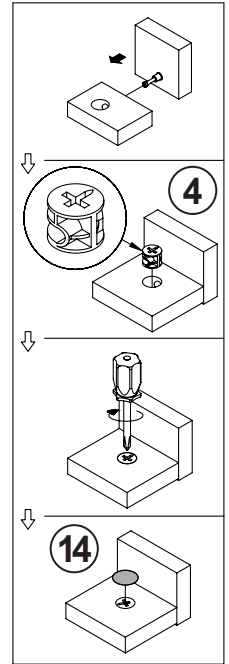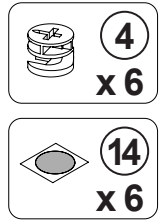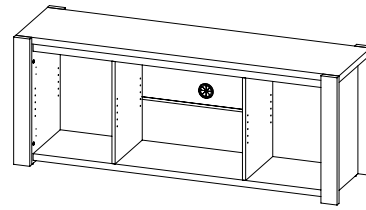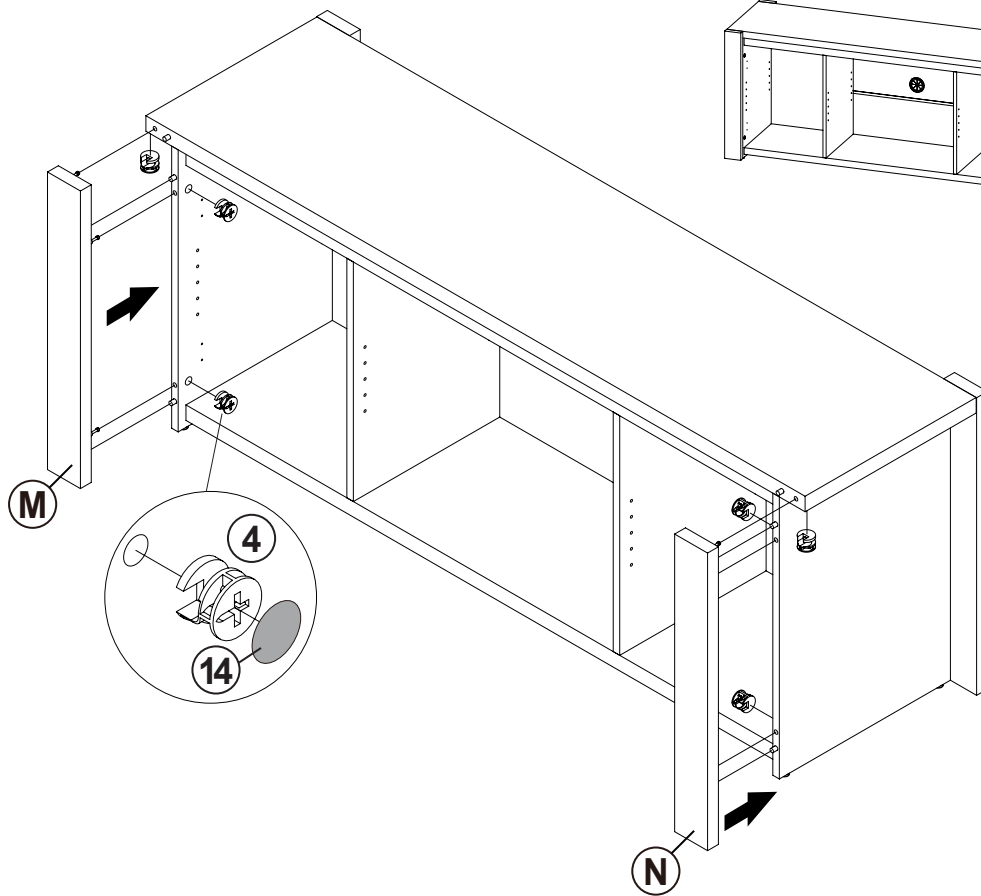


   STEP 14

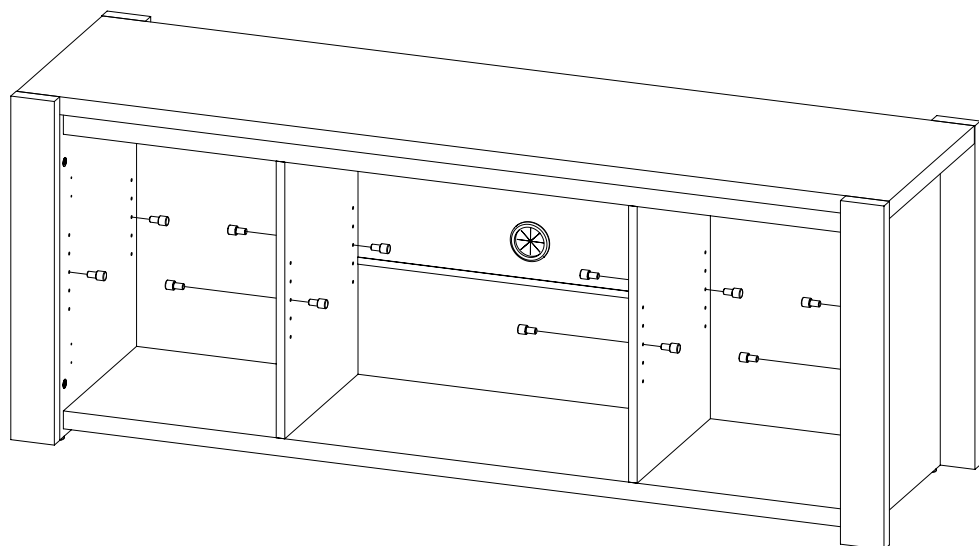
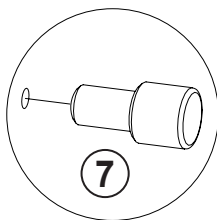



ITEM: **708222**

 STEP 15

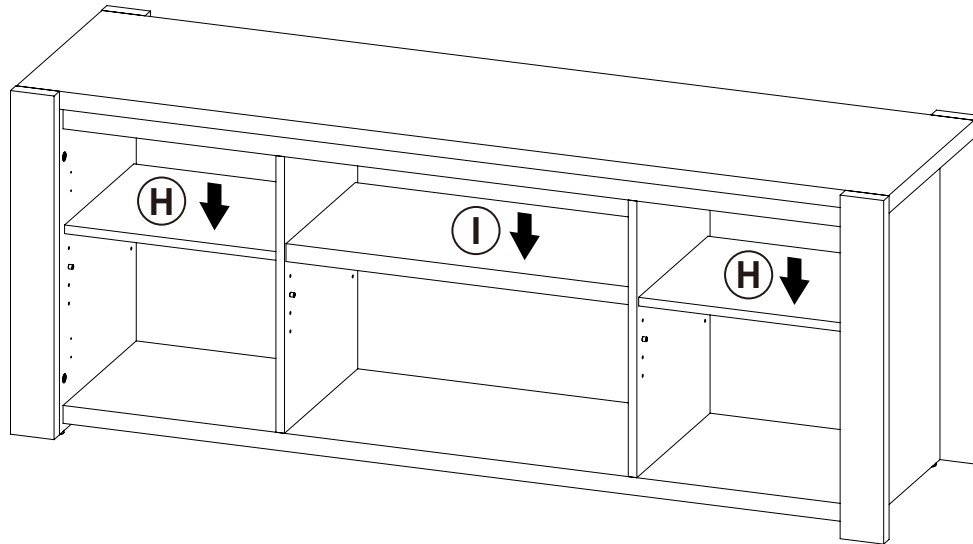

  
 
STEP 16

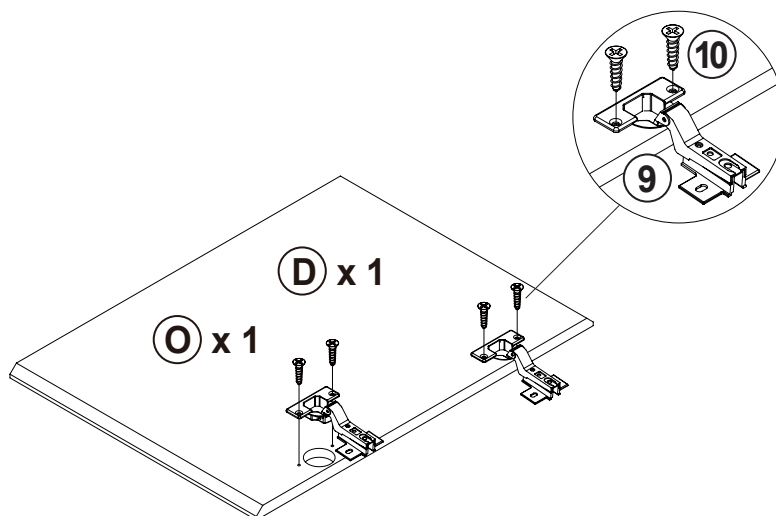





ITEM: **708222**

STEP 17

  COASTER
FINE FURNITURE

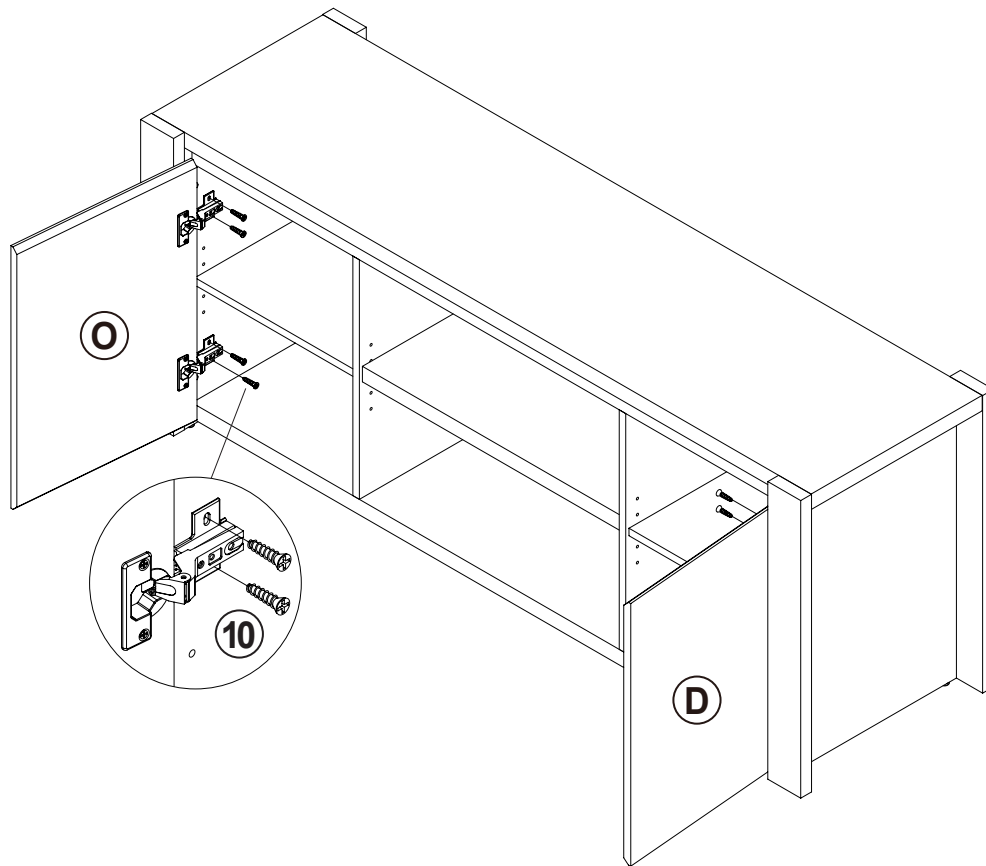

  
 
 
STEP 18

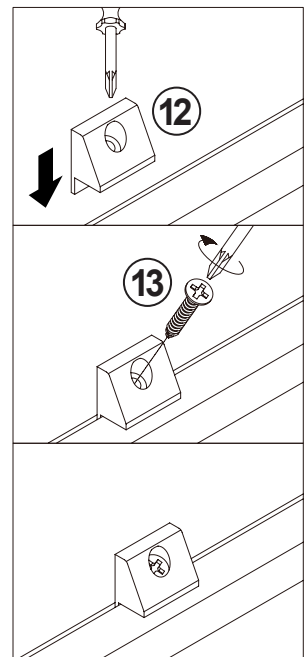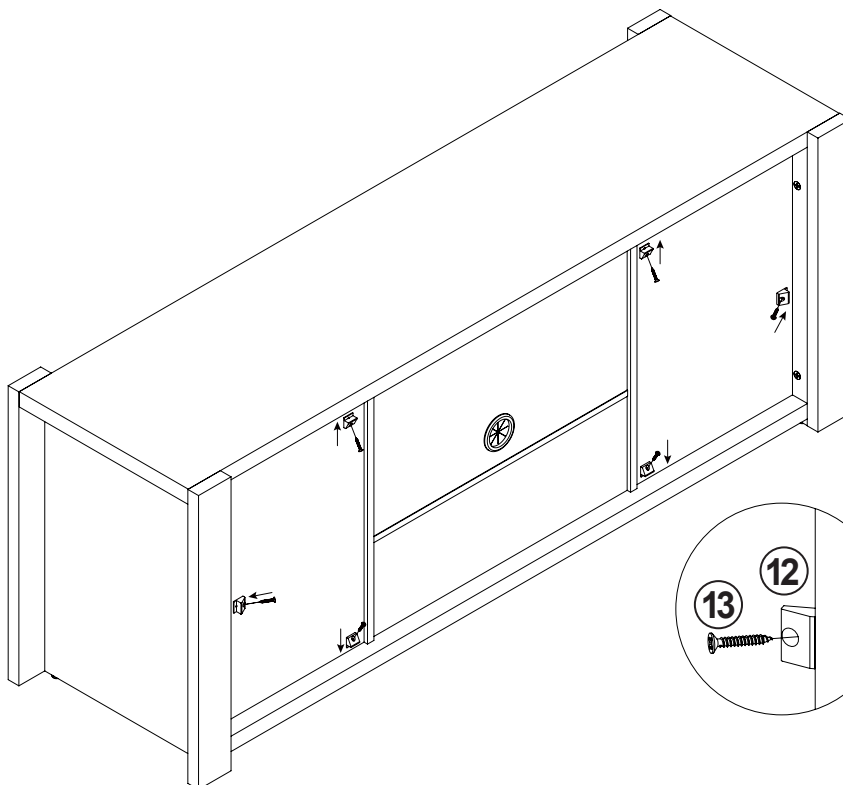


ITEM: **708222**

STEP 19

   COMPLETE

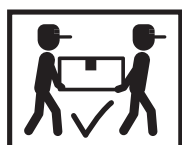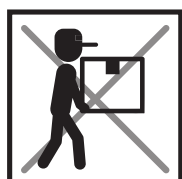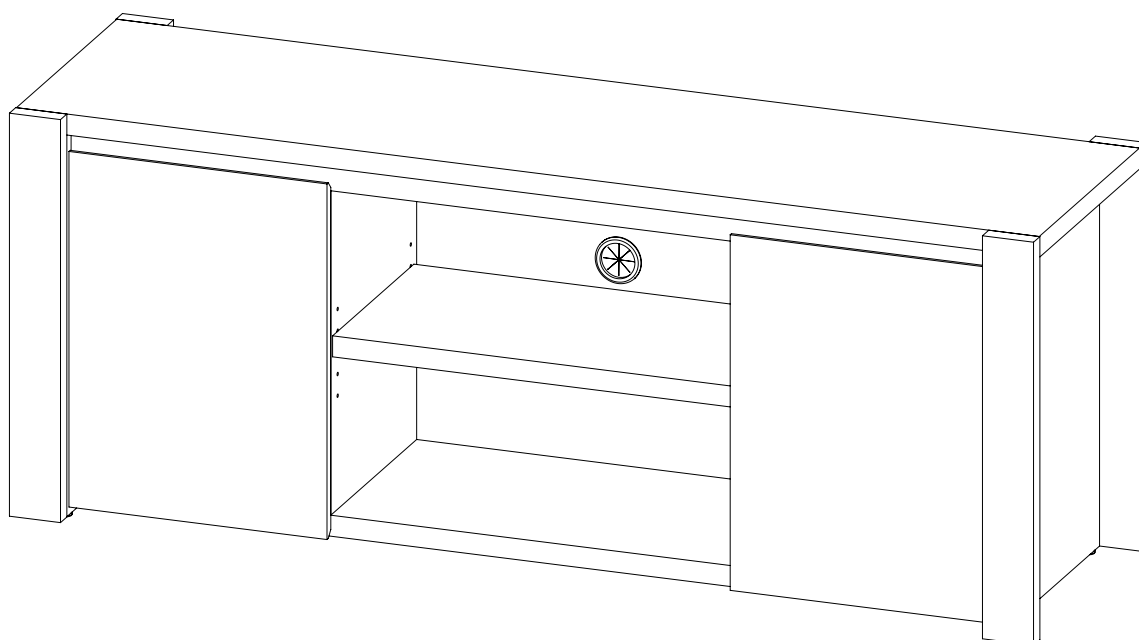

ITEM: 708222

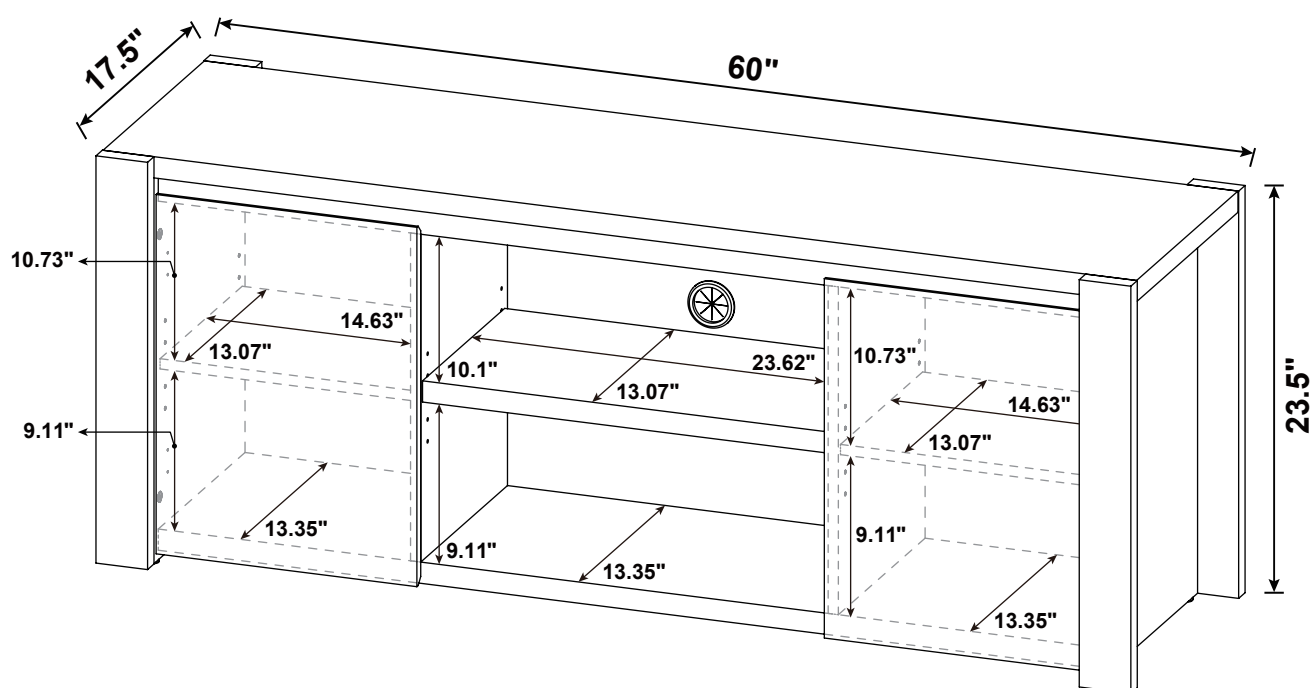 

*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

708224
MEDIA TOWER

ITEM:708224

ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

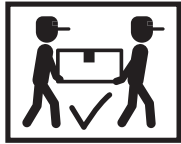

ASSEMBLY TIME

60 MINUTES

 PARTS IDENTIFICATION







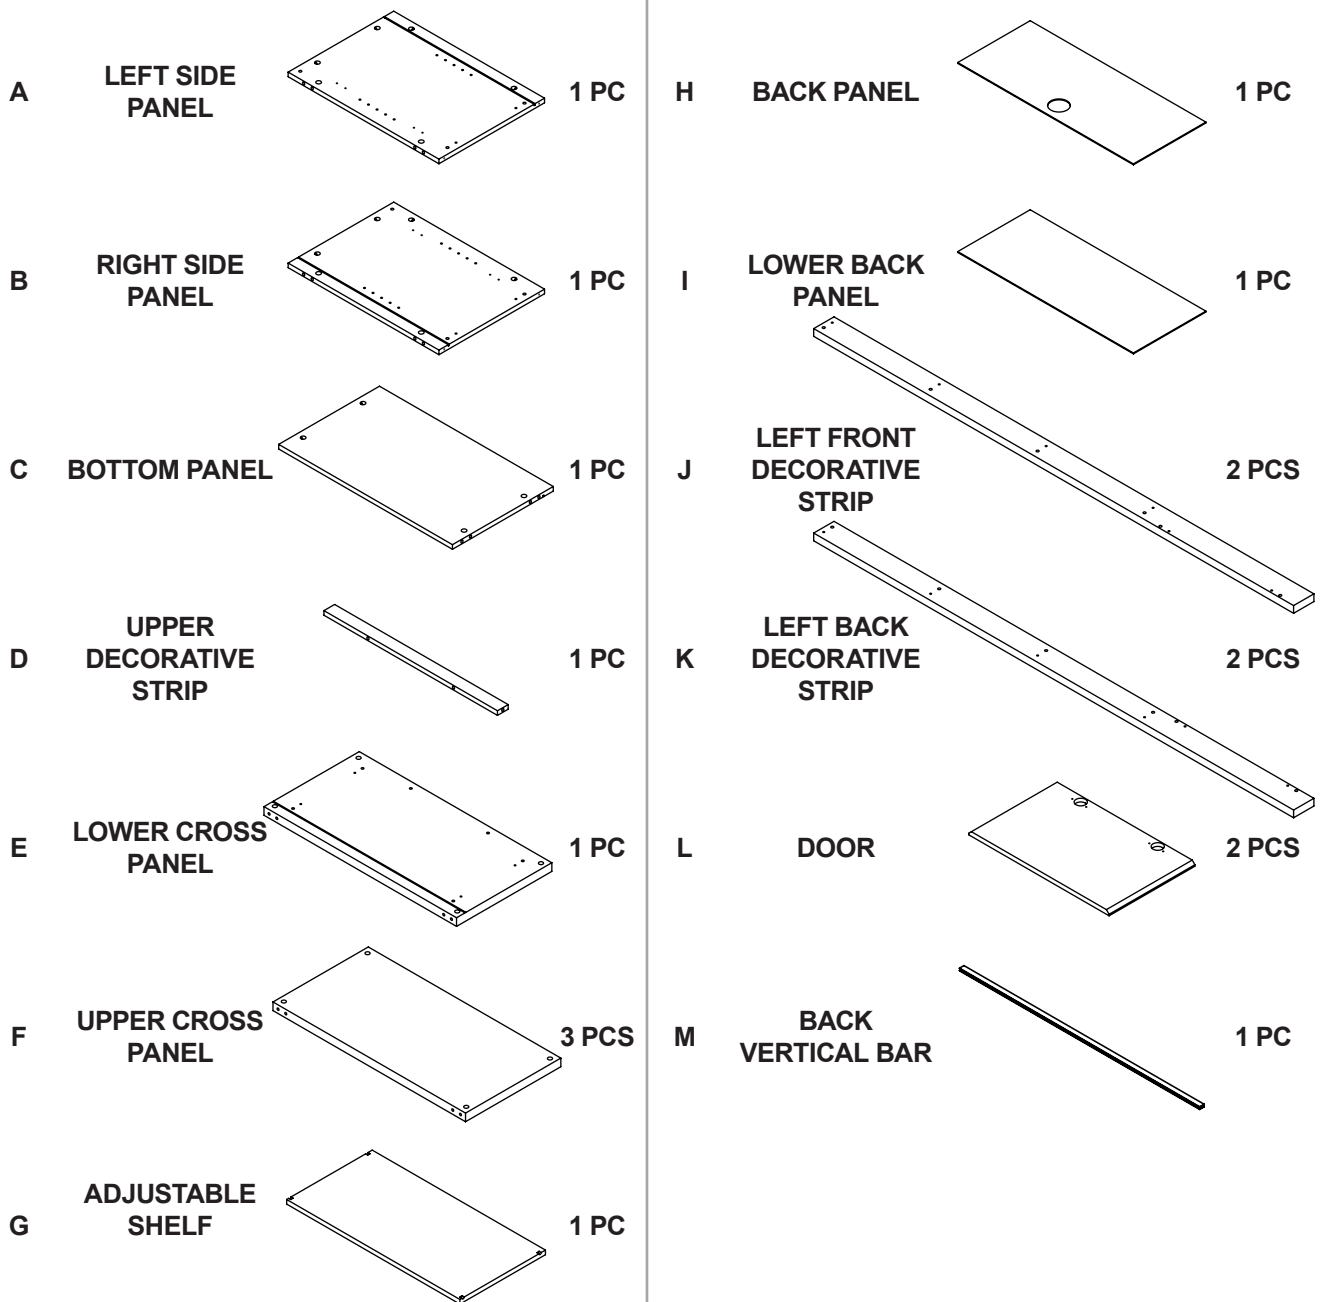


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:708224

       HARDWARE IDENTIFICATION

Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	7	PLASTIC COVER Ø 52mm		1 PC
2	WOODEN DOWEL Ø8x30mm		36 PCS	8	HINGE Ø35mm SR		4 PCS
3	CAM BOLT Ø7x35.5mm SR		32 PCS	9	HINGE SCREW Ø4x15mm SR		16 PCS
4	CAM LOCK Ø15x12mm SR		32 PCS	10	FIXER		6 PCS
5	PLASTIC FEET Ø15mm		4 PCS	11	FIXER SCREW Ø 3x19mm SR		6 PCS
6	PIN FOR ADJUSTABLE SHELF Ø4.9x15mm SR		4 PCS	12	STICKER Ø20mm		6 PCS

Z7, Z8 not included in blister packaging.

 
 
NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: 708224

STEP 1

COASTER
FINE FURNITURE

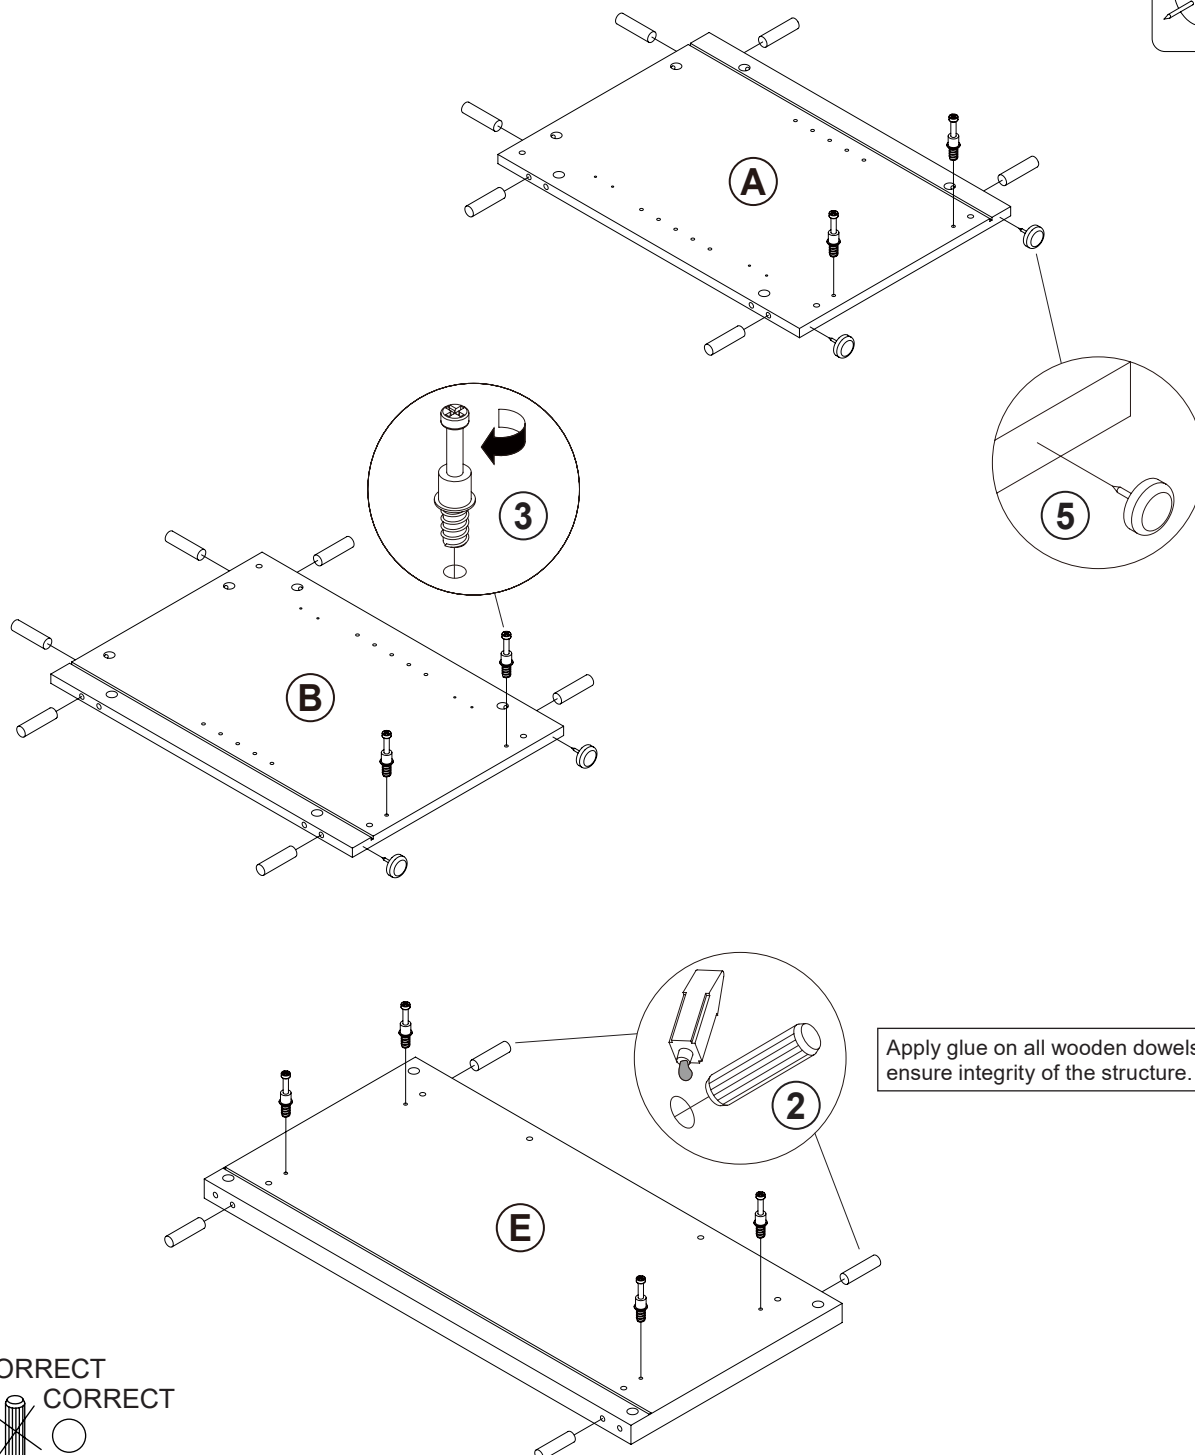

INCORRECT
CORRECT


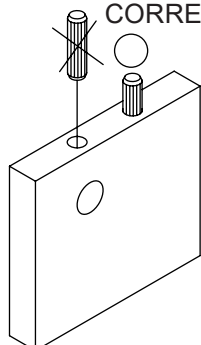 


Apply glue on all wooden dowels to ensure integrity of the structure.

ITEM: **708224**

STEP 2

 
 
COASTER
FINE FURNITURE

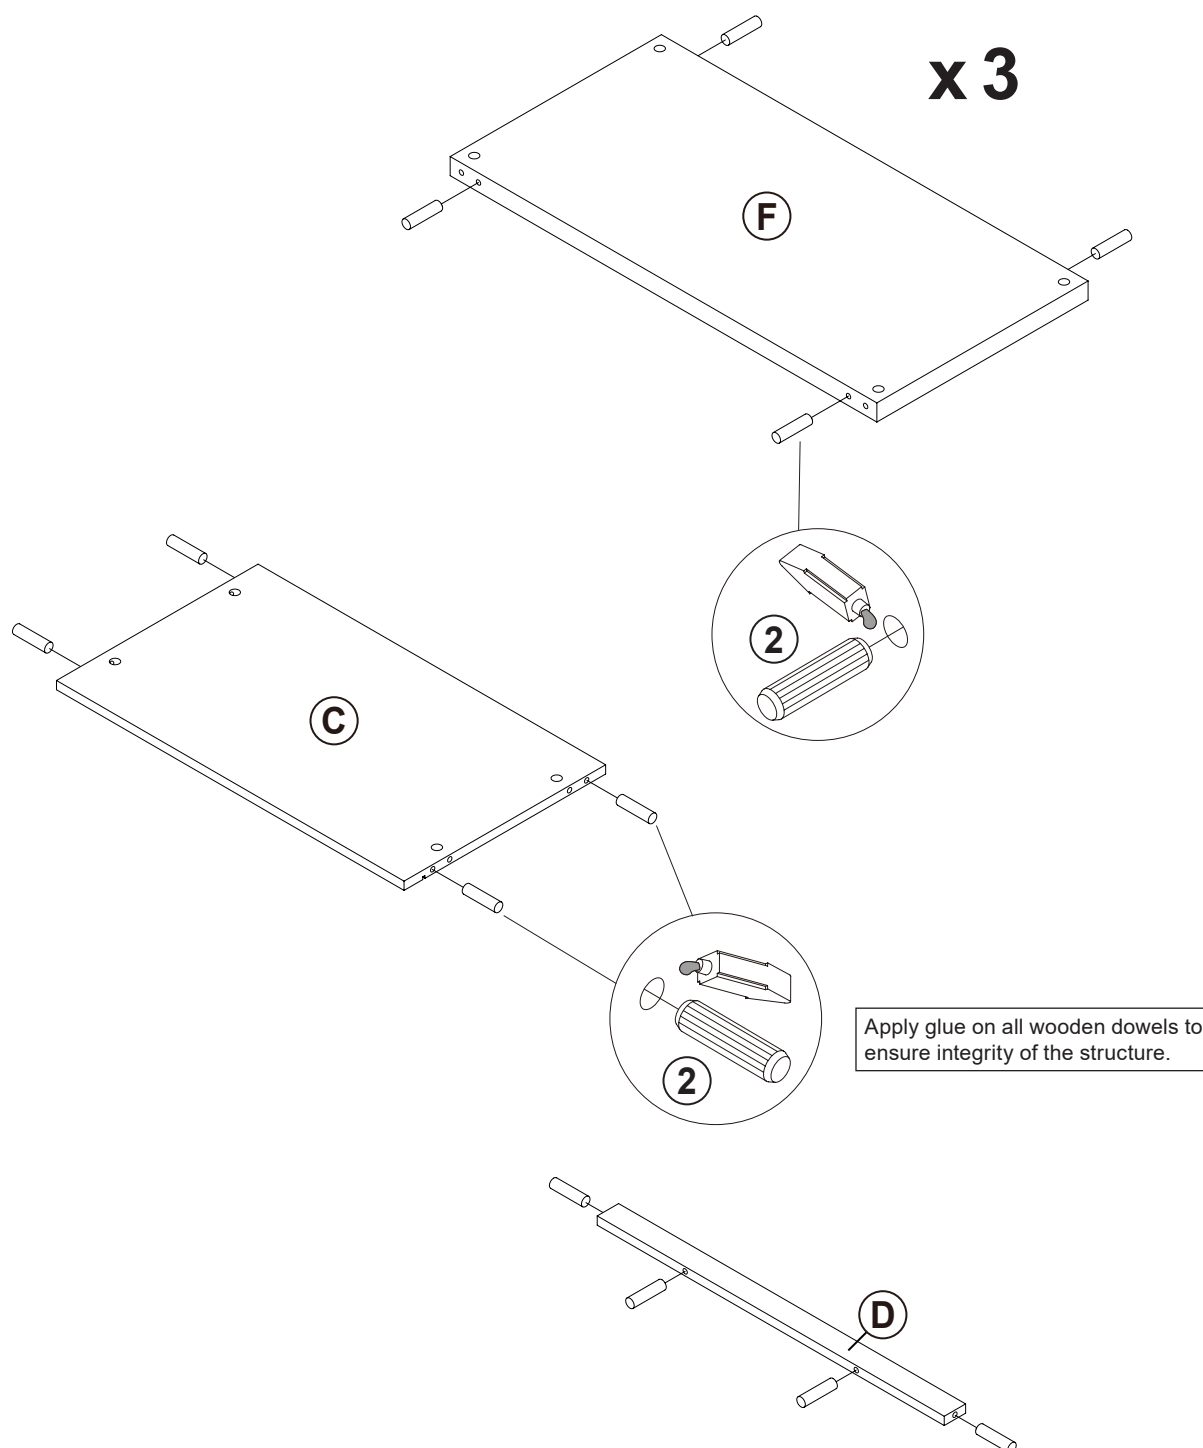



ITEM: **708224**

STEP 3

  COASTER
FINE FURNITURE

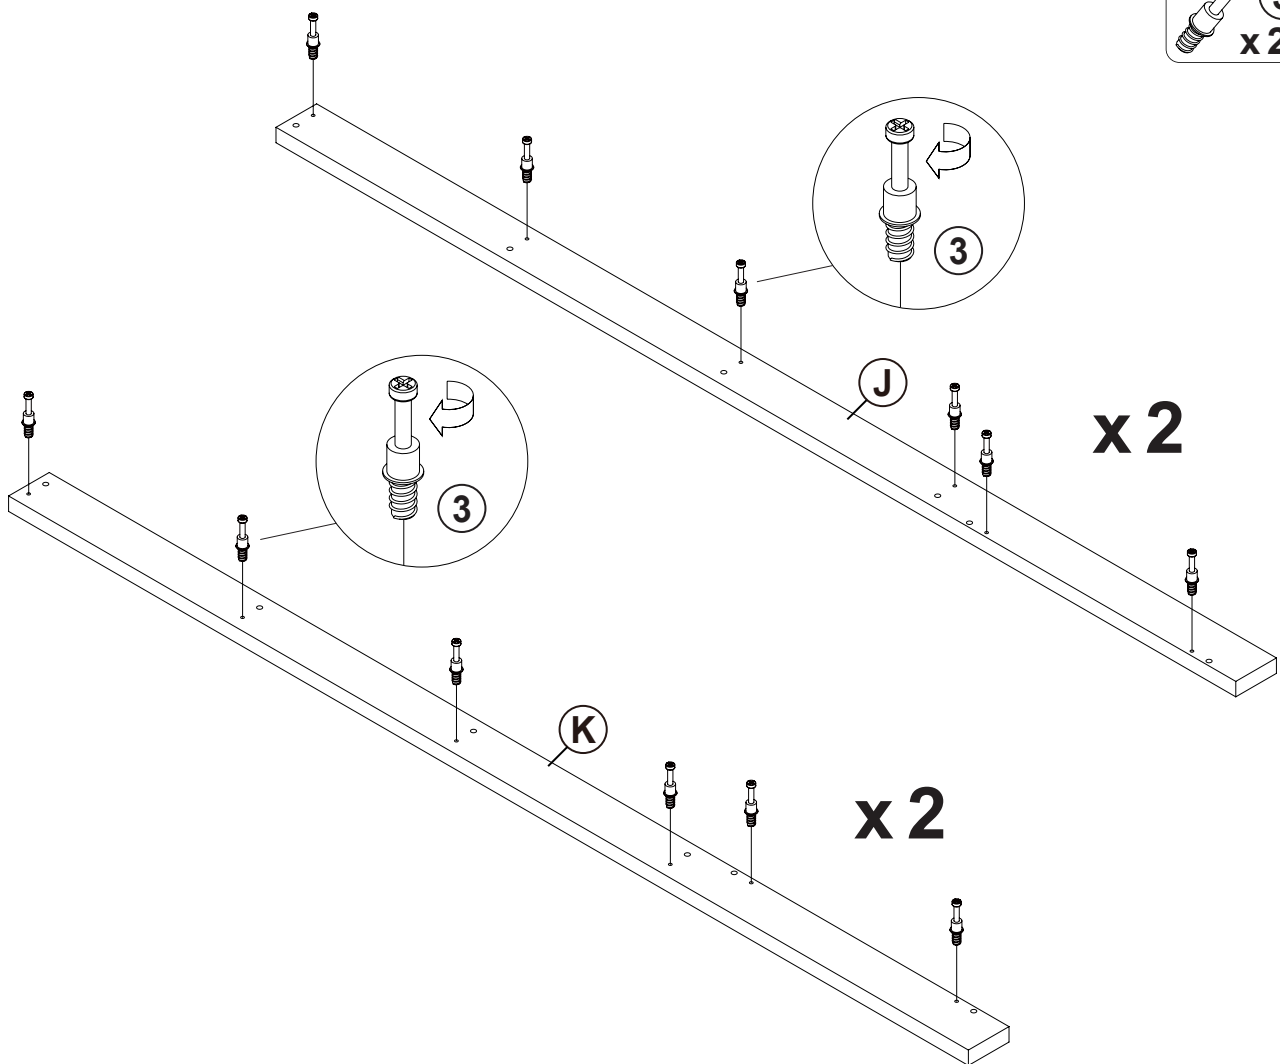

  
STEP 4

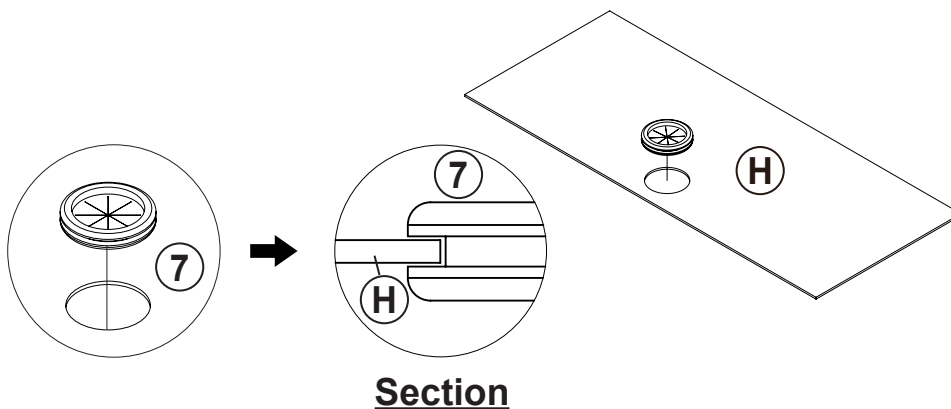



ITEM: **708224**

STEP 5

 COASTER
FINE FURNITURE


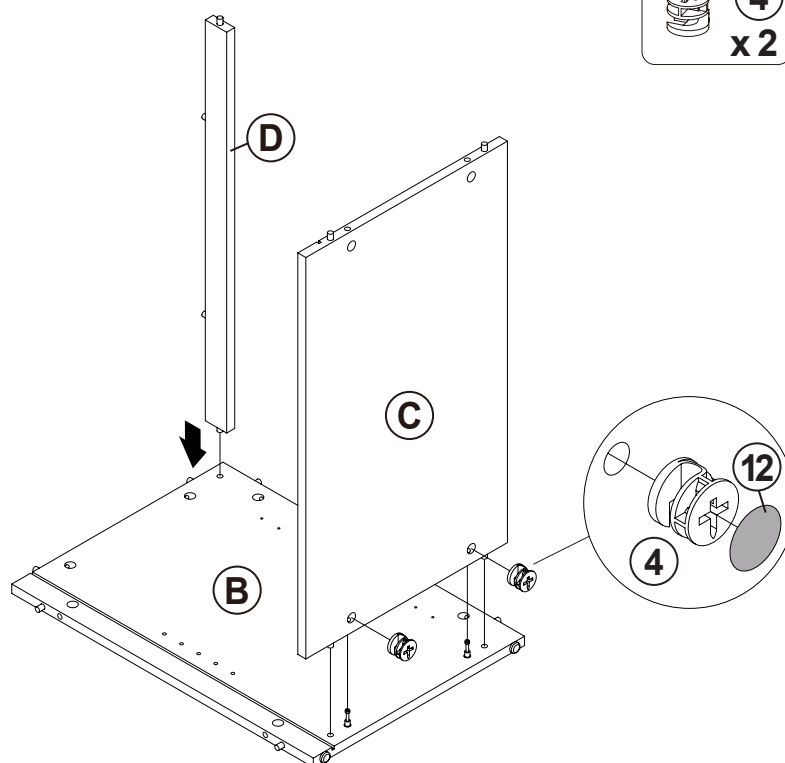


  STEP 6




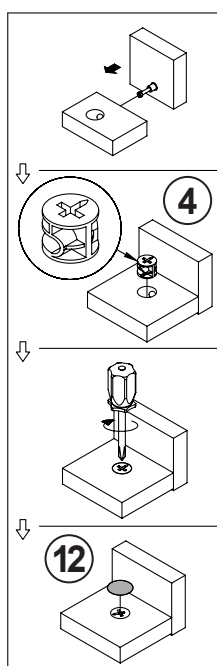
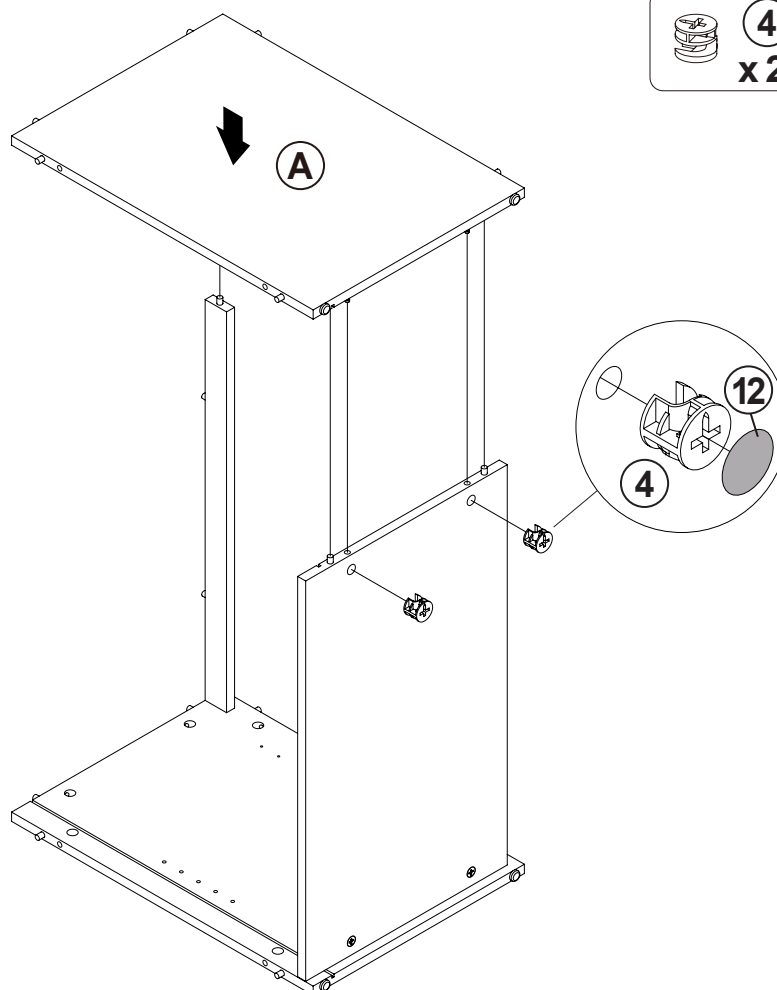


ITEM: **708224**

  STEP 7

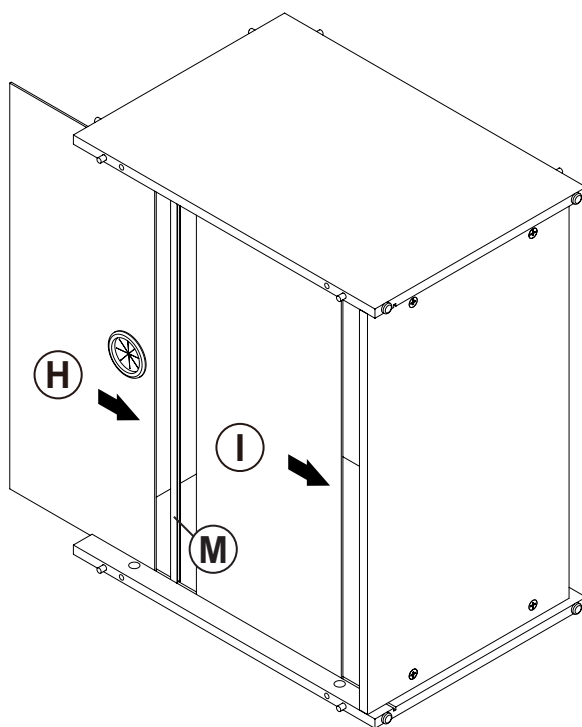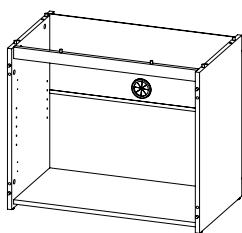

     
STEP 8

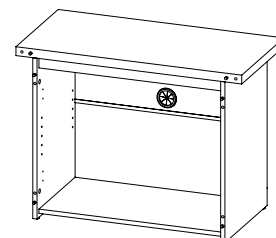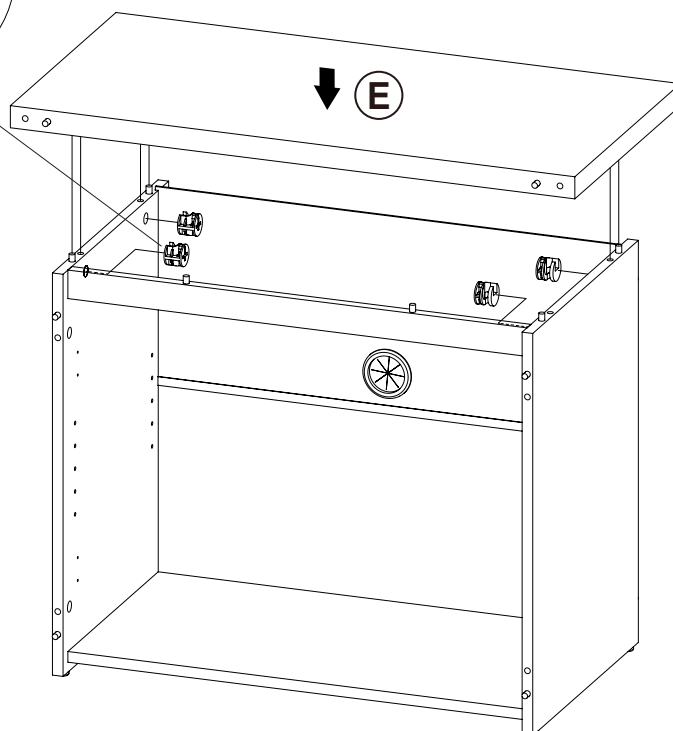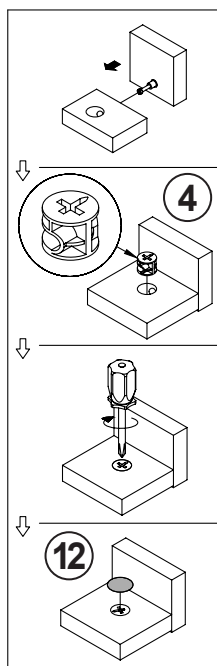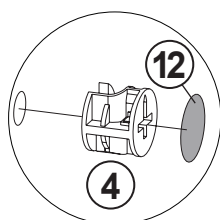



ITEM: **708224**

STEP 9

 COASTER
FINE FURNITURE

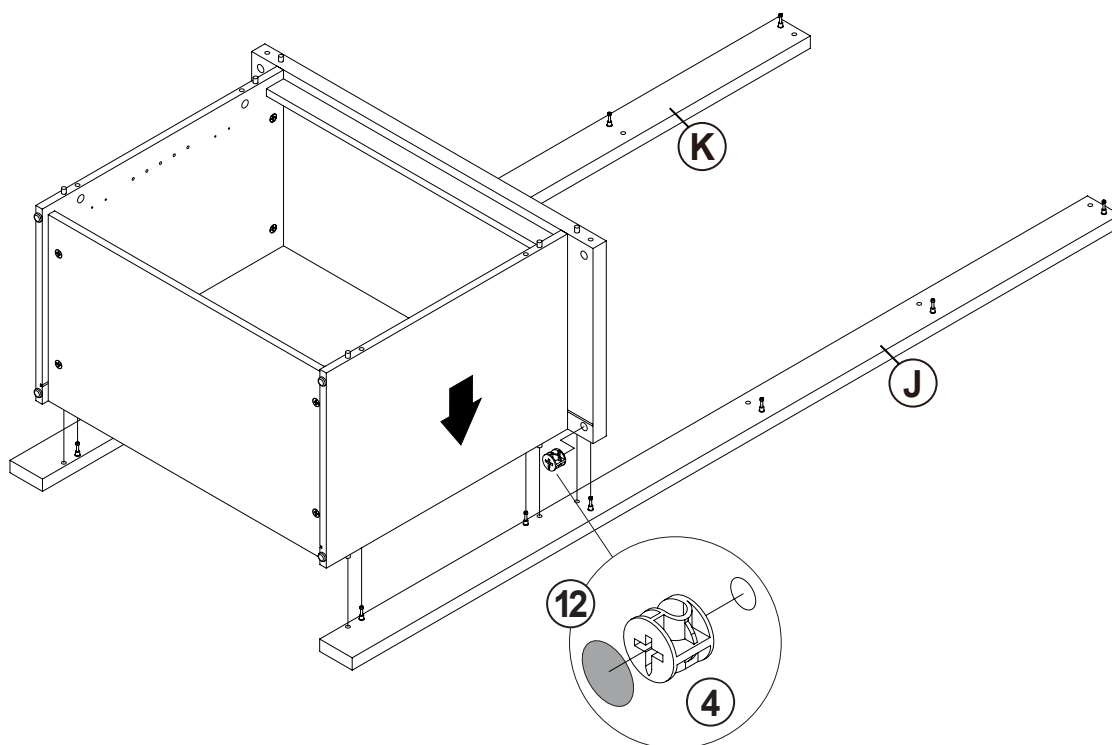



 
 
STEP 10

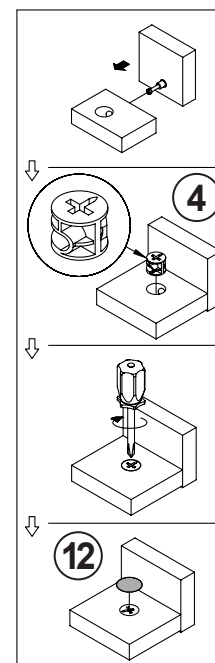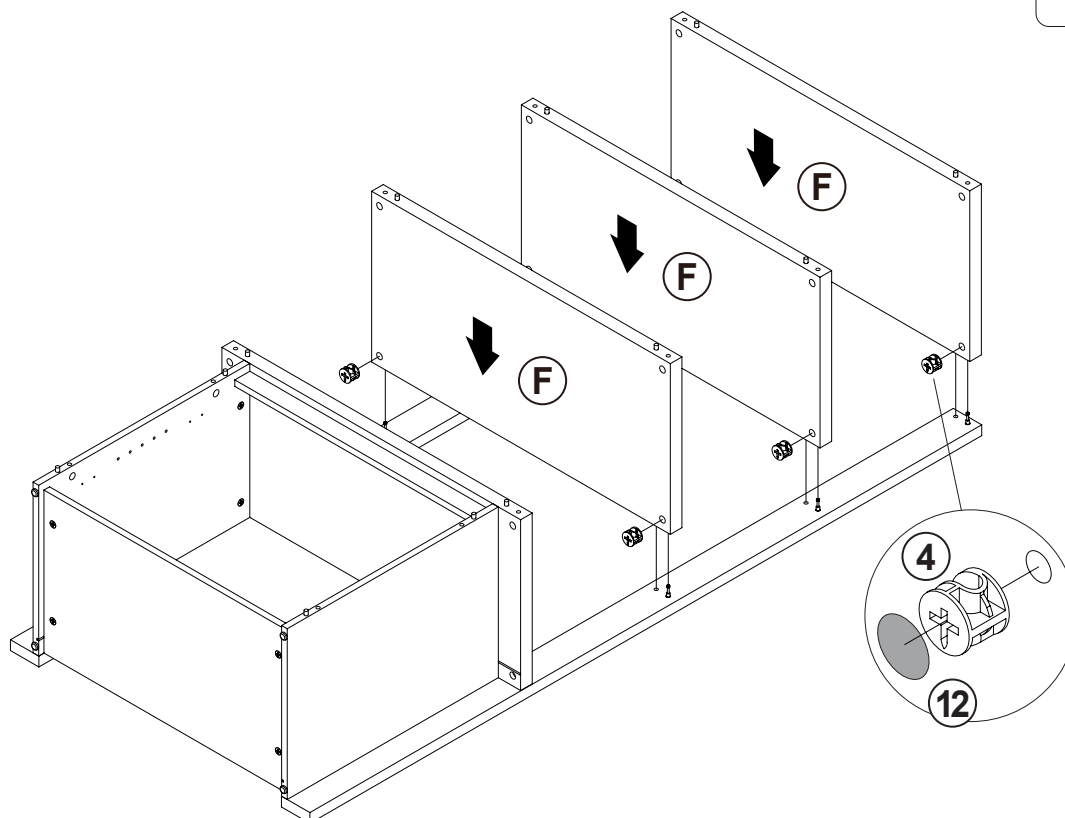





ITEM: **708224**

COASTER
FINE FURNITURE

    STEP 11

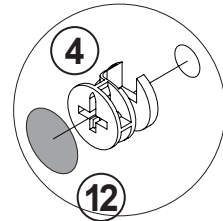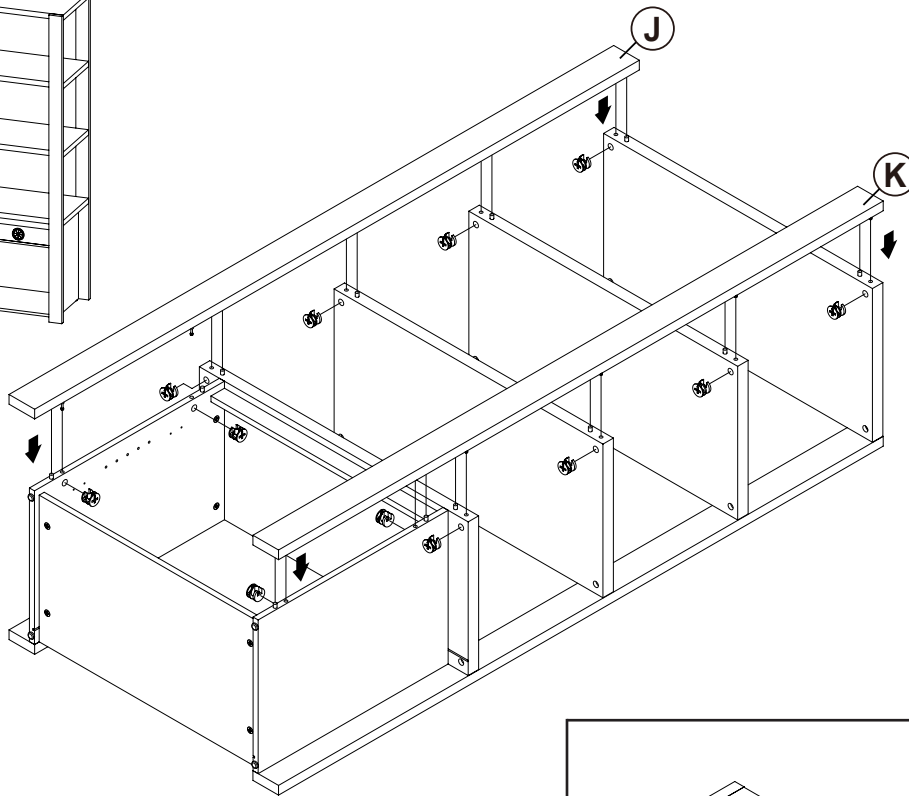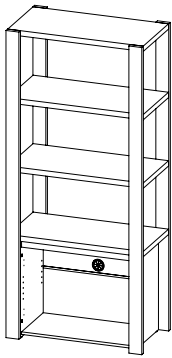

  
 
 
STEP 12

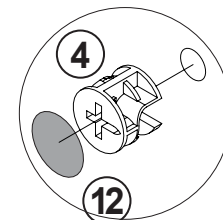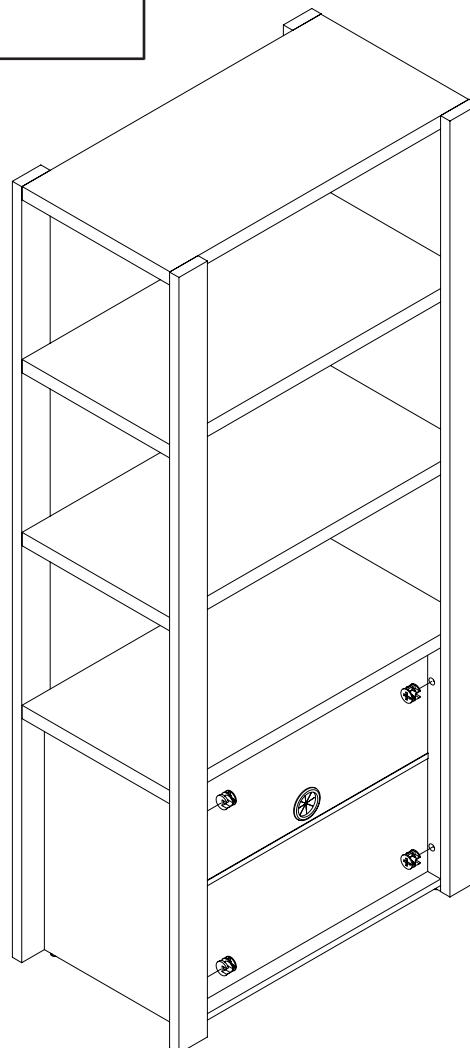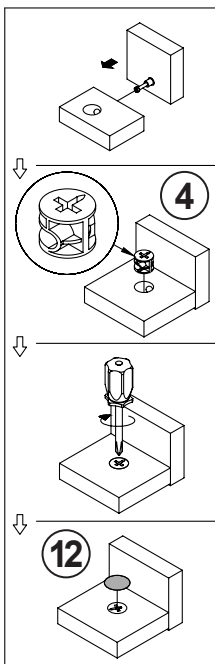


ITEM: **708224**

STEP 13

   COASTER
FINE FURNITURE

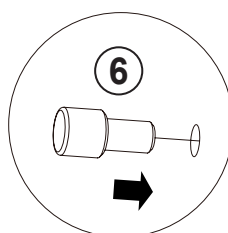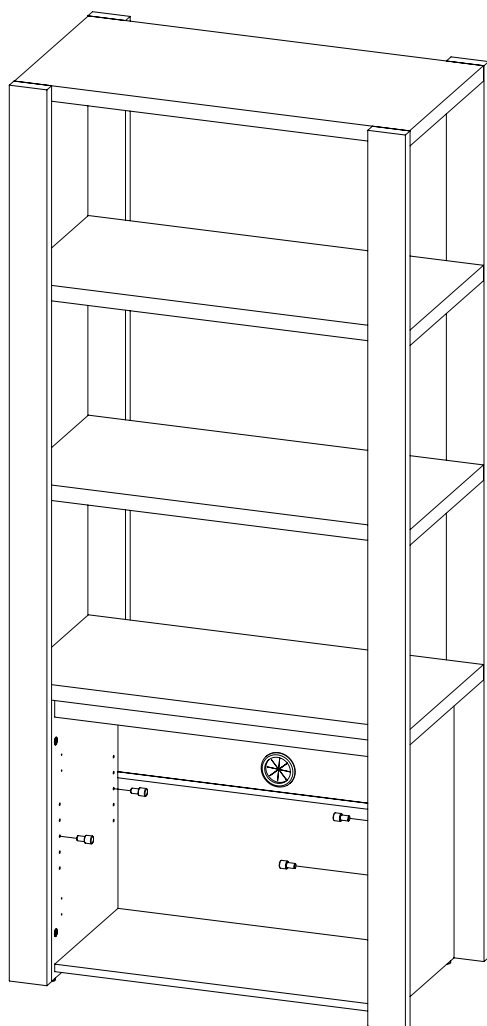


 
STEP 14

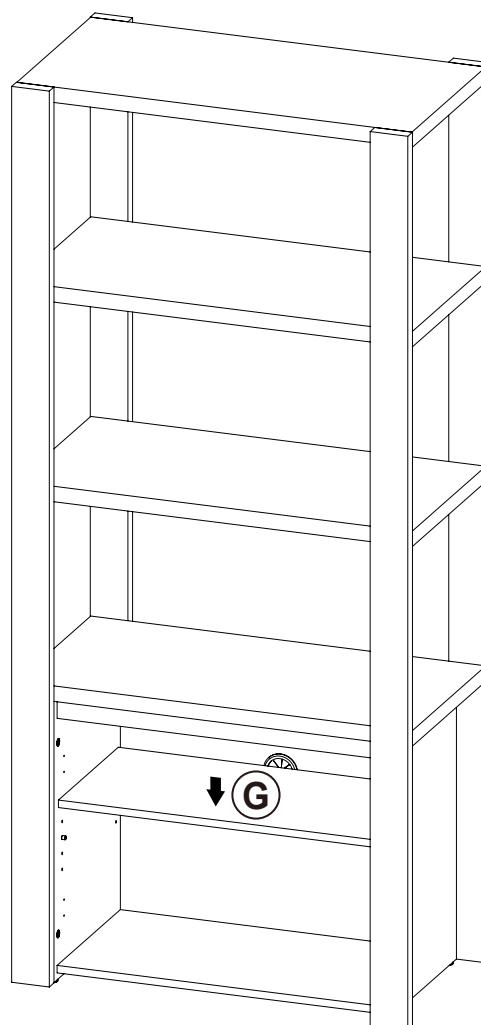


ITEM: **708224**

STEP 15

  
COASTER
FINE FURNITURE

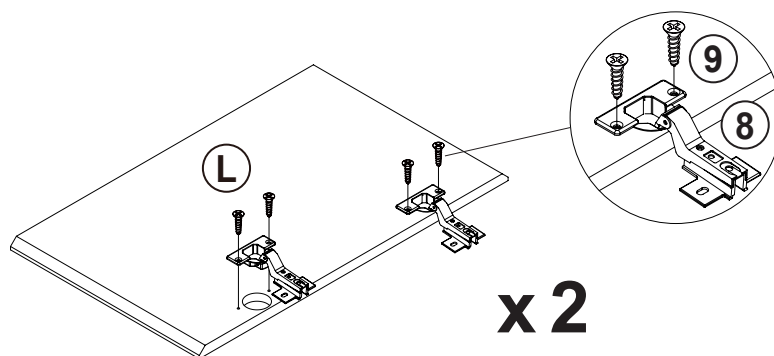

 
STEP 16

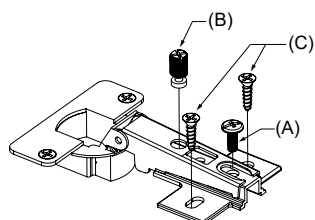



HORIZONTAL BY
SCREW A ADJUSTMENT

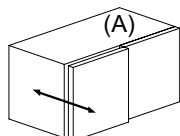 

LATERAL BY
SCREW B ADJUSTMENT

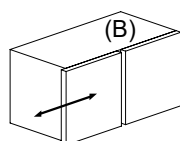 





VERTICAL BY
SCREW C ADJUSTMENT

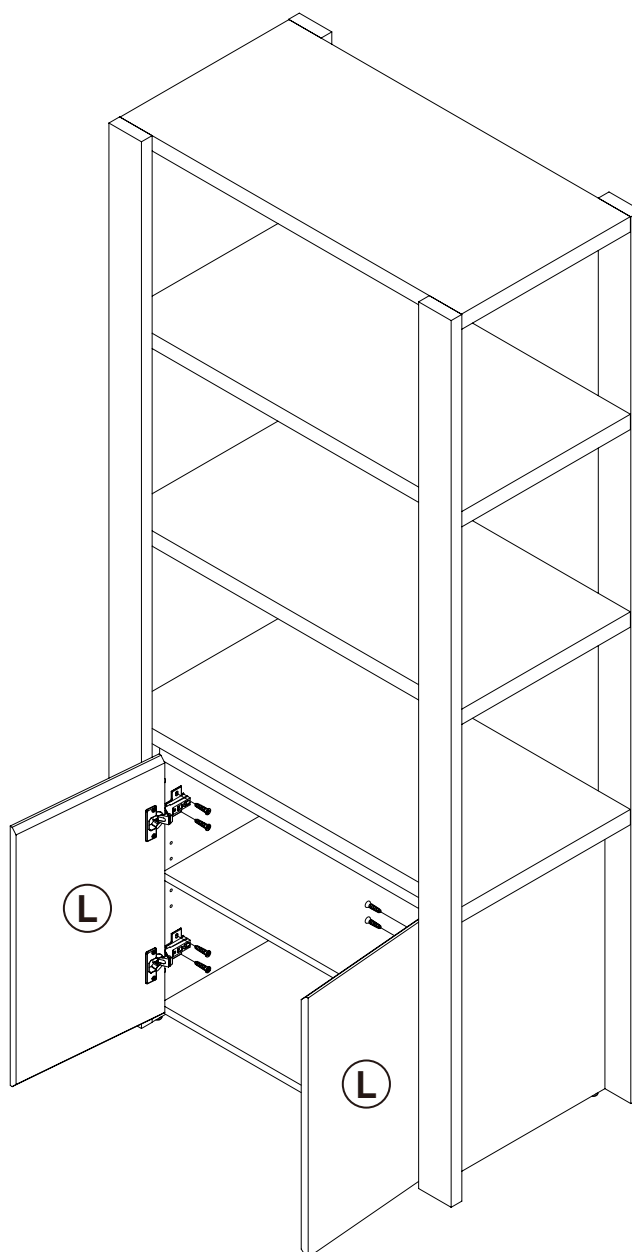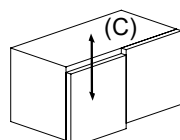  

ITEM: **708224**

STEP 17

  
 
 
COASTER
FINE FURNITURE

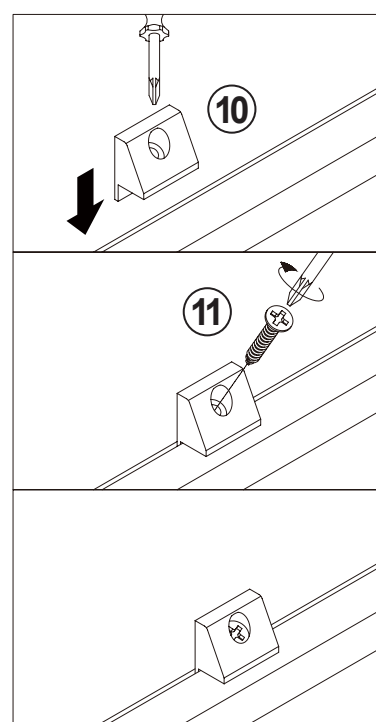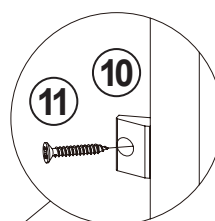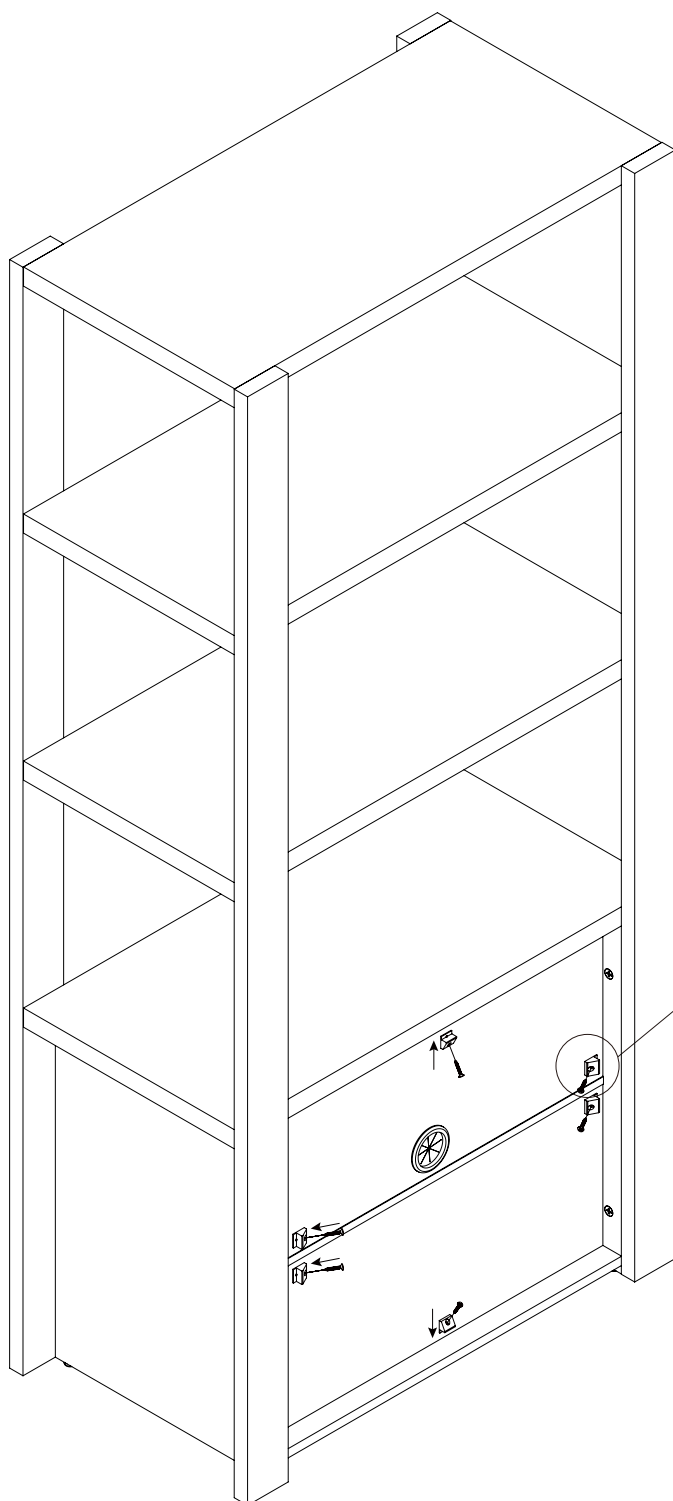


ITEM: **708224**

STEP 18

   COMPLETE

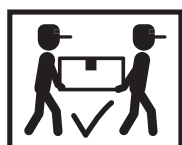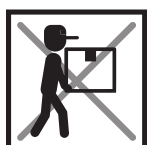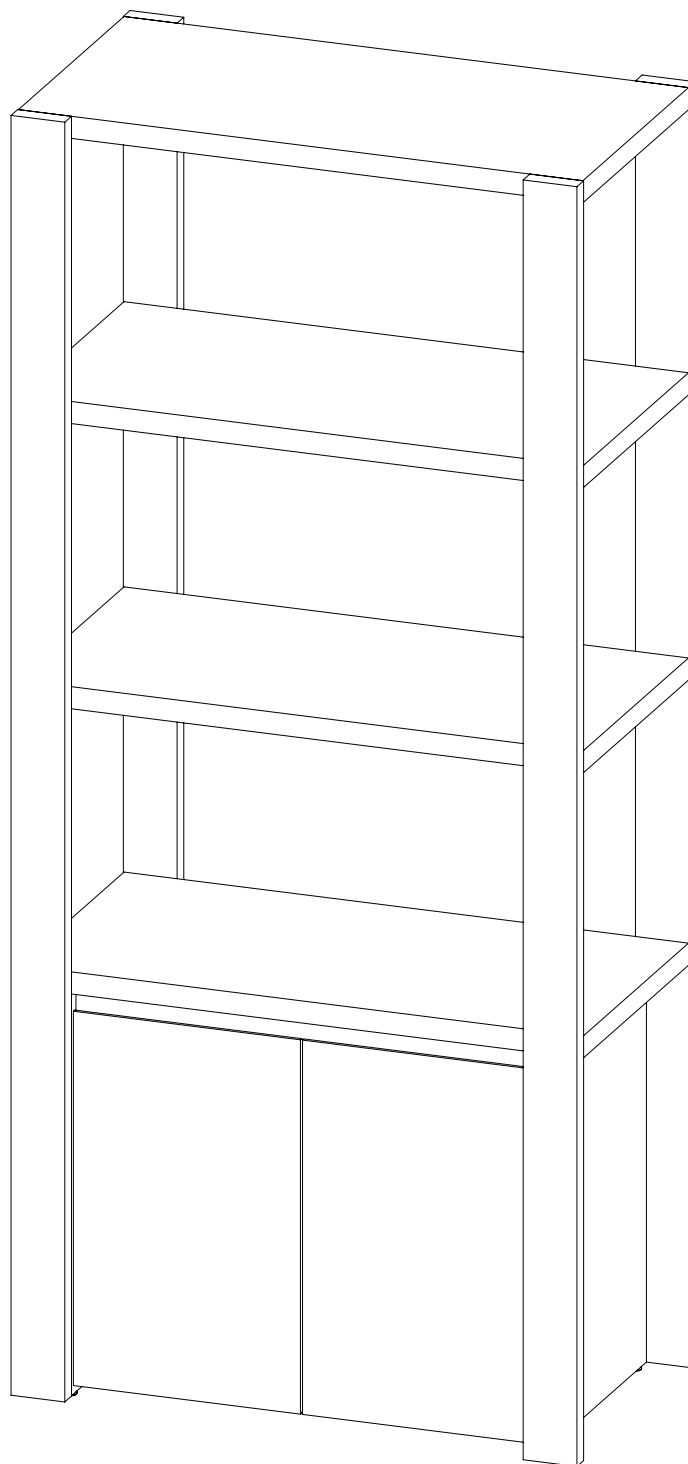

ITEM: 708224

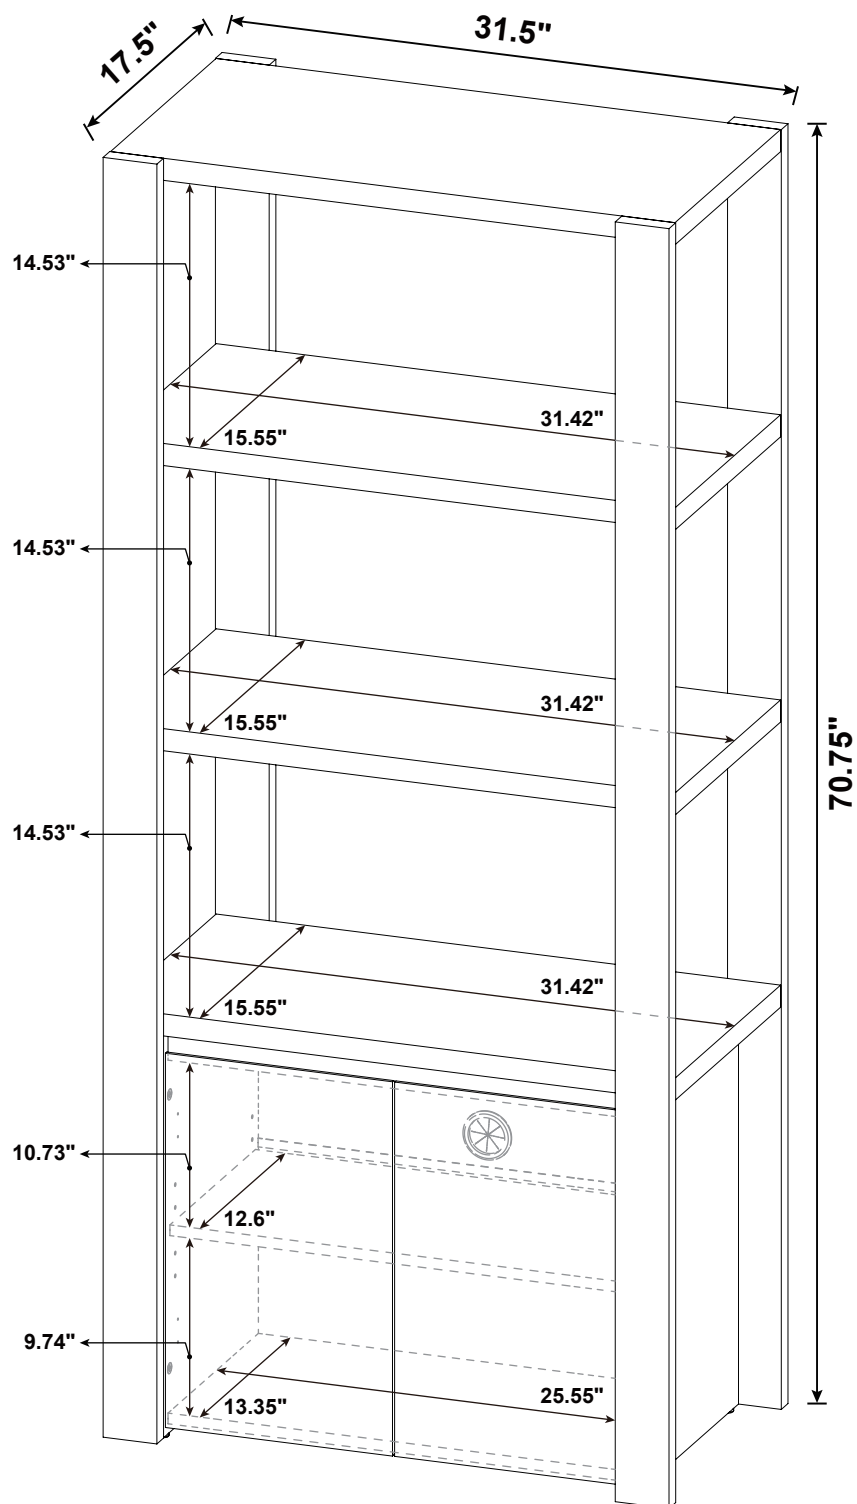 

Note : Dimension tolerance $\pm 5\%$

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

 
WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

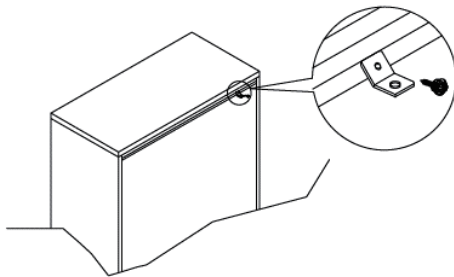

STEP 2

 Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

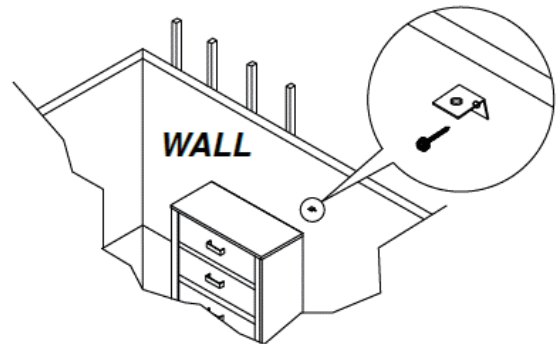

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

