




8019

P1



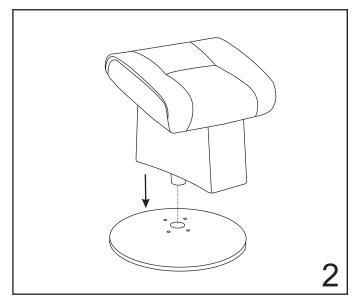


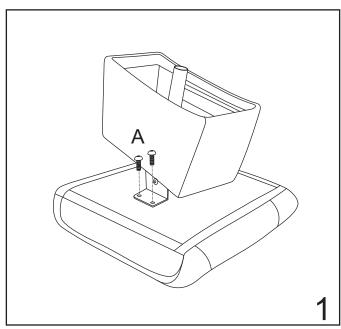

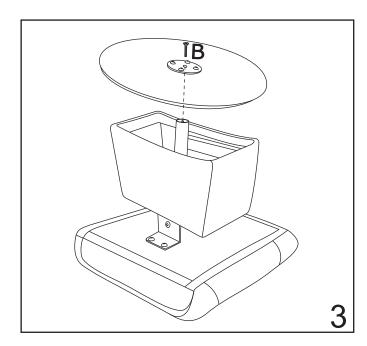


#### DURING ASSEMBLY CHECK AND TIGHTEN ALL BOLTS

Α	M6X20	4PCS	F		1PC
В	M6X45	1PC	G	M6X16	1PC
С	()	2PCS	Н	5-3	1PC
D	M8X35	2PCS	I	4mm.5mm.6mm	1SET
Ε	M6X20	6PCS			

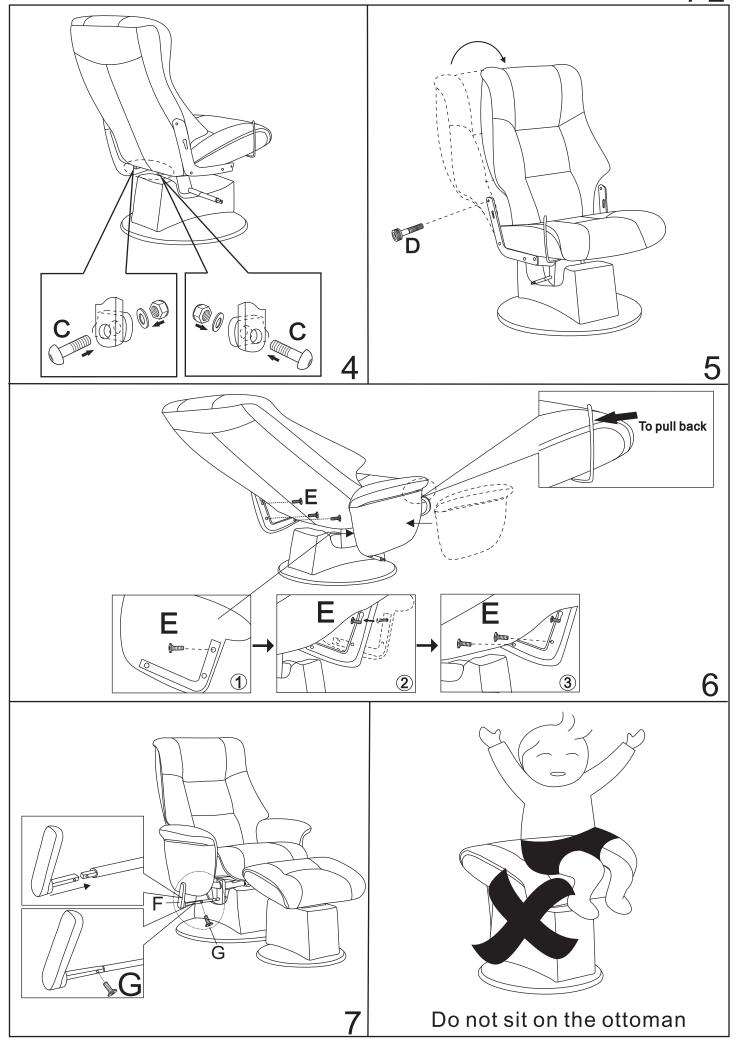

# **1** Rocking / Gliding Function

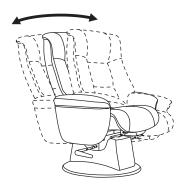

Back and forward motion.
Stop motion and lock before standing.

### 2 Locking function



To lock chair into still position and prevent gliding motion, rotate side handle.
Check motion has stopped before standing.

## ③ Reclining function



Pull interior lever inside arm rest, to recline. Back cushion will hold position upon release of lever.

### **4** Swivel Function



Chair can swivel 360°.

Caution: Always lock glide function and bring chair to full stop before standing. Do not attempt to exit chair while in motion.