

 



WINNERS ONLY[®] Assembly Instructions






AP300C 50" COFFEE TABLE

Thank you for purchasing this quality product. Be sure to check all packaging material carefully for small parts that may have come loose inside the carton during shipment.

 COMPONENT LIST:

PART NO	FIGURE	DESCRIPTION	QTY
AP300C-01		Hardware Bag	1 pce
AP300C-13		Table Top	1 pce
AP300C-07		Legs	4 pcs
AP300C-22		Fixed Shelf	1 pce

HARDWARE LIST:

PART NO	FIGURE	DESCRIPTION	QTY
1		Hex Bolt	8 pcs
2		Pan Head Screw	4 pcs
3		Lock Washer	8 pcs
4		Flat Washer	8 pcs
5		Wrench	1 pce


This product will take 15-20 minutes to assemble.

Reminders

1. Use only the hardware supplied.
2. Once the product is assembled, level and tighten all the bolts.
3. Do not over-tighten bolts.
4. This item may require periodic tightening

NOTE:

1. Two or more people are needed for assembly
2. Please keep all hardware parts out of the reach of children.

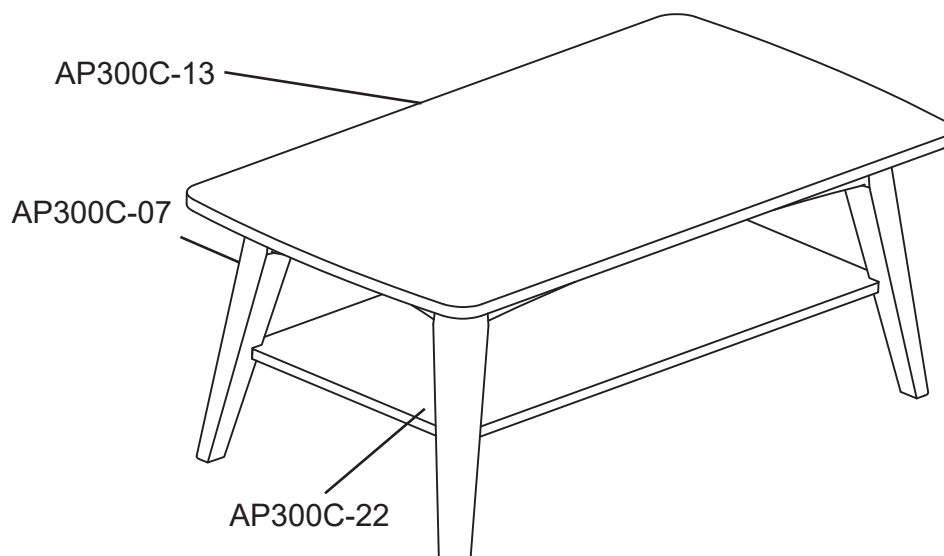


WINNERS ONLY[®] Assembly Instructions

AP300C 50" COFFEE TABLE

ASSEMBLY :


STEP 1

- 1.1-Turn the Table Top upside down on a protective surface such as carpet or other soft material.
- 1.2-Insert the three legs into the corner of the apron by insert the **Flat Washer**, **Lock Washer** and **Hex Bolt** into pre-drilled holes on the corner block and tighten it using **Wrench**.
- 1.3-Insert the Fixed Shelf into the leg assembly, then install the fourth leg using **Flat Washer**, **Lock Washer** and **Hex Bolt** into pre-drilled holes on the corner block, tighten using **Wrench**.
- 1.4-Insert the **Pan Head Screw** into pre-drilled holes on the corner block of Fixed Shelf and tighten using the **Screw driver** (**Not provided**).

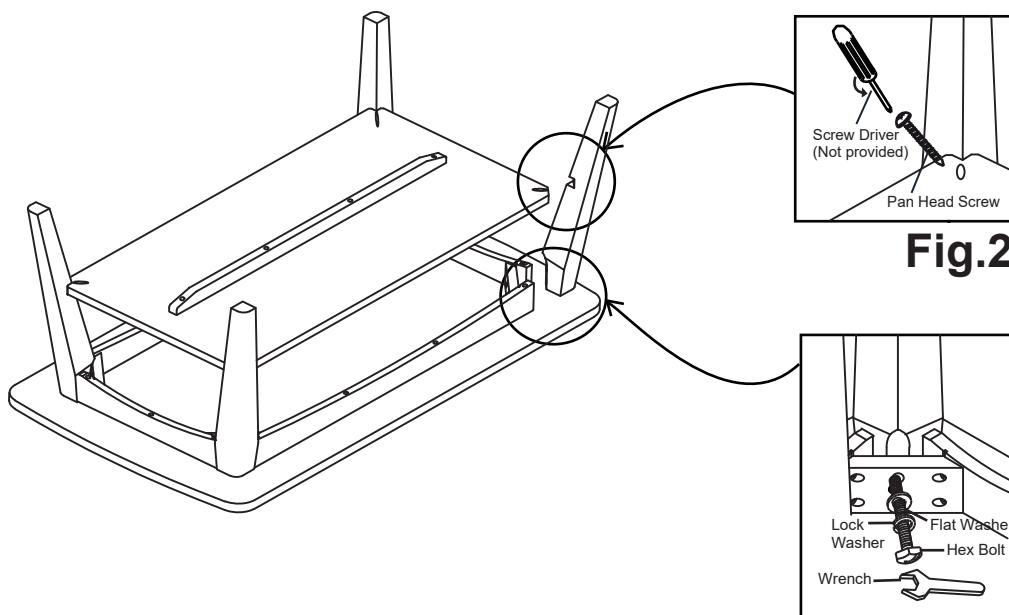

STEP 2

- 2.1- Turn table to upright position.
- 2.2- Once end table is fully balance fully tighten all bolts.

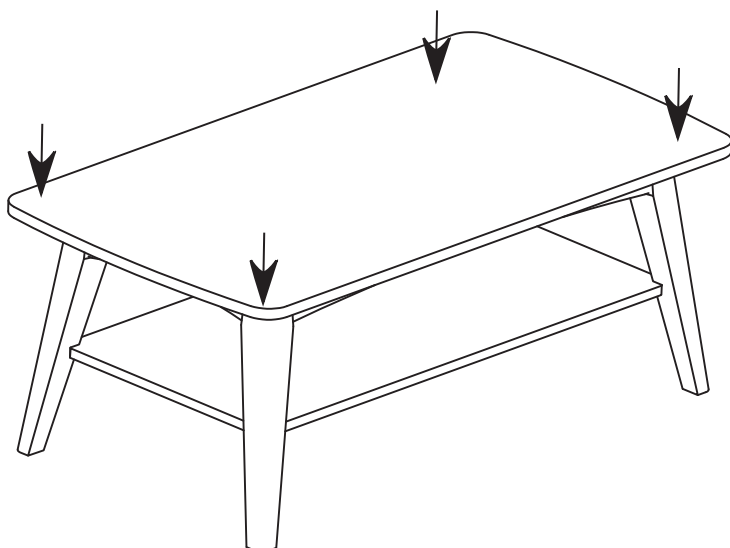

Assembly is now Completed.

CARE INSTRUCTION

- ~ Be sure to use the same type of polish consistently. Your furniture will appear cloudy or streaky if oil based or wax based polishes are interchanged.
- ~ Spray your furniture surface evenly. Wipe in a circular motion with a soft clean cloth.