

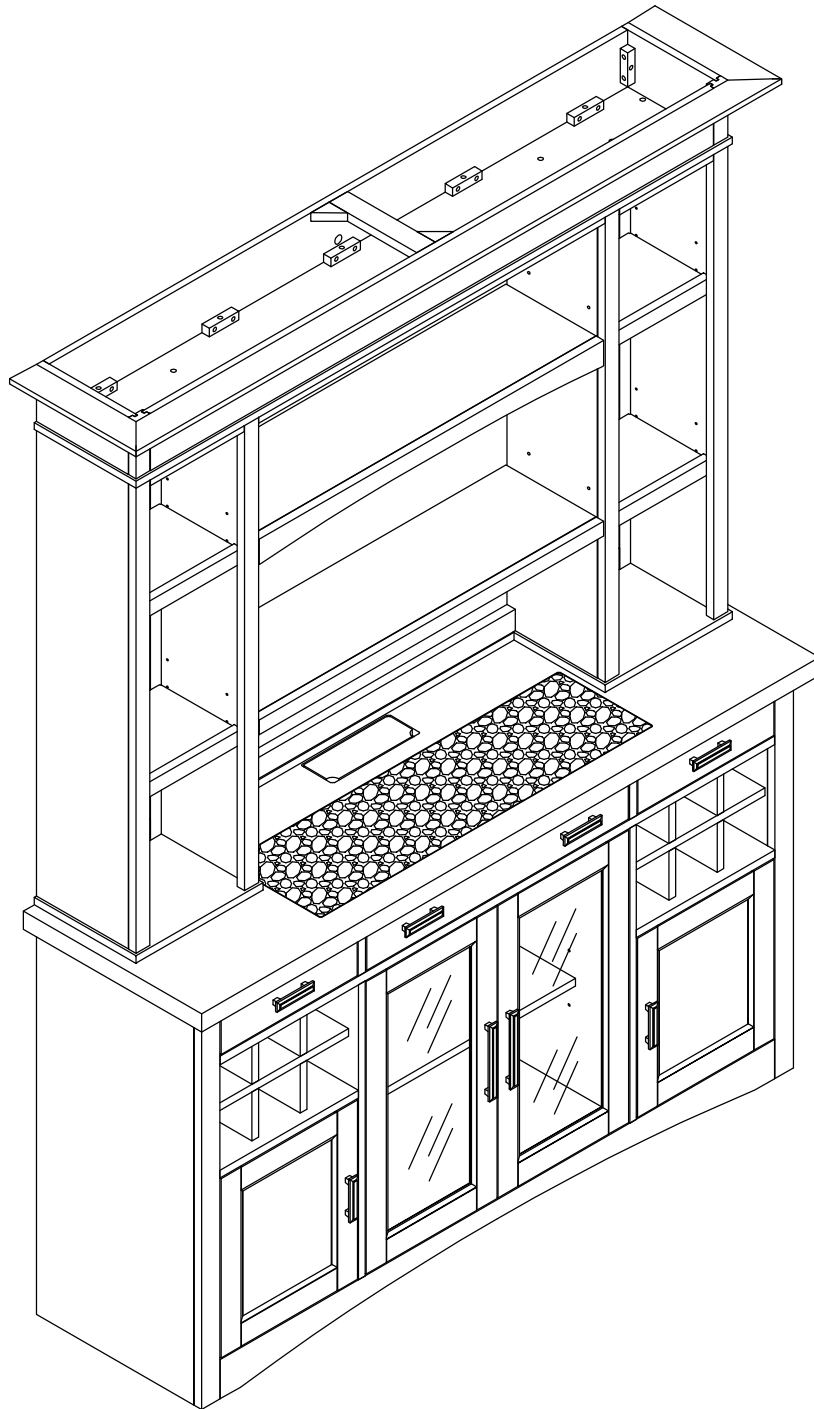 


Parker House  
FURNITURE

## Assembly Instruction

Item No: DAME#69H

Description : DISPLAY HUTCH 69 IN











 

 



**Parker House**  
FURNITURE










# Assembly Instruction

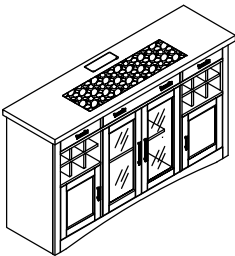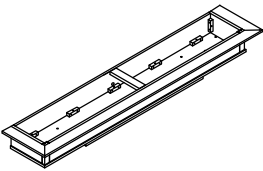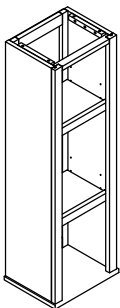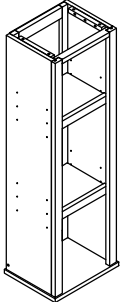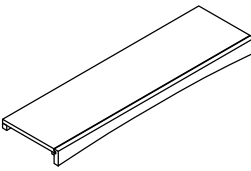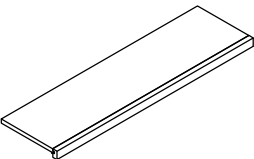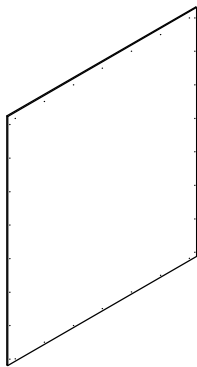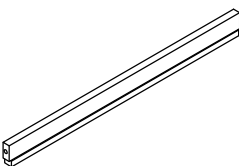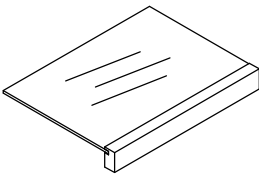         Item No: DAME#69H  
Description : DISPLAY HUTCH 69 IN

## HARDWARE LIST

No	Description	Sketch	Q'TY	F	Shelf Holder		16PCS
A	Allen Wrench 4mm		1PC	G	Wrench Ø5/16		1PC
B	Bolt Ø5/16 x 38mm		8PCS	H	Hex Nut Ø5/16 x 12mm		2PCS
C	Lock Washer Ø5/16 x 12mm		8PCS	I	Halfmoon Washer		2PCS
D	Flat Washer Ø5/16 x 19mm		8PCS	J	Bolt Ø5/16 x 83mm		2PCS
E	Shelf Pin		8PCS	K	Screw #3.5 x 15mm		42PCS
				L	Anti-tip hardware		1 Set

## PARTS LIST

SERVER (1PC)	HUTCH TOP (1PC)	LEFT PIER (1PC)	RIGHT PIER (1PC)	UPPER SHELF (1PC)
① 	② 	③ 	④ 	⑤ 
BOTTOM SHELF (1PC)	BACK PANEL (1PC)	STRETCHER(1PC)	GLASS (4PCS)	
⑥ 	⑦ 	⑧ 	⑨ 	




Parker House  
FURNITURE


## Assembly Instruction

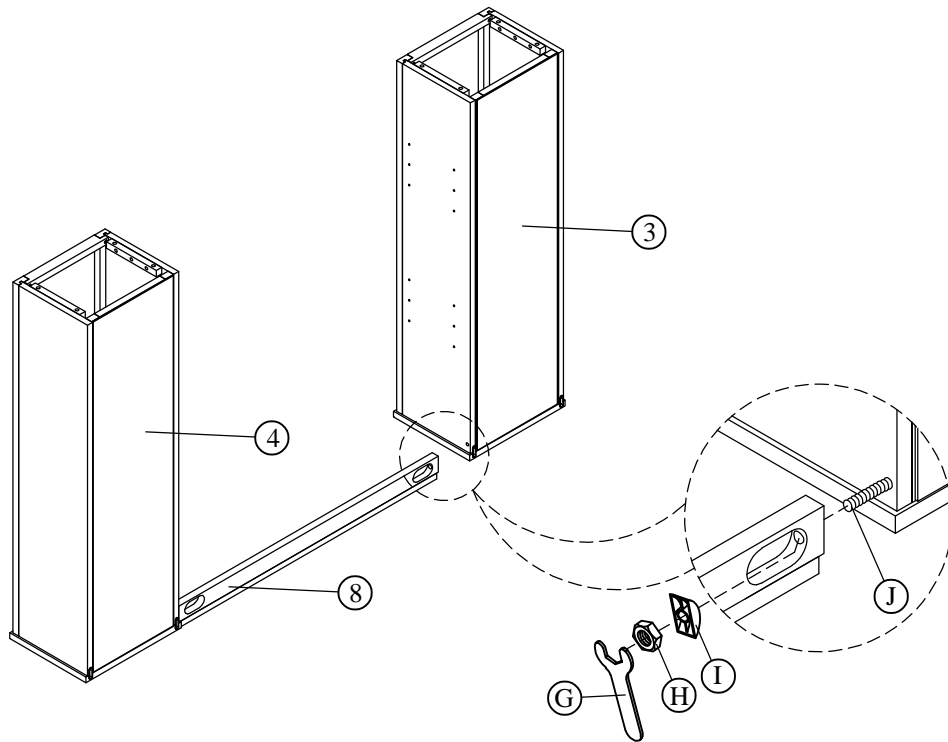 Item No: DAME#69H  
Description : DISPLAY HUTCH 69 IN

### STEP 1



### STEP 2

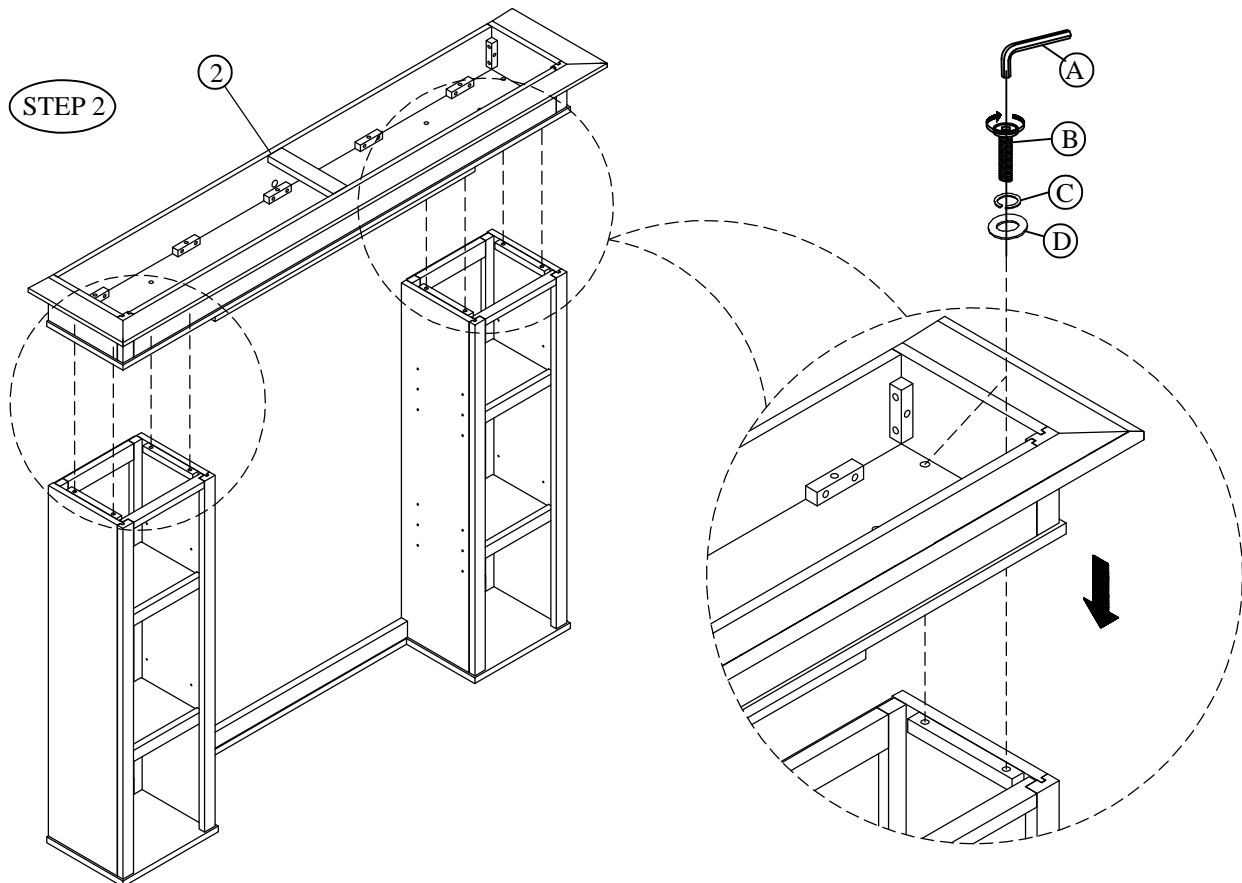 

\* Do not tighten bolts




Parker House  
FURNITURE

## Assembly Instruction

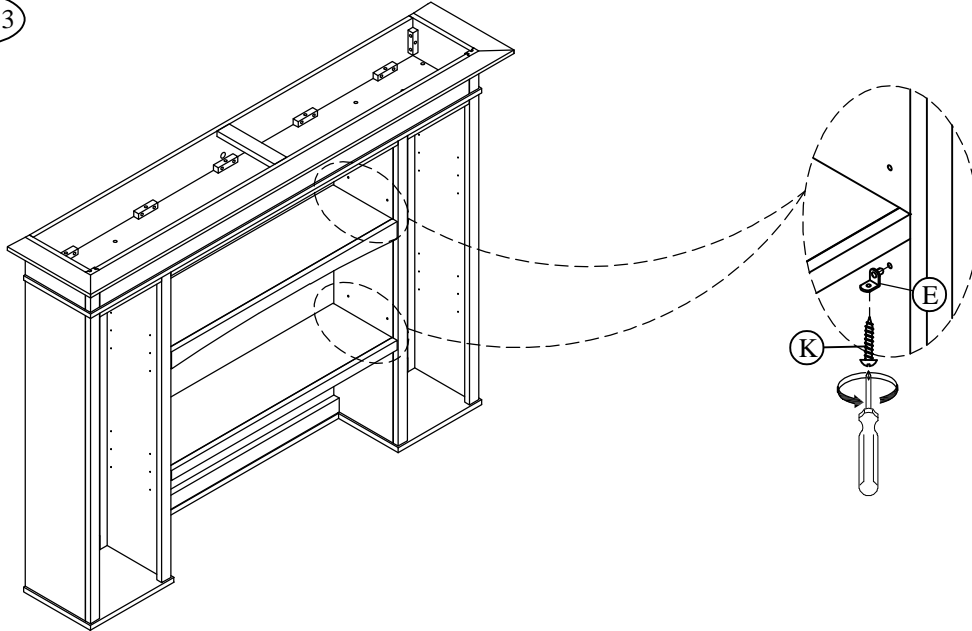 
Item No: DAME#69H

Description : DISPLAY HUTCH 69 IN

STEP 3



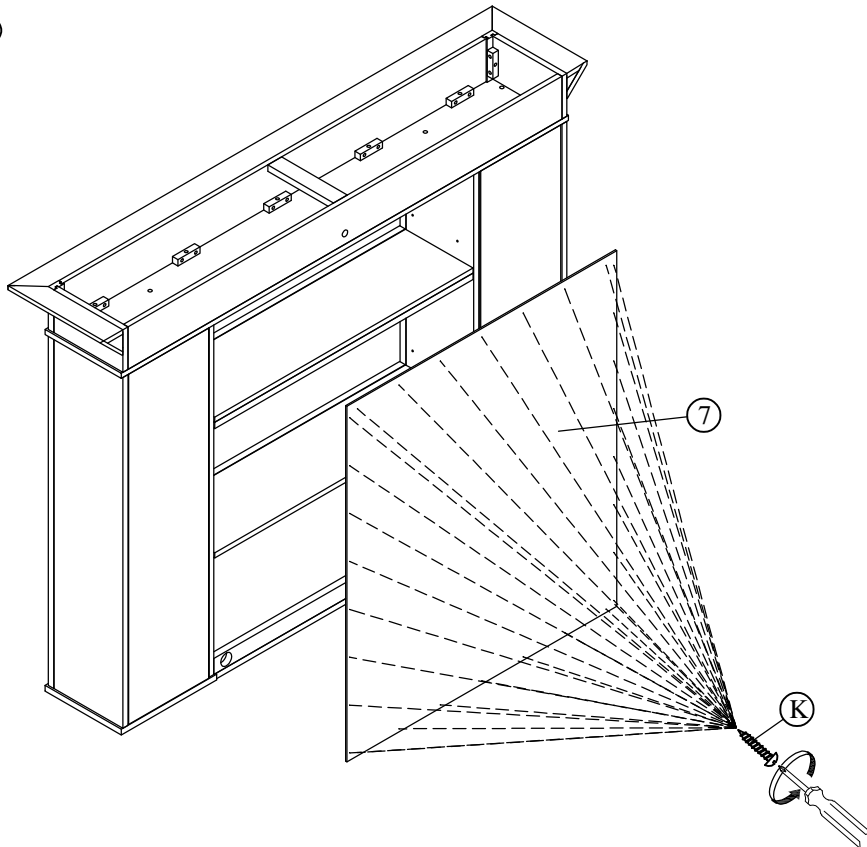 STEP 4






Parker House  
FURNITURE

## Assembly Instruction

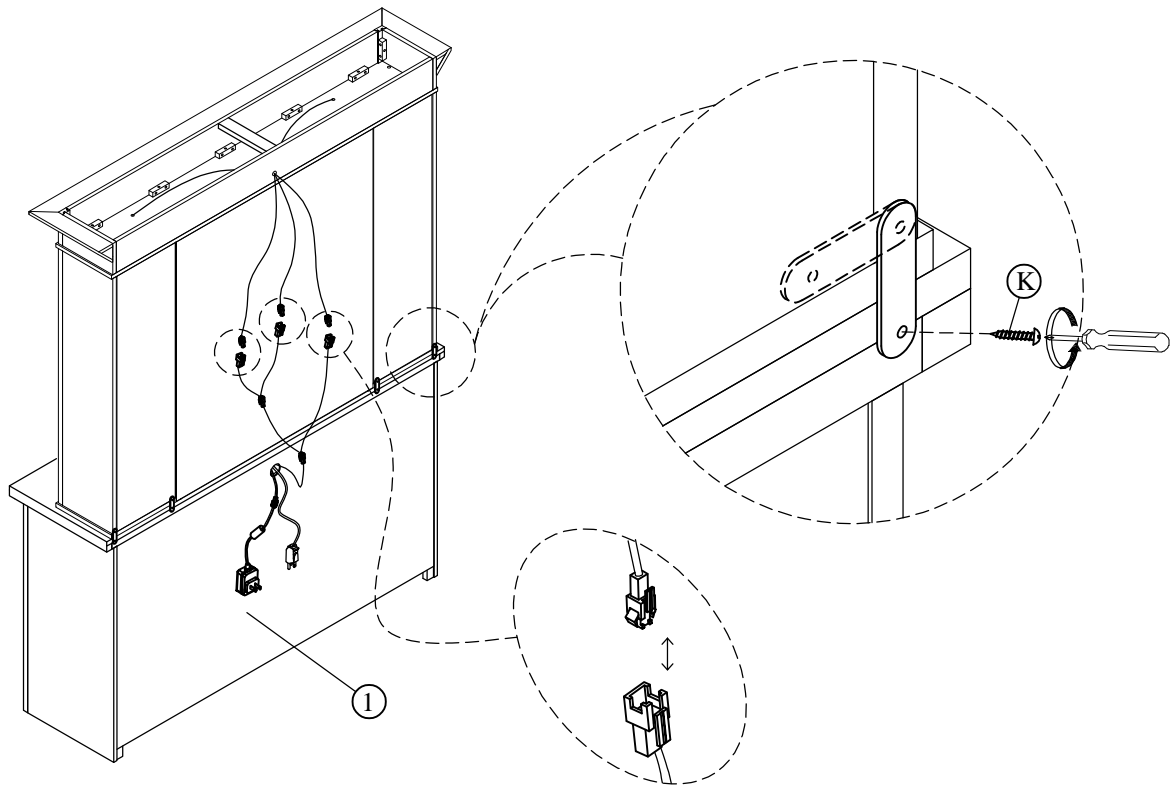 
Item No: DAME#69H

Description : DISPLAY HUTCH 69 IN

### STEP 5



### STEP 4

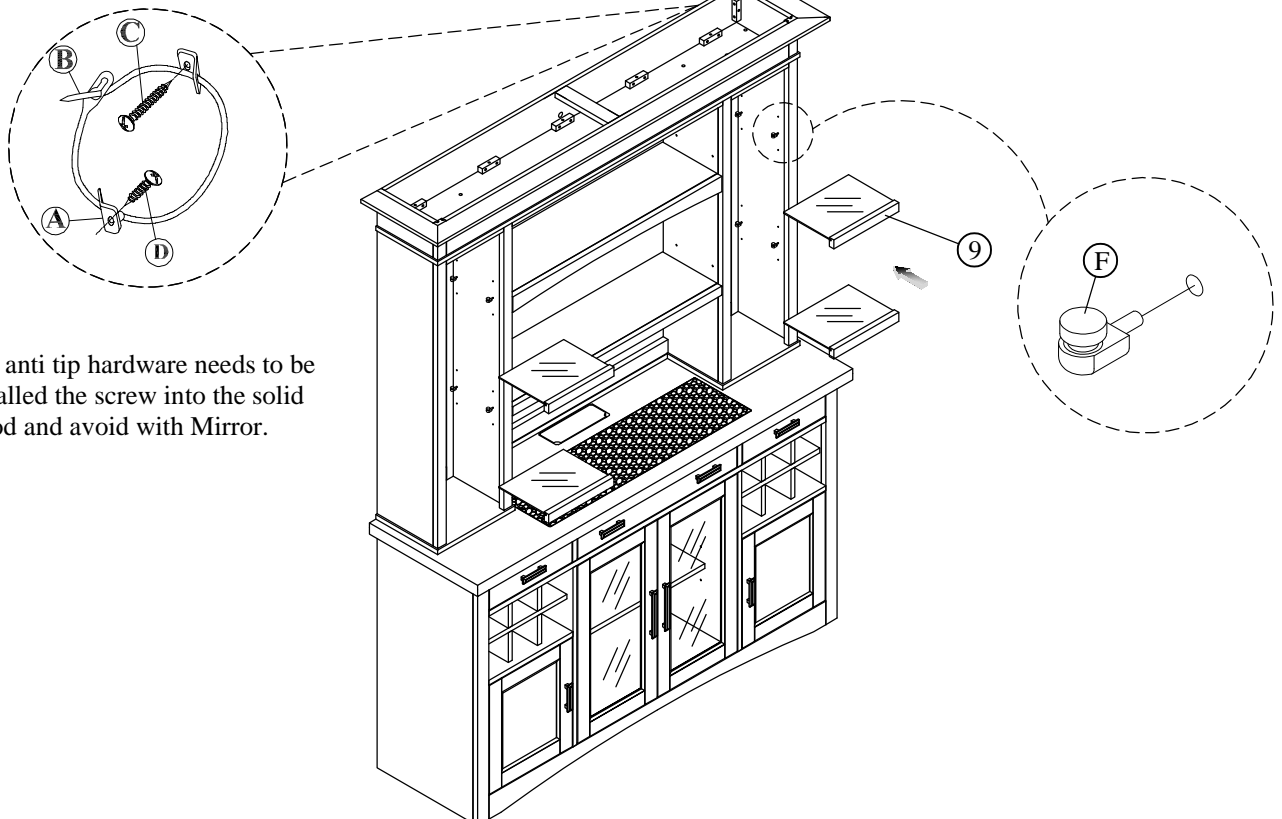 


The anti tip hardware needs to be installed the screw into the solid wood and avoid with Mirror.



Parker House  
FURNITURE

# Anti-Tip Hardware Installation Instructions

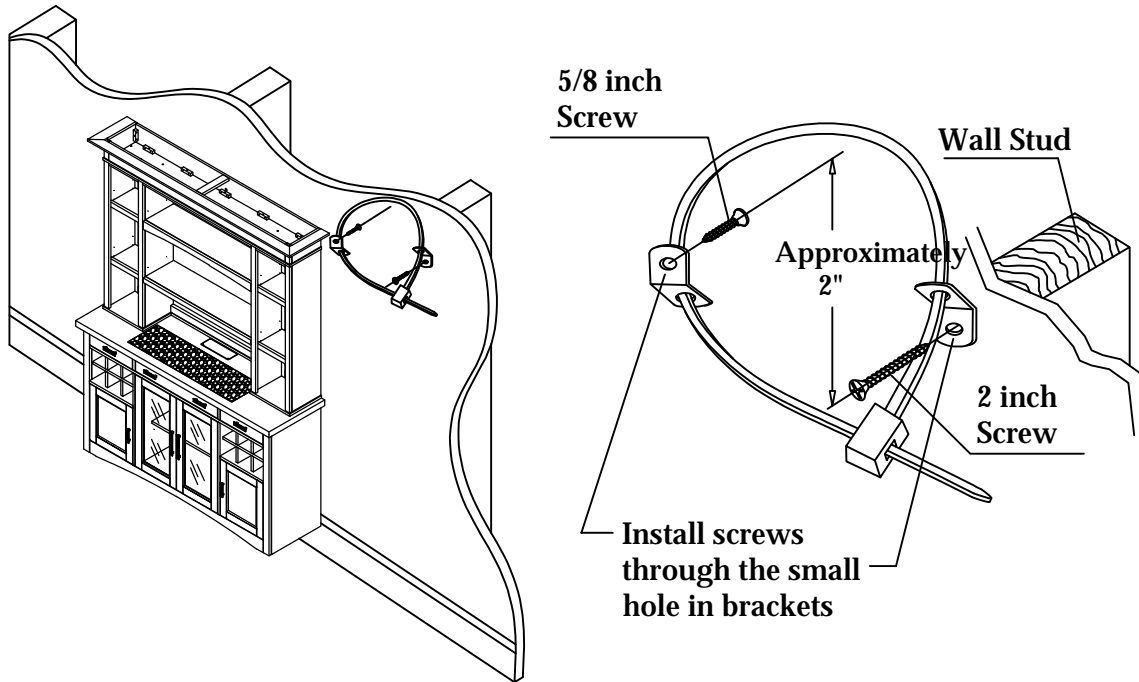 **Notice:** In homes where small children may be present, Parker House. recommends that steps be taken for certain furniture items to prevent or minimize the risk of tip-over. This furniture is equipped with Tip-over Restraint Hardware for use to minimize this risk, if used. Please follow below installation steps. Parker House. recommends that parents and guardians periodically visit the U.S. Consumer Product Safety Commission (CPSC) website at <http://www.cpsc.gov/> and stay up to date on all issues related to children's product safety.



1. Temporarily locate the furniture to near it's final location in the room next to a wall. Locate a wall stud behind your furniture and also mark the stud's location on the back of your furniture.
2. Firmly attach one bracket to the stud approximately 2" below the top of the furniture with the 2 inch long Wood Screws provided. It may be necessary to drill 3/32 dia. pilot holes for the screws.
3. Firmly attach the other bracket onto a solid, structural part on the back of the furniture using the 5/8 inch long Wood Screws. It may also be necessary to pilot bore for these screws.
4. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug but do not over tighten.

**Caution:** Parker House. assumes no liability for improper installation or excessive loads placed on screws, brackets or straps. Failure to detach this restraint before moving furniture may result in personal injury and property damage.

**Warning:** This tip-over restraint is not to be a substitute for proper adult supervision. Do not allow children to climb on furniture. Items left on top of the TV and furniture, such as toys, remote controls and treats might tempt young children to climb. Push the TV as far back as possible from the front of its stand. Place electrical cords out of a child's reach, and teach children not to play with the cords.