

## SIMPLE MANUAL

# Portable Loudspeaker

Please read this manual carefully before operating your set and retain it for future reference.  
To view the instructions of advanced features, visit <http://www.lg.com> and then download  
Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL  
FJ3



[www.lg.com](http://www.lg.com)

Copyright © 2017 LG Electronics. All Rights Reserved

**WARNING:** This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. ***Wash hands after handling.***

#### **FCC Compliance Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference and
- (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**FCC RF Radiation Exposure Statement :** This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with minimum distance 20 cm (7.8 inches) between the antenna and your body. Users must follow the specific operating instructions for satisfying RF exposure compliance.

#### **Responsible Party :**

 
LG Electronics USA, Inc.  
1000 Sylvan Ave  
Englewood Cliffs, NJ 07632  
Tel: 1-800-243-0000

#### **Precautions on handling a battery**

- This unit has a built-in valve regulated lead-acid rechargeable battery. (12 V/7.0 Ah)
- Do not use the battery in a closed room or near fire.
- Charge the battery under the charging condition specified.
- If any corrosion of the terminals, leakage or deformation of the case of the battery is found, do not use the battery.
- If the battery leaks, while protecting your hands or clothing, remove the battery from the device and should be extremely careful not to infect the skin or eyes.
- If the battery leaks and the liquid inside spills on the skin or clothing, immediately wash it off with plenty of clean water. If the liquid splashes into eyes, immediately flush the eyes with plenty of clean water and consult a doctor.
- Avoid mixed usage of batteries differing in type, manufacturer or history of use.
- Do not throw the battery in fire nor heat the battery.
- Do not short of battery terminals.
- Do not attempt to disassemble, remodel or destroy the battery.
- Do not place the battery near a child.
- The battery can be replaced. If you need to charge your battery more and more frequently, it might be time to replace it. The battery should be serviced by LG Electronics customer care center.
- Charge fully before storing a battery which has not been in use for a long period and turn ON/OFF switch off (OFF). Store the battery in a cool, dry place.
- During storage of the battery, charge it at least once every three months. If the battery is stored for a long period without being charged, its battery life may be shortened.
- The used battery must be recycled or disposed of separately from household waste.



## Top Panel

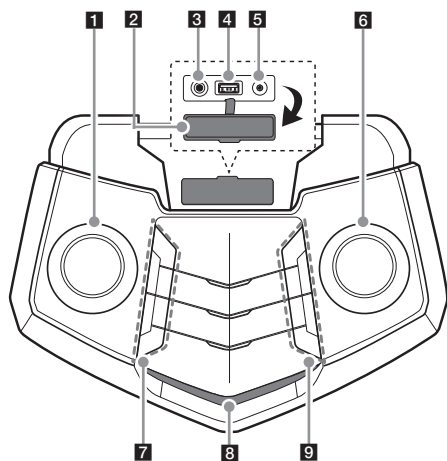

**1 MIC VOL. ▼**  
Adjusts microphone volume level.

**2** Port cover



### Note

When you don't use the unit, close the port cover securely.

**3 MIC IN.**  
Connects a microphone.

**4 USB port**  
You can play sound files by connecting the USB device.

**5 PORT (Portable) IN.**  
Connects a portable device.

**6 ▼ MAIN VOL.**  
Adjusts speaker volume level.

**7** (Standby)  
Turns the power on or off.

### ECHO / DEMO

- Selects ECHO mode.
- In power off status, if you press ECHO / DEMO, shows DEMO mode.

### VOCAL EFFECTS

Selects VOCAL EFFECTS mode.

### VOICE CANCELLER

You can reduce the vocal tones during music playback from various input sources.

### # / b (KEY CHANGER)

Changes the key to suit your vocal range.

**8** Display window

**9 F (Function)**  
Selects the function and input source.

### >|| (Play/Pause)

Starts or pauses playback.

### PRESET/REPEAT

- Chooses a preset number for a radio station. / Stores radio stations by pressing and holding.
- Listens to your files repeatedly or randomly.
- Sees the name of connected all **Bluetooth** device in Bluetooth mode.

 
### SOUND EFFECT/BASS BLAST

- Chooses sound impressions.
- Press and hold to select BASS effect directly.

### |<</>>|

- Skips Fast backward or Forward. / Searches for a section within a file by pressing and holding.
- Selects the radio stations.

## Rear Panel

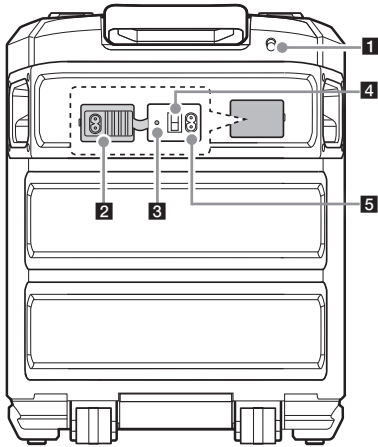

1 FM antenna

2 Port cover



### Note

When you don't use the unit, close the port cover securely.

3 Battery charging indicator

4 Power ON / OFF switch

Switches the unit ON or OFF.  
(Battery can be charged even when this unit is in off  
(OFF) status.)

5 AC in socket



 
### Note

Fully charge the device before using.


## Carrying the unit

The unit has wheels and a handle so you can easily move the unit.

1. Press the lock button on the handle.

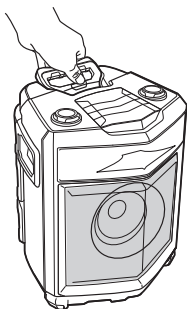

 2. Pull the handle up.

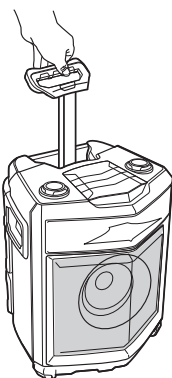

### Note

When you don't use the unit, close the port cover securely.




### Caution

This unit is splash-proof speaker but it can be damaged when you used under water

## Additional Information

### Specifications

#### General

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 370 mm x 480.5 mm x 310 mm (Approx. 14.5 inch x 18.9 inch x 12.2 inch)
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	50 W RMS

#### Battery

Battery type	12 V / 7.0 Ah (Valve Regulated Lead-Acid rechargeable battery)
Operating time	Approx. 13 hours (Based on fully charging the battery and continuous playback using 50 % volume level.) It may vary depending on the battery status and operational conditions.
Charging time	Approx. 11 hours It may vary depending on the battery status and operational conditions.

Design and specifications are subject to change without notice.



**LG Customer Information Center**

1-800-243-0000	USA, Consumer
1-888-865-3026	USA, Commercial

**Register your product Online!**

[www.lg.com](http://www.lg.com)

Printed in China