### **DENON®**

**DA-10** 

Portable USB-DAC / Headphones Amplifier

## **Quick Start Guide**

Kurzanleitung / Guide de démarrage rapide / Guida di avvio rapido / Guía de inicio rápido / Snelhandleiding / Snabbstartsguide / Краткое руководство пользователя / Skrócona instrukcja obsługi / かんたんスタートガイド / 快速入门指南

### Read Me First....

Bitte zuerst lesen... / Lisez-moi en premier.... / Nota preliminare.... / Lea esto primero.... / Lea esto primero... / Las detta först... / Läs detta först... / Läs detta först... / Las detta först... / Las

**ENGLISH** 

**DEUTSCH** 

FRANÇAIS

**ITALIANO** 

ESPAÑOL

NEDERLANDS

SVENSKA

РУССКИЙ


POLSKI

日本語

中国简体

### **Getting Started**

#### What's In the Box

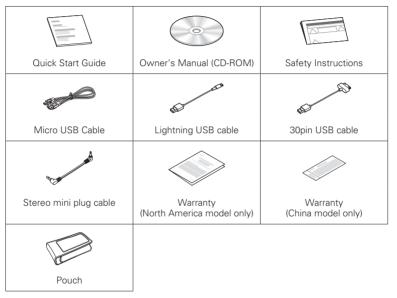



These drawings are for illustrative purposes only and may not represent the actual product(s).


### **Setup and Playback**

 - 1 Charging the battery of this unit
- 2 Connecting a headphone
- 3 Enjoying music from an iPod/iPhone/iPad

## 1 Charging the battery of this unit

This unit has an internal battery. Be sure to charge the battery before use. It takes approximately 3.5 hours to recharge the battery when it is completely run down using a USB charger (1.5 A or higher) or approximately 6.5 hours when charging from a computer.

- Turn the power off.
- Use the supplied micro USB cable to connect this device to a computer, or connect a USB charger to the USB-DAC connector.




- Before USB connecting this unit to your computer, install the driver software in your computer (Windows OS only).
- The battery indicator (CHARGE) lights in orange while the battery is charging.
- The battery indicator (CHARGE) lights in green when charging is complete.

## 2 Connecting a headphone

 Set the output mode selecting switch to" VAR (variable)".



Connect the plug of the headphones to the headphones jack.



#### NOTE

When "FIXED" is set, audio is output from the headphones jack, but the volume level is the maximum level and cannot be adjusted. When "FIXED" is set, do not connect headphones to this unit.

# Enjoying music from an iPod/iPhone/iPad

Set the input source selecting switch to" iPod/iPhone".



Input source selecting switch

Connect the USB cable supplied with this unit or the USB cable supplied with your iPod/iPhone/iPad to the iPod/iPhone connector of this unit.



Play back music by operating the iPod/iPhone/iPad.

### **Owner's Manual**

Please reference to the Owner's Manual for more details about the setup and operation of the receiver and its features

### □ Online Version

Enter the following URL into your web browser:

manuals.denon.com/DA10/ALL/EN/




#### Online Manual



#### □ Printable Version

Access the print version of the owner's manual from the included CD-ROM or select the" PDF Download" link from the Online Version.

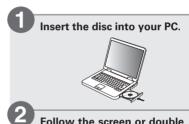

click on the PDF file.





www.denon.com