


Music Studio 7

HW-LS70H / HW-LS71H

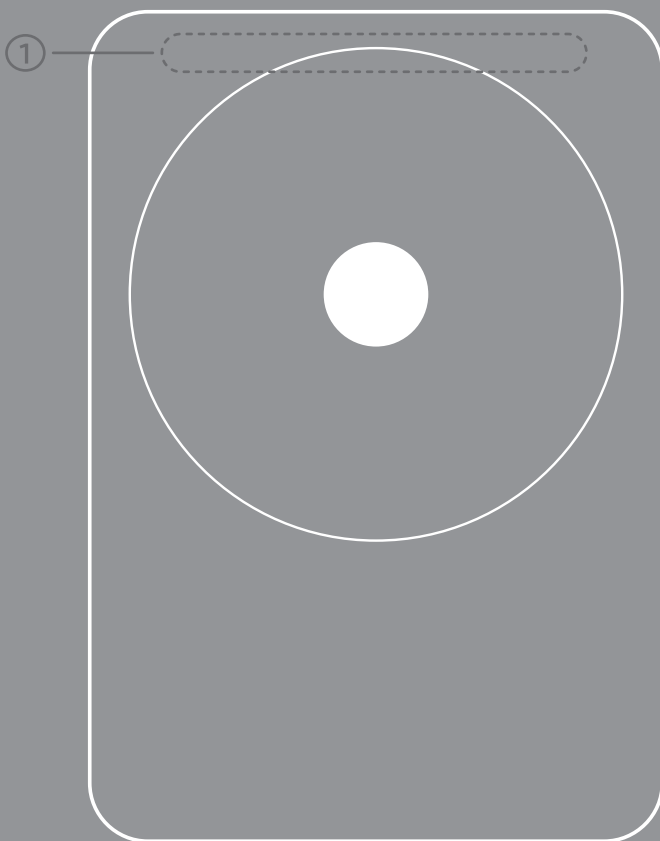

Product Overview

○ (Multi Function) Button

In standby mode, press the ○ (Multi Function) button to turn on the WiFi Speaker.

Press the ○ (Multi Function) button to change the mode.

— + (Volume) Button

🎵 (Instant Play) Button

The music that was playing can be resumed instantly.

- Press the button to play or pause.
- Press the button twice to skip to the next track.

* When **Spotify Tap** is selected in the **Instant Music Play settings** of the **Samsung Sound** app, the shortcut button is assigned accordingly. In this mode, pressing the button twice launches Spotify and plays a track recommended for your listening preferences.

⊘ (Mic On/Off) button

Press the button to turn the microphone on or off. When the microphone is off, the LED indicator will light red.


To switch to **Bluetooth Pairing** state, press and hold the ⊘ (Mic On/Off) button on the WiFi Speaker for more than 3 seconds.

① LED indicator

The LED indicator flashes, glows, or changes color depending on the WiFi Speaker's current mode or status.

* The image may be different from the actual one.

Connecting by the Samsung Sound App

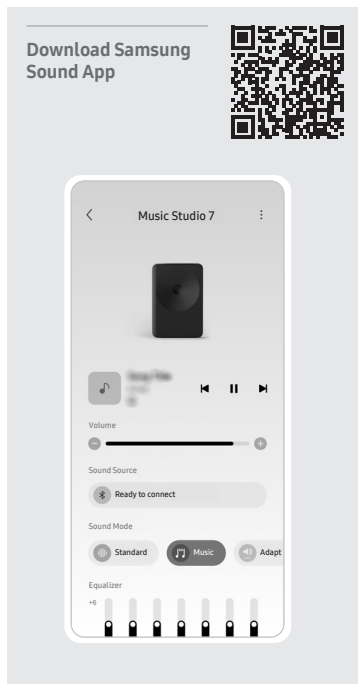

Installation

- The Samsung Sound app allows you to control the functionality of and adjust the settings of the WiFi Speaker.
- Download the Samsung Sound app from your mobile device's app store (App Store, Play Store) or scan the provided QR code.

Device registration

1. Run the Samsung Sound app on your mobile device.
 2. Follow the on screen instructions and add the product to your mobile device.
- If the automatic pop-up window does not appear, press (+) on the Home screen to register the product.

NOTE

By scanning the QR code attached to the WiFi Speaker, you can directly register the WiFi Speaker to the Samsung Sound app.

Control with Samsung Sound

1. Open the Samsung Sound app on your mobile device, and then select the WiFi Speaker you have registered.
 2. The settings menu will appear for the WiFi Speaker, and you can adjust the settings such as **Volume**, **Sound Mode**, and **Equalizer**.
- If another user wants to control the WiFi Speaker,
 - Make sure the mobile device is connected to the same Wi-Fi network as the WiFi Speaker.
 - Open the Samsung Sound app and follow the on-screen instructions to complete the setup. Once the setup is finished, the WiFi Speaker can be controlled through the app.

* The image may be different from the actual one.