



**ELECTRIC RANGE  
(Fingerprint Resistant)**

**MODELS:**


WFES5030RB0 (Black)  
WFES5030RW0 (White)



# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8	W11379945	Bracket, Anti-Tip	14	W10711900	Element (3000W) (Right Front)
	W11640146	Owner's Manual	9	7101P485-60	Screw, Anti-Tip Kit			FOLLOWING PARTS NOT ILLUSTRATED
	W11638798	Quick Start Guide	10	W11668631	Element, Warm Zone (Center)	W11696452		Harness, Main
	W11639163	Tech Sheet				W11706379		Harness, Cooktop
2	W11600012	Spring, Element	11	8273994	Element (1200W) (Left Rear and Right Rear)	W11172528		Harness, Hidden Bake
3	W11593284	Bracket, Cooktop				3196520		Clip, Wire
4	W11629534	Cooktop (includes, Cooktop Bracket)	12		Bullnose	3196896		Clip, Wire
5	W11282542	Element (3000W Dual) (Left Front)		W11353384	Black			
6	3196169	Screw		W11353380	White			
7	W11640572	Pan, Radiant Element	13	3400080	Screw			


# CONTROL PANEL PARTS

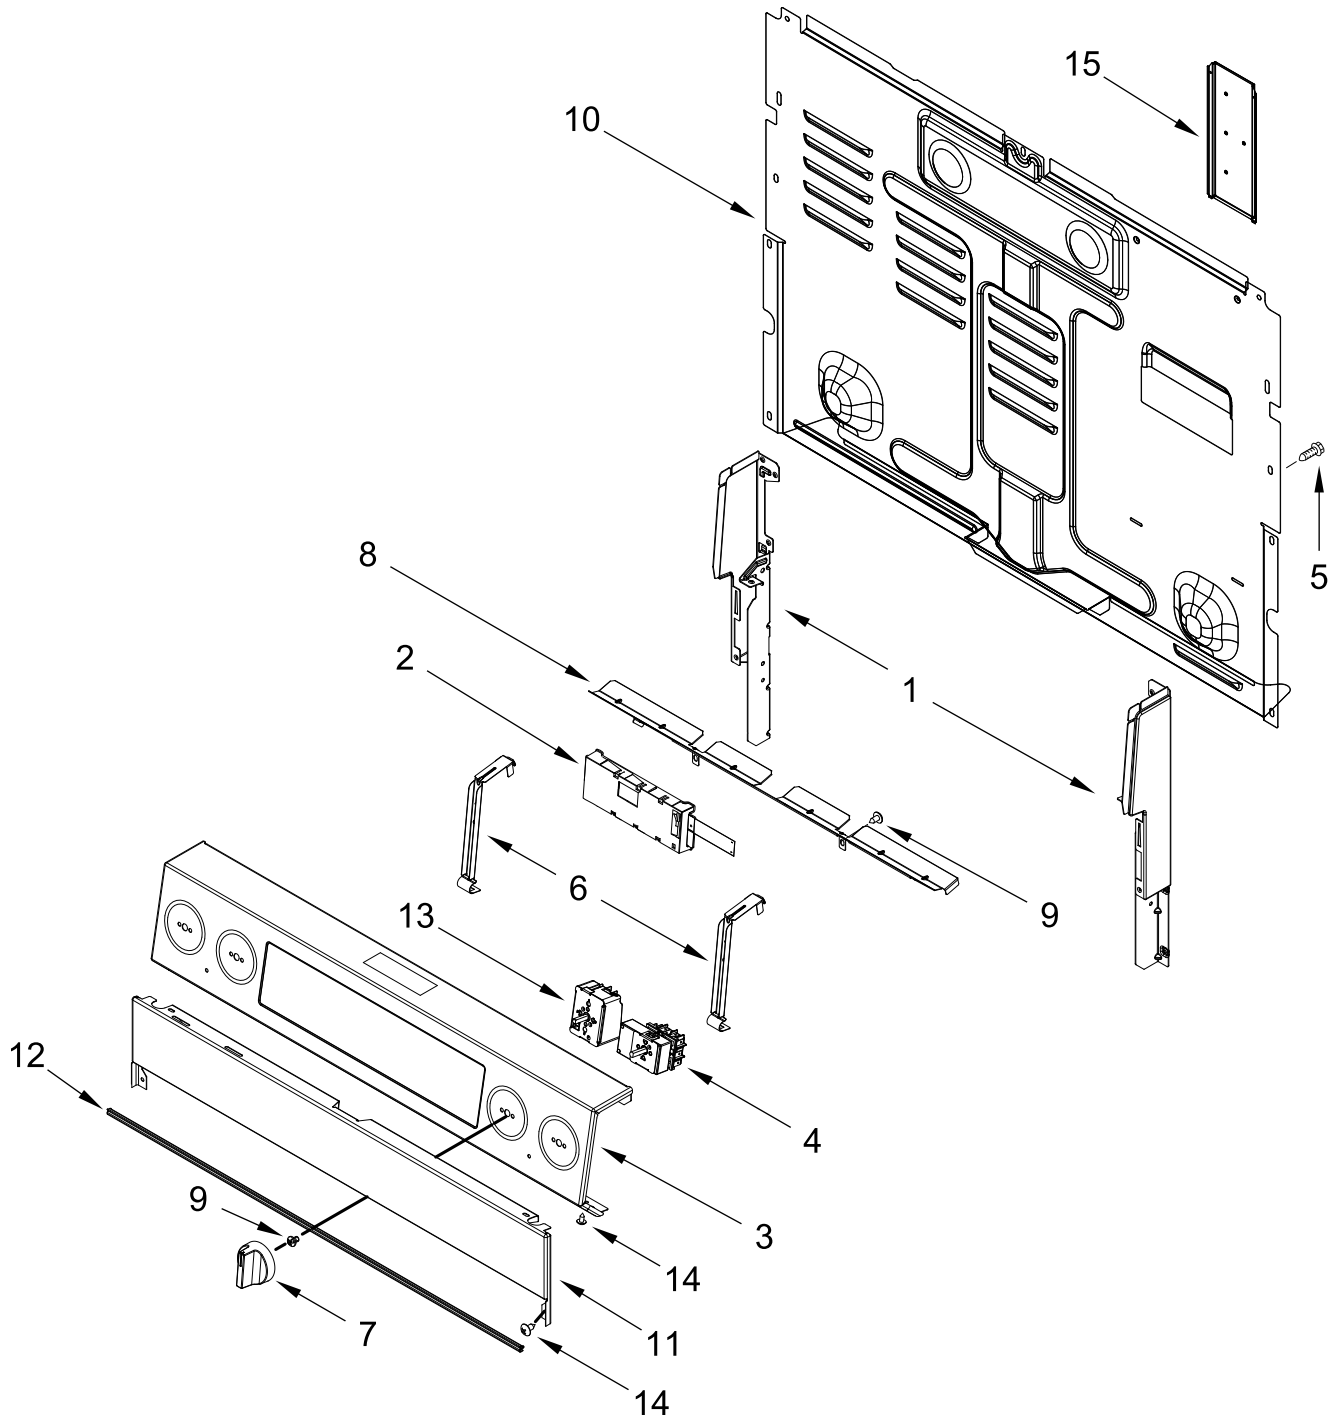

# CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	W10437092	Switch, Infinite (Left Front and Right Front)	11		Lower Panel
	W11327041	Black (Left)					W11625413	Black
	W11327043	Black (Right)					W11625412	White
	W11327042	White (Left)	5	3196178	Screw	12	W11643797	Gasket, Lower Panel
	W11327044	White(Right)	6	W11290750	Bracket, Control	13	W10578768	Switch, Infinite (Left Rear, Right Rear)
2		Control, Electronic (LCX)	7		Knob			
	W11652497	Black		W11621687	Black			
				W11621686	White	14	3196169	Screw
3		Panel, Console	8	W11363806	Shield, Heat	15	W11394231	Cover, Rear Flue
	W11299259	Black	9	3400882	Screw			
	W11299260	White	10	W11393668	Cover, Upper Rear			


# CHASSIS PARTS

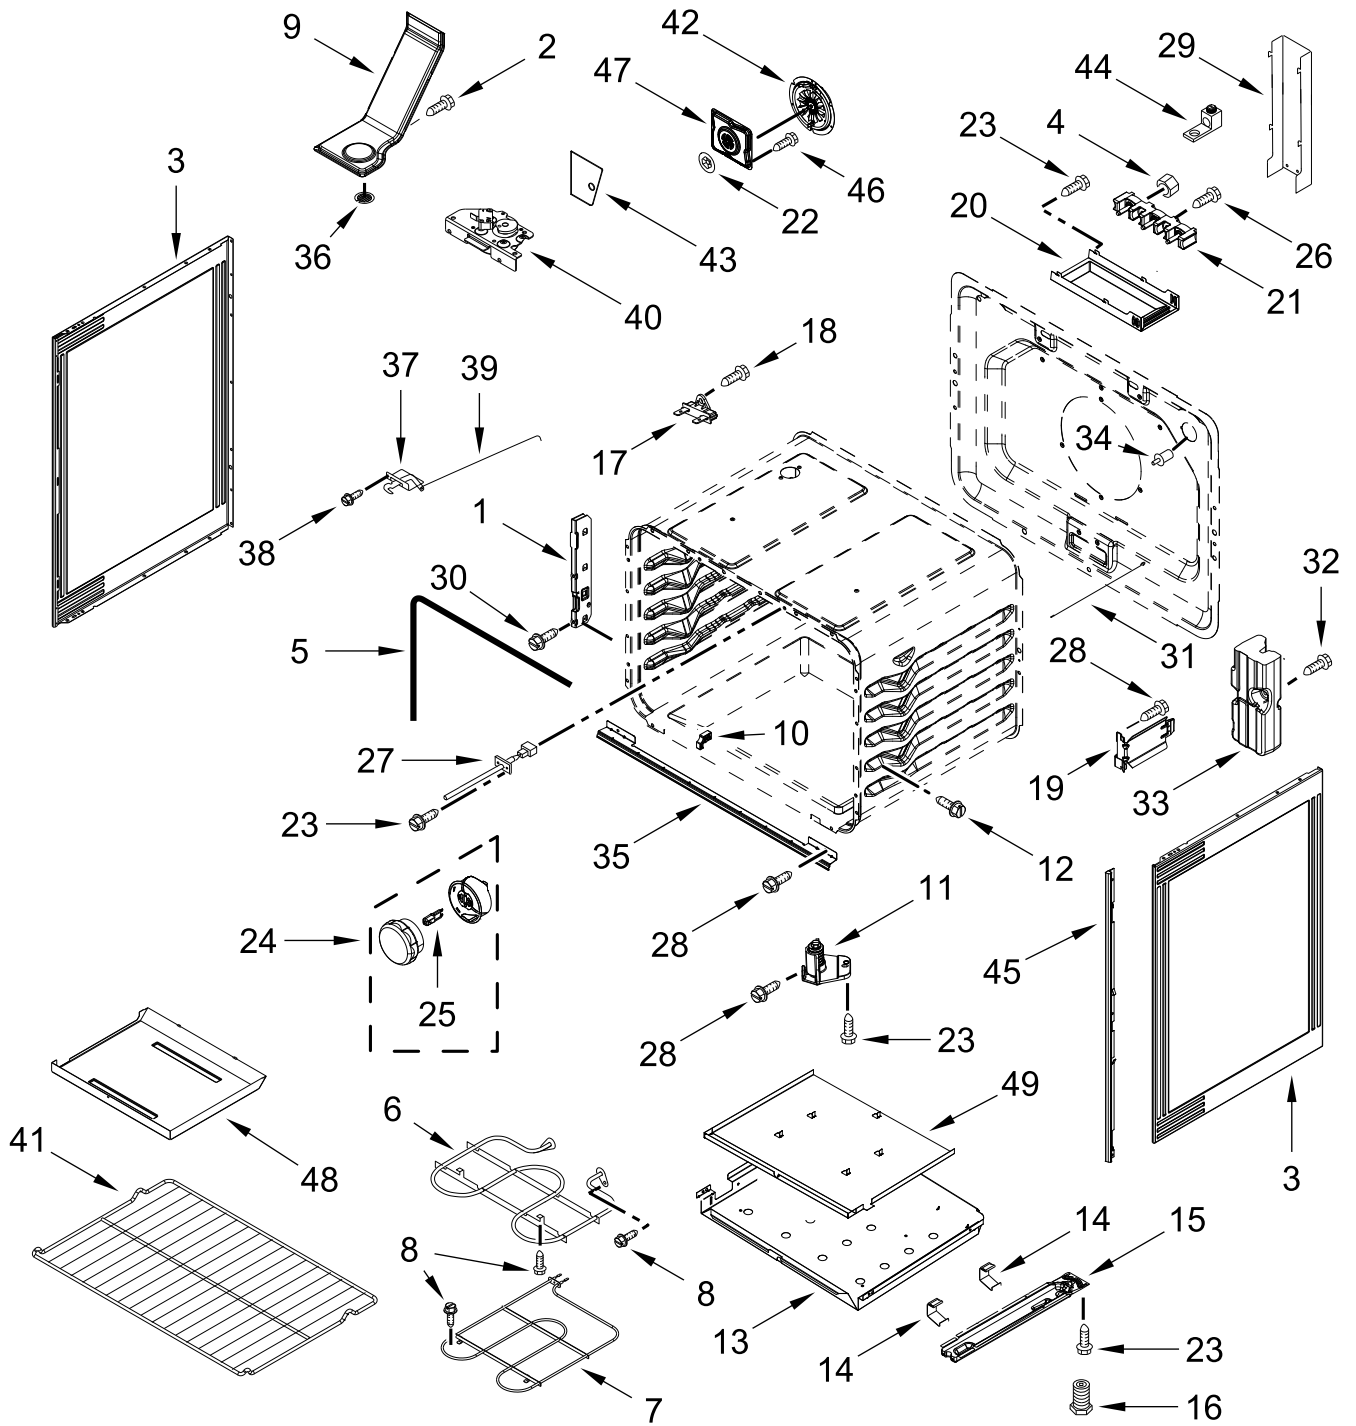

# CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	19	W10404688	Clip, Oven Support	40	W10107820	Rear Door Latch Assembly
2	W10362924	Screw	20	W11673744	Bracket, Service	41	W11173792	Rack, Oven
3		Panel, Side	21	W11591244	Block, Terminal	42	W11353930	Fan, Convection
	W11445467	Black	22	3400968	Nut	43	W10646923	Card, Insulator
	W11445761	White	23	3196178	Screw	44	W10281322	Kit, Bare Wire Adapter Block
4	3400029	Nut	24	W11634772	Light Assembly	45	W11510560	Barrier Rail, Rubber (Left and Right)
5	W11491751	Seal, Door	25	W10571723	Bulb, Halogen 40 Watts	46	W10516115	Screw
6	W10308476	Element, Broil	26	3400016	Screw	47	W11373155	Cover, Conv Fan
7	9755770	Element, Bake	27	W10586204	Sensor	48	W10183712	Tray, Hidden Bake
8	3196174	Screw	28	3196169	Screw	49	W10134125	Shield, Heat
9	W11621245	Tube, Vent	29	W10326122	Cover, Terminal Block			FOLLOWING PARTS NOT ILLUSTRATED
10	W10674705	Glide, Drawer Front	30	W10031780	Screw	W10774939		Insulation, Wrap
11	W10341186	Front Foot Assembly	31	9757239	Rod, Door Switch	W11407378		Insulation, Back
12	W10067840	Screw	32	W11034869	Screw	W11404469		Insulation, Flue
13	W10134121	Tray, Insulation	33	W10910404	Counterweight			
14	W10137382	Clip, Panel	34	W11511828	Switch, Door			
15	W10390008	Base Rail Assembly (Left)	35	W11464547	Bracket, Front Frame			
	W10390007	Base Rail Assembly (Right)	36	W11092984	Screen, Vent			
16	W10058460	Foot, Leveling	37	9761013	Front Door Latch Assembly			
17	3196548	Fuse, Thermal	38	3196560	Screw			
18	3196172	Screw	39	W10078380	Rod, Latch			

# DOOR PARTS

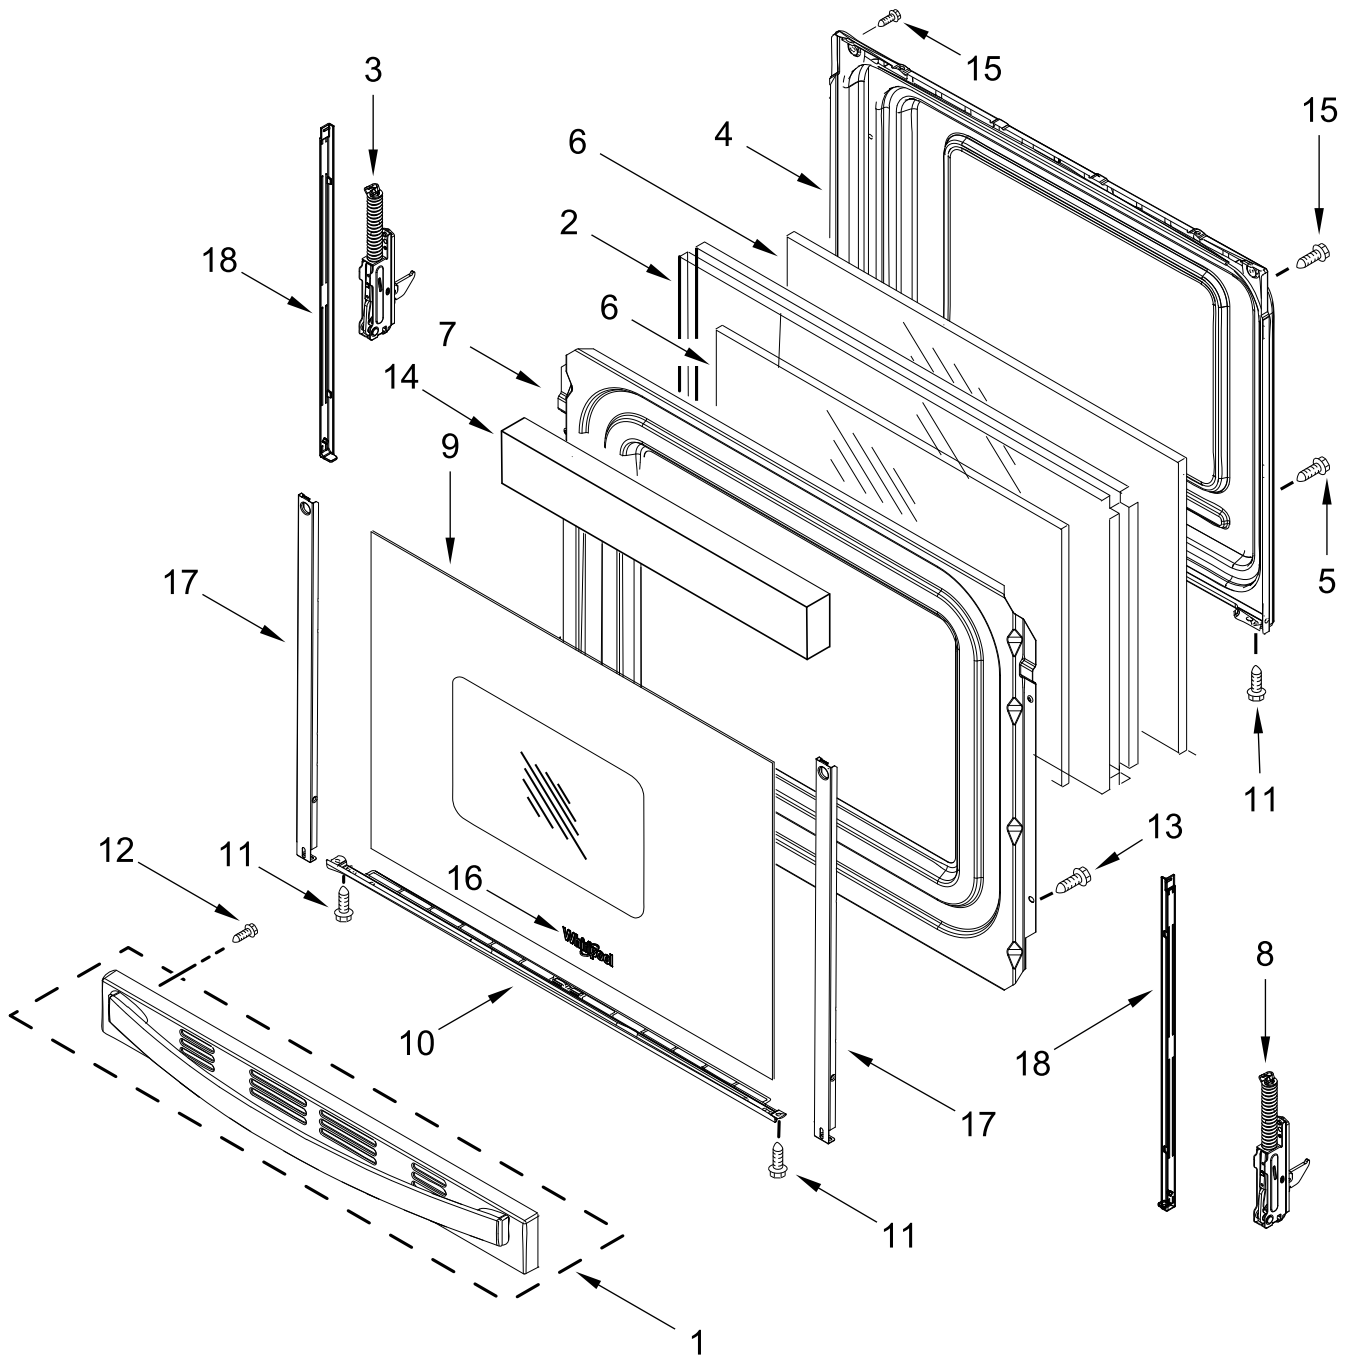




# DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly
	W11353052	Black
	W11353053	White
2	W10316950	Frame, Glass
3	W10388635	Hinge, Door (Active)
4	9761344	Liner, Door
5	W10031790	Screw
6	9758162	Glass, Inner
7	W11380222	Retainer, Insulation

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
8	W10440013	Hinge, Door (Active)
9		Glass Assembly, Outer Door
	W11729636	Black
	W11729637	White
10		Trim, Lower
	W11444043	Black
	W11444042	White
11	W10327235	Screw
12	W10465158	Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
13	W10031780	Screw
14	W10278991	Insulation, Door Strip
15	W10200660	Screw
16	W10884775	Badge
17	W11379944	Strap, Door
18		Trim, Side
	W10746436	Black (Left)
	W10746435	Black (Right)
	8523172	White (Left)
	8523166	White (Right)

# DRAWER PARTS

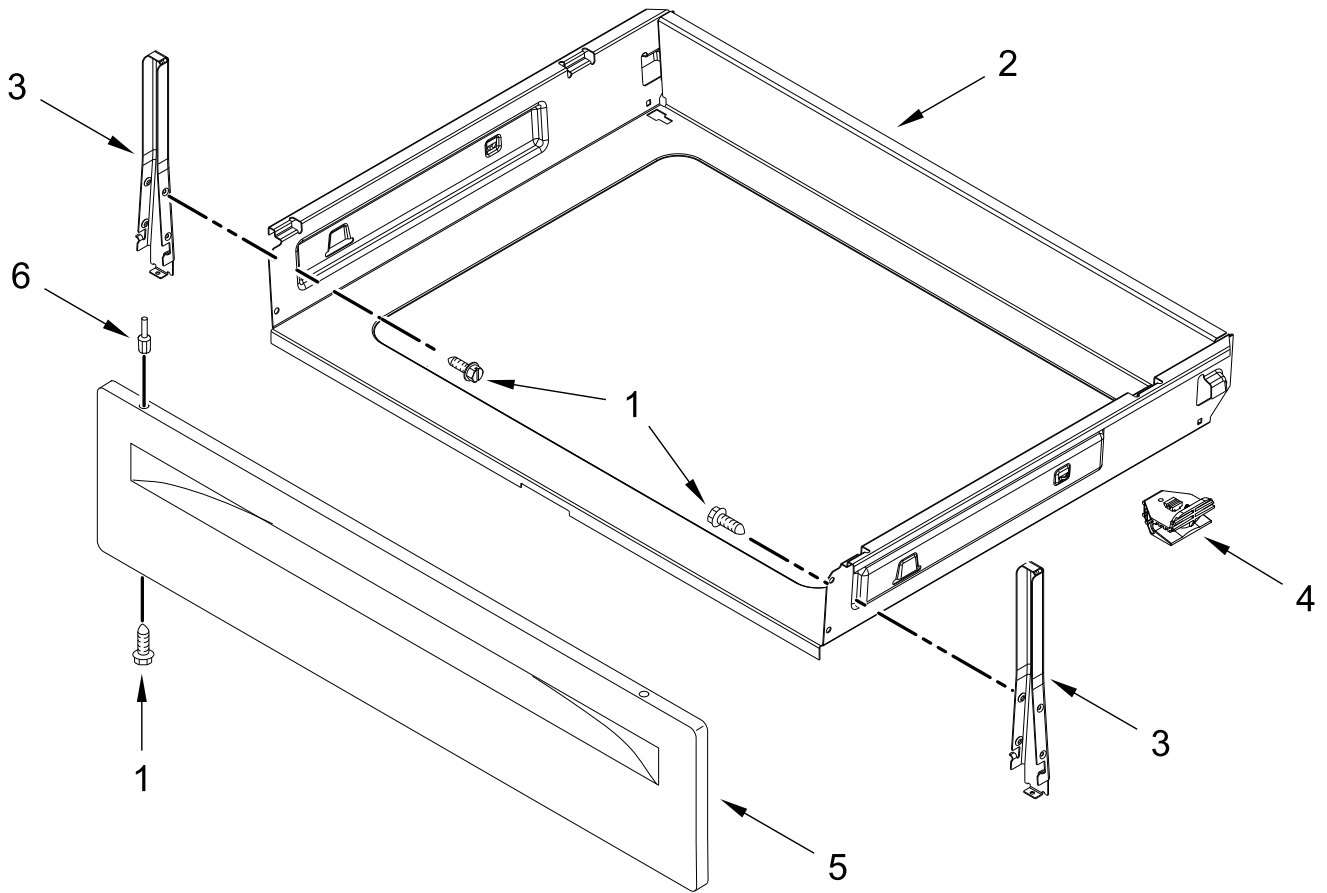

# DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196169	Screw	5		Panel, Drawer Front	6		Rivet, Push
2	W10688022	Drawer, Storage		W11123900	Black		3196813	Black
3	W10462912	Bracket, Mounting Drawer		W11123901	White		3196814	White
4	W10674708	Glide, Drawer Rear						

# OPTIONAL PARTS

## REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

## PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

## PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

## INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

## PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

## ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	W11601635	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting