homestyles*

20 06659 0083


Chaise


IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

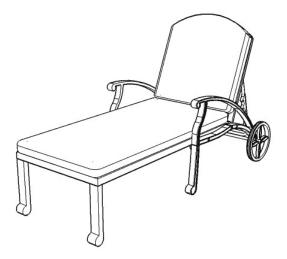

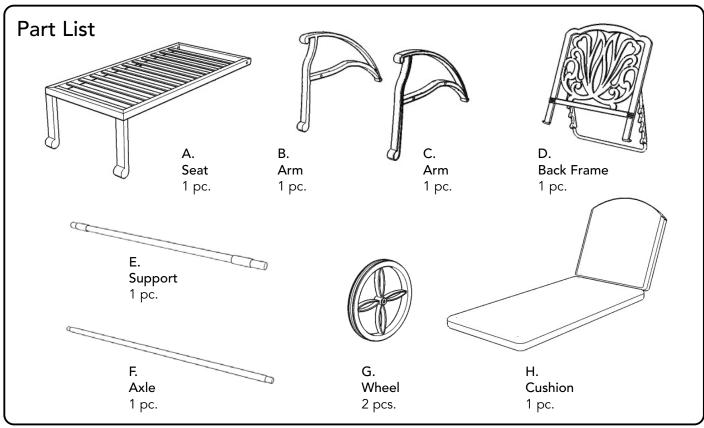


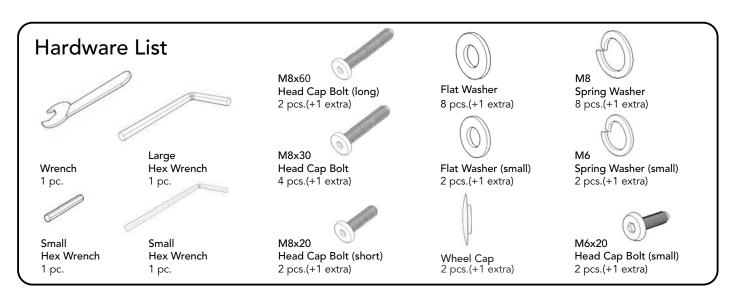


Assembly Instructions 2/5

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Wrench and Hex Wrench as the bolts may need to be tightened up in the future.

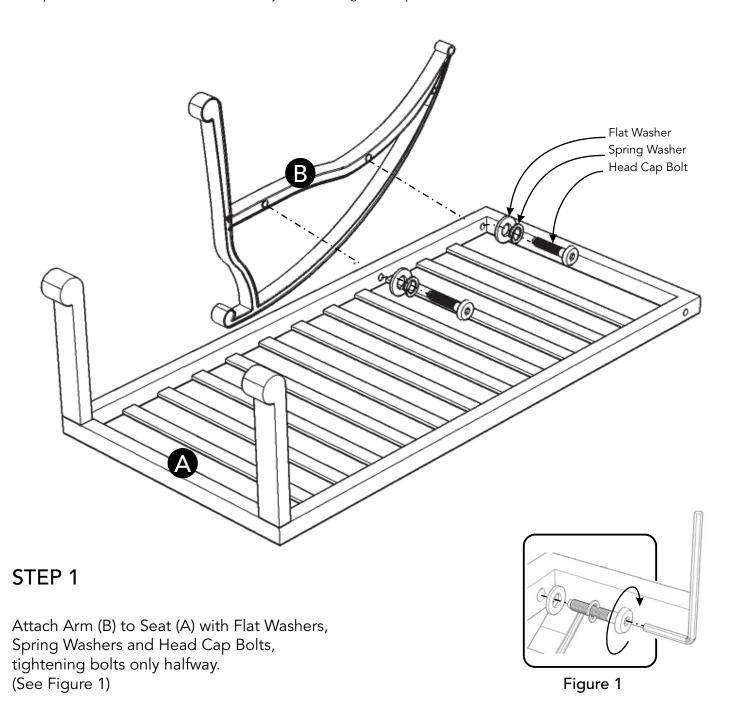

Assembly Instructions 3/5

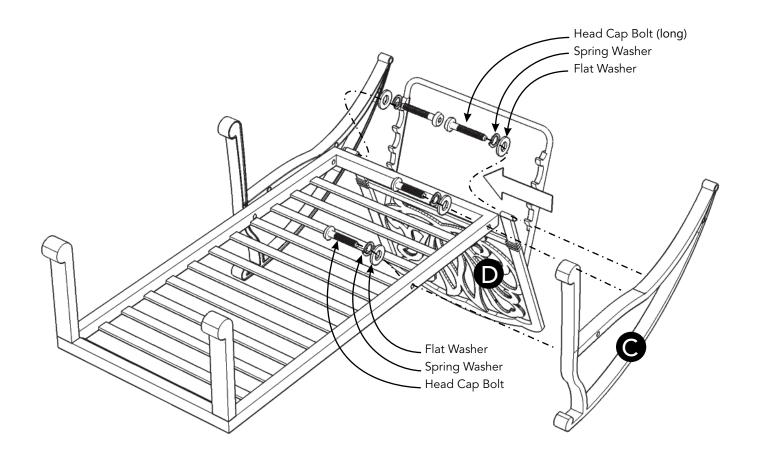


STEP 2

Place Back Frame (D) to unit with Flat Washers, Spring Washers and Head Cap Bolts (long), tightening bolts only halfway.

Attach Arm (C) to unit with Flat Washers, Spring Washers, Head Cap Bolts and Head Cap Bolts (long), bolts only halfway.

Tighten all bolts used in Steps 1 and 2.

Assembly Instructions 4/5

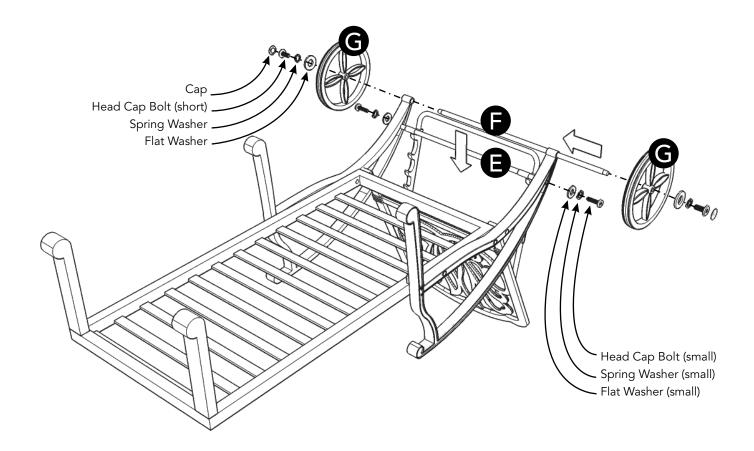

STEP 3

Attach Support (E) to unit with Flat Washers (small), Spring Washers (small) and Head Cap Bolts (small), tightening bolts only halfway.

Insert Axle (F) into unit.

Attach Wheels (G) to unit with Flat Washers, Spring Washers and Head Cap Bolts (short), tightening bolts only halfway. (See Figure 2)

Tighten all Head Cap Bolts.

Cover center wheel holes with Caps.

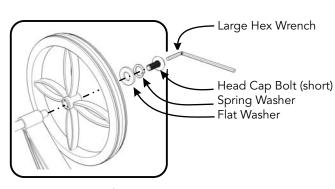



Figure 2

Assembly Instructions 5/5

STEP 4

Turn unit over to its upright position.

Place Cushion (H) onto unit.

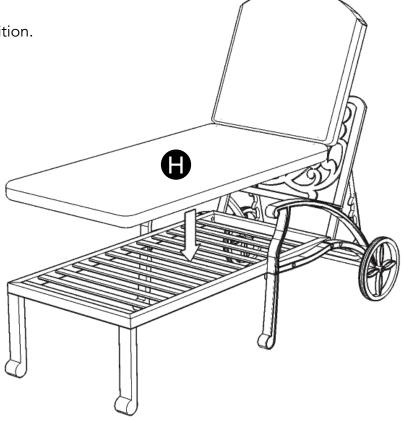

STEP 5

Use velcro on Cushion (H) to attach to unit. (See Figure 3)


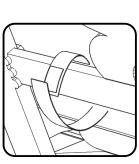


Figure 3

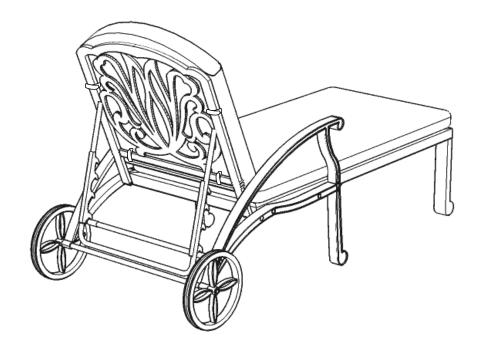

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT

CRACKING



Do not place in direct sunlight.

PREVENT FADING



Do not write directly on surface.

PREVENT

MARKING



Do not place hot objects on surface.

PREVENT
FINISH DAMAGE



Do not use rubber based placemats.

PREVENT

DISCOLORING



Do not use commercial waxes and polishes.

PREVENT YELLOWING

CLEAN

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319