

KFP1642
INSTRUCTIONS
INSTRUCTIONS
INSTRUCCIONES



KitchenAid®

WELCOME TO THE WORLD OF KITCHENAID.®

We're committed to helping you create a lifetime of delicious meals for family and friends. To help ensure the longevity and performance of your appliance, keep this guide handy. It will empower you with the best way to use and care for your product. Your satisfaction is our #1 goal. Remember to register your product online at www.kitchenaid.com, or by mail using the attached Product Registration Card.



Join us in the kitchen at www.proline.kitchenaid.com.
Scan with your mobile device for recipes, tips, and more.

USA: 1.800.832.7173
Canada: 1.800.807.6777

KitchenAid.com
KitchenAid.ca

TABLE OF CONTENTS

FOOD PROCESSOR SAFETY

Important safeguards.....	4
Electrical requirements	5

PARTS AND FEATURES

Parts and accessories.....	6
Selecting the right tools.....	8

USING YOUR FOOD PROCESSOR

Attaching the work bowl.....	12
Attaching the lid and safety lock.....	12
Using the 3-in-1 feed tube.....	13
Using the speed controls.....	14

USING YOUR ACCESSORIES

Preparing the dicing kit for first use.....	15
Installing/using the dicing disc	16
Installing/removing the multipurpose blade.....	17
Installing/removing the prep bowl	18
Installing/removing the shredding, julienne, and parmesan discs.....	19
Installing/removing the slicing disc.....	20
Adjusting the slicing thickness.....	20
Installing/removing the mini-bowl and mini-blade.....	21
Installing/removing the egg whip or dough blade	22
Installing/removing the citrus press	23
Removing accessories and work bowl.....	24

CARE AND CLEANING..... 25**TIPS FOR GREAT RESULTS** 26**TROUBLESHOOTING** 29**WARRANTY AND SERVICE**..... 30**PROOF OF PURCHASE & PRODUCT REGISTRATION**

Always keep a copy of the itemized sales receipt showing the date of purchase of your Food Processor. Proof of purchase will assure you of in-warranty service. Before you use your Food Processor, please fill out and mail your product registration card packed with the unit, or register on-line at www.kitchenaid.com. This card will enable us to contact you in the unlikely event of a product safety notification and assist us in complying with the provisions of the Consumer Product Safety Act. This card does not verify your warranty. Please complete the following for your personal records:

Model Number _____

Serial Number _____

Date Purchased _____

Store Name _____

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

 **DANGER**

You can be killed or seriously injured if you don't immediately follow instructions.

 **WARNING**

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. To protect against risk of electrical shock, do not put Food Processor in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from the outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest Authorized Service Facility for examination, repair, or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by KitchenAid may cause fire, electric shock, or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter.
10. Keep hands and utensils away from moving blades or discs while processing food to reduce the risk of severe injury to persons or damage to the Food Processor. A scraper may be used but must be used only when the Food Processor is not running.
11. Blades are sharp. Handle carefully.
12. To reduce the risk of injury, never place cutting blade or discs on base without first putting bowl properly in place.
13. Be certain cover is securely locked in place before operating appliance.
14. Never feed food by hand. Always use the food pusher.
15. Do not attempt to defeat the cover interlock mechanism.
16. This product is designed for household use only.

SAVE THESE INSTRUCTIONS

17. Do not use appliance other than intended use.
18. Disconnect from supply circuit before cleaning or servicing.
19. CAUTION: Do not open until blade stops.
20. CAUTION: To ensure continued protection against risk of electric shock, connect to properly grounded outlets only.

SAVE THESE INSTRUCTIONS

Electrical requirements

WARNING



Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

Volts: 120 VAC






Hertz: 60 Hz

NOTE: This Food Processor is equipped with a three prong grounded plug. If the plug does not fit fully in the outlet, contact a qualified electrician. Do not modify the plug in any way.

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.

PARTS AND FEATURES


Parts and accessories

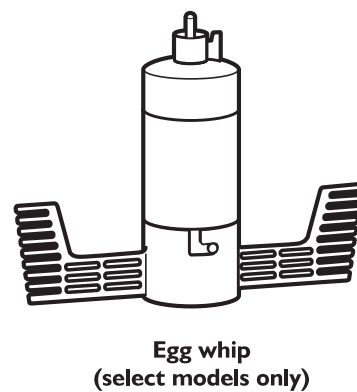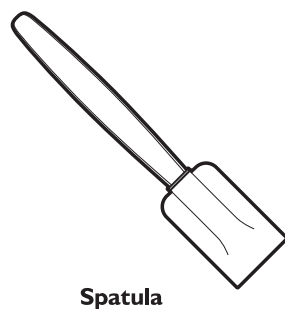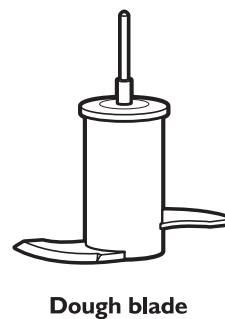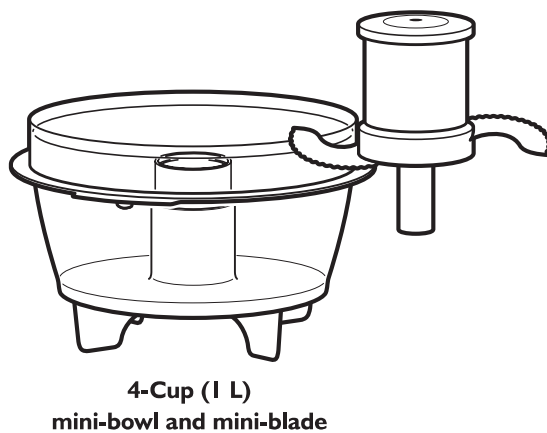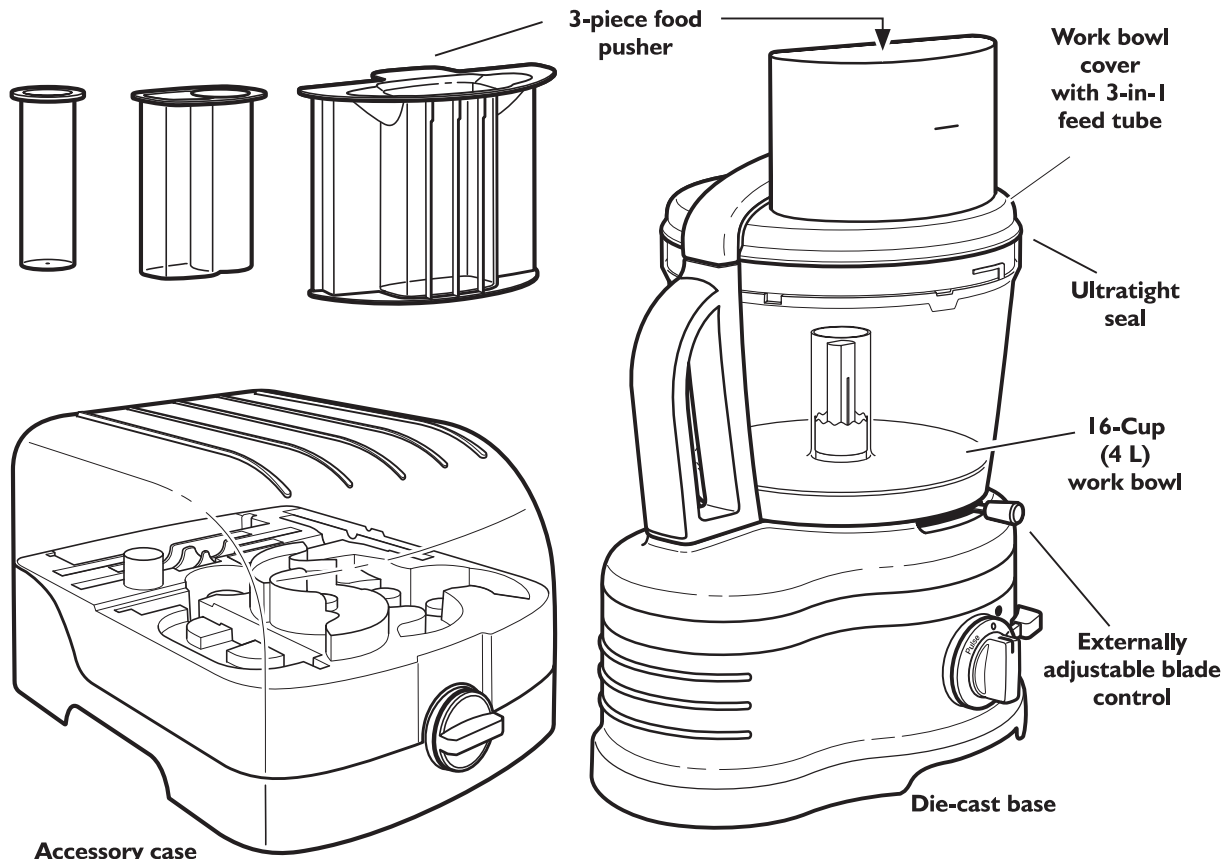


Parts and accessories

English


DICING KIT

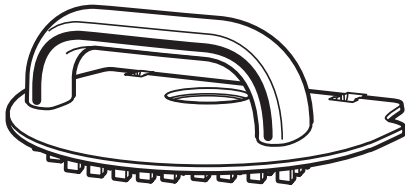


⑤ 8mm Grid cleanout tool

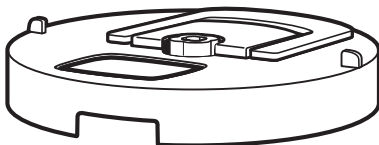


④ Dicing kit lid

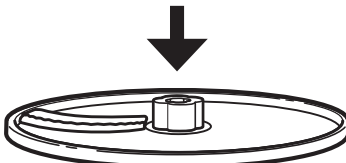


③ 8mm Dicing kit blade*

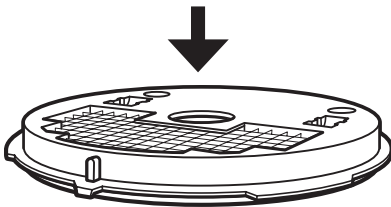


② Dicing kit grid

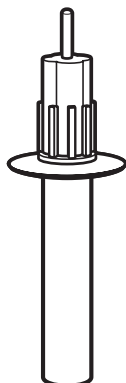


Disc adapter
(*Use this adapter)

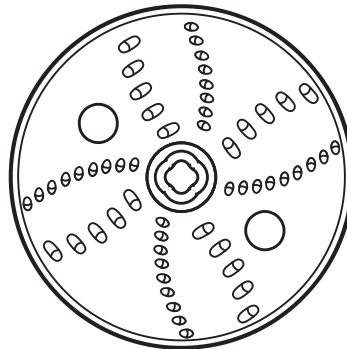


Reversible (2 mm and 4 mm)
shredding disc*

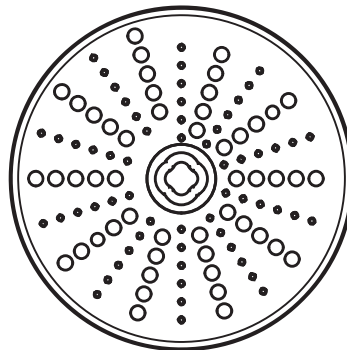


Parmesan/Ice shaving disc*
(select models only)

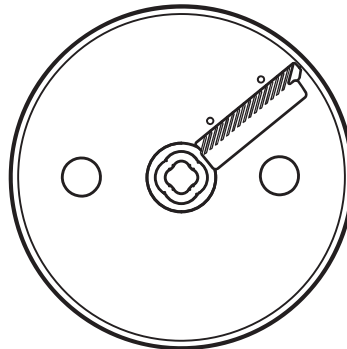


Julienne disc*
(select models only)

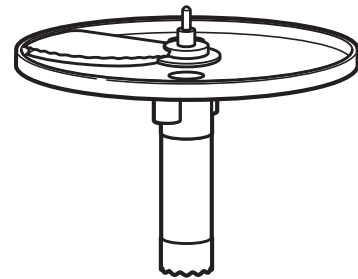


Externally adjustable slicing
disc (thin to thick)

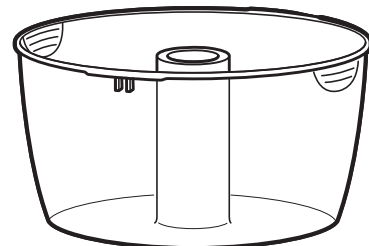

10-Cup (2.4 L)
prep bowl

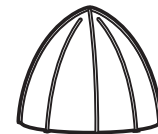


Citrus press
(select models only)

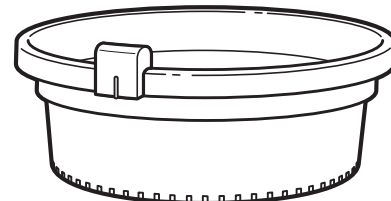

Citrus press adapter
(select models only)

PARTS AND FEATURES


Selecting the right tools

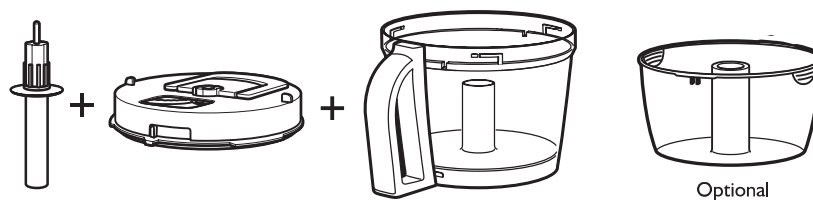


Dicing kit with disc adapter used with work bowl and an optional prep bowl



Dice

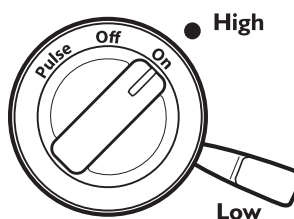

Potatoes, Tomatoes, Onions, Cucumbers, Fruit, Vegetables

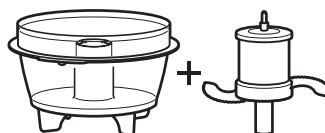

Mini-bowl used with mini multipurpose stainless steel blade



Chop




Mince




Puree




Mix

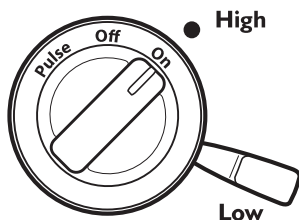

Vegetables, Fruit,
Fresh herbs, Nuts, Meat

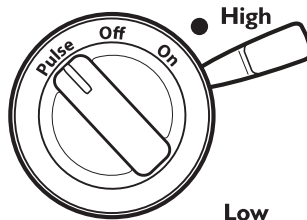

Vegetables, Fruit

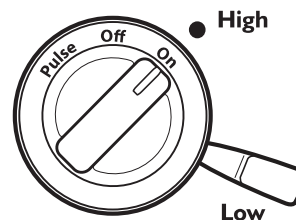


Pesto, Sauces, Cake batter, Cream

NOTE: For best results when chopping, begin with the speed lever set to “High” then change setting to “Low”.

Selecting the right tools


English

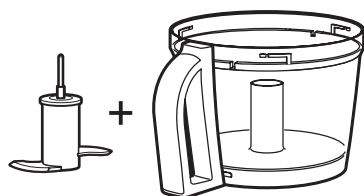


Plastic dough blade used with work bowl



Knead

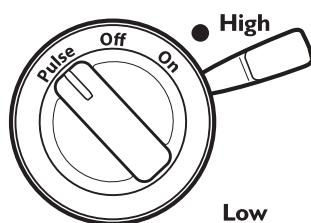


Yeast dough

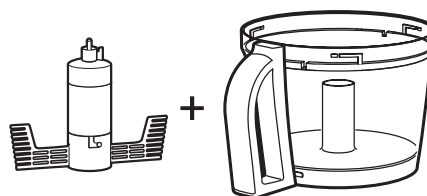


Egg whip* used with work bowl



Whip

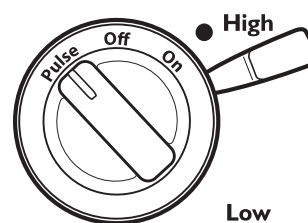

Eggs

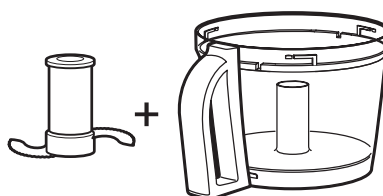

Multipurpose stainless steel blade used with work bowl



Chop




Mince




Puree




Mix

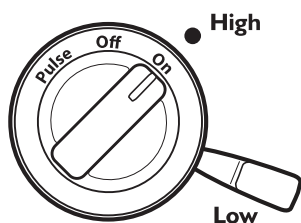

Vegetables, Fruit,
Fresh herbs, Nuts, Meat

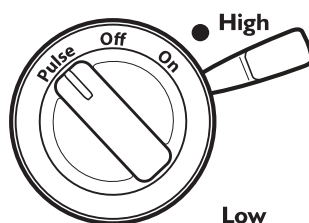

Vegetables, Fruit

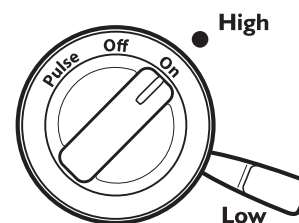

Pesto, Sauces, Cake batter,
Pie dough, Cream


NOTE: For best results when chopping, begin with the speed lever set to “High” then change setting to “Low”.

* Available with select models only.




PARTS AND FEATURES

Selecting the right tools




Use other settings than suggested below to adjust results to your personal preferences.

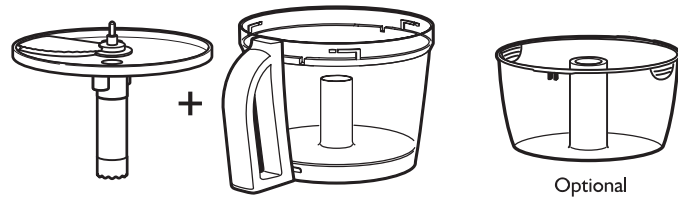

Adjustable slicing disc used with work bowl and an optional prep bowl

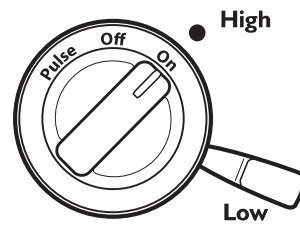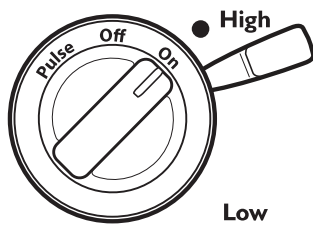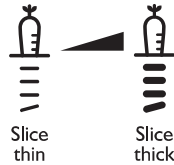

Potatoes, Tomatoes, Fruit (soft), Vegetables (soft), Fruit (hard), Vegetables (hard)

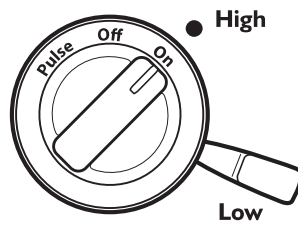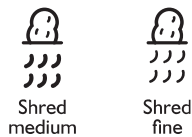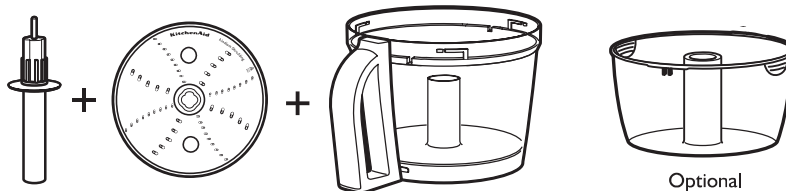


Vegetables, Cheese (freeze 30 min. prior), Chocolate, Fruit (hard)



PARTS AND FEATURES

Selecting the right tools


English

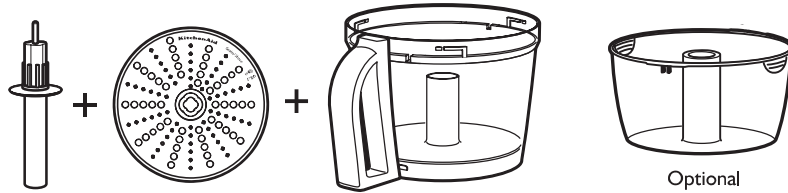


Parmesan/ice shaving disc* used with work bowl and optional prep bowl

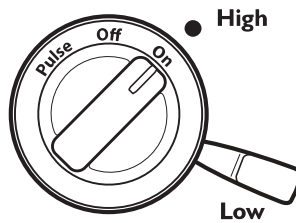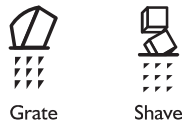

Hard cheese, Ice, Chocolate

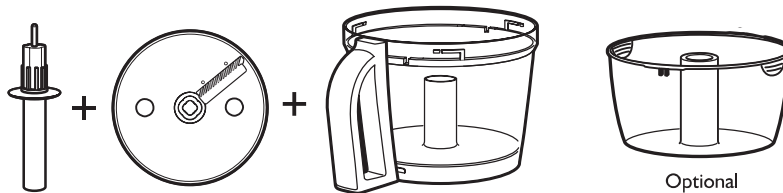

Julienne disc* used with work bowl and optional prep bowl

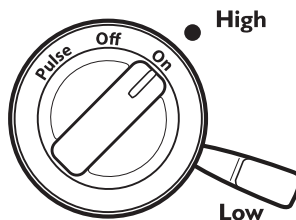

Carrots, Zucchini, Potatoes, Vegetables

* Available with select models only.

USING YOUR FOOD PROCESSOR

Attaching the work bowl

! WARNING



Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.


Do not use an adapter.

Do not use an extension cord.


Failure to follow these instructions can result in death, fire, or electrical shock.

Before first use


Before using your Food Processor for the first time, wash the bowls and accessories as described in the “Care and Cleaning” section.

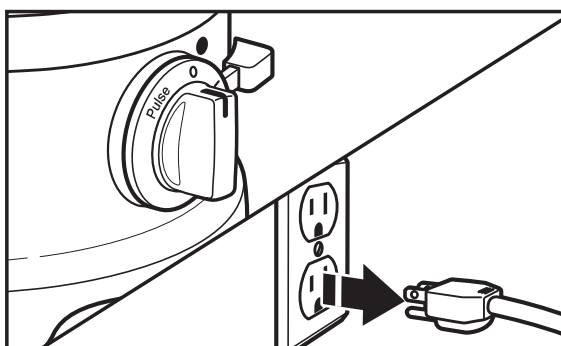

1 Be sure the Food Processor is turned off, unplugged, and placed on a level surface.

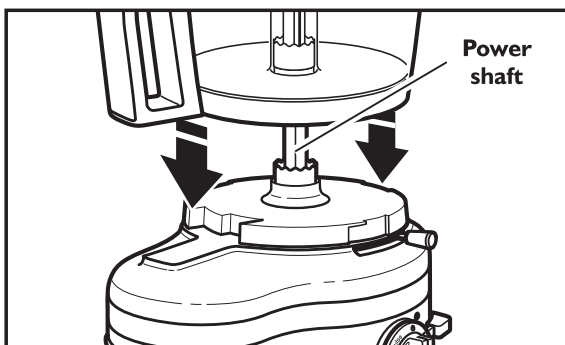


2 Place the work bowl on the base as shown.

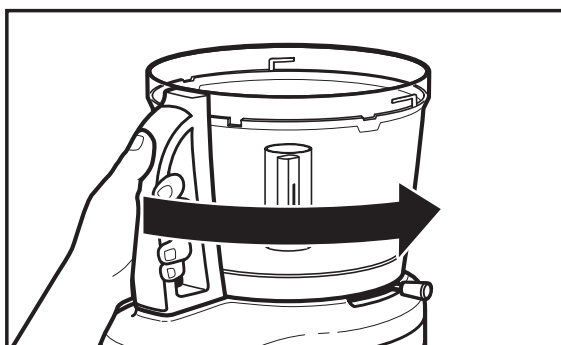


3 Turn work bowl to lock it on the base.

Attaching the lid and safety lock

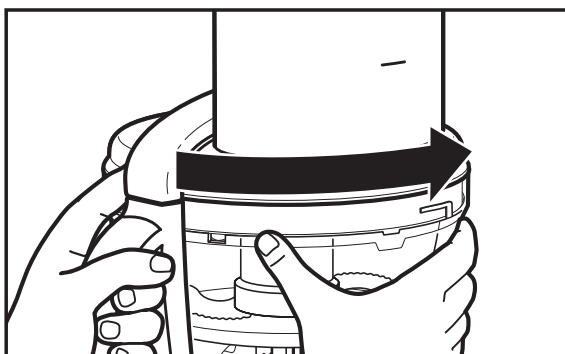

1 Install the work bowl lid, aligning the tabs and locking it into place. The Ultratight seal is spill resistant.

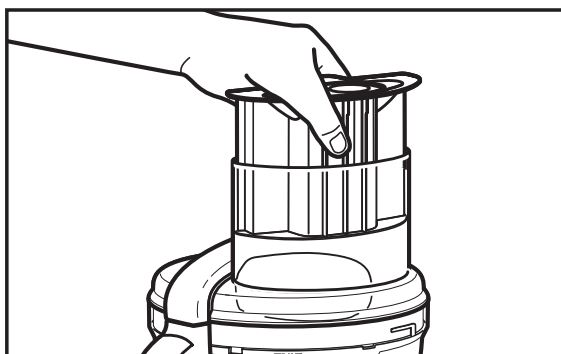

2 The large feed tube must be inserted into the lid for the Food Processor to run.

TIP: It is easier to attach the lid when the large feed tube is removed. After attaching the lid, make sure to insert the large feed tube.

Using the 3-in-1 feed tube

WARNING




Rotating Blade Hazard

Always use food pusher.
Keep fingers out of openings.
Keep away from children.
Failure to do so can result in amputation or cuts.


Before use

Before operating the Food Processor, be sure the work bowl, blades and work bowl cover are properly assembled on the Food Processor base.


English

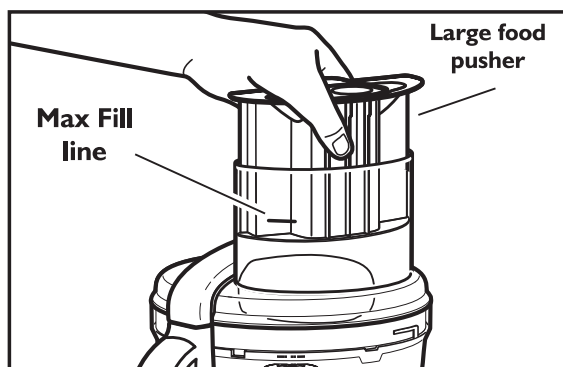


1 Use entire feed tube and the large food pusher to process large items.

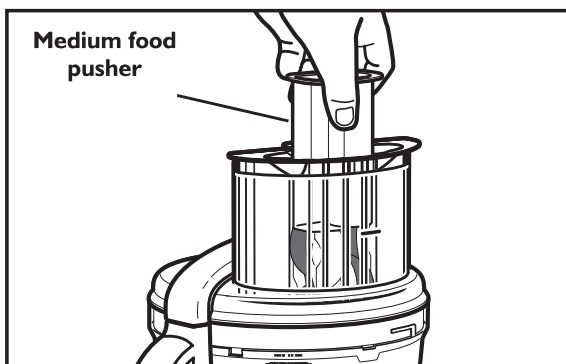

2 Use the medium food pusher in the feed tube to process smaller items.

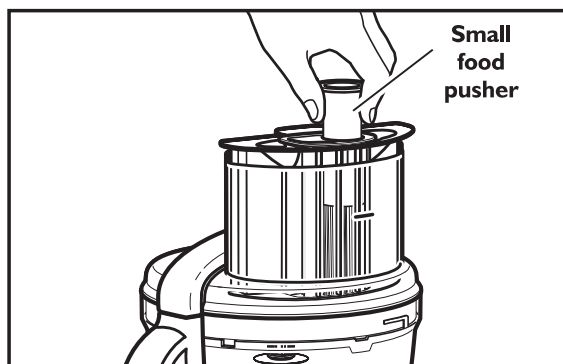

3 Use the small food pusher to slice or shred the smallest, thinnest items.

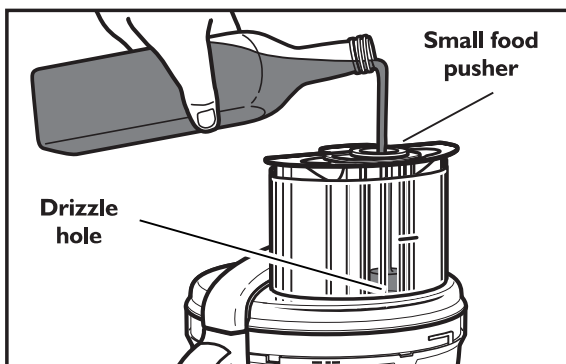




4 Use the drizzle hole in the small food pusher to slowly drizzle oil or other liquid ingredients into the work bowl.

TIP: The drizzle hole flow rate is ideal for making mayonnaise.

USING YOUR FOOD PROCESSOR

Using the speed controls

NOTE: If the Food Processor fails to operate, make sure the work bowl and cover are properly locked on the base, and the large food pusher is fully in place.

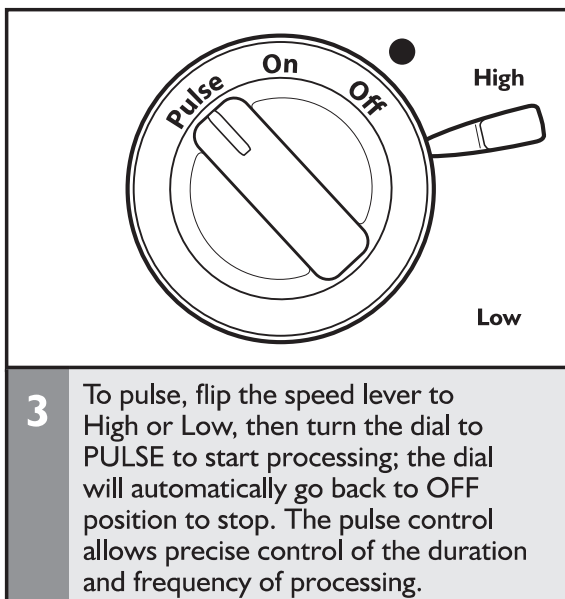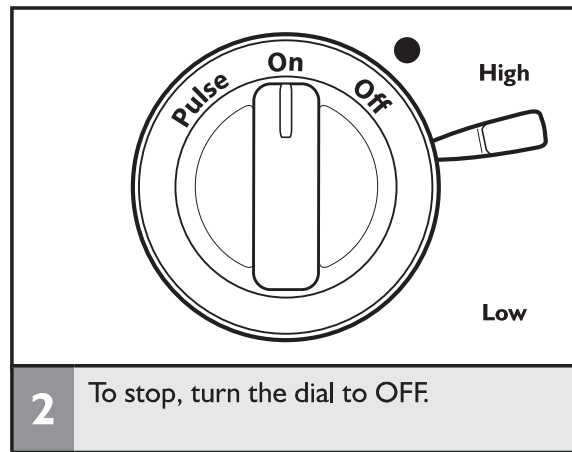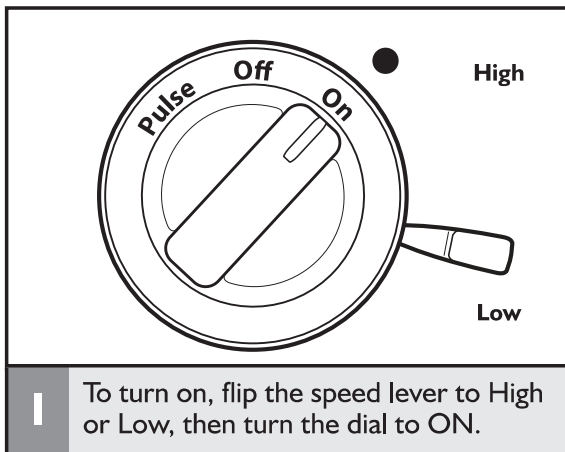


NOTE: The speed lever must be in the OFF position in order to change speeds.

Preparing the dicing kit for first use

IMPORTANT: Follow these directions in order to properly wash all parts of the dicing kit before using it for the first time.

WARNING

Cut Hazard
Handle blades carefully.
Failure to do so can result in cuts.

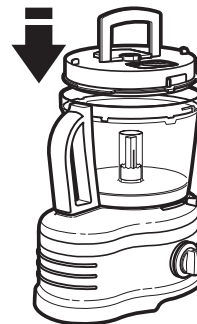


1 Using the handle, place the assembled dicing kit into the work bowl.




2

When placing kit in the work bowl, line up the kit's tab with the groove in the work bowl.

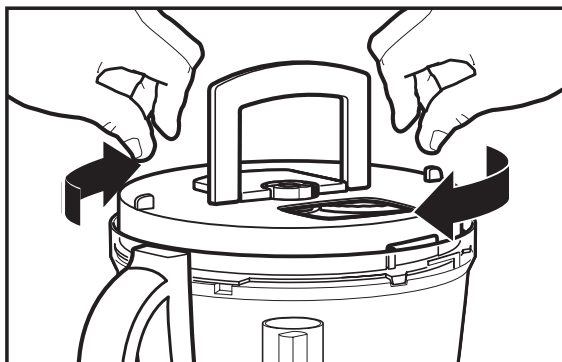


3

Rotate the dicing kit lid, using the finger tabs until it unlocks.

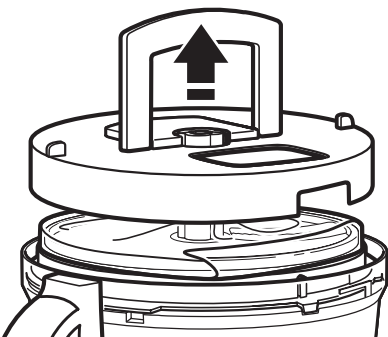

4







Using the handle, remove the dicing kit lid from the dicing kit.

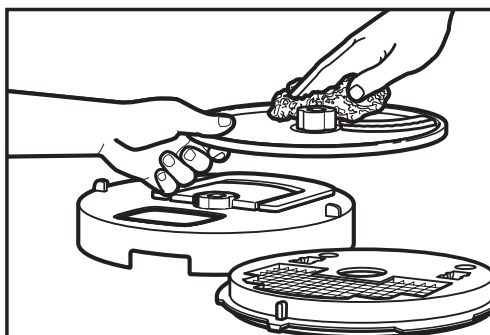

5

Clean each part of the dicing kit in the dishwasher, or with a soft cloth and warm water.

Installing/using the dicing kit

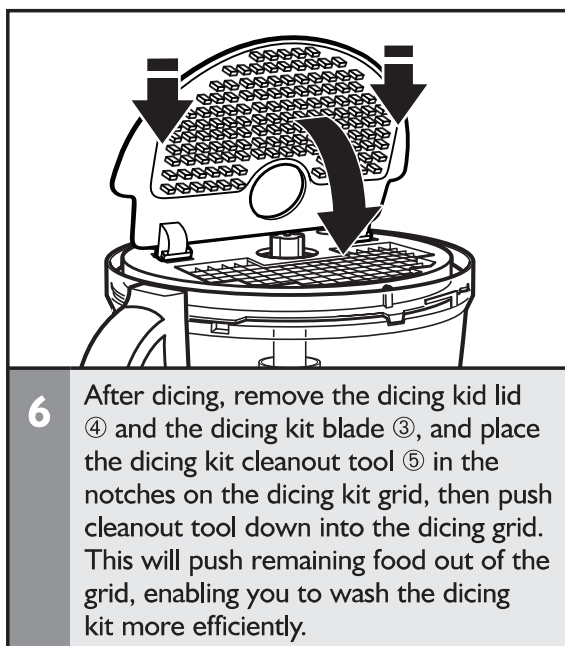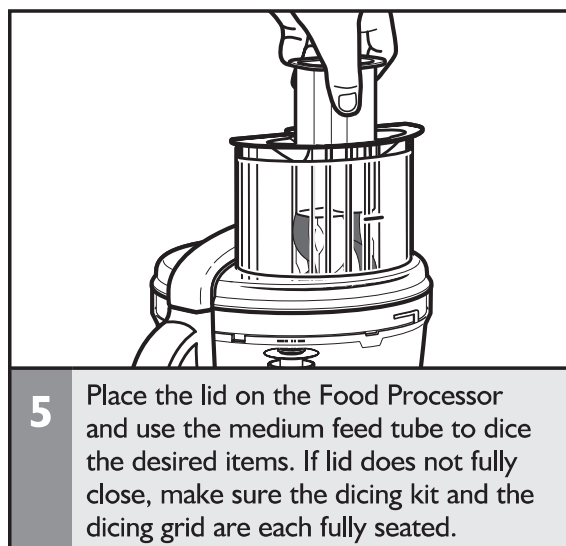
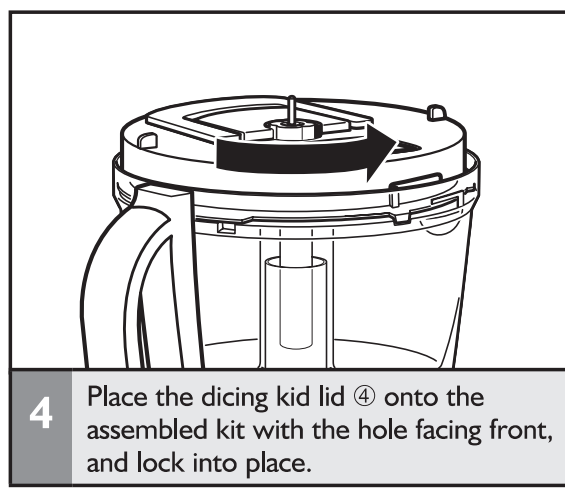
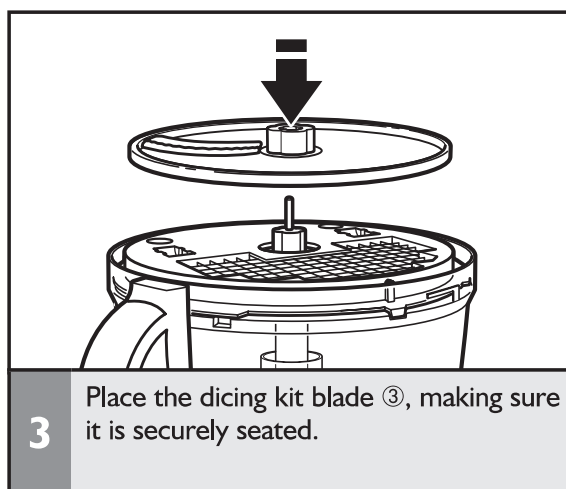
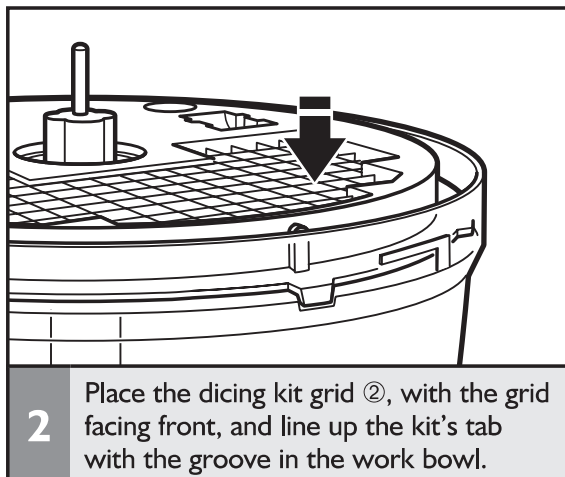
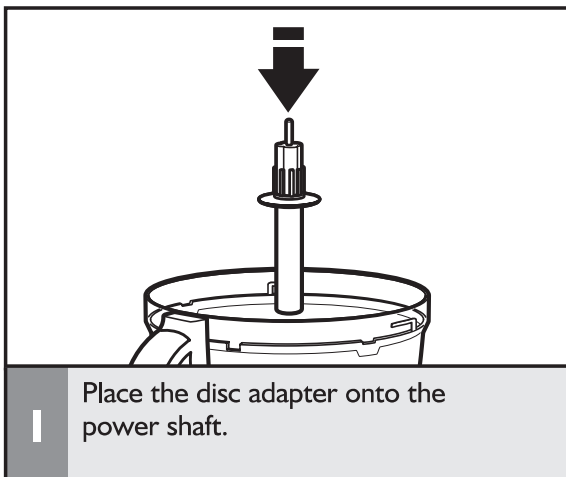


NOTE: Hard foods like carrots may require more force to remove with the dicing kit cleanout tool. It is normal for some food to remain in the grid until washing is complete.

Installing/removing the multipurpose blade






NOTE: The multipurpose blade has a spill resistant seal and can be left in work bowl, or removed before the contents are emptied.

English

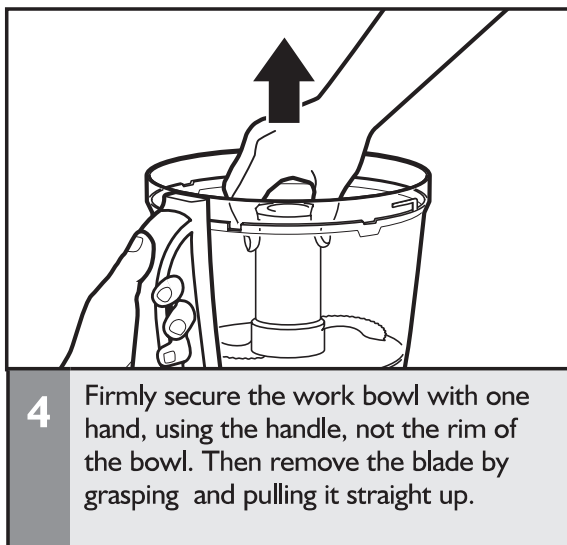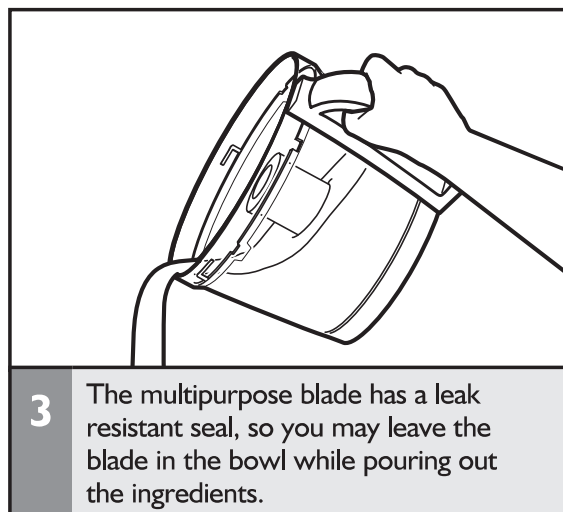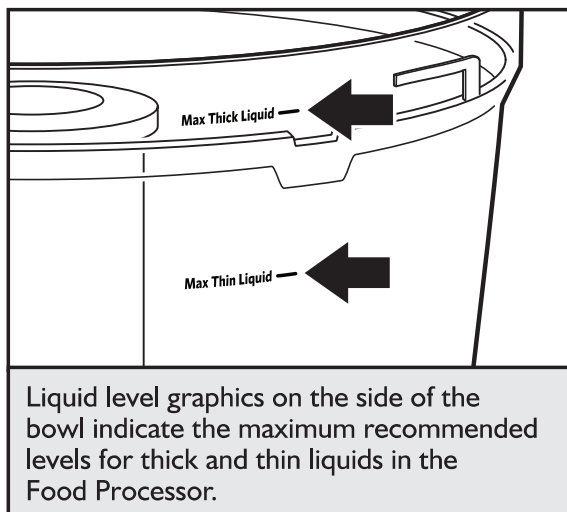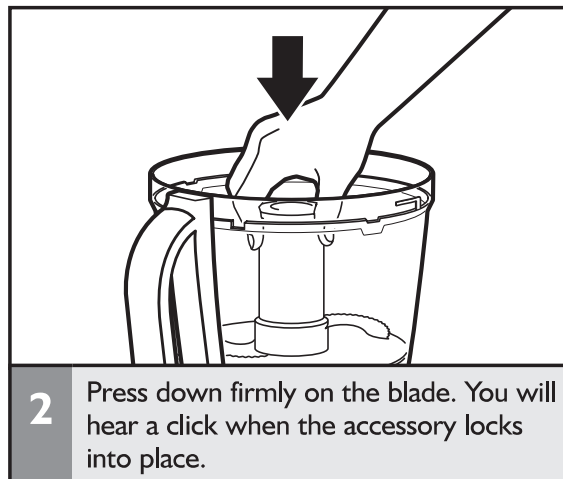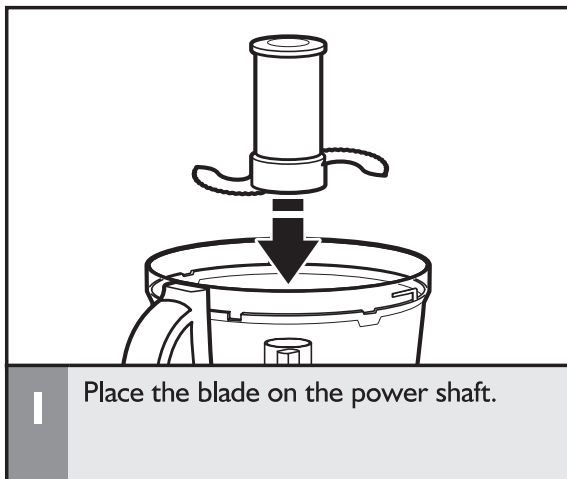

Installing/removing the prep bowl






NOTE: The prep bowl can be used only with the discs and the dicing kit.

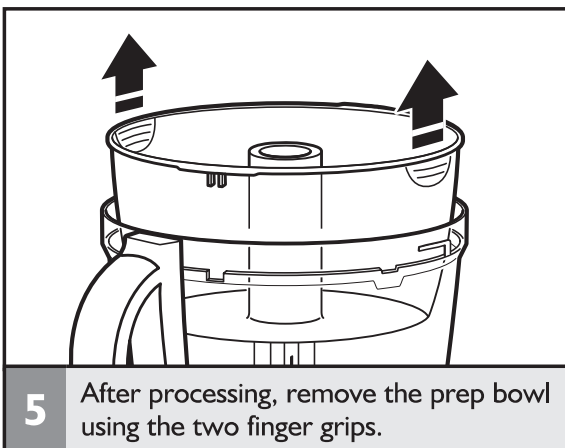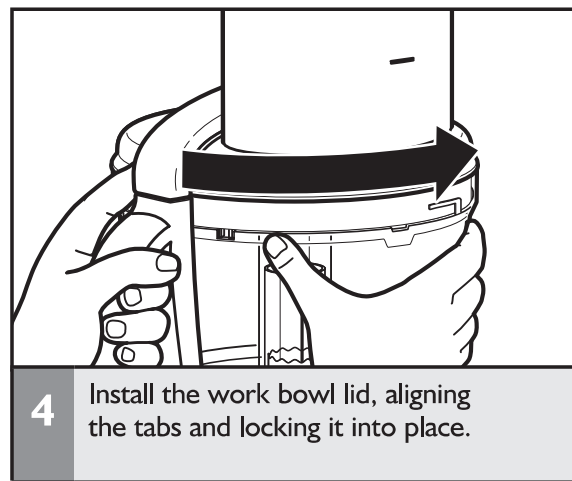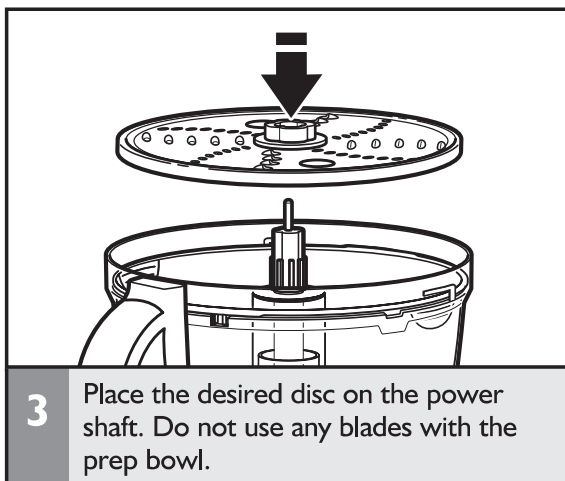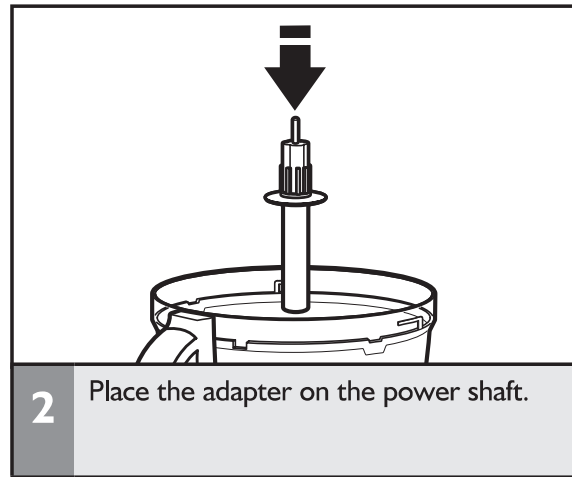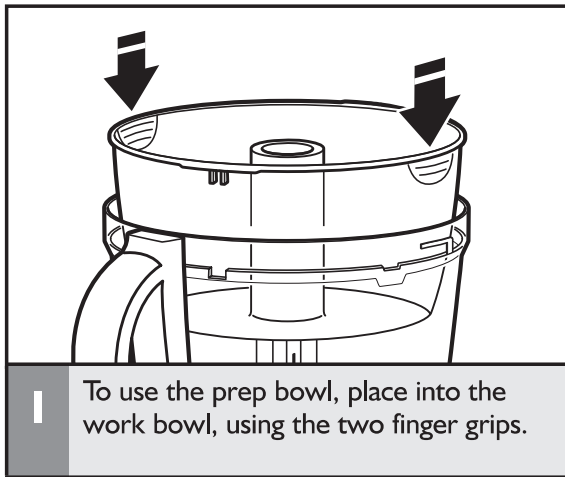

IMPORTANT: Discs and adapters must be removed before removing bowls.

Installing/removing the shredding, julienne*, and parmesan* discs

English

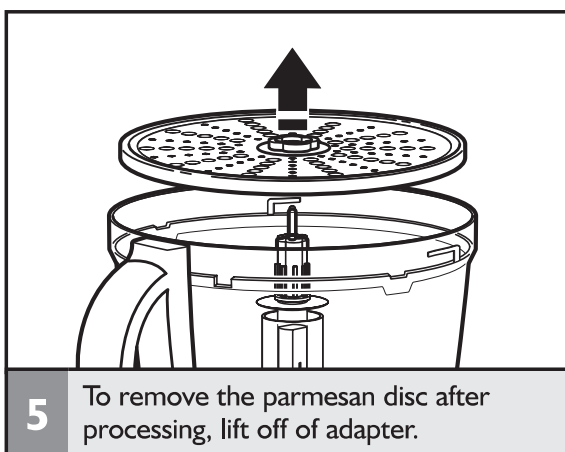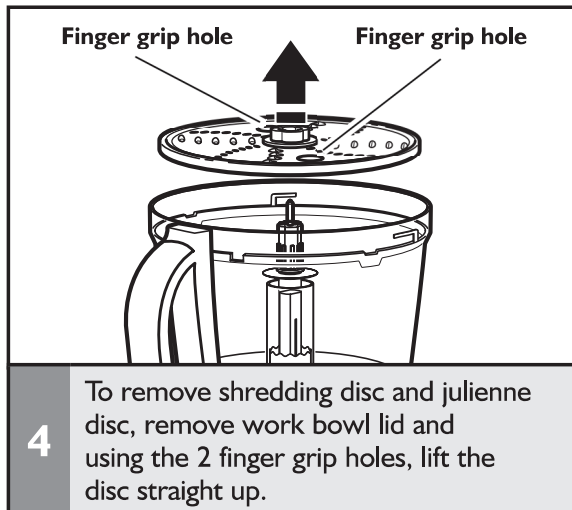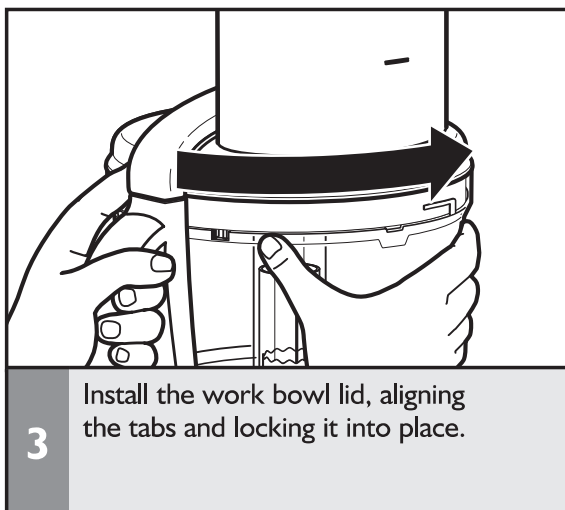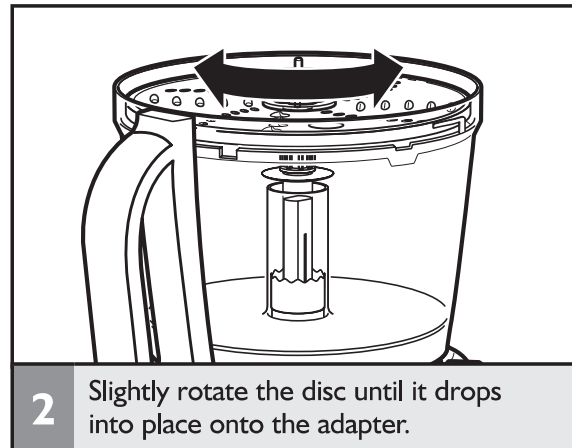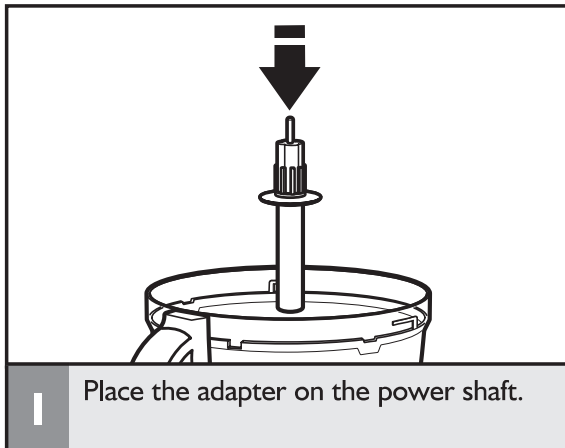


IMPORTANT: Discs and adapters must be removed before removing bowls.


* Available with select models only.

USING YOUR ACCESSORIES


Installing/removing the slicing disc

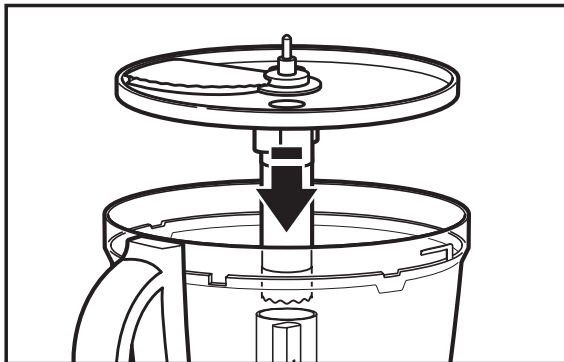


1 Place the disc on the power shaft.

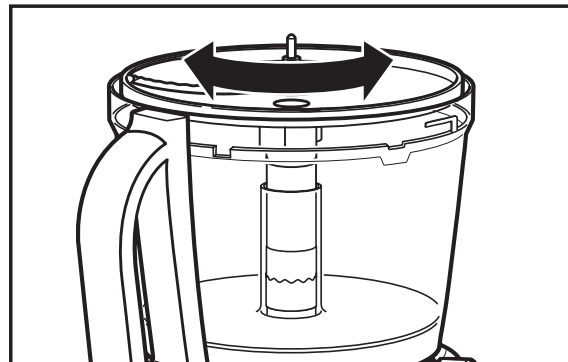

2 Slightly rotate the disc until it drops into place.

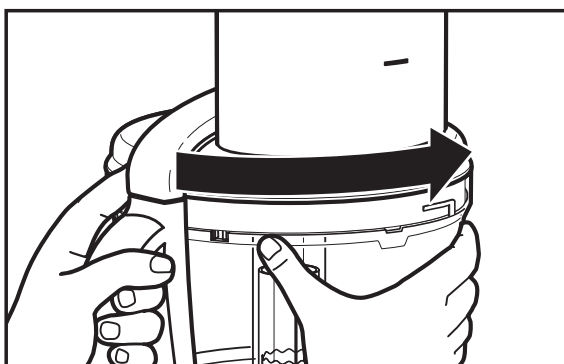

3 Install the work bowl lid, aligning the tabs and locking it into place.

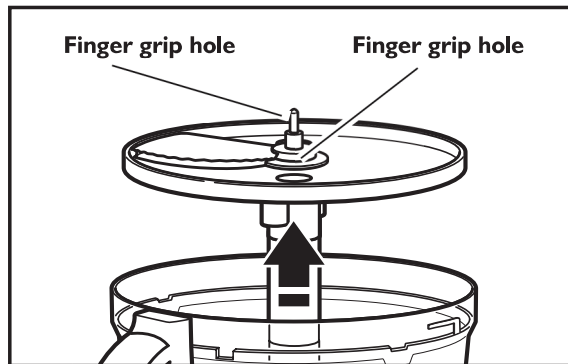


4 To remove slicing disc, remove work bowl lid and using the 2 finger grip holes, lift the disc straight up.

Adjusting the slicing thickness

NOTE: Changing thickness settings with other discs or blades installed will have no effect on operation.

Be aware, it is possible to change the thickness of your slices by changing pressure on the food item when guiding it into the feed tube. Use more pressure for a thicker slice, or use less pressure for a thinner slice.

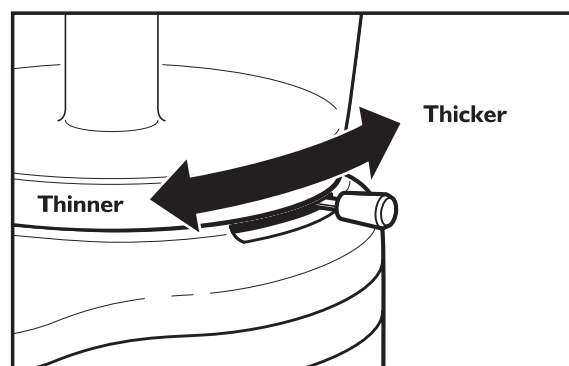


Move lever to desired thickness setting.

IMPORTANT: Discs and adapters must be removed before removing bowls.


Installing/removing the mini-bowl and mini-blade

English

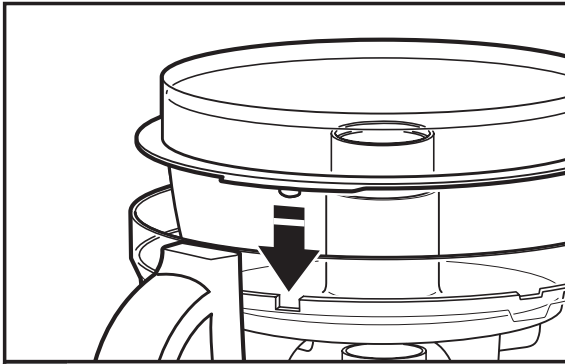


1

Place the mini-bowl inside the work bowl, making sure the tab on the mini-bowl lines up with the notch in the work bowl.

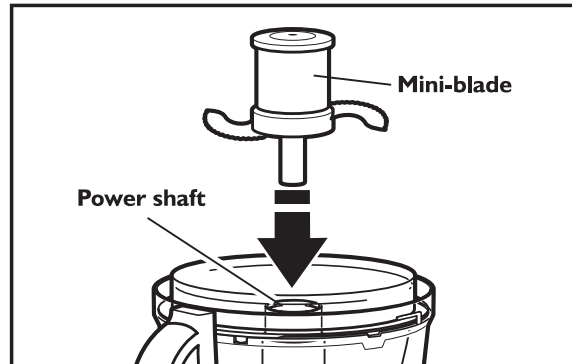


2

Press down firmly on the mini-blade. You will hear a click when it locks into place.

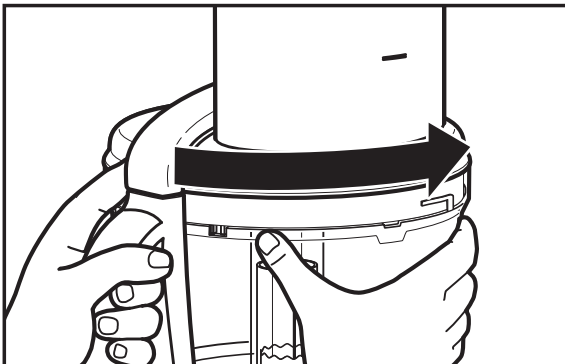


3

Install the work bowl lid, aligning the tabs and locking it into place.

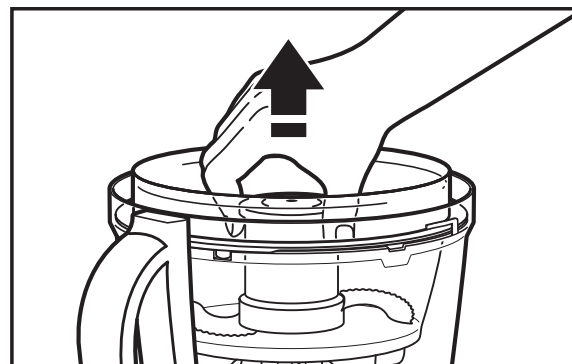

4

Remove the work bowl lid. Grasp and pull the mini-blade straight up.

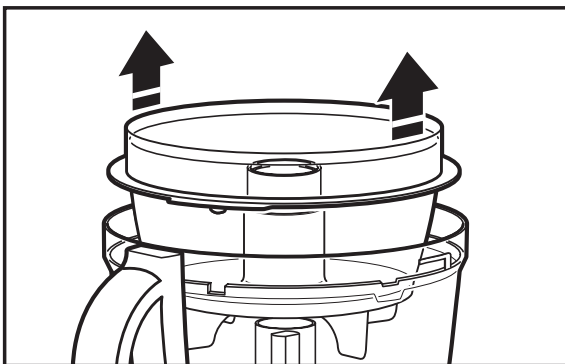


5

Using the two finger grips lift the mini-bowl up.


IMPORTANT: Discs and adapters must be removed before removing bowls.

USING YOUR ACCESSORIES


Installing/removing the egg whip* or dough blade

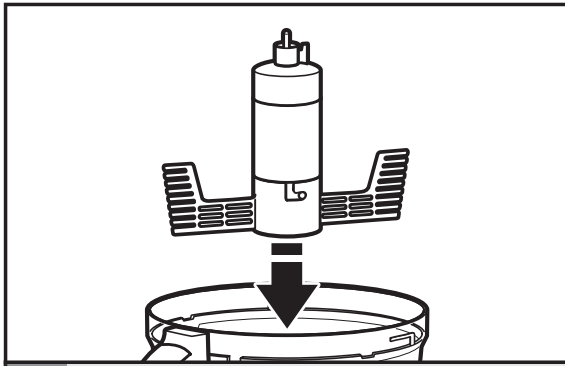

1 Place the egg whip or dough blade onto power shaft.

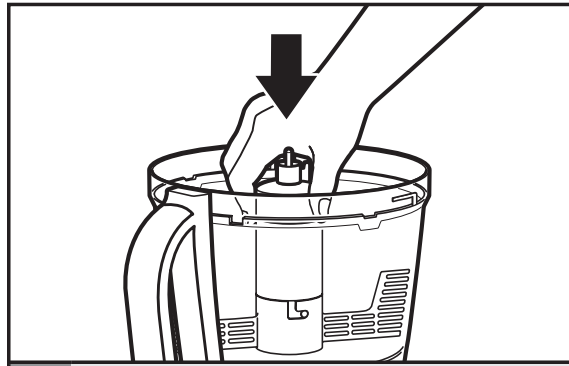

2 Press down firmly on the egg whip or dough blade. You will hear a click when the accessory locks into place.

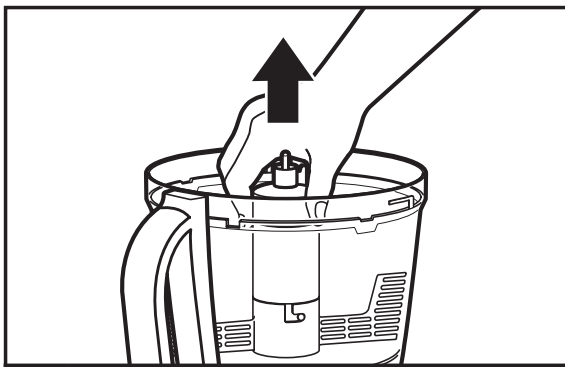






3 After processing, firmly grasp egg whip or dough blade and lift straight up.

IMPORTANT: Discs and adapters must be removed before removing bowls.

* Available with select models only.

Installing/removing the citrus press*

English

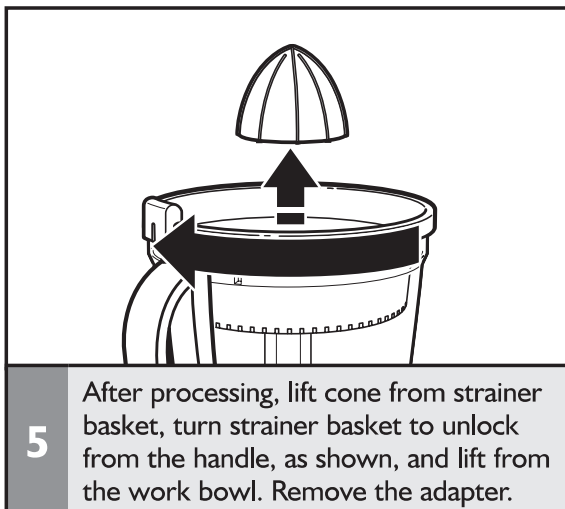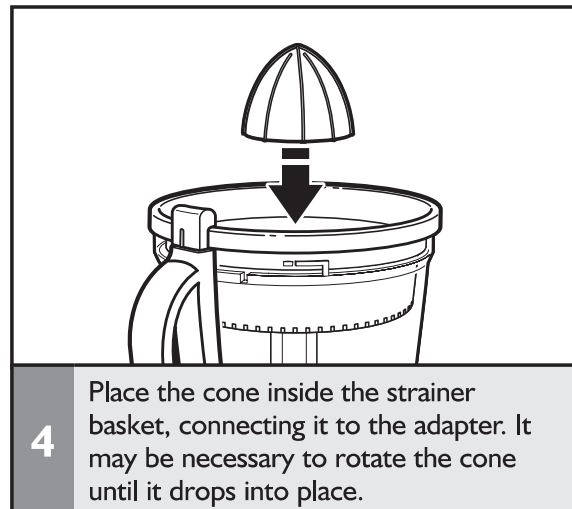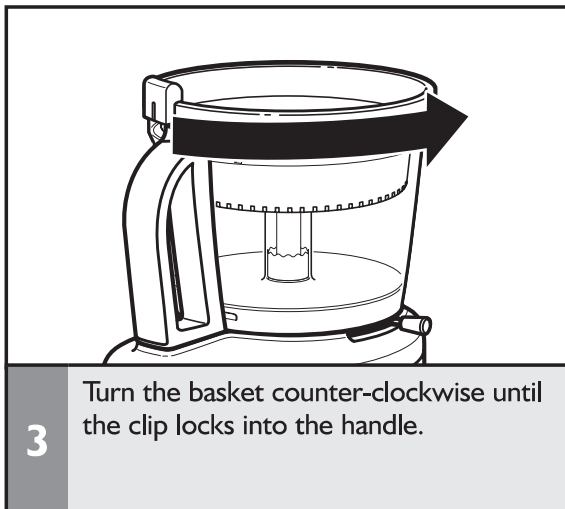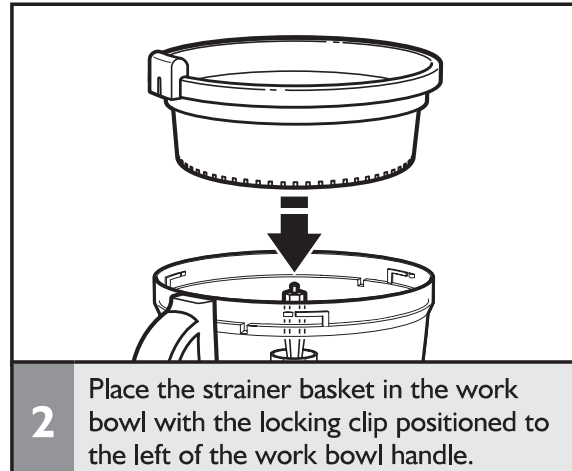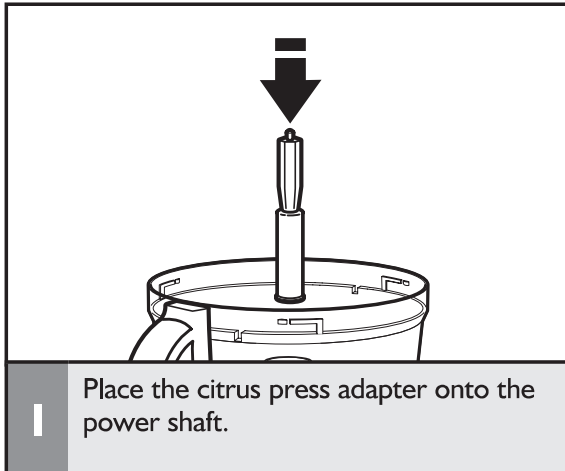


IMPORTANT: Discs and adapters must be removed before removing bowls.

* Available with select models only.


USING YOUR ACCESSORIES

Removing accessories and work bowl


IMPORTANT: Be sure the Food Processor is off and unplugged before disassembling.

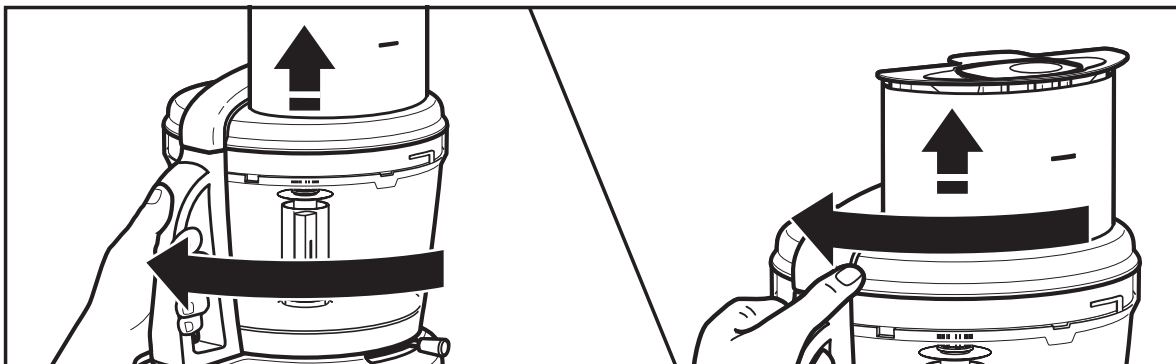


- 1** **To remove work bowl from Food Processor before removing accessories:** Turn the work bowl and lift to remove, and then turn and lift the lid.
To remove accessories before removing work bowl from Food Processor: Turn the work bowl cover to unlock, as shown, and lift the lid to remove, continuing next steps with bowl still attached to Food Processor.

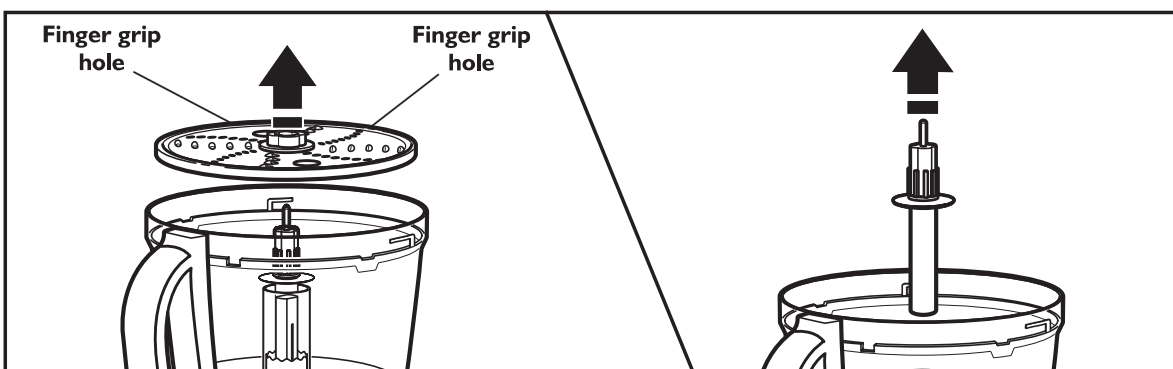

- 2** **To remove disc accessories:** Hold the disc by the 2 finger grips; lift it straight up. Then remove the adapter.

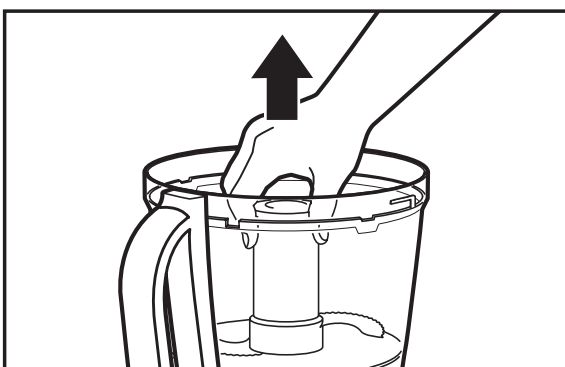

- 3** **To remove blade accessories:** Grasp blade and pull straight up.

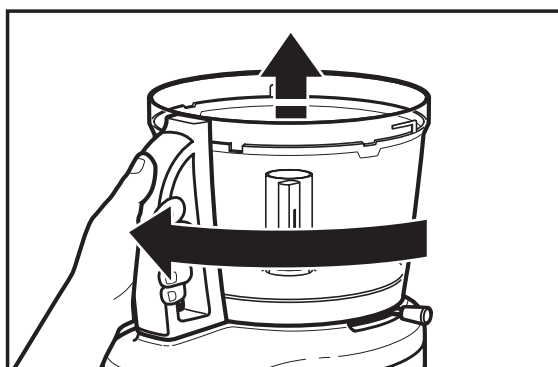

- 4** **If work bowl is still attached to Food Processor:** Turn the work bowl and lift to remove.