



Sealed Burner Rangetop Knob Kit

wolfappliance.com 800.222.7820

CONTENTS

Knobs

Note: Depending on the model, certain knobs may be included with this kit but not used.

TOOLS REQUIRED

Phillips screwdriver


INSTALLING KNOBS

- 1 Remove the knobs from the packaging, and discard the packaging material.
- 2 On the unit, use the icon etched next to each bezel to determine the correct placement of each knob.

ICON	FEATURE	KNOB TEXT
	Sealed burners	OFF HI - LO Simmer HI - LO
	Infrared griddle	100 to 450
	Infrared charbroiler	OFF and HI
	French top	OFF and HI
	Wok	OFF, LO, and HI

- 3 Discard any additional knobs that are not necessary for the unit.

- 4 Test pushing in and turning the knobs. If any of the knobs "stick" when pressed, remove the knob and slightly loosen the two bezel screws. When the alignment is correct, tighten the screws and install the knob.

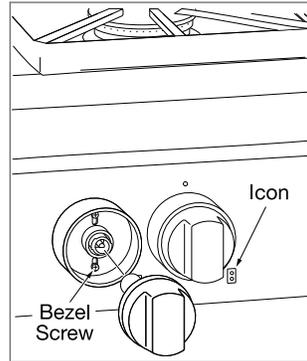

CAUTION

Do not attempt to clean knobs or bezels in a dishwasher. Do not soak or use abrasive cleaners. To clean knobs or bezels, wipe with a damp cloth and mild detergent and water. Rinse and dry.

