




BEYOND
fire


INSTALLATION INSTRUCTIONS

FACEPLATES


AC01020, AC01021, AC01022

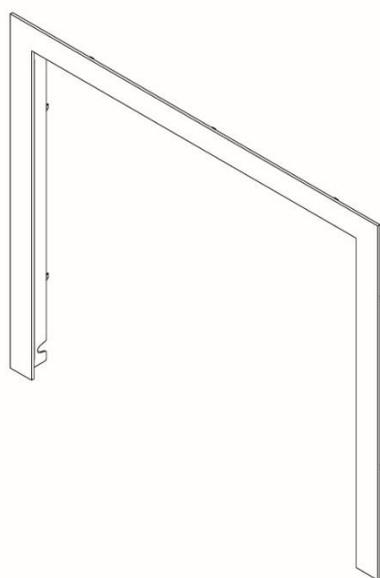

AC01020

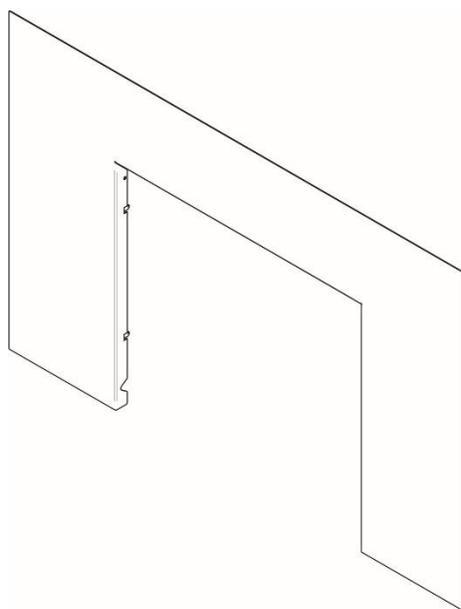

AC01021

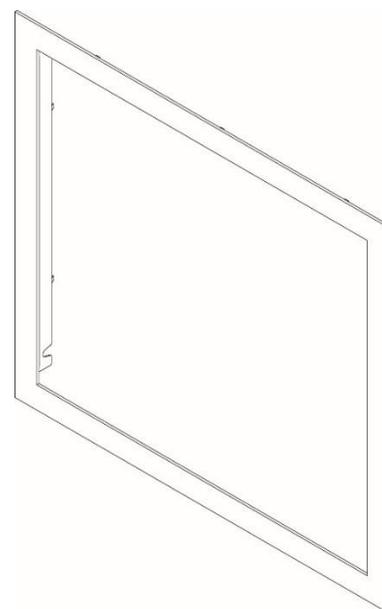


AC01022

WARNING :


The faceplate should never come into contact with masonry products such as cement, acid or any other product containing abrasives. Damages and discolouration caused by these products will void the warranty.

Dimensions :


AC01020

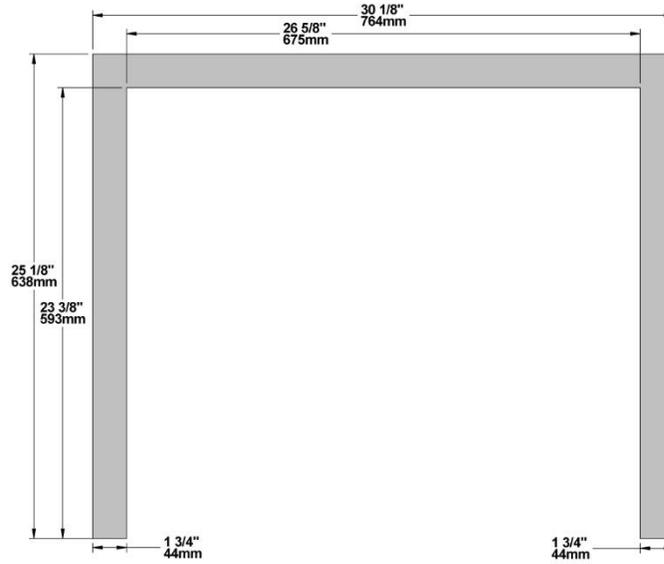

AC01021

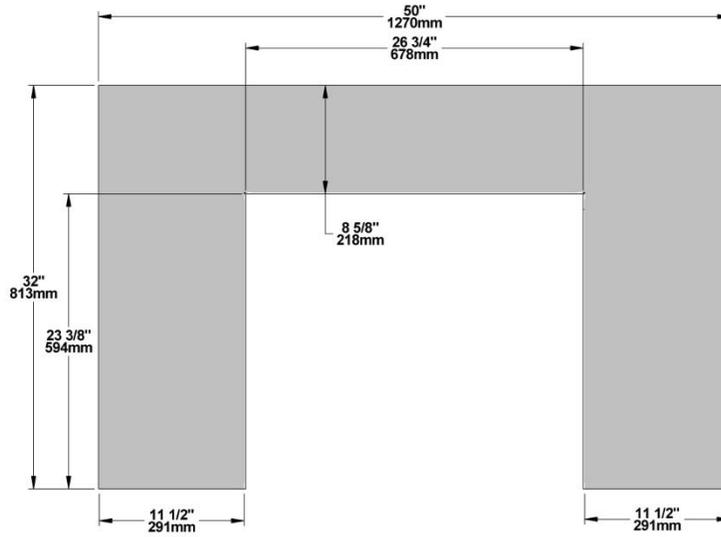


AC01022

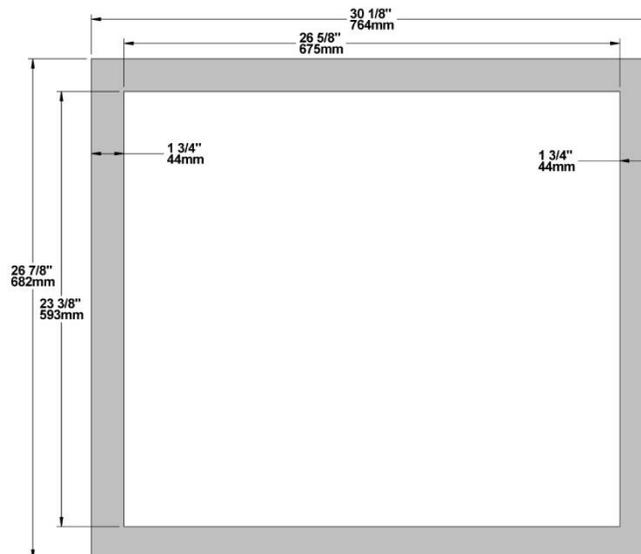


Installation Instruction – AC01020

1. Align the clips on the faceplate with the notches on the insert. Push the front panel onto the insert until it snaps onto it.


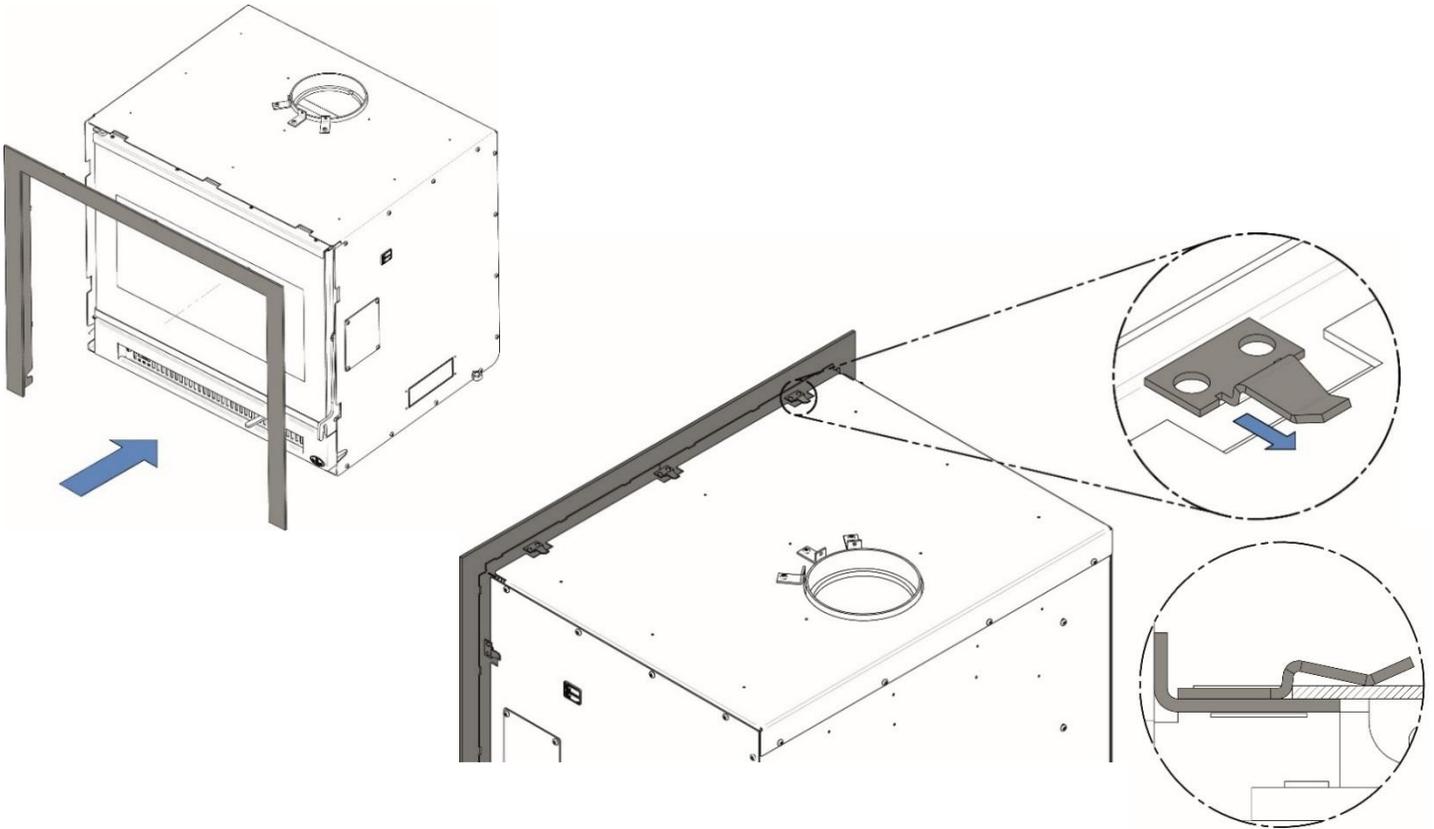


2. Make sure the fan cord is out on the side, in the opening between the front and the insert.


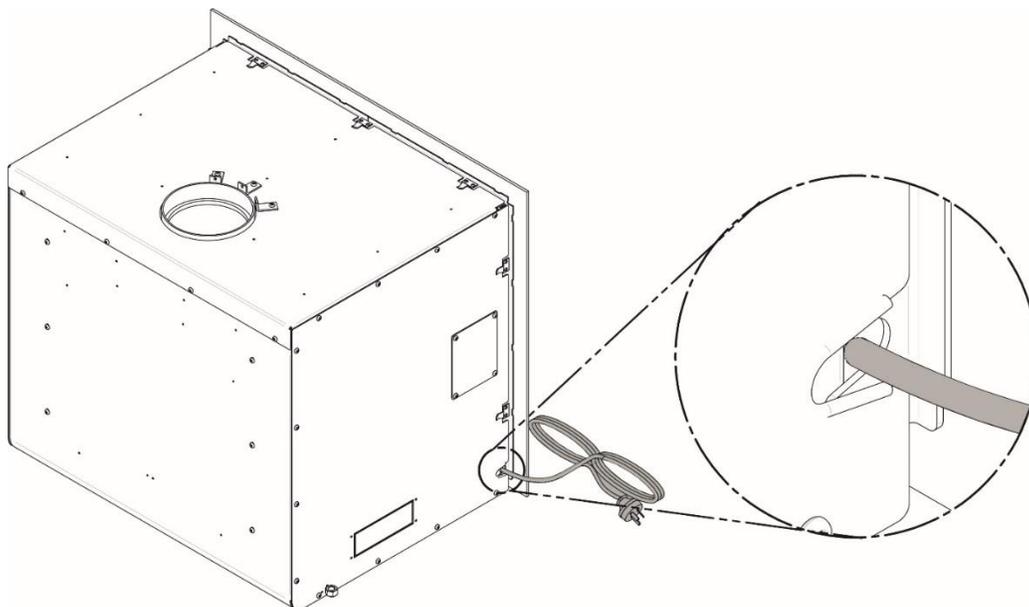


Installation Instruction – AC01021


1. This faceplate can be cut according to the size of the hearth hole. To do this, two solutions are available to you.
 - a) Place the faceplate temporarily where it will be installed. Draw the outline of your chimney to guide you in cutting your facade. Cut the faceplate along the line previously drawn.
 - b) Take the measurements of the hole, then cut the faceplate according to the measures taken.

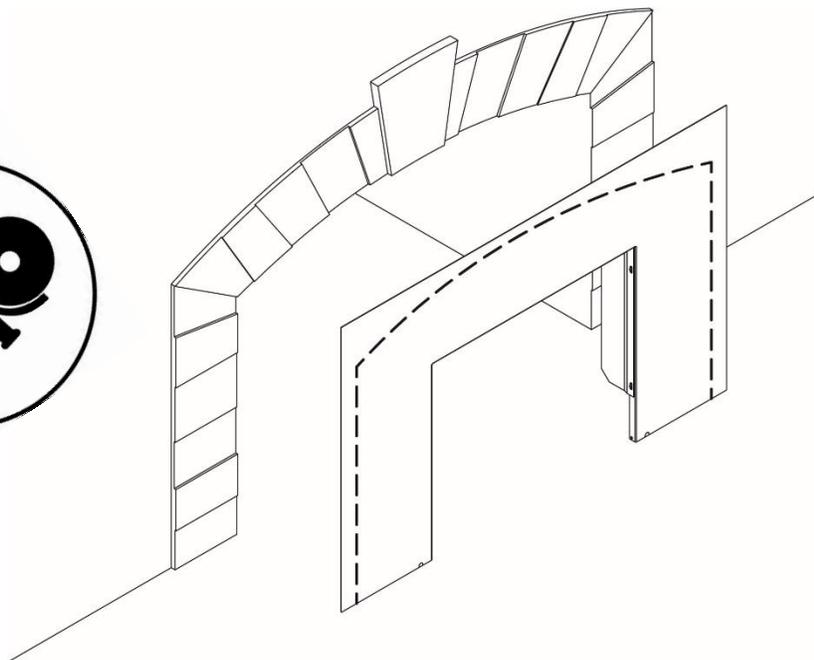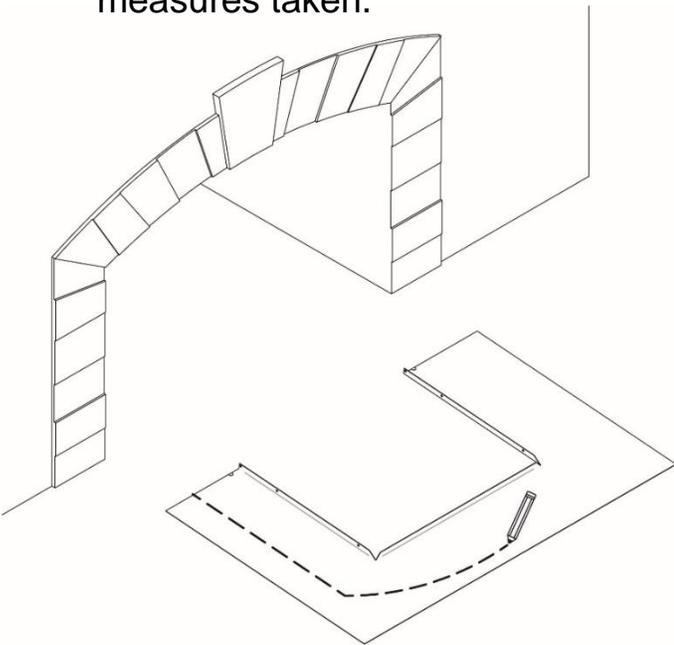

2. Align the clips on the faceplate with the notches on the insert. Push the front panel onto the insert until it snaps onto it.

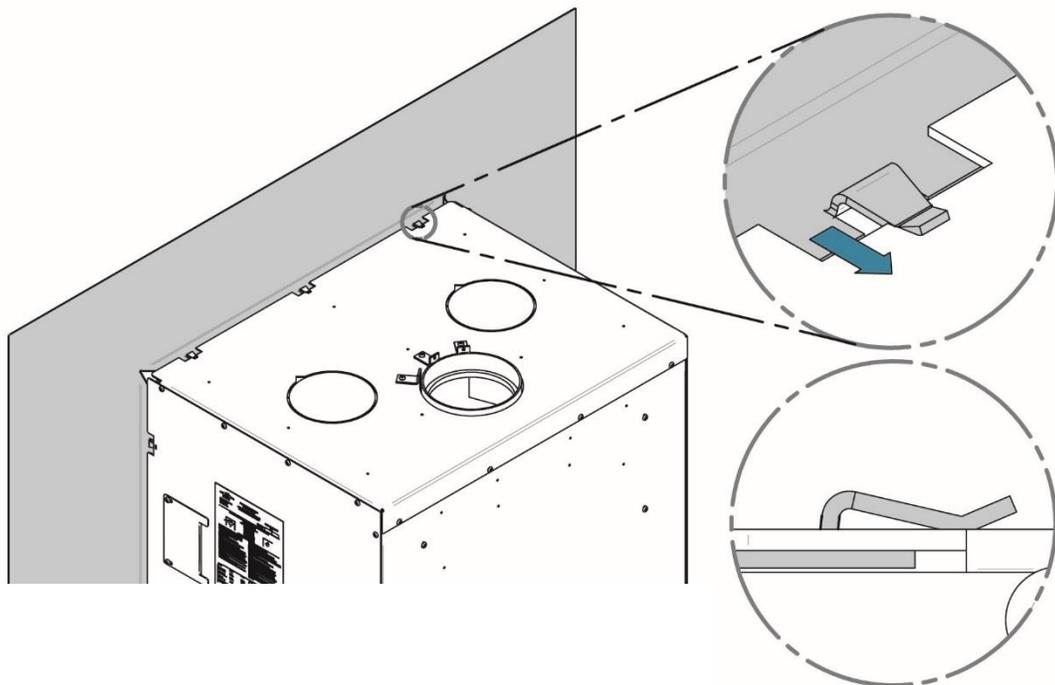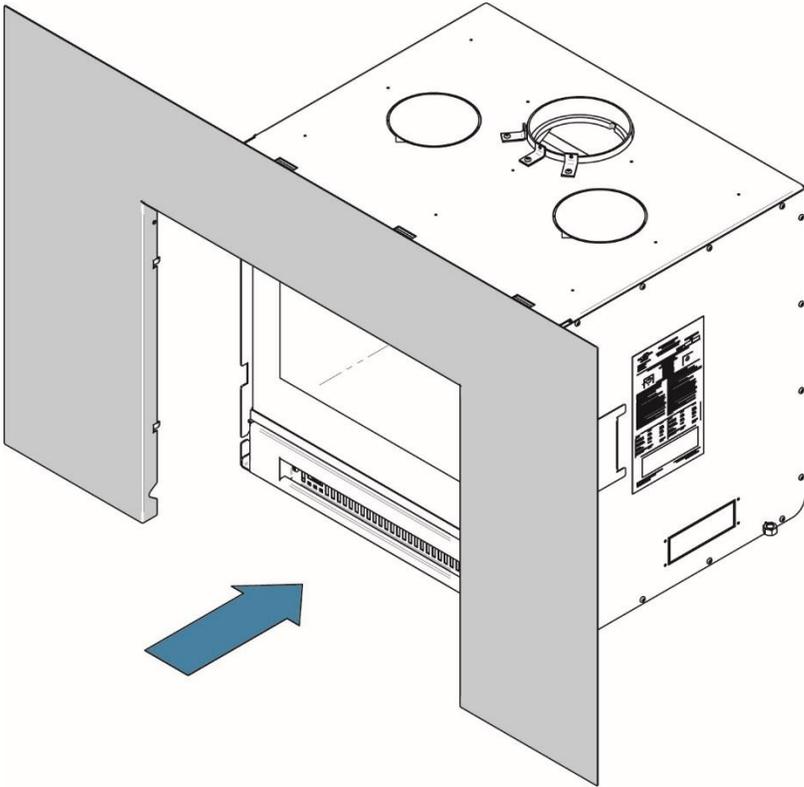


3. Make sure the fan cord is out on the side, in the opening between the front and the insert.

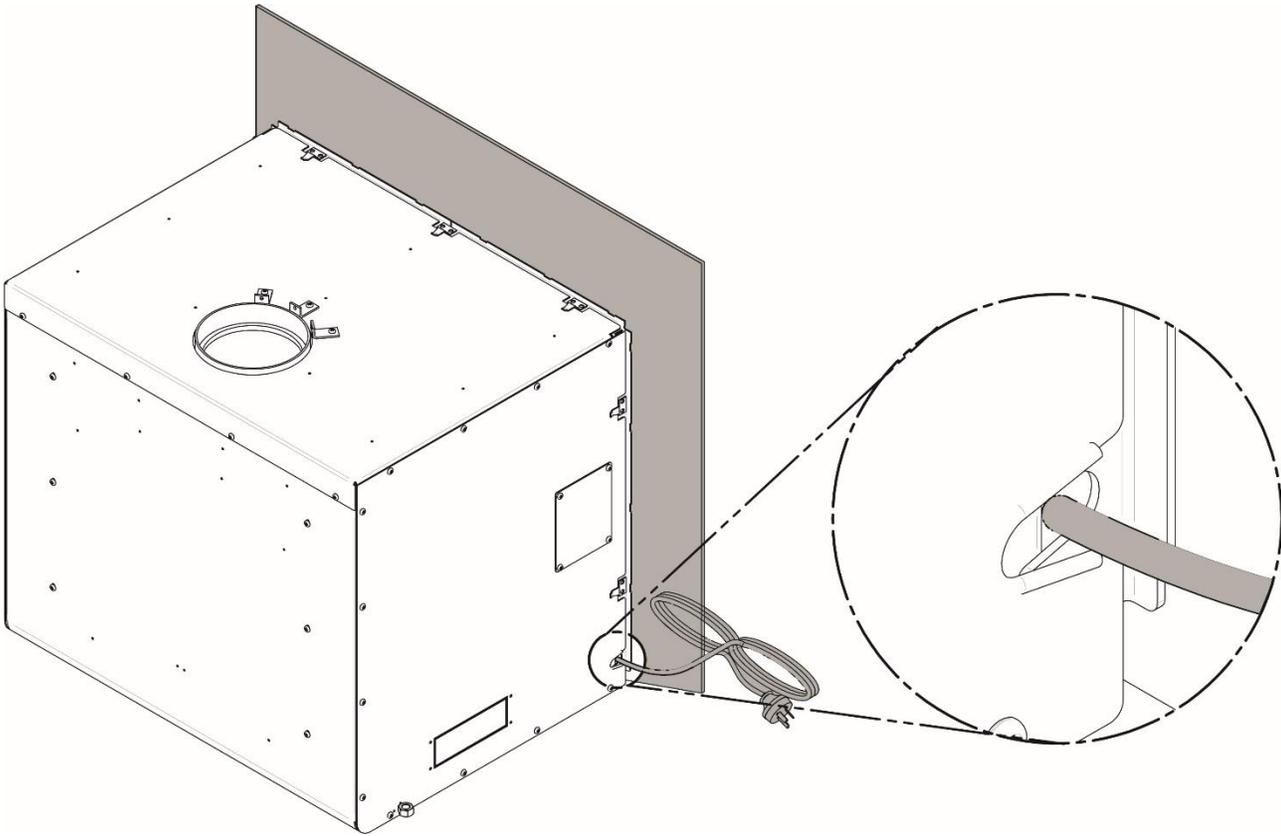


Installation Instruction – AC01022

1. Wedge the decorative bracket between the bottom of the insert and the insert jacket.

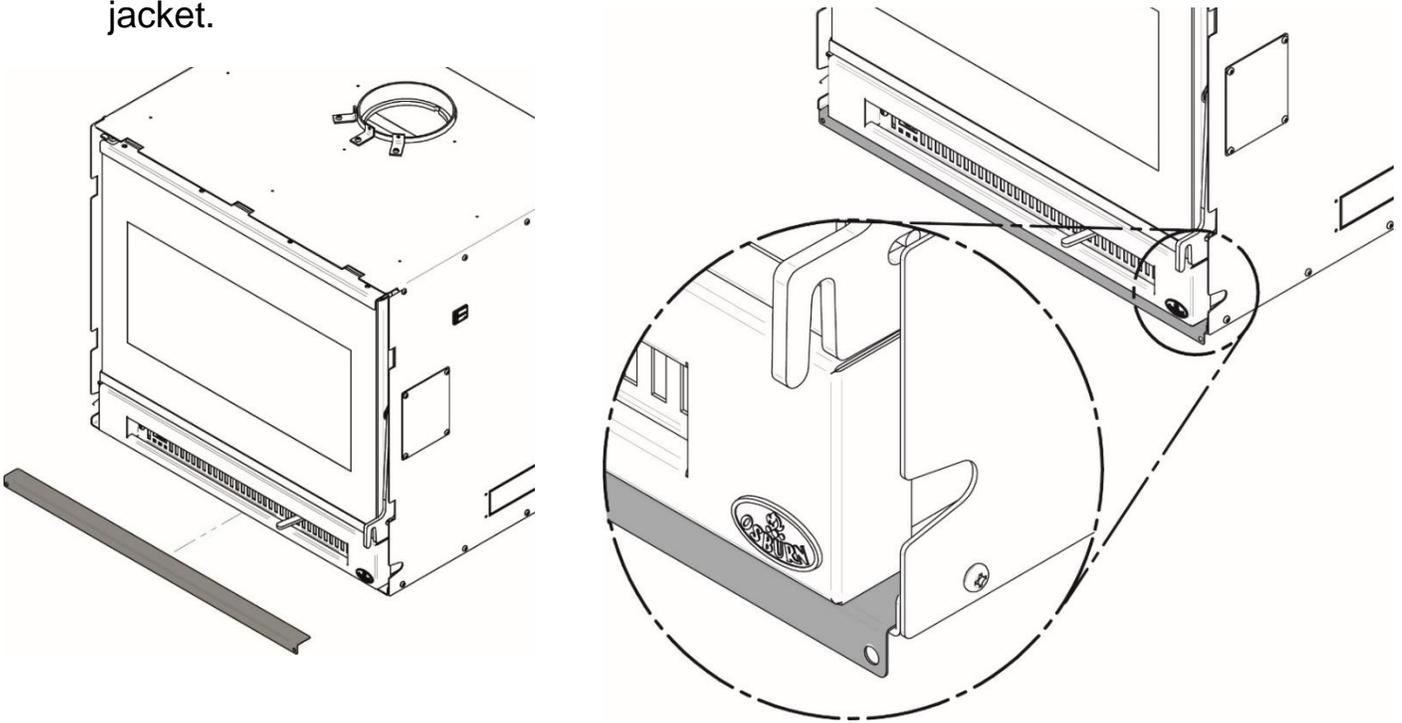

2. Align the clips on the faceplate with the notches on the insert. Push the front panel onto the insert until it snaps onto it.

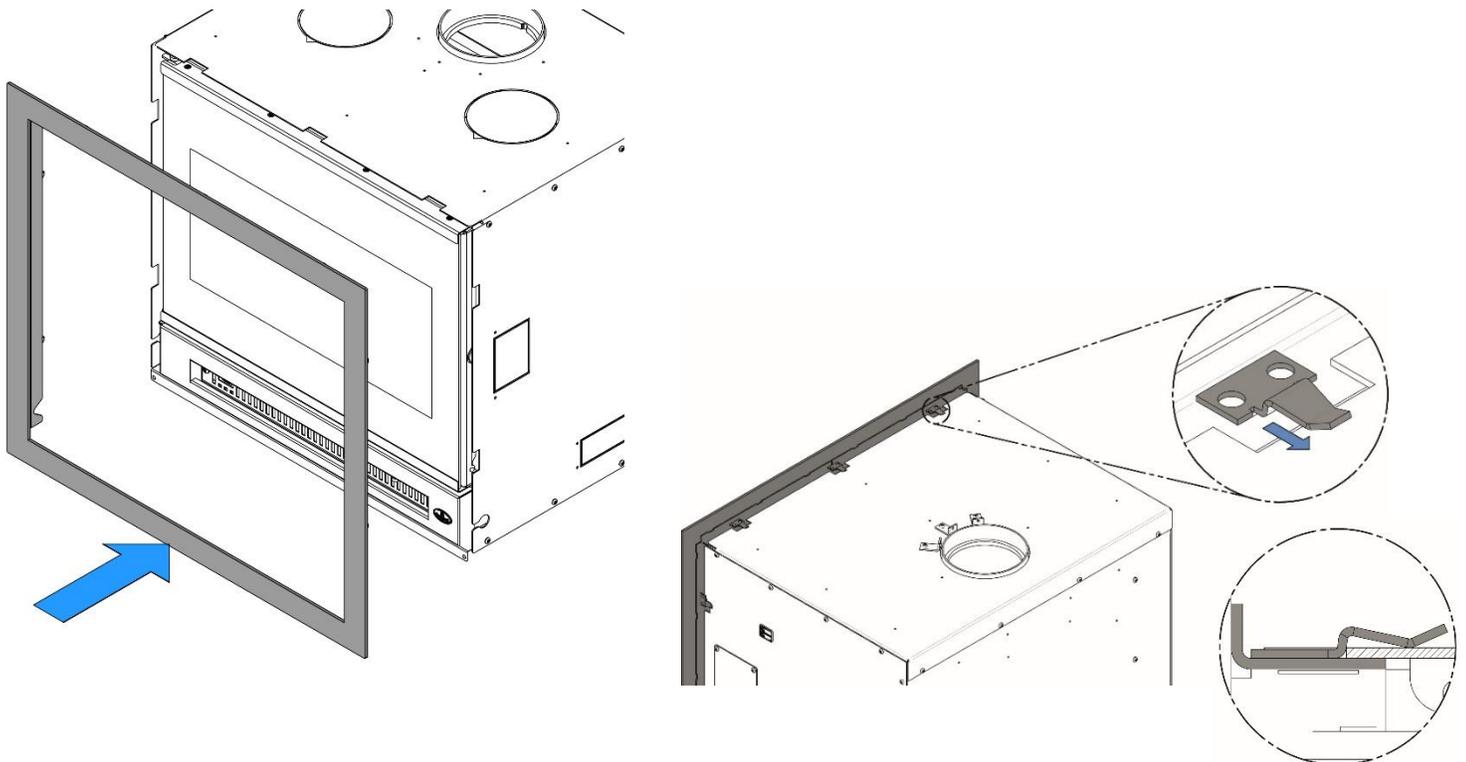

3. Make sure the fan cord is out on the side, in the opening between the front and the insert.

