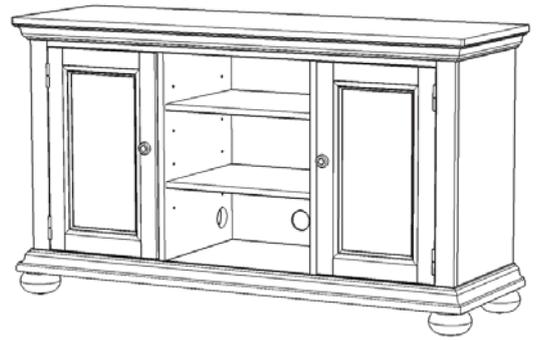


**Entertainment Center****IMPORTANT**

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

**Part List**

A.  
Top  
1 pc.



B.  
Base  
1 pc.




C.  
Front Rail  
1 pc.




D.  
Back Rail  
1 pc.




I.  
Back Panel  
2 pcs.

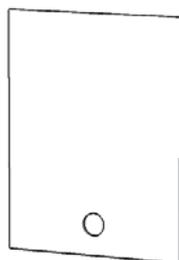

 J.  
Back Panel  
1 pc.



 K.  
Shelf  
4 pcs.



L.  
Shelf  
2 pcs.

For assembly see instructions in carton 88 5427 102.