 


MOTOMOTION
FASHION. FORWARD. FURNITURE.

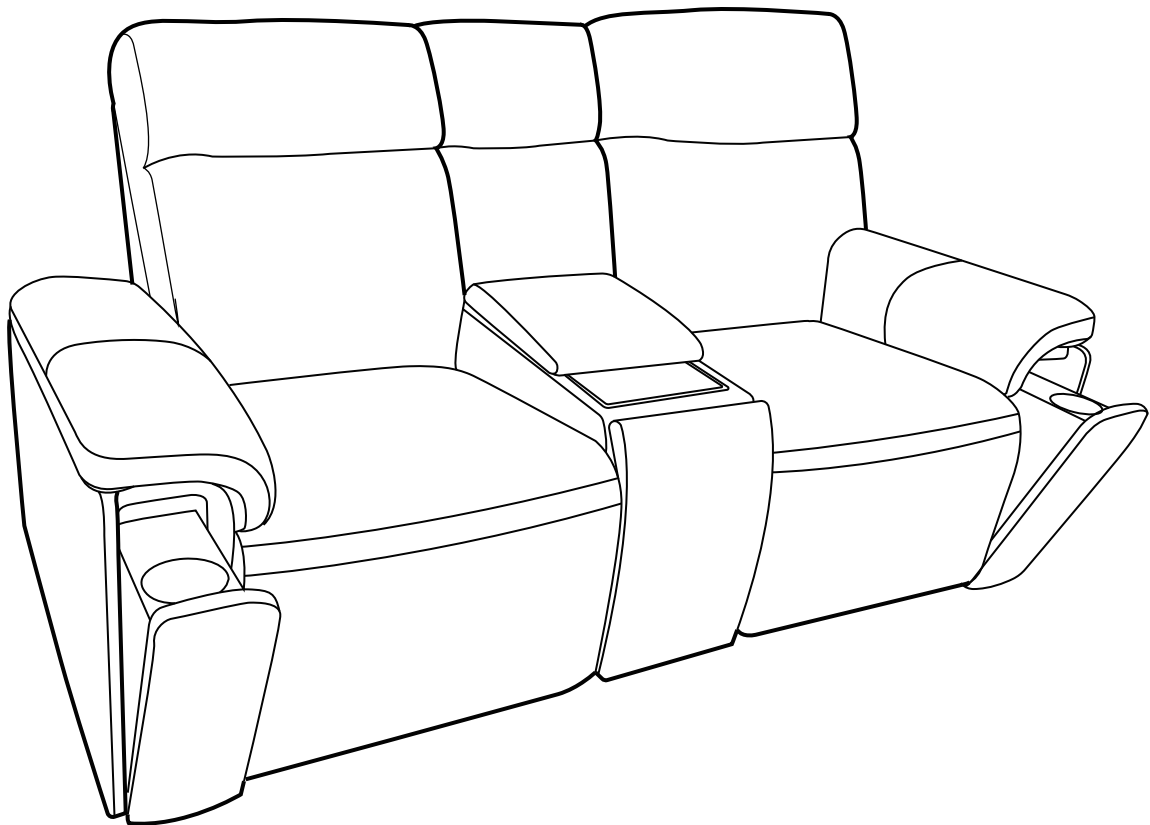

USER'S MANUAL

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE.

WARNING: To reduce the risk of burns, fire, electric shock, or injury:

1. DANGER: Unplug the unit before cleaning to reduce the risk of electric shock.
2. Unplug before installing or removing parts.
3. Close supervision is necessary when used by or near children or individuals with disabilities.
4. Use this product only as described in these instructions. Do not use attachments not recommended by the manufacturer.
5. Do not operate the unit if the power cord or plug is damaged, if it is not functioning properly, if it has been dropped, or if it has been immersed in water.
6. Keep the power cord away from heated surfaces.
7. Never drop or insert objects into any opening.
8. Do not use outdoors. For indoor residential use only.
9. To disconnect, set all controls to the OFF position, then remove the plug from the outlet.
10. WARNING: Risk of injury. Keep children away from the extended footrest.
11. WARNING: Risk of injury. Do not use this equipment to support video devices such as TVs or computer monitors.

DOUBLE INSULATION MAINTENANCE

A double-insulated product has two separate insulation systems and does not require grounding. No grounding is provided on such a product, and none should be added. Any service or repair on a double-insulated product requires great care and should be performed only by qualified personnel. Replacement parts must be identical to the original parts.

KEEP THESE INSTRUCTIONS.

 
 
MOTOMOTION Assembly Instructions—Loveseat with Console

FASHION. FORWARD. FURNITURE.

Thank you for purchasing this quality product. Please check all packaging carefully, as some parts may have come loose into the box during transport.

The box contains two bags with the sides of the sofa. Keep them aside for assembly.


Read the following instructions carefully before beginning assembly.

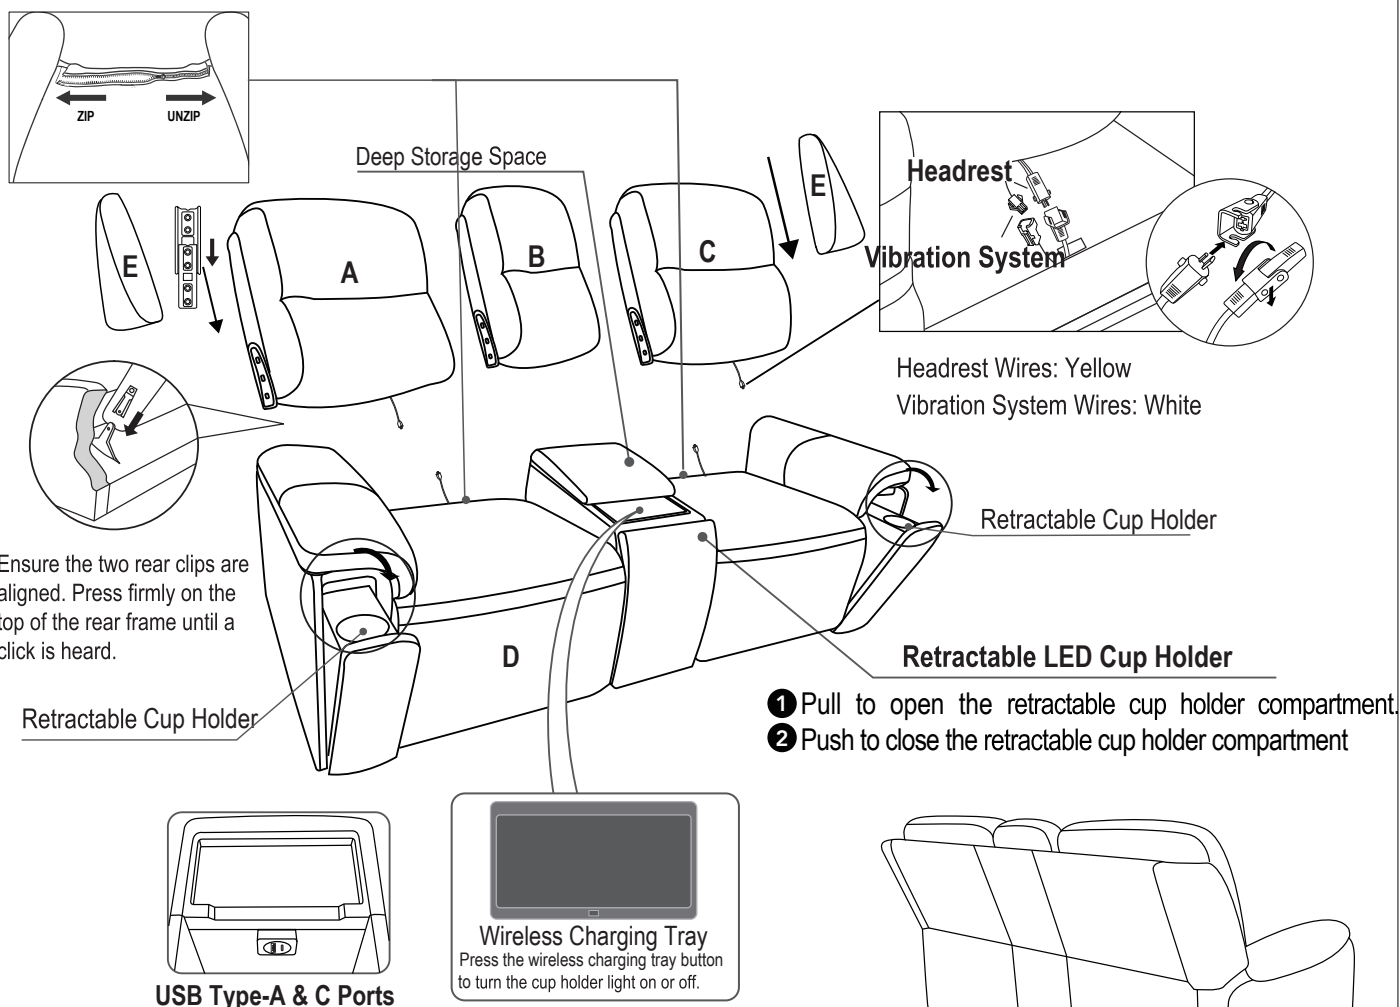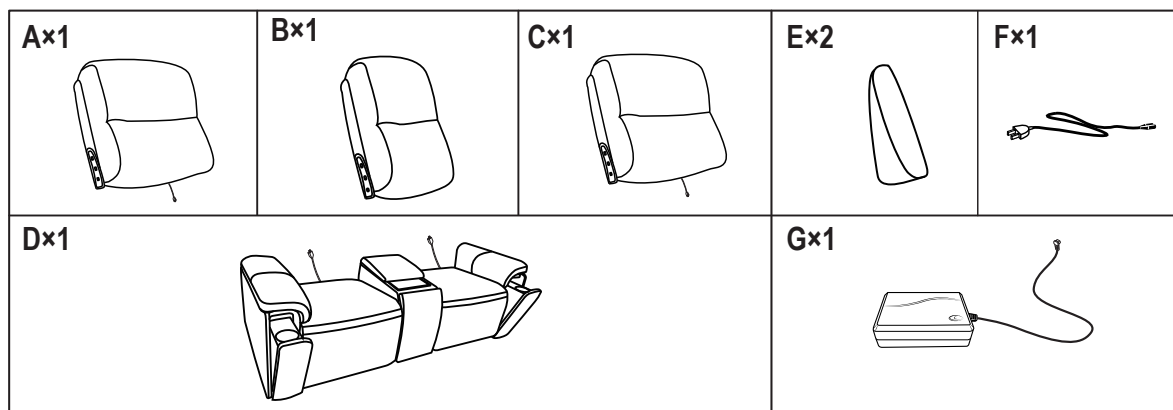

Do not plug the power cord into an outlet until the unit is fully assembled and set in place.


NOTE:

 - 1) To avoid electric shock or damage to the product, plug the power cord only into a grounded outlet.
- 2) Read the instruction manual carefully before using the product.




WARNING: Read the instructions below carefully before operating this motorized unit.
This equipment must not be used or operated by children.

 Audio Amplifier

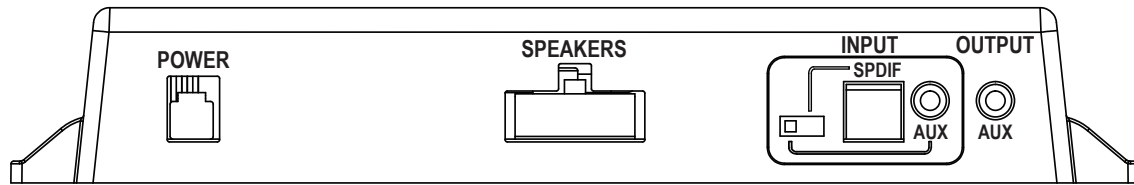

 Located under the loveseat console, the audio amplifier includes one AUX input, one AUX output, and one S/PDIF port. Multiple devices can be connected using 3.5 mm AUX cables: connect the audio source to the AUX input, then connect the AUX output to the AUX input of the next amplifier. 3.5 mm AUX cables are sold separately.

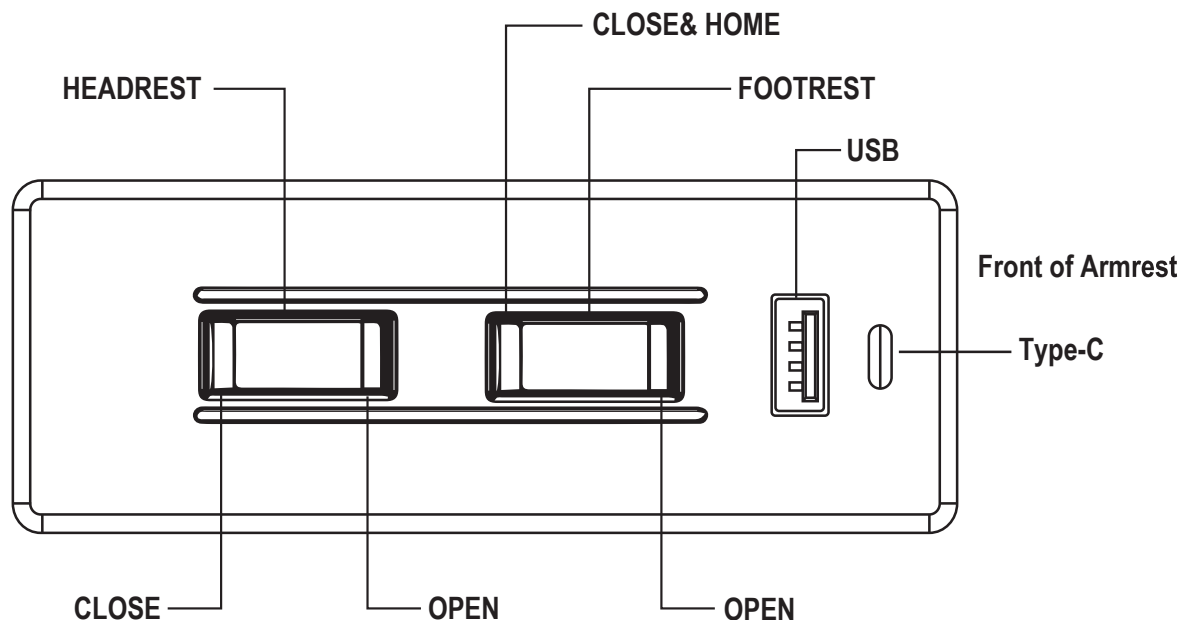


Ensure there are no obstacles in the path of the mechanism before or during operation.

To Recline: Sit on the chair and press the front of the button near the footrest to raise it smoothly and recline the chair to the desired position. To return the footrest to vertical position, press the back of the same button.

To Adjust the Headrest: Press the front of the button near the backrest to raise the headrest smoothly and set it to the desired position. To lower it and return it to the original position, press the back of the same button.

To Close All Functions: To simultaneously return the headrest, footrest, and lumbar support to their original positions, press and hold the back side of the button closest to the footrest.

 Audio Control Panel

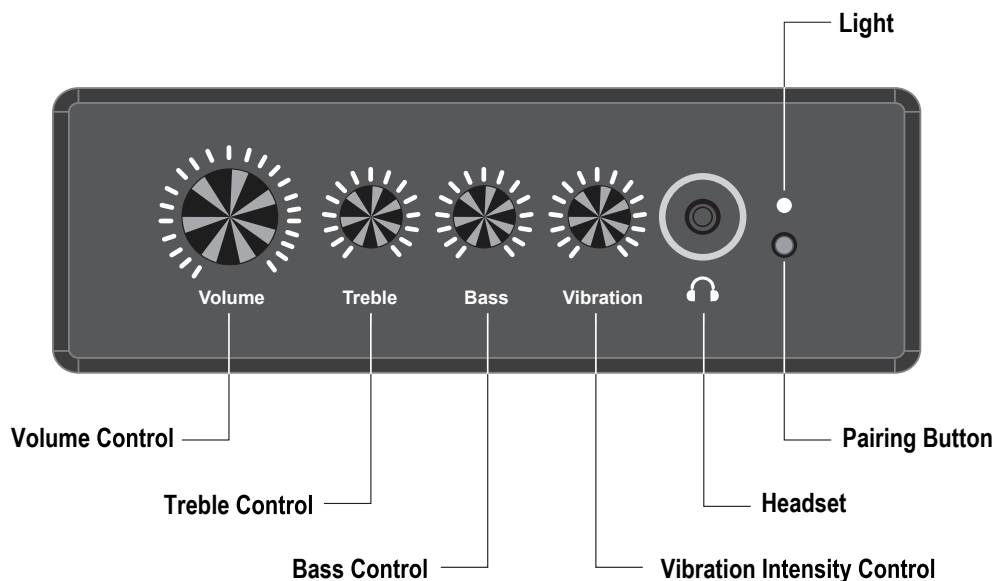

Turning On/Off the Speaker

Press and hold the volume adjustment knob to turn on the speaker. Press and hold again to turn off the speaker.

Wireless Connection Pairing Mode

Press and hold the pairing button (blue light flashes) to initiate pairing with Moto Media System. Once connected, the blue light stays on and you will hear the voice prompt: "Connected." If disconnected, the blue light will turn off and you will hear the voice prompt: "Disconnected."

Switching Broadcast Mode

Press the pairing button twice quickly; you will hear the voice prompt: "Broadcast Mode." When connected, the red light stays on. Press the pairing button twice quickly again, and you will hear the voice prompt: "Broadcast Off," which exits the broadcast mode.

2. After the device connects via wireless connection, press the pairing button twice quickly (red light flashes) to enter broadcast mode; the blue light will turn purple. Press the pairing button twice quickly again to exit broadcast mode; the purple light will turn back to blue.

Using Broadcast Mode

When a device such as a phone or TV is connected to the wireless button of Sofa A, press the pairing button twice quickly to switch to broadcast mode (purple light stays on). Then turn on the Sofa B speaker and press the pairing button twice quickly to switch it to broadcast mode (red light stays on). Sofa A will act as the signal source, and Sofa B will sync to play the audio or video from Sofa A.

Notes

1. Wireless connection search will automatically end after three minutes without connecting to any devices, and the flashing light will turn off. If you press the button during the flashing period, the search will end.
2. Wireless connection mode has higher priority than broadcast mode. In broadcast mode, if different devices connect via wireless connection to play audio or video, broadcast mode will stop. If no playback occurs for about 4 seconds, it will re-search for other broadcast signal sources.
3. If multiple sofas are connected to the same device via wireless connection, audio and video cannot be played simultaneously. The default is for the last connected sofa to play.

Example: If sofas A, B, and C are all in broadcast mode (red light stays on), press and hold the pairing button (red light flashes) to connect to sofa A (purple light stays on). Sofas B and C will sync to play audio or video from sofa A. If the same device connects to sofa B (purple light flashes), sofa B and C will play normally, and sofa A will stop working. If you then connect to sofa C (purple light stays on), sofa C will play normally, while sofas A and B will not work. A restart is needed for playback.

4. When using wireless connection to connect the main speaker sofa to a TV, there may be delays and instability. It is recommended to use a wired connection to the main speaker sofa and then use broadcast mode for wireless synchronization to other sofas.
5. Please keep the wireless connection between devices within 10 metres.

FCC INSTRUCTIONS

CAUTION: Any changes or modifications not approved by the party responsible for compliance could void the user's authority to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, as specified in Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This device generates, uses, and can radiate radio frequency energy. If not installed and used according to the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The power light does not turn on.	The AC cable is not connected.	Connect the AC power cable to another working outlet.
The recliner opens or closes unevenly.	<ul style="list-style-type: none"> The supporting frame is deformed. Intermittent stops occur when opening the backrest or footrest. The motor sensor may be defective. 	<ul style="list-style-type: none"> Replace the frame. Replace the motor.
The side switch does not work or the USB port does not charge.	<ul style="list-style-type: none"> The backrest or footrest is in an intermediate position, or a clicking sound is heard while the product is not operating. The USB port does not charge. 	<ul style="list-style-type: none"> Replace the switch and control box. Replace the switch.
The LED strip lights up only partially.	The LED bulbs are damaged.	Replace the entire strip of light.
The volume knob is not turned, but the sound keeps increasing.	Audio control panel failure (defective encoder control).	Replace the audio control panel.

MOTOMOTION

FASHION. FORWARD. FURNITURE.

Customer Service

For any questions regarding the use of this product, or if it requires servicing, please contact your dealer.