 
 
 







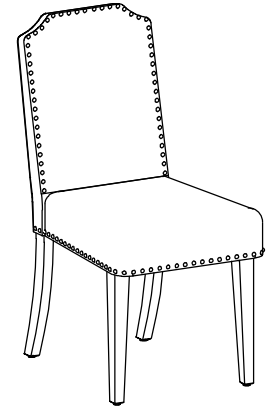


Warning :

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture must be assembled on a soft surface such as a blanket or carpet.

Components and Hardware List


Chair Back  (A) 1 pc.	Seat Frame  (B) 1 pc.	Front Leg  (C) 2 pcs.	Allen Head Bolt Ø5/16" x 18 x 3-3/8"  (D) 4 pcs.	Allen Head Bolt Ø5/16" x 18 x 2-1/8"  (E) 4 pcs.
Allen Head Bolt Ø5/16" x 18 x 1-3/4"  (F) 2 pcs.	Ø5/16" Spring Washer  (G) 10 pcs.	Ø5/16" Flat Washer  (H) 10 pcs.	4mm Allen Key  (K) 1 pc.	Upholstery Tack  (E) 6 pcs.




92610 / 11 / 12

Clipped Top Uph Chair


STEP 1: Remove Velcro strips on the seat frame to assemble the chair back and front legs.

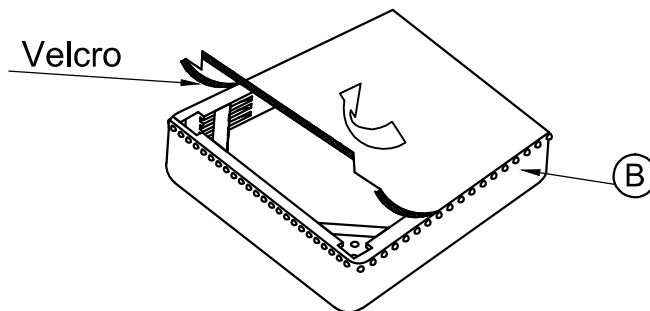


STEP 2:

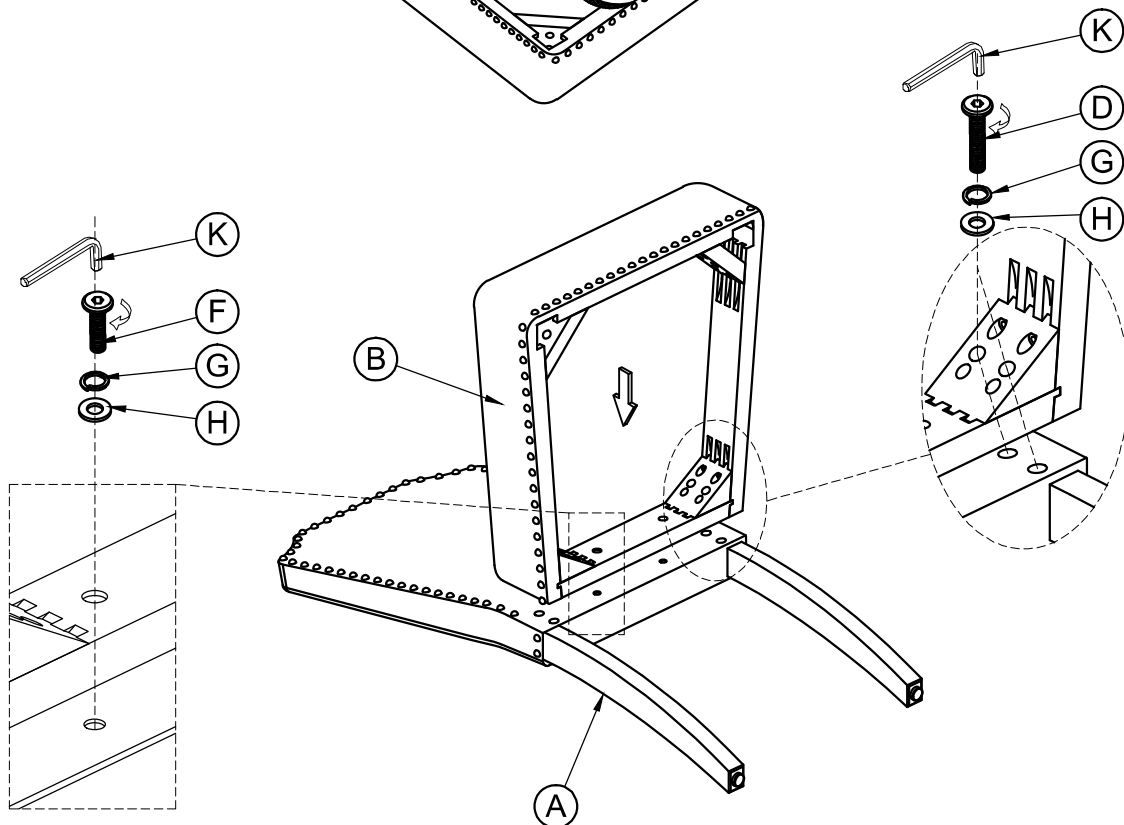

STEP 3:

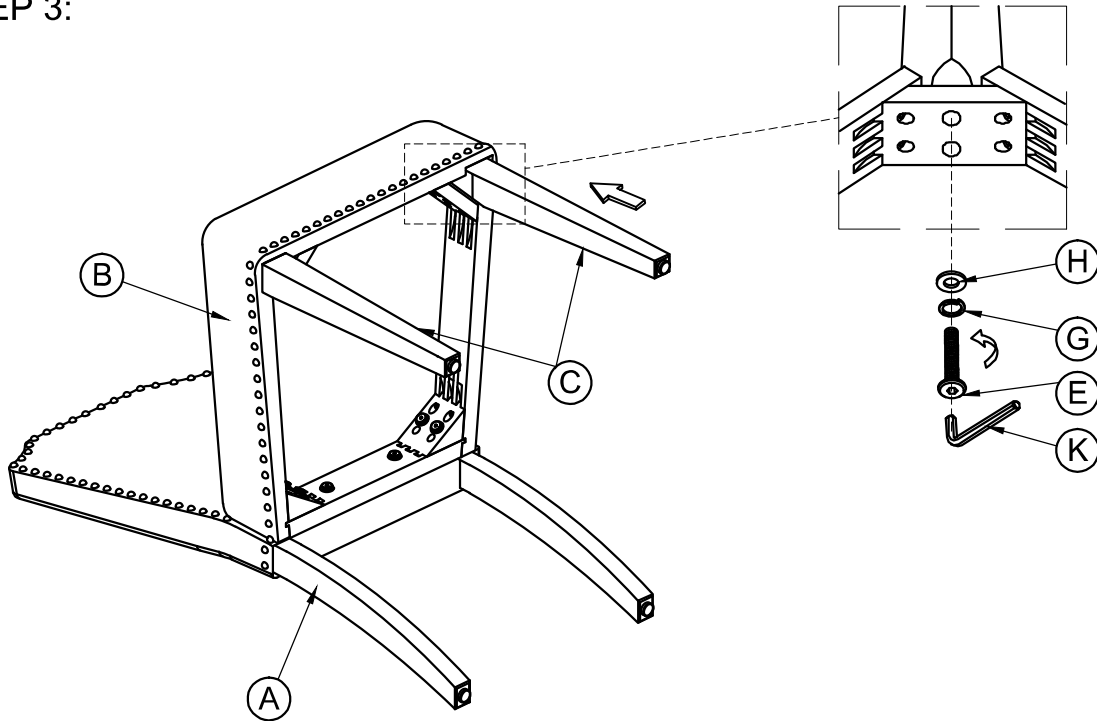

STEP 4: Attach all Velcro strips to the seat frame.

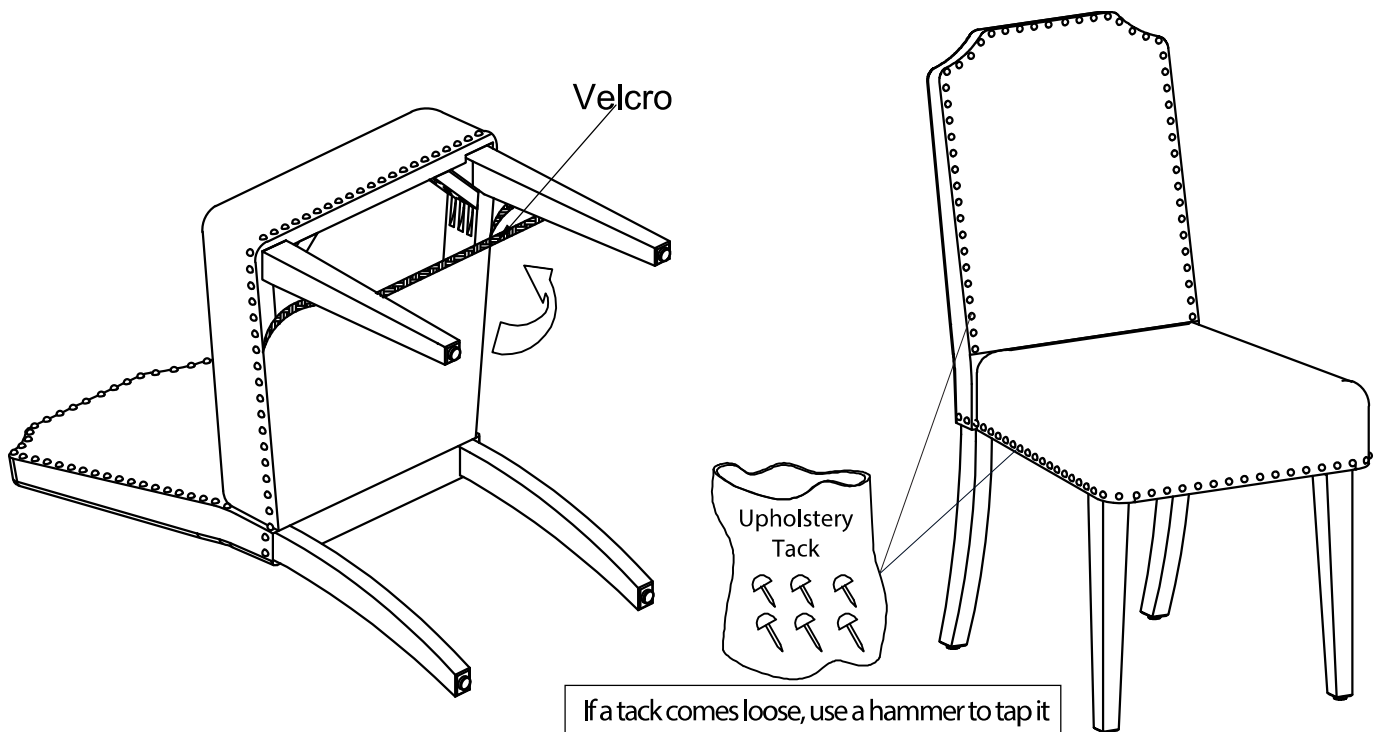

If a tack comes loose, use a hammer to tap it back into place or replace it with a new one.

COMPLETE