 


Initial commissioning

 
⚠ Before using the tumble dryer for the first time, ensure that it is correctly installed and connected.

If the tumble dryer has not been transported as described in "Installation and connection" then it must be left to stand for at least 1 hour before it is connected to the electricity supply. Otherwise the heat pump can be damaged.

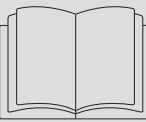

It is **essential** to read the operating instructions.

Operation

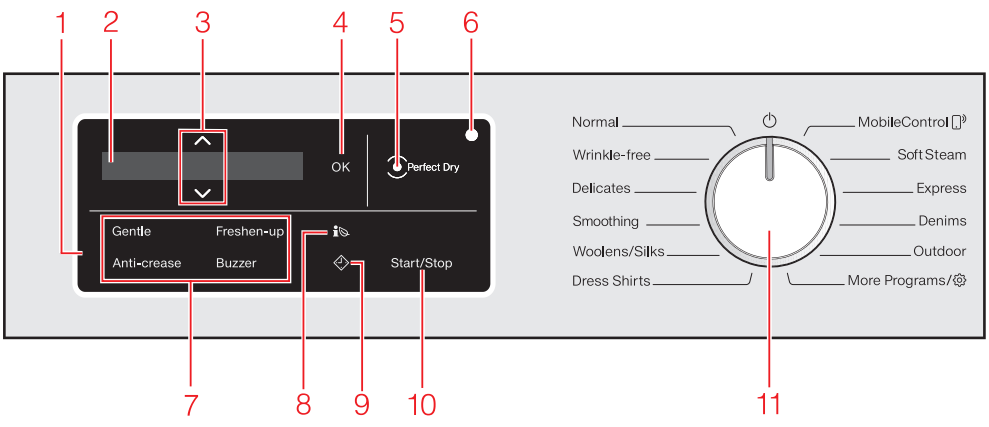

Switching on the tumble dryer

■ Turn the program selector to a program. The welcome tone will sound and the welcome screen will light up. The display will now guide you through the initial commissioning, which is divided into several steps. For further information please refer to the separate operating instructions supplied.

- 1 Control field**
The control field consists of a display and various sensor buttons.
- 2 Display**
Different values are displayed and/or selected on the display:
- 3 Sensor buttons** $\wedge \vee$
The values in the display can be changed with the $\wedge \vee$ sensor buttons.
- 4 OK sensor button**
Confirm the selected values with the OK sensor button.
- 5 Perfect Dry indicator** $\odot$
With programs with a selectable drying level, the Perfect Dry system calculates the residual moisture present in the laundry to ensure a precise drying result. The display flashes at the beginning of the program and lights up towards the end of the program.
- 6 Optical interface**
for service technicians.
- 7 Sensor buttons for extras**
You can supplement the drying program with extra options.
- 8 Sensor button** info
You can use the info sensor button to call up an energy consumption forecast for the selected drying program.
- 9 Sensor button** $\diamond$
The sensor button $\diamond$ starts the delay start function.
- 10 Start/Stop sensor button**
Touching the Start/Stop sensor button starts the selected program or cancels a program that has already been started.
- 11 Program selector**
For selecting programs and for switching off the machine. The tumble dryer is switched on when you select a program, and switched off by turning the program selector to the $\odot$ position.

Operating the sensor buttons
The sensor buttons react to fingertip contact. Selection is possible as long as the respective sensor button is illuminated. If a sensor button is brightly lit, this means: currently selected. If a sensor button is dimly lit, this means: selection possible.

Energy saving tips

- To avoid unnecessarily long drying times and high consumption of energy:
 - Make sure your laundry is spun at the maximum spin speed before drying.
- Load according to the optimum amount of laundry recommended for the program being used. This will mean that the energy consumption for the amount of laundry is at its most economical.
- Clean the lint filters after every drying cycle.
- Make sure the room temperature is not too high.
- If there are other heat producing appliances in the room in which the tumble dryer is located, make sure the room is well-ventilated and switch the other appliances off, if possible.

Drying

1. Notes on correct laundry care

⚠ Remove foreign objects like detergent dispensing devices from the laundry. They can melt and damage the dryer and the laundry.

- Sort the laundry according to the type of fiber and weave, size, garment care label symbol, and the drying level required.
- Untangle the laundry.
- Check seams and stitching to ensure that padding and linings are intact.
- Fasten duvet covers and pillow cases to prevent small items from being rolled up inside them.
- Fasten hooks and eyes.
- Tie together textile belts and apron ties.
- Sew in or remove underwiring from bras.

2. Selecting a program

- Turn the program selector to a program. The interior drum lighting will come on.

Program selection

There are three possible ways to select a program:

1. Selecting the standard programs with the program selector dial

 
- Turn the program selector to the required program. The selected program will be shown in the display. This will then be replaced by the standard display.

2. Selecting more programs by setting the program selector to the "More programs/@" position and the display.

- Turn the program selector to the *More programs/@* position. The following will appear in the display: Time Dry
- Touch the $\vee/\wedge$ sensor buttons until the program you want appears in the display.
- Confirm the program with the OK sensor button.

3. Selecting the programs via the MobileControl program selector position and the Miele@mobile app

- Turn the program selector to the *MobileControl* position.
- Follow the instructions in the display.
- Touch the "Start/Stop" sensor button. The dryer can now be operated via a mobile device together with the Miele@mobile app.

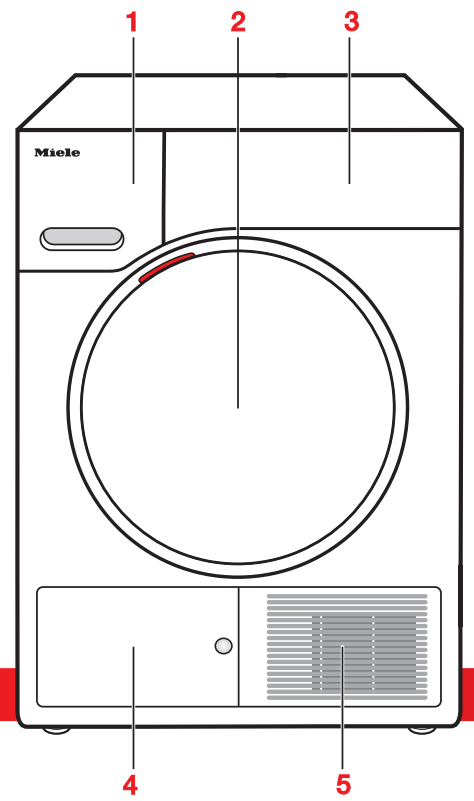

- 1 Condensed water container**
– empty after every drying program
- 2 Door**
- 3 Control panel**
- 4 Access panel for the heat exchanger and plinth filter**
– do not open during drying
- 5 Cool air intake grille**
– do not obstruct with a laundry basket or other objects

3. Loading the tumble dryer

- Open the door.
- Unfold the laundry and load loosely into the drum.
- ⚠ Do not overload the drum. Overloading can cause unnecessary wear and tear to the laundry, give a disappointing drying result and cause more creasing.
- ⚠ If you are not using a fragrance capsule: The tab must be pushed down completely (see arrow).
- ⚠ When closing the door, make sure that laundry does not get trapped in the door opening.
- Shut the door with a gentle swing.

4. Selecting program settings

Programs with drying levels
Normal, Wrinkle-free, Delicates, Smoothing, Dress Shirts, Express, Denim, Outdoor, Sportswear, Steam Care, Table Linen/Draperies, Bed linen
The pre-set drying level can be changed if required.

- Touch the $\vee$ or $\wedge$ sensor buttons to change the drying level.

Time-controlled and other programs
Time Dry, Cold Air, Basket
You can change the duration in ten-minute increments.

- Touch the $\vee$ or $\wedge$ sensor buttons to change the duration.

Woolens/Silks, Pillows, Proofing
The drying result is preset by the dryer and cannot be altered.

Selecting an extra option

- Touch the sensor button for the desired extra. It then lights up brightly.
- Freshen up**
For removing or reducing odors in clean (dry or damp) clothing.
- Gentle**
Low temperature for delicate fabrics with the info symbol on the care label, e.g. acrylic garments.
- Anti-crease**
Helps to prevent creasing if the laundry is not removed immediately after the end of a program.
- Buzzer**
A buzzer sounds to let you know the program has finished.

EcoFeedback

You can use the info sensor button to call up an energy consumption forecast for the selected drying program.

- Touch the info sensor button. The estimated energy consumption levels will be displayed as a bar chart.

Delay start/SmartStart Delay start

With the delay start function, you can delay the start of the program. The start of the program can be delayed from 15 minutes up to a maximum of 24 hours.

SmartStart

With the SmartStart function you can define a time period during which your dryer will be started automatically by a signal, for instance to make use of cheaper electricity rates.

5. Starting a program

- Touch the flashing Start/Stop sensor button. The Start/Stop sensor button will light up and *Drying* will appear in the display.

 
6. Program end – removing the laundry

The program is finished when *End/Anti-crease* or *End* appears. The Start/Stop button light goes out.

- To save energy, 10 minutes after the end of the program the Start/Stop sensor button will begin to flash slowly and the display will go out.
- The tumble dryer switches off automatically.

⚠ Do not open the door before the end of the program.

- Open the door.

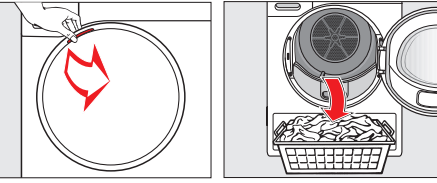

- Remove the laundry.

⚠ Check that all items have been removed from the drum. If items are left in the dryer, they could be damaged by over-drying when the dryer is next used.

The inside of the drum lights up so that you don't forget any items of laundry when you empty it.

- The drum lighting switches off automatically (energy saving).
- Turn the program selector to $\odot$.
- Clean the lint filters.
- Close the drum door.
- Empty the condensed water container.

Emptying the condensed water container

Empty the condensed water container after every drying program.

Empty container See will light up in the display if the maximum level of the condensed water container is reached.

To turn the message off: Open and close the door while the dryer is switched on.

- Remove the condensed water container.
- To prevent water running out, keep it in a horizontal position when carrying it. Hold it at the front and towards the back.

- Empty the condensed water container.
- Replace the condensed water container in the dryer.
- ⚠ Do not drink condensed water. It can cause health problems in people and animals.

Changing the program

You cannot change to another program once a program has started (this prevents unintentional alterations). If you move the program selector, **Cannot be changed** will light up in the display until you move the program selector back to the original program.

Exception: The dryer is switched off by turning the program selector to the $\odot$ position.

You will need to cancel the current program before you can select a new one.

Canceling a program

- Touch the Start/Stop sensor button. Cancel program will light up in the display.
- Confirm with the OK sensor button. As soon as Program canceled lights up:
- Turn the program selector to $\odot$.

The current program can also be canceled in this way

- Turn the program selector to $\odot$.
- Select a program.
- Touch the Start/Stop sensor button. The drying cycle begins.

Adding or removing laundry

⚠ Bear in mind that hot steam can escape after the door is opened.

- Pull open the door.
- Add or remove items.
- Close the door.
- Touch the Start/Stop sensor button. The program starts.

Program duration

 
Altering the program sequence can cause the program duration shown in the time display to be adjusted.

Fragrance capsule


Tip: Using a fragrance capsule will add a pleasant fragrance to your laundry.

⚠ Before using a fragrance capsule, please read "IMPORTANT SAFETY INSTRUCTIONS – Using a fragrance capsule (optional accessory)" and "Fragrance capsule" in the operating instructions.

Inserting a fragrance capsule

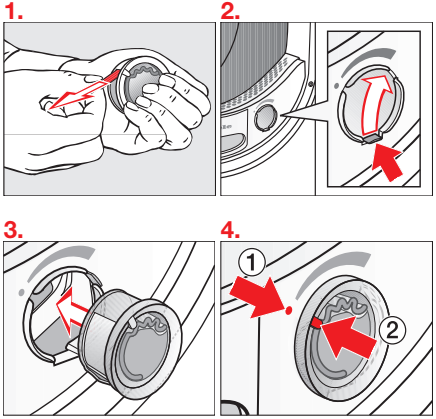

 
Markers ① and ② must line up with one another.

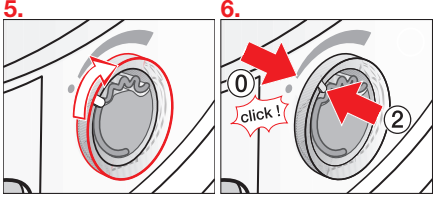

- Turn the outer ring clockwise a little.

Before drying

 - Turn the outer ring clockwise.

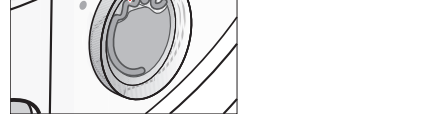

The further you open the capsule, the more intense the fragrance.

After drying

 
To avoid the fragrance escaping needlessly:

- Turn the outer ring counter-clockwise until marker ② is in position ①.

If you want to dry laundry occasionally without adding fragrance: Remove the fragrance capsule and store it in its original packaging until you want to use it again. See the following section.

Before cleaning the lint filters

- Remove the fragrance capsule (reverse points 3 and 4) and store it in its original packaging.

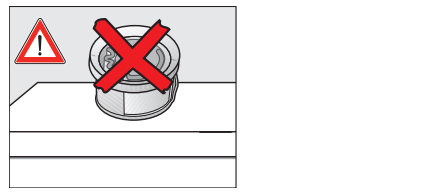

⚠ Never lay the fragrance capsule down on any surface as the fragrance will spill out.

Program guide

Program	Load (weight of dry laundry)	Laundry type	Extra options
Normal	Full load (17.6 lb)	T-Shirts, underwear, baby clothes, workwear, jackets, covers, aprons, overalls, hand towels, bath towels, bathrobes, bed linen For T-shirts, underwear, baby clothes: do not use Extra dry (laundry can shrink)	(A), (B), (C), (D)
Wrinkle-free	Half load (8.8 lb)	Workwear, overalls, pullovers, dresses, pants, table linen, leggings	(A), (B), (C), (D)
Delicates	Small load (5.7 lb)	Dress shirts, blouses, lingerie, appliquéd garments	(B), (C), (D)
Smoothing	Very small load (2.2 lb)	Cotton pants, jackets, shirts	(B), (C), (D)
Woolens/Silks	Small load (4.4 lb)	Pullovers, cardigans, socks, leggings	(D)
Dress Shirts	Small load (4.4 lb)	Shirts, blouses	(A), (B), (C), (D)
MobileControl	The Miele@mobile app is used to select the programs and operate the appliance.		(C), (D)
SoftSteam Express	Very small load (2.2 lb) Half load (8.8 lb)	Cotton pants, jackets, shirts Resilient garments (such as those suitable for the Normal program)	(C), (D)
Denim	Small load (6.6 lb)	Pants, jackets, skirts, shirts	(A), (B), (C), (D)
Outdoor	Small load (5.5 lb)	Outdoor clothing	(B), (C), (D)
Time dry	Full load (17.6 lb)	Thick jackets, pillows, sleeping bags, blankets	(B), (C), (D)
Table Linen/Draperies	Half load (8.8 lb)	Table linen, draperies, curtains	(C), (D)
Cold Air	Full load (17.6 lb)	Everything	(D)
Proofing	Small load (5.5 lb)	Microfiber fabrics, skiwear, outdoor wear, fine, close weave cotton garments (poplin), tablecloths	(C), (D)
Basket program	Maximum weight: 7.7 lb	Prohibited: Proofing agent containing paraffin Bags, shoes, stuffed animals, hats, scarves, gloves, sequined tops	(D)
Sportswear	Small load (6.6 lb)	Only with dryer basket (optional accessory) Sportswear	(B), (C), (D)
Pillows	-	Pillows (2 small or 1 large)	(C), (D)
Bed linens	Half load (8.8 lb)	Bed linen	(A), (B), (C), (D)

Extra dry X

Normal+ X

Slightly dry X

Hand iron 6 X

Hand iron 60 X

Machine iron X

Machine iron	X
Hand iron 60	X
Hand iron 6	X
Slightly dry	X
Normal+	X
Extra dry	X

Laundry type

T-Shirts, underwear, baby clothes, workwear, jackets, covers, aprons, overalls, hand towels, bath towels, bathrobes, bed linen
For T-shirts, underwear, baby clothes: do not use Extra dry (laundry can shrink)

Workwear, overalls, pullovers, dresses, pants, table linen, leggings

Dress shirts, blouses, lingerie, appliquéd garments

Cotton pants, jackets, shirts

Pullovers, cardigans, socks, leggings

Shirts, blouses

Load (weight of dry laundry)

Full load (17.6 lb)

Half load (8.8 lb)

Small load (5.7 lb)

Very small load (2.2 lb)

Small load (4.4 lb)

Small load (4.4 lb)

Program

Normal

Wrinkle-free

Delicates

Smoothing

Woolens/Silks

Dress Shirts

MobileControl

SoftSteam Express

Denim

Outdoor

Time dry

Table Linen/Draperies

Cold Air

Proofing

Basket program

Sportswear

Pillows

Bed linens

Garment care label symbols

Drying

Normal/higher temperature

Reduced temperature: Select Gentle (for delicate textiles)

Do not tumble dry

Ironing

Very hot

Hot

Warm

Do not iron

Extra options

(A), (B), (C), (D)

(A), (B), (C), (D)

(B), (C), (D)

(B), (C), (D)

(D)

(A), (B), (C), (D)

Tips on drying

- Always observe the maximum recommended load for each program (see Program guide).
- Overloading can cause unnecessary wear and tear to the laundry, give a disappointing drying result and cause more creasing.
- Do not load the drum with items that are still soaking wet. Make sure your laundry is spun at the maximum spin speed before drying.
- Minimum iron fabric tends to crease more, the larger the load. This is particularly the case for garments made from very fine weave fabric, such as dress shirts or blouses.

Lint filters

Removing visible lint

Clean both lint filters in the door opening after every drying cycle.

Remove the fragrance capsule (if fitted).

Pull the upper lint filter forward to remove it.

Use your fingers or a vacuum cleaner to remove the lint from the surface of the filter.

Push the upper lint filter back into position until it clicks.

Close the door.

Cleaning the lint filters and air flow openings thoroughly

If the drying duration has become longer or the surface of the filters is visibly compacted with lint, you should carry out the following cleaning procedure.

Pull the upper lint filter forward to remove it.

Turn the yellow dial on the lower lint filter in the direction of the arrow (until you hear it click).

Hold the dial and pull the lint filter forward to remove it.

Use a vacuum cleaner to remove any visible lint from the upper air flow openings.

Flush the lint filters through with warm running water.

Shake out the lint filters thoroughly and then dry them carefully.

Ensure the filters are dry before replacing them.

Refit all of the lint filters and close the door.

Plinth filter

Only clean the plinth filter when *Clean lint and plinth filter* See lights up.

To turn the message off: Switch the dryer off and then on again. Confirm with *OK*.

Press the round, indented area on the heat exchanger access panel to open it. The access panel will spring open.

Pull the plinth filter out by the handle.

A guide pin in the dryer will come out which prevents the access panel from closing without the plinth filter.

Pull the handle out of the plinth filter.

Clean the filter thoroughly under running water.

Squeeze the water out of the plinth filter thoroughly.

The plinth filter must not be replaced dripping wet.

Use a damp cloth to remove any lint.

Checking the heat exchanger unit

Danger of injury! Do not touch the cooling fins with your hands. You could cut yourself.

Carefully vacuum up any visible fluff or dirt.

Refitting the plinth filter

Fit the filter back on the handle. Make sure it is the correct way round.

First insert the handle with the plinth filter attached over the two guide pins.

The word Miele on the handle must be the correct way up.

Close the heat exchanger access panel.

Frequently asked questions

Some of the messages in the display are more than one line long. Touch the V or ^ sensor button to read them in full.

Problem/Fault message	Possible cause and solution
lights up after the tumble dryer is switched on and a program cannot be selected	Access via a PIN code has been activated. You must enter the correct PIN code to use the tumble dryer. See "Settings menu – PIN Code" in the operating instructions.
The program is canceled and the following lights up: Empty container. See	The condensed water container is full or there is a kink in the drain hose. Empty the condensed water container. Check the drain hose. To switch off the message: Open and close the door while the dryer is switched on.
Fill condensate container	This is to remind you that water is taken from the condensed water container when the <i>SoftSteam</i> program is being used. The condensed water container must be filled with water to at least the -min- marker. Confirm with <i>OK</i> .
Open & close door.	This is to remind you to load the laundry when the <i>SoftSteam</i> program is selected. Load the laundry in the drum.
At the end of a program the following lights up: Clean the lint and plinth filter See	There is a build-up of fluff in the airways. See "Cleaning and care" in the operating instructions. Clean the lint filters. Clean the plinth filter. Cleaning the air flow openings. Clean the heat exchanger. To switch off the message: Confirm with <i>OK</i> .
After a program has been interrupted, the following lights up: Clean the lint and plinth filter See	There is a build-up of fluff in the airways. See "Cleaning and care" in the operating instructions. Clean the lint filters. Clean the plinth filter. Cleaning the air flow openings. Clean the heat exchanger. To switch off the message: Switch the dryer off and then on again.
End/Cooling down	The program has finished but the laundry has not yet cooled down. Either remove the laundry and spread it out to cool down or leave it in the tumble dryer to cool down during the cooling phase.

Problem/Fault message

The display is in a different language

A different language has been selected in "Settings, Language".
 Set the language you want. The flag symbol will guide you.

The display remains dark, and the Start/Stop sensor button does not light up or flash

There is no power to the dryer.
 Check whether the plug is plugged in.
 Check whether the fuse has tripped.

The dryer has switched off automatically to save energy.
 Turn the program selector to switch the dryer on again.

The laundry is not sufficiently dry

The load consisted of different types of fabric.
 Finish drying using the *Time dry* drying program.
 Select a more suitable program next time.
Tip: You can alter the residual moisture level for some programs. See "Settings menu – Drying levels" in the operating instructions.

Items made of synthetic fibers are charged with static electricity after drying

Synthetic fibers tend to attract static charge. Static charge can be reduced by adding a fabric softener to the final rinse in the washing program.

There is a build-up of lint

Lint is principally the result of friction when garments are being worn and to some extent when they are being washed. Machine drying hardly causes any lint to form. Lint is collected by the **lint** and plinth filter and can be removed easily. See "Cleaning and care".

You can hear operating noises (buzzing/humming)

This is not a fault. The compressor (heat pump) is operating or you have selected the *SoftSteam* program. No action required. These noises are quite normal and can be heard when the compressor or the condensed water pump is operating.

Quick Start Guide

Heat-pump dryer

These short instructions are not a substitute for the operating instructions supplied with the appliance! It is essential to familiarize yourself with the dryer before using it for the first time. Take note of the operating instructions, as well as the "IMPORTANT SAFETY INSTRUCTIONS".

en – US

M.-Nr. 10 671 390

PROGRAM GUIDE

fold here

Cleaning and care

Lint filters

Removing visible lint

Clean both lint filters in the door opening after every drying cycle.

Remove the fragrance capsule (if fitted).

Pull the upper lint filter forward to remove it.

Use your fingers or a vacuum cleaner to remove the lint from the surface of the filter.

Push the upper lint filter back into position until it clicks.

Close the door.

Cleaning the lint filters and air flow openings thoroughly

If the drying duration has become longer or the surface of the filters is visibly compacted with lint, you should carry out the following cleaning procedure.

Pull the upper lint filter forward to remove it.

Turn the yellow dial on the lower lint filter in the direction of the arrow (until you hear it click).

Hold the dial and pull the lint filter forward to remove it.

Use a vacuum cleaner to remove any visible lint from the upper air flow openings.

Flush the lint filters through with warm running water.

Shake out the lint filters thoroughly and then dry them carefully.

Ensure the filters are dry before replacing them.

Refit all of the lint filters and close the door.

Plinth filter

Only clean the plinth filter when *Clean lint and plinth filter* See lights up.

To turn the message off: Switch the dryer off and then on again. Confirm with *OK*.

Press the round, indented area on the heat exchanger access panel to open it. The access panel will spring open.

Pull the plinth filter out by the handle.

A guide pin in the dryer will come out which prevents the access panel from closing without the plinth filter.

Pull the handle out of the plinth filter.

Clean the filter thoroughly under running water.

Squeeze the water out of the plinth filter thoroughly.

The plinth filter must not be replaced dripping wet.

Use a damp cloth to remove any lint.

Checking the heat exchanger unit

Danger of injury! Do not touch the cooling fins with your hands. You could cut yourself.

Carefully vacuum up any visible fluff or dirt.

Refitting the plinth filter

Fit the filter back on the handle. Make sure it is the correct way round.

First insert the handle with the plinth filter attached over the two guide pins.

The word Miele on the handle must be the correct way up.

Close the heat exchanger access panel.

Frequently asked questions

Some of the messages in the display are more than one line long. Touch the V or ^ sensor button to read them in full.

Problem/Fault message	Possible cause and solution
lights up after the tumble dryer is switched on and a program cannot be selected	Access via a PIN code has been activated. You must enter the correct PIN code to use the tumble dryer. See "Settings menu – PIN Code" in the operating instructions.
The program is canceled and the following lights up: Empty container. See	The condensed water container is full or there is a kink in the drain hose. Empty the condensed water container. Check the drain hose. To switch off the message: Open and close the door while the dryer is switched on.
Fill condensate container	This is to remind you that water is taken from the condensed water container when the <i>SoftSteam</i> program is being used. The condensed water container must be filled with water to at least the -min- marker. Confirm with <i>OK</i> .
Open & close door.	This is to remind you to load the laundry when the <i>SoftSteam</i> program is selected. Load the laundry in the drum.
At the end of a program the following lights up: Clean the lint and plinth filter See	There is a build-up of fluff in the airways. See "Cleaning and care" in the operating instructions. Clean the lint filters. Clean the plinth filter. Cleaning the air flow openings. Clean the heat exchanger. To switch off the message: Confirm with <i>OK</i> .
After a program has been interrupted, the following lights up: Clean the lint and plinth filter See	There is a build-up of fluff in the airways. See "Cleaning and care" in the operating instructions. Clean the lint filters. Clean the plinth filter. Cleaning the air flow openings. Clean the heat exchanger. To switch off the message: Switch the dryer off and then on again.
End/Cooling down	The program has finished but the laundry has not yet cooled down. Either remove the laundry and spread it out to cool down or leave it in the tumble dryer to cool down during the cooling phase.

Problem/Fault message

The display is in a different language

A different language has been selected in "Settings, Language".
 Set the language you want. The flag symbol will guide you.

The display remains dark, and the Start/Stop sensor button does not light up or flash

There is no power to the dryer.
 Check whether the plug is plugged in.
 Check whether the fuse has tripped.

The dryer has switched off automatically to save energy.
 Turn the program selector to switch the dryer on again.

The laundry is not sufficiently dry

The load consisted of different types of fabric.
 Finish drying using the *Time dry* drying program.
 Select a more suitable program next time.
Tip: You can alter the residual moisture level for some programs. See "Settings menu – Drying levels" in the operating instructions.

Items made of synthetic fibers are charged with static electricity after drying

Synthetic fibers tend to attract static charge. Static charge can be reduced by adding a fabric softener to the final rinse in the washing program.

There is a build-up of lint

Lint is principally the result of friction when garments are being worn and to some extent when they are being washed. Machine drying hardly causes any lint to form. Lint is collected by the **lint** and plinth filter and can be removed easily. See "Cleaning and care".

You can hear operating noises (buzzing/humming)

This is not a fault. The compressor (heat pump) is operating or you have selected the *SoftSteam* program. No action required. These noises are quite normal and can be heard when the compressor or the condensed water pump is operating.

Quick Start Guide

Heat-pump dryer

These short instructions are not a substitute for the operating instructions supplied with the appliance! It is essential to familiarize yourself with the dryer before using it for the first time. Take note of the operating instructions, as well as the "IMPORTANT SAFETY INSTRUCTIONS".

en – US

M.-Nr. 10 671 390

PROGRAM GUIDE

fold here

Frequently asked questions

Problem/Fault message

The display is in a different language

A different language has been selected in "Settings, Language".
 Set the language you want. The flag symbol will guide you.

The display remains dark, and the Start/Stop sensor button does not light up or flash

There is no power to the dryer.
 Check whether the plug is plugged in.
 Check whether the fuse has tripped.

The dryer has switched off automatically to save energy.
 Turn the program selector to switch the dryer on again.

The laundry is not sufficiently dry

The load consisted of different types of fabric.
 Finish drying using the *Time dry* drying program.
 Select a more suitable program next time.
Tip: You can alter the residual moisture level for some programs. See "Settings menu – Drying levels" in the operating instructions.

Items made of synthetic fibers are charged with static electricity after drying

Synthetic fibers tend to attract static charge. Static charge can be reduced by adding a fabric softener to the final rinse in the washing program.

There is a build-up of lint

Lint is principally the result of friction when garments are being worn and to some extent when they are being washed. Machine drying hardly causes any lint to form. Lint is collected by the **lint** and plinth filter and can be removed easily. See "Cleaning and care".

You can hear operating noises (buzzing/humming)

This is not a fault. The compressor (heat pump) is operating or you have selected the *SoftSteam* program. No action required. These noises are quite normal and can be heard when the compressor or the condensed water pump is operating.

Quick Start Guide

Heat-pump dryer

These short instructions are not a substitute for the operating instructions supplied with the appliance! It is essential to familiarize yourself with the dryer before using it for the first time. Take note of the operating instructions, as well as the "IMPORTANT SAFETY INSTRUCTIONS".

en – US

M.-Nr. 10 671 390

PROGRAM GUIDE

fold here

PROGRAM GUIDE

fold here