



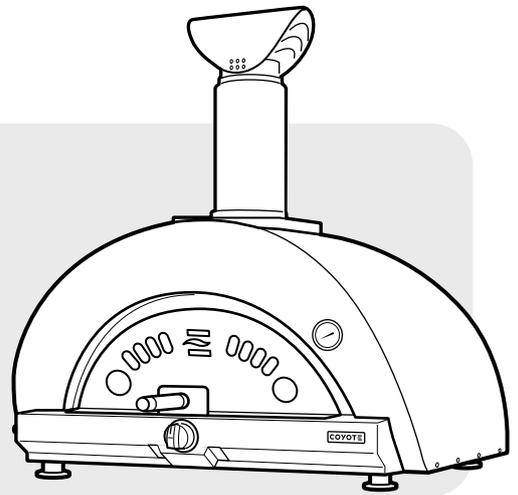


CoyoteOutdoor.com




TO TURN ON THE GAS BURNER, FOLLOW THESE STEPS:

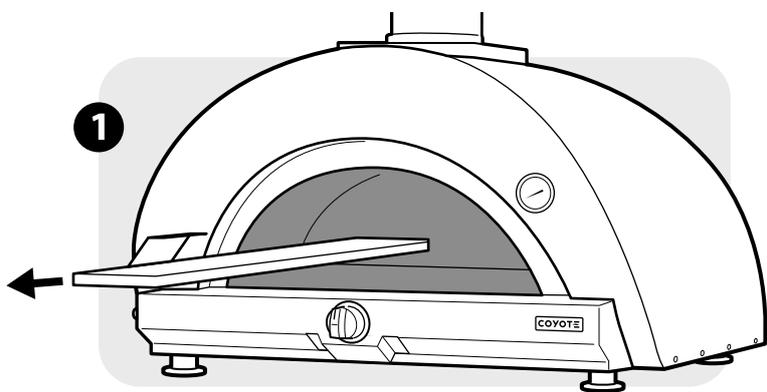


Remove the burner cover.

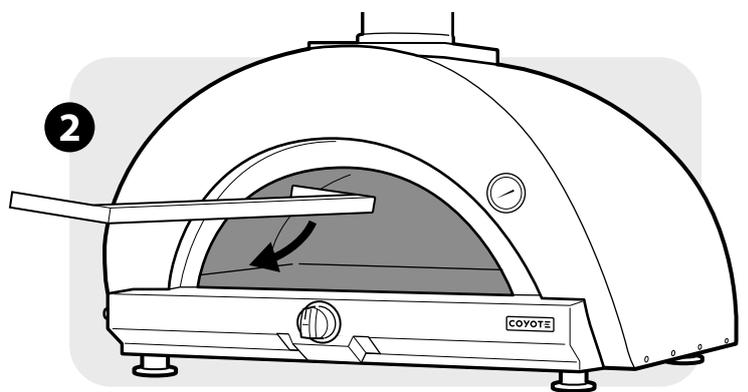


Insert the ash guard.

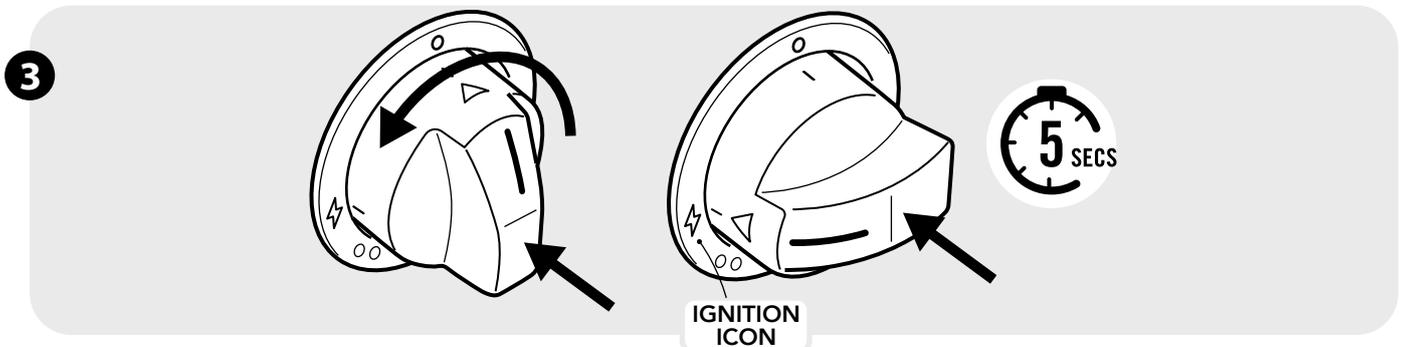


Press the knob and turn it to the ignition icon. Keep the knob pressed for 5 seconds.

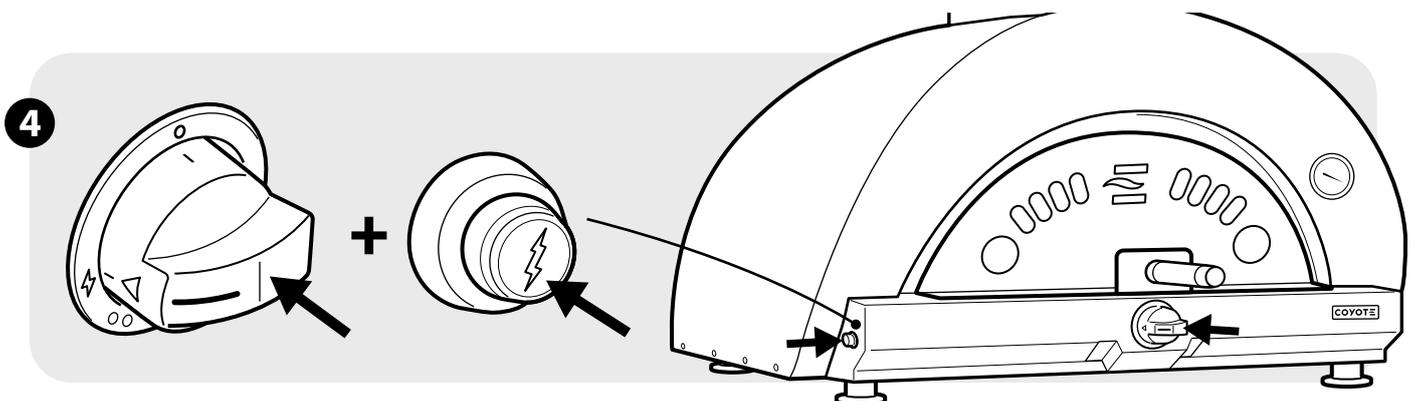

While keeping the knob pressed, press the igniter button at the same time to light the pilot flame.

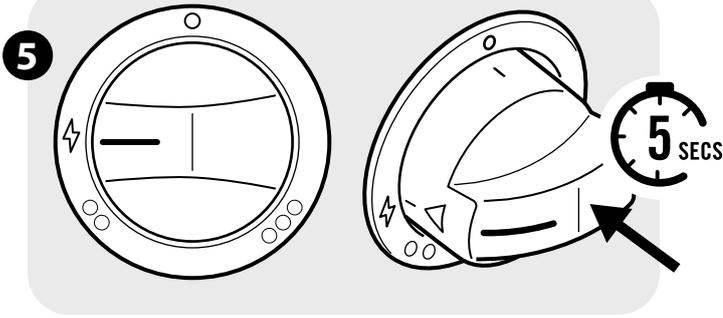


After lighting the pilot flame, hold the knob down for an additional 5 seconds to activate the thermocouple.

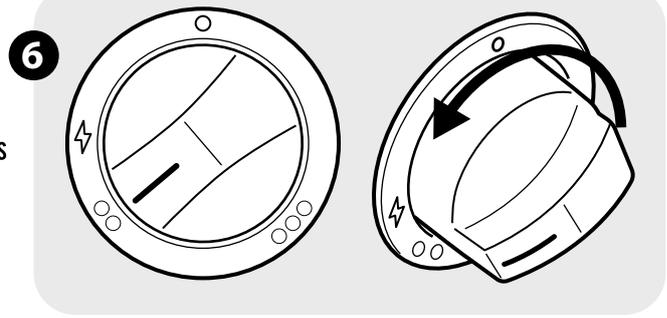


Release the knob and turn it counterclockwise to activate the burner.

⚠ Note: If the pilot flame fails to ignite or goes out, turn off the knob. Wait for at least 30 seconds and repeat steps 3 through 5

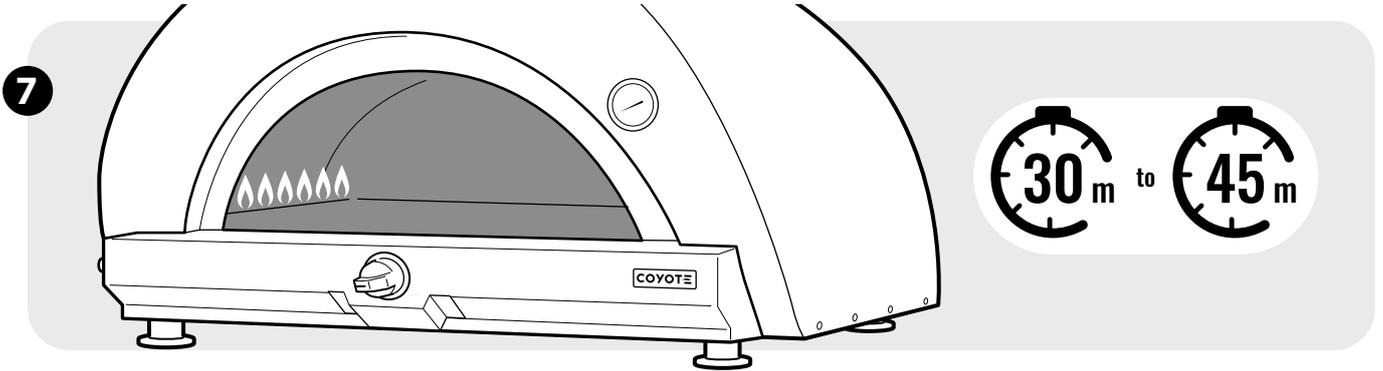


Allow the oven to preheat the bricks for 30 to 45 minutes before using the oven for pizza.


TO TURN OFF THE GAS BURNER, FOLLOW THESE STEPS:

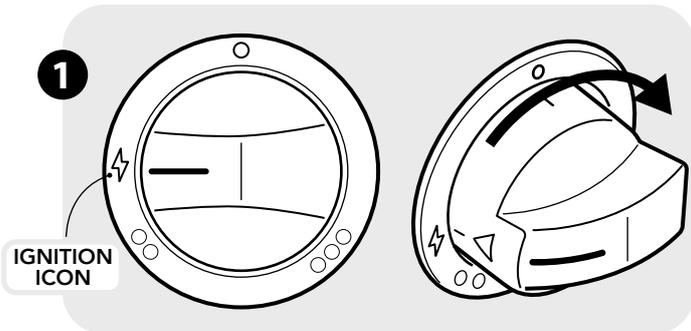

Turn the knob clockwise to the ignition icon.

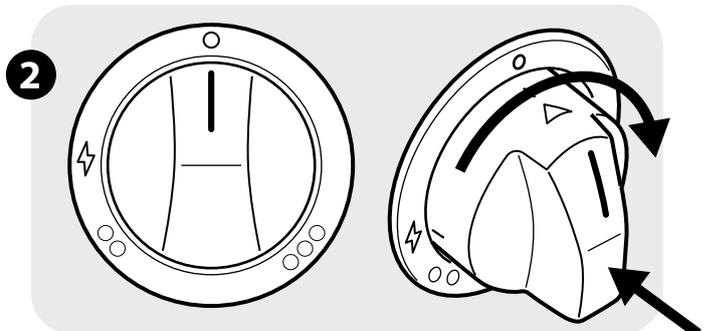

Press the knob to turn it to the off position.

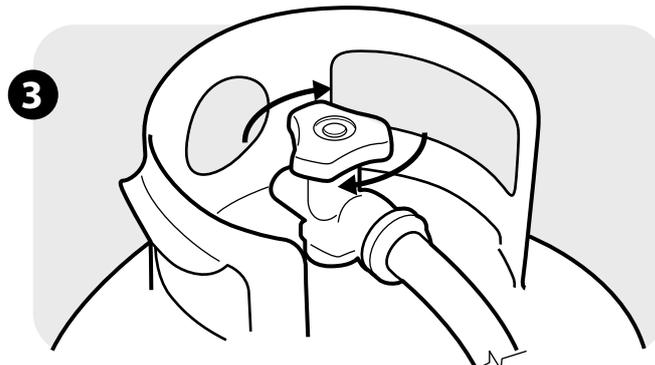

Turn off the gas supply.